



# DIGITAL RECORDING STUDIO BR-1200 CD

## Owner's Manual

Thank you, and congratulations on your choice of the BOSS BR-1200CD Digital Recording Studio.

Before using this unit, carefully read the sections entitled:

“USING THE UNIT SAFELY”(page 2-3)

“IMPORTANT NOTES”(page 4-5)

These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's manual should be read in its entirety.


The manual should be saved and kept on hand as a convenient reference.

### ■ Printing conventions in this manual

- Text or numerals enclosed in square brackets [ ] indicate buttons.  
[PLAY] PLAY button  
[CURSOR] CURSOR button
- Reference such as (p. \*\*) indicate pages in this manual to which you can refer.

### Copyright © 2004 BOSS CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of BOSS CORPORATION.

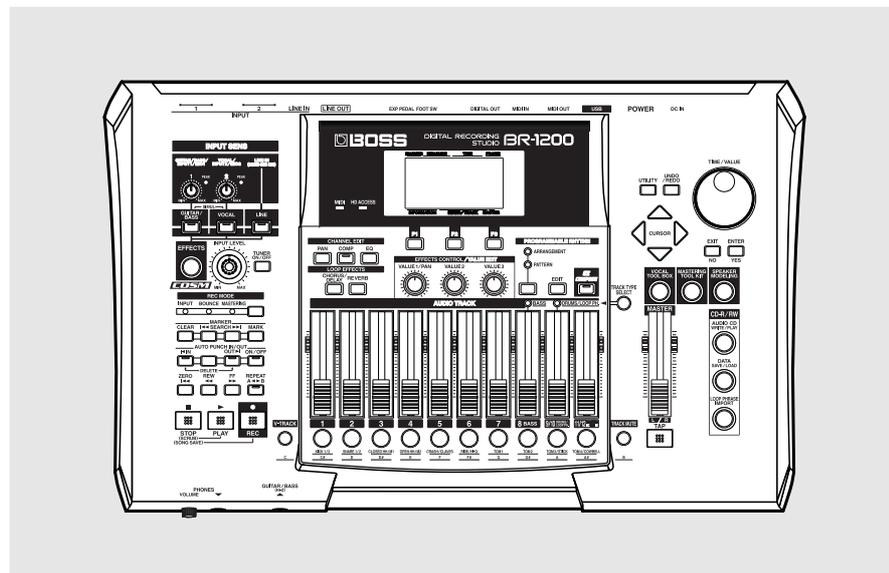

Basic Operation	Section 1
Recording and Playback	Section 2
Editing	Section 3
Using Effects	Section 4
Using Rhythm	Section 5
Using the CD-R/RW Drive	Section 6
Using MIDI	Section 7
Using USB	Section 8
Other Convenient Functions	Section 9
Appendices	Section 9

# USING THE UNIT SAFELY

## INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

### About ⚠ WARNING and ⚠ CAUTION Notices

<b>⚠ WARNING</b>	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
<b>⚠ CAUTION</b>	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

### About the Symbols

	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The ⚡ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ⏻ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

### ALWAYS OBSERVE THE FOLLOWING

#### ⚠ WARNING

- Before using this unit, make sure to read the instructions below, and the Owner's Manual.

---

- Connect mains plug of this model to a mains socket outlet with a protective earthing connection.

---

- Do not open (or modify in any way) the unit or its AC adaptor.

---

- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" sheet.

---

- Never use or store the unit in places that are:
  - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
  - Damp (e.g., baths, washrooms, on wet floors); or are
  - Humid; or are
  - Exposed to rain; or are
  - Dusty; or are
  - Subject to high levels of vibration.

---

- Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces.

#### ⚠ WARNING

- Be sure to use only the AC adaptor supplied with the unit. Also, make sure the line voltage at the installation matches the input voltage specified on the AC adaptor's body. Other AC adaptors may use a different polarity, or be designed for a different voltage, so their use could result in damage, malfunction, or electric shock.

---

- Use only the attached power-supply cord. Also, the supplied power cord must not be used with any other device.

---

- Do not excessively twist or bend the power cord, nor place heavy objects on it. Doing so can damage the cord, producing severed elements and short circuits. Damaged cords are fire and shock hazards!

---

- This unit, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level, or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should immediately stop using the unit, and consult an audiologist.

---

- Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit.

## **WARNING**

- Immediately turn the power off, remove the AC adaptor from the outlet, and request servicing by your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the “Information” sheet when:
  - The AC adaptor, the power-supply cord, or the plug has been damaged; or
  - If smoke or unusual odor occurs
  - Objects have fallen into, or liquid has been spilled onto the unit; or
  - The unit has been exposed to rain (or otherwise has become wet); or
  - The unit does not appear to operate normally or exhibits a marked change in performance.
- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit.
- Protect the unit from strong impact. (Do not drop it!)
- Do not force the unit’s power-supply cord to share an outlet with an unreasonable number of other devices. Be especially careful when using extension cords—the total power used by all devices you have connected to the extension cord’s outlet must never exceed the power rating (watts/amperes) for the extension cord. Excessive loads can cause the insulation on the cord to heat up and eventually melt through.
- Before using the unit in a foreign country, consult with your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the “Information” page.
- DO NOT play a CD-ROM disc on a conventional audio CD player. The resulting sound may be of a level that could cause permanent hearing loss. Damage to speakers or other system components may result.

## **CAUTION**

- The unit and the AC adaptor should be located so their location or position does not interfere with their proper ventilation.
- Always grasp only the plug on the AC adaptor cord when plugging into, or unplugging from, an outlet or this unit.
- At regular intervals, you should unplug the AC adaptor and clean it by using a dry cloth to wipe all dust and other accumulations away from its prongs. Also, disconnect the power plug from the power outlet whenever the unit is to remain unused for an extended period of time. Any accumulation of dust between the power plug and the power outlet can result in poor insulation and lead to fire.
- Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children.
- Never climb on top of, nor place heavy objects on the unit.
- Never handle the AC adaptor or its plugs with wet hands when plugging into, or unplugging from, an outlet or this unit.
- Before moving the unit, disconnect the AC adaptor and all cords coming from external devices.
- Before cleaning the unit, turn off the power and unplug the AC adaptor from the outlet.
- Whenever you suspect the possibility of lightning in your area, disconnect the AC adaptor from the outlet.
- Should you remove the grand terminal, keep them in a safe place out of children’s reach, so there is no chance of them being swallowed accidentally.
- Always turn the phantom power off when connecting any device other than condenser microphones that require phantom power. You risk causing damage if you mistakenly supply phantom power to dynamic microphones, audio playback devices, or other devices that don’t require such power.

Be sure to check the specifications of any microphone you intend to use by referring to the manual that came with it. (This instrument’s phantom power: +48 V DC, 7 mA Max)

# IMPORTANT NOTES

In addition to the items listed under “USING THE UNIT SAFELY” on page 2–3, please read and observe the following:

## Power Supply

- Do not connect this unit to same electrical outlet that is being used by an electrical appliance that is controlled by an inverter (such as a refrigerator, washing machine, microwave oven, or air conditioner), or that contains a motor. Depending on the way in which the electrical appliance is used, power supply noise may cause this unit to malfunction or may produce audible noise. If it is not practical to use a separate electrical outlet, connect a power supply noise filter between this unit and the electrical outlet.
- The AC adaptor will begin to generate heat after long hours of consecutive use. This is normal, and is not a cause for concern.
- Before connecting this unit to other devices, turn off the power to all units. This will help prevent malfunctions and/or damage to speakers or other devices.

## Placement

- Using the unit near power amplifiers (or other equipment containing large power transformers) may induce hum. To alleviate the problem, change the orientation of this unit; or move it farther away from the source of interference.
- This device may interfere with radio and television reception. Do not use this device in the vicinity of such receivers.
- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this unit. Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Excessive heat can deform or discolor the unit.
- When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.

## Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

## Repairs and Data

- Please be aware that all data contained in the unit’s memory may be lost when the unit is sent for repairs. Important data should always be backed up on a storage device (e.g., CD-R/RW or external computer connected via USB), or written down on paper (when possible). During repairs, due care is taken to avoid the loss of data. However, in certain cases (such as when circuitry related to memory itself is out of order), we regret that it may not be possible to restore the data, and Roland assumes no liability concerning such loss of data.

## Additional Precautions

- Please be aware that the contents of memory can be irretrievably lost as a result of a malfunction, or the improper operation of the unit. To protect yourself against the risk of losing important data, we recommend that you periodically save a backup copy of important data you have stored in the unit’s memory on a storage device (e.g., CD-R/RW or external computer connected via USB).
- Unfortunately, it may be impossible to restore the contents of data that was stored in the unit’s hard disk once it has been lost. Roland Corporation assumes no liability concerning such loss of data.
- Use a reasonable amount of care when using the unit’s buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- Never strike or apply strong pressure to the display.
- When connecting / disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable’s internal elements.
- To avoid disturbing your neighbors, try to keep the unit’s volume at reasonable levels. You may prefer to use headphones, so you do not need to be concerned about those around you (especially when it is late at night).
- When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.
- Use only the specified expression pedal (EV-5; sold separately). By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit.

- Use a cable from Roland to make the connection. If using some other make of connection cable, please note the following precautions.
  - Some connection cables contain resistors. Do not use cables that incorporate resistors for connecting to this unit. The use of such cables can cause the sound level to be extremely low, or impossible to hear. For information on cable specifications, contact the manufacturer of the cable.

## Handling CD-ROMs

- Avoid touching or scratching the shiny underside (encoded surface) of the disc. Damaged or dirty CD-ROM discs may not be read properly. Keep your discs clean using a commercially available CD cleaner.

## Copyright

- Unauthorized recording, distribution, sale, lending, public performance, broadcasting, or the like, in whole or in part, of a work (musical composition, video, broadcast, public performance, or the like) whose copyright is held by a third party is prohibited by law.
- Do not use this unit for purposes that could infringe on a copyright held by a third party. We assume no responsibility whatsoever with regard to any infringements of third-party copyrights arising through your use of this unit.

## About the License Agreement

- The BR-1200CD and its CD-R/RW capability are designed to allow you to reproduce material to which you have copyright, or material which the copyright owner has granted you permission to copy. Accordingly, reproduction of Music CD or other copyrighted material without permission of the copyright owner avoiding technical prohibiting features of second-generation and later copying like SCMS or others constitutes copyright infringement and may incur penalties even in case such reproduction is for your own personal use and enjoyment (private use). Consult a copyright specialist or special publications for more detailed information on obtaining such permission from copyright holders.

## Disclaimer of liability

- BOSS/Roland will take no responsibility for any “direct damages,” “consequential damages,” or “any other damages” which may result from your use of the BR-1200CD. These damages may include but are not limited to the following events which can occur when using the BR-1200CD.
  - Any loss of profit that may occur to you
  - Permanent loss of your music or data
  - Inability to continue using the BR-1200CD itself or a connected device

The explanations in this manual include illustrations that depict what should typically be shown by the display. Note, however, that your unit may incorporate a newer, enhanced version of the system (e.g., includes newer sounds), so what you actually see in the display may not always match what appears in the manual.

- 
- \* Microsoft and Windows are registered trademarks of Microsoft Corporation.
  - \* The screen shots in this document are used in compliance with the guidelines of the Microsoft Corporation.
  - \* Windows® is known officially as: “Microsoft® Windows® operating system.”
  - \* Apple and Macintosh are registered trademark of Apple Computer, Inc.
  - \* MacOS is a trademark of Apple Computer, Inc.
  - \* All product names mentioned in this document are trademarks or registered trademarks of their respective owners.
-

# Precautions Regarding the Hard Disk

The BR-1200CD contains an internal hard disk. This device is of an extremely high-precision design, and it can be easily damaged if not used and handled correctly. To ensure that the hard disk is being handled properly, you must adhere to the following:

## Important Performance and Image Data

---

Once a hard disk fails to function normally, all data that has been stored on it could be destroyed.

- All hard disks eventually wear out. Individual differences among hard disks and the conditions under which they are used have a considerable effect on a hard disk's lifespan. Some devices can be used continuously for many years, while in rare cases, others break down after a period of several months. We recommend that you consider the hard disk not as a permanent storage site, but as a place to store data temporarily. We also recommend that you back up important performance and image data onto the external media that is supported by your device.

For instructions on how to make such backups, refer to "Saving Data on the Hard Disk to CD-R/RW Discs" (p. 228).

Note that Roland assumes no liability whatsoever, including monetary compensation, for the loss of any recorded content in the event of the malfunction of, or physical damage to the hard disk, or for any direct or incidental damages resulting from the loss of such data.

## Precautions Regarding Setup and Use

---

Certain hard disk setup procedures and usage conditions may result in the corruption of recorded data, malfunctioning, or physical damage to the disk, so be sure to observe the following precautions.

- Do not subject the hard disk to vibration or shock, especially while the unit is in operation. Failure to observe this precaution can result in the hard disk being permanently damaged.

### Conditions to be avoided:

- Lifting or moving the BR-1200CD while the power is turned on.
- Transporting the BR-1200CD unprotected in an automobile trunk.
- Knocking the BR-1200CD against table edges when it is being moved.
- Positioning the BR-1200CD close to drums during performances.
- Positioning the BR-1200CD close to amplifiers for guitars and other musical instruments during performances.
- Do not set up the unit in any location where it may be affected by vibration from external sources, or on any surface that is not stable and level.
- If the device includes a cooling fan, ensure that the fan and the side panel air vents remain unobstructed.
- Do not block the ventilation holes provided in the case as this can result in the temperature inside the BR-1200CD rising, and this will drastically reduce the hard disk's lifespan.
- Do not use the unit in conditions of high temperature and humidity or in any location subject to rapid temperature changes.
- Do not unplug the power cord or switch off any circuit breakers in the circuit to which the unit is connected while the power is turned on.
- Do not move the unit while the power is turned on or immediately after turning off the power. When transporting the unit, first turn off the power and confirm that the display screen has gone off, disconnect the power plug, then wait at least two minutes before moving the device.
- When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.

## Emergency Procedures

---

\* *The following procedures are to be used as emergency measures only, and are not recommended for normal operation.*

If the device fails to respond to operational commands or does not complete operations, turn off the power. If the power does not shut off following normal shutdown procedures (p. 37), disconnect the power plug.

If the unit does not operate normally when the power is turned on again, it may mean that the hard disk has been damaged. In such instances, consult your dealer or the nearest Roland Service Center. Note, however, that it may not be possible to recover any data from the hard disk once it has been lost.

In addition, even if the hard disk appears to be operating correctly, carry out a Surface Scan (p. 285) to confirm that it has not been damaged.

# Notes When Using Mics

Always be sure to switch the phantom power off except when connecting condenser mics requiring a phantom power supply. Supplying phantom power to dynamic mics, audio playback equipment, and other devices that do not use phantom power may cause damage to your equipment.

For mic specifications, please refer to the owner's manual for whatever model of mic you are using.

(BR-1200CD Phantom Power: +48 V DC, 7 mA Max.)

Phantom power is supplied to the eight XLR connectors for INPUT 1/MIC 1 and INPUT2/MIC 2 simultaneously. The phantom power cannot be switched on or off for each connector individually.

If simultaneously using mics that require phantom power with those that don't, then connect any mic that does not need phantom power to one of the standard

1/4" phone jacks. Phantom power is supplied only to the XLR connectors, not to the standard jacks.

To connect mics to the standard jacks, use a commercially available XLR-to-phone adapter cable or other form of adapter.

## About the CD-ROM "Discrete Drums"

**A CD-ROM is supplied with the BR-1200CD.**

The CD-ROM includes a variety of drum phrases created by Discrete Drums.

These professionally recorded drum parts are saved as Loop Phrases that can easily be imported directly into the BR-1200CD and used in your songs.

Drum phrases are categorized and sorted under each folder in .WAV format files.

The BR-1200CD allows you to easily use these phrases by using the Loop Phrase Import function.

### **NOTE**

This CD-ROM is not an Audio CD. This CD-ROM should not be played with a consumer audio CD player. If it is, very loud noises can be generated and audio equipment such as CD players, amplifiers or speakers can be damaged!!

Since all the data included in this CD-ROM has already been factory-installed in the User bank of the Loop Phrase area of the BR-1200CD, you can easily use the Loop Phrase functions and add the audio to your tracks without using this CD-ROM.

However, in case you initialize your hard disk drive in the BR-1200CD, or accidentally erase the User Loop Phrases, you can recover all of the factory-installed Loop Phrases by importing them from this CD-ROM.

**To import Loop Phrases from this CD-ROM, refer to "Create Loop Phrase" in "Section 4 Using Rhythm." ("Using wave data on a CD-ROM/R/RW disc (Loop Phrase Import)" (p. 190))**

For more information about the factory-installed Loop Phrases in the User Bank, which are the original WAV files on this CD-ROM, please refer to "User Loop Phrase List" (p. 334).

# Before Using CD-R/RW Discs

Two different types of recordable disc can be used with the BR-1200CD—namely, CD-R discs and CD-RW discs.

## What is a CD-R disc?

CD-R (Compact Disc Recordable) is a CD to which data can be written. It is not possible to erase or move the data that has been written.

This type of disc should be used to create audio CDs that will be played on standard CD players. Playback of CD-RW discs will not be possible on this type of equipment. In addition, even if you have created an audio CD using a CD-R disc, playback will only be possible on players that support the playback of recordable discs.

## What is a CD-RW disc?

CD-RW (Compact Disc ReWritable) is a CD that can be written and erased. As a result, this type of recordable disc can be used again and again.

While you can create audio CDs using CD-RW discs, it will not be possible to play these CDs on a standard CD player. (You will, however, be able to play these discs using the BR-1200CD's CD-R/RW drive.)

## Handling the CD-R/RW Disc Drive

- Before being shipped, a cardboard insert was placed in the disk drive to protect it from vibration during transport. When you turn on the unit, press the EJECT button to remove this material before you use the CD-R/RW drive. This material should be saved, and reinserted whenever the unit is transported.
- Install the unit on a solid, level surface in an area free from vibration. If the unit must be installed at an angle, be sure the installation does not exceed the permissible range.
- Avoid using the unit immediately after it has been moved to a location with a level of humidity that is greatly different than its former location. Rapid changes in the environment can cause condensation to form inside the drive, which will adversely affect the operation of the drive and/or damage CD-R/RW discs. When the unit has been moved, allow it to become accustomed to the new environment (allow a few hours) before operating it.
- Avoid using the CD-R/RW drive in locations with high temperatures. Failure to observe this precaution can result in the drive becoming unable to operate correctly or in write errors. In addition, this type of environment can also reduce the lifespan of the CD-R/RW drive.
- Remove any disk from the drive before powering up or down.

- To avoid the risk of malfunction and/or damage, insert only CD-R/RW discs into the disc drive. Never insert any other type of disc. Avoid getting paper clips, coins, or any other foreign objects inside the drive.
- Do not touch the lens.
- When the lens is dirty, clean the lens with a commercial lens blower.
- If a write error occurs, carry out cleaning using a commercially available CD-RW drive lens cleaner.
  - \* *Note that some commercially available cleaners are intended for CD-R drives, while others are intended for CD-RW drives. Be sure to select a cleaner for CD-RW drives.*
  - \* *Never use commercially available cleaner intended for standard CD players. This type of cleaner cannot be used to clean the BR-1200CD's write lens.*
  - \* *Even if the recommended type of CD-R/RW disc is used in a perfectly normal CD-R/RW drive, the possibility of write errors cannot be completely eliminated. Please be aware that this type of problem can still occur as a result of variations in CD-R/RW drives and CD-R/RW disc manufacturing differences.*

## Handling CD-R/RW Discs

- \* *In addition to the following precautions, please also read the instructions provided with the CD-R/RW discs.*
- DO NOT play a CD-R/RW disc (CD-R/RW disc on which song data has been backed up) on a conventional audio CD player. The resulting sound may be of a level that could cause permanent hearing loss. Damage to speakers or other system components may result.
- Upon handling the discs, please observe the following.
  - Do not touch the recorded surface of the disc.
  - Do not use in dusty areas.
  - Do not leave the disc in direct sunlight or an enclosed vehicle.
- Keep the disc in the case.

## Compatibility of CD-R/RW discs and drives


- Ensure that the recommended type of CD-R/RW discs are always used. Failure to observe this precaution can lead to an increase in the frequency of write errors.
- Even when the recommended type of disc is used, there is still a possibility that write errors can occur. Please be aware that this type of problem can still result from variations in CD-R/RW drives and CD-R/RW disc manufacturing differences.
- The usage of discs with printable labels is not recommended, even if these discs are of the recommended type. Certain storage conditions can cause discs with printable labels to warp, and write errors can occur as a result.

## When you insert a CD-R/RW disc to built in CD-R/RW drive...

When you insert a CD-R/RW disc to built in CD-R/RW drive, lock the CD-R/RW disc at correct position according to "Insert a CD-R/RW disc" below. Please be careful to lock a CD-R/RW disc correctly. Unless, it is possible that the disc tray is stuck and unable to remove a CD-R/RW disc.

## Inserting a CD-R/RW disc

1. Press the eject button and open a disc tray.
2. Pull out a disc tray.
3. Locate the position of center hole of CD-R/RW disc at stopper of CD-R/RW drive.
4. Press the CD-R/RW disc downward. The CD-R/RW disc will be locked by 3 clips of the stopper.

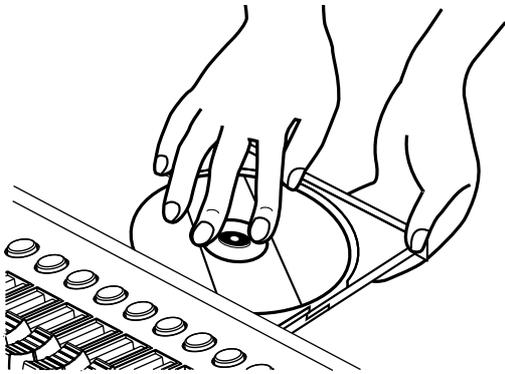


\* As a certain amount of force must be applied for insertion, always confirm that the CD-R/RW disc has been correctly inserted. Failure to properly and fully insert a disc can result in an inability to carry out writing correctly.

5. Press disc tray until it is locked in the BR-1200CD.

## Removing a CD-R/RW disc

1. Hold the stopper downward and remove a CD-R/RW disc from outer rim.

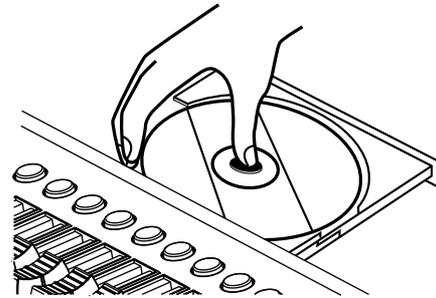

### NOTE

#### If a disc tray does not open

If the power is turned off with the disc still in the drive (such as due to a power failure), the disc tray cannot be opened by pressing the eject button. In this case, you can insert a piece of wire to force the tray open.



Emergency Eject Hole

Make sure the BR-1200CD's power has been turned OFF before attempting to use the emergency eject hole. If you insert something while the power is on, the disc could get damaged, or unexpected problems may occur.

# Contents

<b>USING THE UNIT SAFELY .....</b>	<b>2</b>
<b>IMPORTANT NOTES.....</b>	<b>4</b>
<b>Precautions Regarding the Hard Disk .....</b>	<b>6</b>
<b>Notes When Using Mics .....</b>	<b>7</b>
<b>About the CD-ROM "Discrete Drums" .....</b>	<b>7</b>
<b>Before Using CD-R/RW Discs.....</b>	<b>8</b>
<b>Introduction to the BR-1200CD.....</b>	<b>18</b>
Main Features .....	18
<b>Panel Descriptions .....</b>	<b>20</b>
Top Panel.....	20
Front Panel .....	26
CD-R/RW drive .....	26
Display.....	27
Rear Panel .....	28
<b>Common operations and display items .....</b>	<b>30</b>
Top screen .....	30
Current position.....	30
FUNCTION buttons ([F1] through [F3]).....	30
Page Scroll.....	31
Scroll Bar .....	31
Cursor.....	31
TIME/VALUE dial .....	32
VALUE 1/PAN, VALUE 2, and VALUE 3 knobs.....	32

## **Basic Operation.....33**

<b>Connecting other devices.....</b>	<b>34</b>
Precautions When Making Connections.....	35
<b>Turning on/off the BR-1200CD .....</b>	<b>36</b>
Turning on the BR-1200CD.....	36
Turning off the BR-1200CD .....	37
<b>Listening to the demo songs and selecting songs (Song Select) .....</b>	<b>38</b>
<b>Basic operation of the recorder .....</b>	<b>39</b>
Playing and stopping .....	39
Using a foot switch.....	39
Adjusting the volume .....	40
Changing the current position .....	41
Using the transport buttons.....	41
Using TIME/VALUE dial .....	42
Using markers.....	43
Changing V-Tracks.....	44
Turning tracks off temporarily (Track Mute) .....	46
<b>Preparing a song for recording (Song New).....</b>	<b>48</b>
<b>Selecting an input source for recording (Input Select) .....</b>	<b>50</b>
Recording guitar or bass guitar.....	50
Recording a solo vocal microphone .....	50
Recording guitar + Vocal.....	50
When recording stereo inputs to a stereo track.....	50
<b>Adjusting the input source volume (Input Sensitivity) .....</b>	<b>51</b>
<b>Recording with effects (Insert Effects).....</b>	<b>52</b>
When you Want to Record the Input Sounds As Is .....	53
<b>Selecting drums to act as a guide for recording .....</b>	<b>54</b>
Setting up a drum track (Track Type Select).....	54
Playing drum sounds .....	55
Selecting drum patterns .....	56

Changing the drum pattern tempo.....58  
 Set the new tempo  
 using the TIME/VALUE dial.....58  
 Setting the tempo using [TAP].....59  
 Changing the drum sounds .....60

**Adjusting the recording level ..... 62**

**Setting an audio input's  
 left-right position (Input Pan) ..... 63**

**Applying reverb for a warmer sound  
 during recording (Reverb)..... 64**

**Recording..... 66**

**Recording a new track while listening to  
 an earlier recording (Overdubbing) ..... 68**

**Saving your song (Song Save) ..... 70**  
 Saving your song from the Utility screen .....71

**Demo Song List..... 72**

## **Section 1 Recording and Playback..... 73**

**Playing back  
 repeatedly (Repeat Function) ..... 74**

**Re-recording only the portion  
 that is mistaken (Punch In/Out) ..... 75**  
 Manual punch in and punch out .....75  
 Performing manual punch in  
 and punch out using [REC] .....75  
 Performing manual punch in and  
 punch out using a foot switch.....76  
**Auto punch in and punch out .....76**  
 Specifying the section to be re-recorded.....76  
 Recording procedure .....77

**Repeating recording  
 in a specific section (Loop Recording).....78**  
 Specifying the section to be repeated.....78  
 Specifying the section to be recorded.....78  
 Performing loop recording .....78

**Using V-Tracks ..... 79**  
 Switching V-Tracks.....79  
 Assigning names  
 to V-Tracks (Track Name).....80

Changing the Final Mastering Track .....80

**Rectifying recording mistakes  
 (Undo/Redo) .....81**  
 Undo .....81  
 Redo.....81

**Mixing audio from various tracks  
 onto a stereo track (Bounce).....82**  
 Setting the left-right position  
 of each track (Pan).....82  
 Suppressing variations  
 in volume (Compressor) .....82  
 Adjusting the sound  
 of each track (Equalizer) .....83  
 Enhancing the sound (Loop Effects) .....84  
 Applying reverb .....84  
 Applying chorus, delay or doubling .....85  
 Mixing the playback tracks  
 to a single stereo track (Bounce) .....86  
 Bouncing directly to a CD-R/RW disc .....87

## **Section 2 Editing.....89**

**Placing markers in your song (Marker) .....90**  
 Positioning a marker .....90  
 Clearing markers.....90  
 Moving to markers .....90  
**Editing markers.....91**  
 Moving markers .....91  
 Naming a marker .....91  
 Assigning an audio-CD song division  
 to a marker .....91  
 Changing scenes assigned to markers .....92  
 Stopping automatically  
 at a marker (Marker Stop).....92

**Registering and recalling  
 mixer settings (Scene) .....93**  
 Registering, recalling, and deleting scenes .....93  
 Recalling a scene  
 without changing track volumes .....93  
 Recalling scenes automatically  
 during recording or playback (Auto Scene) .....94  
 Setting an Auto Scene .....94  
 Clearing an Auto Scene .....95

Disabling Auto Scene .....	95
Setting Auto Scene control of effects and track EQ.....	95
<b>Finding the start or end of a section of audio (Scrub/Preview).....</b>	<b>97</b>
Using Scrub to find the start of a section of audio .....	97
Changing the scrubbing direction .....	98
Using Scrub and Preview to find the end of a section of audio .....	98
Enabling Preview .....	98
Using Scrub and Preview.....	98
<b>Editing a recorded performance (Track Edit).....</b>	<b>99</b>
Copying audio data (Track Copy) .....	99
Moving audio data (Track Move).....	101
Exchanging audio data (Track Exchange) .....	103
Inserting a blank space between audio data (Track Insert).....	104
Maximizing the volume levels of data recorded to the tracks (Normalize) .....	105
Deleting audio data and closing the resulting gap (Track Cut) .....	107
Erasing audio data (Track Erase) .....	108
<b>Organizing your songs .....</b>	<b>110</b>
Displaying song details (Song Information) .....	110
Copying songs (Song Copy) .....	110
Erasing songs (Song Erase) .....	111
Making the most of hard disk capacity (Song Optimize) .....	112
Protecting a song (Song Protect) .....	113
Protecting a song (Song Protect) .....	113
Removing song protection.....	113
Naming a song (Song Name).....	114
Saving your song (Song Save).....	114

## **Section 3 Using Effects .... 115**

<b>Makeup of BR-1200CD effects .....</b>	<b>116</b>
<b>Using insert effects.....</b>	<b>118</b>
Effect patches and banks.....	118
Modifying insert effect settings.....	119
Changing the sound of insert effects using the VALUE knobs.....	120
Changing parameters assigned to VALUE knobs .....	120
Changing effect block connections .....	121
Saving insert effect settings.....	122
Copying insert effect settings.....	123
Changing insert effect connections (Insert Effect Location).....	123
Using an expression pedal .....	124
<b>Using loop effects .....</b>	<b>125</b>
Changing the Loop Effect Settings.....	125
Chorus/Delay/Doubling.....	125
Reverb .....	126
<b>Using track-specific compressors (Track Compressor) .....</b>	<b>128</b>
Switching track compressors between stereo and mono (Stereo Link) .....	129
<b>Using track-specific equalizers (Track EQ) .....</b>	<b>130</b>
Setting the Track EQ .....	130
Switching equalizers between stereo and mono (Stereo Link) .....	130
<b>Fixing the pitch of vocals/Adding a backing chorus to vocals (Vocal Tool Box) .....</b>	<b>131</b>
The Vocal Tool Box .....	131
Makeup of the Vocal Tool Box.....	131
Vocal Tool Box patches.....	132
Fixing the pitch of vocals (Pitch Correction) .....	132
Setting the correction method for vocal pitch (Pitch Correction Edit) .....	133
Making Detailed Settings for Pitch Correction (Correction Event Map).....	134
Applying a backing chorus to vocals (Harmony Sequence).....	136
Inserting rests in a backing chorus .....	137

Setting the application method for backing choruses (Harmony Sequence Edit) ..... 137

Making More Detailed Backing Chorus Settings (Harmony Event Map) ..... 138

Saving Vocal Tool Box settings (Patch Write) ..... 140

Copying Vocal Tool Box settings (Patch Copy)..... 141

**Recreating the characteristics of different monitor speakers (Speaker Modeling) ..... 142**

    Speaker Modeling patches ..... 143

    Using Speaker Modeling ..... 143

        Turning off Speaker Modeling..... 143

    Modifying Speaker Modeling settings ..... 143

    Saving Speaker Modeling settings ..... 144

    Copying Speaker Modeling settings ..... 145

**Mastering..... 146**

    Before using the Mastering Tool Kit ..... 146

    Selecting the Mastering Tool Kit..... 146

    Adjusting the Mastering Tool Kit Effects and Volume ..... 147

    Mastering ..... 148

    Modifying Mastering Tool Kit settings (Edit)..... 149

        Editing patch settings ..... 149

    Saving Mastering Tool Kit settings ..... 150

    Copying Mastering Tool Kit settings ..... 151

    Using Auto Fade In/Out ..... 151

        Performing automatic fade-in (Auto Fade In) ..... 151

        Performing automatic fade-out (Auto Fade Out)..... 152

## Section 4 Using Rhythm... 153

**Makeup of Drum/Bass/Loop Phrase..... 154**

    Drums..... 154

    Bass ..... 154

    Loop Phrases ..... 155

**Rhythm arrangements ..... 156**

    Pattern mode and Arrangement mode..... 156

**Using drums ..... 157**

    Setting the track type ..... 157

    Playing drum sounds ..... 157

    Selecting a drum kit ..... 158

    Selecting drum patterns ..... 158

    Changing the drum pattern tempo..... 159

        Setting the tempo using [TAP] ..... 159

**Creating drum patterns ..... 160**

    Preparing for recording ..... 160

    Creating drum patterns using real-time recording ..... 161

        Practicing before recording (Rehearsal)..... 162

        Recording in perfect time (Quantize)..... 162

    Creating drum patterns using step recording ..... 163

    Correcting drum patterns (Microscope) ..... 165

    Changing the drum pattern's groove (Swing) ..... 167

    Changing a drum pattern's name ..... 168

    Copying drum patterns..... 168

    Deleting drum patterns ..... 169

    Loading drum patterns from the CD-R/RW drive (SMF Import)..... 169

**Using bass ..... 171**

    Setting the track type ..... 171

    Playing bass ..... 171

    Selecting bass sounds ..... 172

    Selecting bass patterns ..... 172

    Specifying bass pattern chords ..... 173

    Changing the bass pattern's tempo ..... 173

**Creating bass patterns ..... 174**

    Preparing for recording ..... 174

Creating bass patterns using real-time recording.....	175	Erasing All Pattern Assignments at One Time.....	200
Practicing before recording (Rehearsal).....	176	Inserting patterns.....	200
Recording in perfect time (Quantize).....	176	Inputting chords .....	200
Creating bass patterns using step recording.....	177	Changing and moving chords .....	201
Correcting bass patterns (Microscope) .....	179	Deleting chords .....	201
Changing the bass pattern's groove (Swing) .....	180	Inserting chords .....	202
Changing a bass pattern's name .....	181	Assembling Loop Phrases .....	202
Copying bass patterns .....	182	Canceling Loop Phrase allocations .....	204
Deleting bass patterns .....	182	Inserting Loop Phrases .....	204
Loading bass patterns from the CD-R/RW drive (SMF Import) .....	183	Copying a Loop Phrase from a rhythm arrangement to an audio track .....	204
<b>Using Loop Phrases .....</b>	<b>185</b>	Modifying all of the loop phrases in the current rhythm arrangement (Arrangement Modify).....	206
Setting the track type .....	185	Naming and saving rhythm arrangements .....	207
Playing Loop Phrases.....	185	Copying a rhythm arrangement.....	208
Selecting a Loop Phrase.....	186	Deleting a rhythm arrangement.....	208
Adjusting the Loop Phrase and Drum Volume Balance .....	186	<b>Setting tempos and beats for individual measures (Tempo Map/Beat Map) ...</b>	<b>209</b>
Changing the Loop Phrase tempo .....	187	Setting tempos for individual measures (Tempo Map).....	209
Setting the tempo using [TAP].....	187	Setting beats for individual measures (Beat Map).....	210
<b>Creating Loop Phrases .....</b>	<b>188</b>	<b>Using a metronome.....</b>	<b>211</b>
Using a portion of an audio track.....	188	Setting the track type .....	211
Using wave data on a CD-ROM/R/RW disc (Loop Phrase Import) .....	190	Playing a metronome .....	211
Reading all files at once.....	191	Selecting metronome sounds .....	212
Specifying and modifying the source loop phrase (Time Modify).....	192	Adjusting the Metronome and Loop Phrase Volume Balance.....	212
Modifying Loop Phrase settings.....	193	<b>Creating Drum and Bass Patterns Simply and Easily (EZ Compose) .....</b>	<b>213</b>
Assigning Loop Phrases to track buttons .....	194	What is EZ Compose? .....	213
Copying Loop Phrases .....	194	Using EZ Compose .....	213
Erasing Loop Phrases .....	195	Creating a pattern.....	213
<b>Setting the Universal Beat for Drums, Bass, and Loop Phrases.....</b>	<b>196</b>	Adding a chord progression.....	214
<b>Using rhythm arrangements .....</b>	<b>197</b>	Adding a fill-in .....	214
Selecting a rhythm arrangement.....	197	Pasting In Rhythm Arrangements .....	215
Changing the rhythm arrangement tempo .....	197		
Setting the tempo using [TAP].....	198		
<b>Creating rhythm arrangements.....</b>	<b>199</b>		
Assembling drum and bass patterns .....	199		

## Section 5 Using the CD-R/RW Drive... 217

### Creating Audio CD ..... 218

Precautions .....218

Setting the time between songs (Pre-Gap) .....218

Writing Songs to Discs .....219

Writing songs individually  
(Track At Once) .....219

Writing several songs at once  
(Disc At Once By Song) .....220

Creating Audio CDs with Audio Tracks  
Separated by Markers (Disc At Once by Marker).....222

Playing Back Audio CDs.....224

Enabling playback on CD players (Finalize) .....225

### Using the CD-R/RW drive to exchange data ..... 226

Saving Recorded Songs to CD-R/RW Discs .....226

Backing up a song (Song Backup) .....226

Reading backup songs  
back into the hard disk (Song Recover) .....227

Saving Data on the Hard Disk  
to CD-R/RW Discs .....228

Saving Data  
to CD-R/RW Discs (User Backup) .....228

Reading backup user data  
back into the hard disk (User Recover).....229

Saving the Entire Contents  
of the Hard Disk to a CD-R/RW Disc .....230

Saving the Hard Disk Contents  
to a CD-R/RW Disc (HDD Backup) .....230

Reading backed-up hard disk contents  
back into the hard disk (HDD Recover) .....231

Copying and writing waveform data.....232

Copying waveform data from a computer  
to the audio tracks (WAV/AIFF Import) .....232

Copying audio track waveform data  
to computers (WAV/AIFF Export) .....233

Playing SMFs using external  
MIDI instruments (SMF Player).....236

Erasing data from a  
CD-RW disc (CD-RW Erase) .....237

Setting the time until the  
CD-R/RW drive stops (CD Hold Time).....238

### Importing songs from CDs to audio tracks.....239

## Section 6 Using MIDI .....241

### MIDI fundamentals.....242

What is MIDI? .....242

MIDI connectors .....242

MIDI channels.....242

MIDI Implementation Charts .....242

### Playing drum and bass patterns on external MIDI sound module .....243

Drum sounds and note numbers .....244

### Synchronizing external MIDI sequencers and rhythm machines .... 245

Synchronizing a MIDI device to the rhythm's  
tempo using the MIDI timing clock.....245

Synchronizing a MIDI sequencer  
to the playback time using MTC .....246

Changing the TIME field display.....248

Synchronizing a MIDI device by recording its  
tempo changes on the BR-1200CD (Sync Track) .....248

Setting the starting time  
of synchronization (Sync Offset) .....250

### Controlling MMC-compatible devices from the BR-1200CD ..... 251

### Controlling track volumes via MIDI (MIDI Fader) ..... 252

Turning MIDI Fader on and off.....252

Setting the MIDI channel for MIDI Fader .....253

Confirming the current fader positions .....253

### Inputting drum and bass patterns from a MIDI keyboard (MIDI Recording) ..... 254

### Using MIDI to Control the Switching of the Insert Effects (Effects Program Change)..... 255

**Section 7 Using USB ..... 257**

**Before Using USB (Overview) ..... 258**  
 Operations that can be performed via USB.....258  
 Compatible OS.....258  
 Connecting a computer.....259  
 Structure of data  
 on the BR-1200CD's hard disk .....259

**With Windows ..... 260**  
 Backing up the BR-1200CD's data.....260  
 Reading backup data back into the  
 BR-1200CD from the PC (Recover).....261  
 Saving BR-1200CD track data in  
 WAV/AIFF format (WAV/AIFF Export) .....263  
 Loading WAV/AIFF files in  
 BR-1200CD tracks (WAV/AIFF Import) .....265

**With Macintosh ..... 267**  
 Backing up the BR-1200CD's data.....267  
 Reading backup data back into the  
 BR-1200CD from the PC (Recover).....268  
 Saving BR-1200CD track data in  
 WAV/AIFF format (WAV/AIFF Export) .....270  
 Loading WAV/AIFF files in  
 BR-1200CD tracks (WAV/AIFF Import) .....271

**Section 8  
Other Convenient Functions .... 273**

**Adjusting the display's contrast ..... 274**

**Tuning instruments (Tuner) ..... 275**  
 Setting the reference pitch .....275  
 Tuning.....275

**Mixing audio-device output with the  
BR-1200CD's output (Audio Sub Mix)..... 277**

**Using condenser microphones  
(Phantom Power) ..... 278**

**Creating a MD protected  
from digital copying ..... 280**

**Changing the content of the  
level meter display (Pre/Post Fader) ..... 281**

**Initializing  
all BR-1200CD settings (Initialize) ..... 282**

**Performing hard disk operations.....284**  
 Viewing information about the  
 hard disk (Hard Disk Information).....284  
 Initializing the hard disk (Disk Initialize) .....285  
 Initializing only one of multiple partitions .....286

**Section 9 Appendices ....287**

**Insert effect algorithm list.....288**  
**BANK: GUITAR .....288**  
 1. COSM OD GUITAR AMP.....288  
 2. ACOUSTIC SIM.....288  
 3. BASS SIM.....288  
 4. COSM COMP GUITAR AMP.....289  
 5. ACOUSTIC GUITAR.....289  
 6. BASS MULTI.....289  
 7. COSM BASS AMP.....289  
 8. COSM OD BASS AMP.....290  
 9. COSM COMP BASS AMP.....290

**BANK: MIC.....290**  
 10. VOCAL MULTI .....290  
 11. VOICE TRANSFORMER .....291  
 12. COSM VOCAL COMP .....291  
 13. MIC MODELING .....291

**BANK: STEREO.....291**  
 14. STEREO MULTI .....291  
 15. LO-FI BOX.....291

**BANK: SIMUL .....292**  
 16. VO+GT.AMP .....292  
 17. VO+AC.SIM .....292  
 18. VO+ACOUSTIC .....292

**Insert effect parameter functions .....293**  
 Acoustic Guitar Simulator .....293  
 Acoustic Processor .....293  
 3 Band Equalizer .....294  
 4 Band Equalizer .....294  
 Bass Simulator.....294  
 Bass Cut Filter.....294  
 Chorus.....295  
 2x2 Chorus.....295  
 Compressor .....296

COSM Comp/Limiter (COSM Compressor/Limiter) .....	296	<b>Mastering Tool Kit parameter functions ....</b>	<b>315</b>
COSM Overdrive/Distortion.....	297	Equalizer.....	315
COSM PreAmp&Speaker .....	297	Bass Cut Filter.....	316
De-esser .....	299	Enhancer .....	316
Defretter .....	300	Input.....	316
Delay .....	300	Expander.....	316
Distance .....	301	Compressor .....	317
Doubling .....	301	Mixer .....	317
Enhancer.....	301	Limiter.....	317
Flanger .....	302	Output.....	317
Foot Volume .....	302	<b>Effect parameters</b>	
Humanizer .....	302	<b>assigned to VALUE knobs .....</b>	<b>318</b>
Limiter.....	302	<b>Insert Effect Patch List.....</b>	<b>327</b>
Low Cut Filter.....	303	<b>Vocal Tool Box Patch List.....</b>	<b>330</b>
Lo-Fi Box.....	303	<b>Speaker Modeling Patch List .....</b>	<b>330</b>
Mic Converter.....	304	<b>Mastering Tool Kit Patch List.....</b>	<b>330</b>
Noise Suppressor.....	304	<b>Preset Rhythm Arrangement List .....</b>	<b>331</b>
Octave .....	304	<b>Preset Drum Pattern List.....</b>	<b>332</b>
Pan .....	304	<b>Preset Bass Pattern List .....</b>	<b>333</b>
Phaser.....	305	<b>User Loop Phrase List .....</b>	<b>334</b>
Pickup Simulator.....	305	<b>Harmony Sequence Chord Note List.....</b>	<b>336</b>
Pitch Shifter .....	306	<b>Troubleshooting .....</b>	<b>337</b>
Preamp .....	307	<b>Error Messages .....</b>	<b>340</b>
Ring Modulator.....	308	<b>MIDI Implementation.....</b>	<b>343</b>
Short Delay .....	308	<b>Specifications .....</b>	<b>349</b>
Slow Gear.....	308	<b>Index.....</b>	<b>351</b>
Speaker Simulator .....	308		
Sub Equalizer .....	309		
Tremolo.....	309		
Tremolo/Pan .....	309		
Uni-V .....	309		
Vibrato .....	310		
Voice Transformer.....	310		
Wah.....	310		
<b>Speaker Modeling parameter functions ....</b>	<b>313</b>		
SP Modeling (speaker modeling).....	313		
Bass Cut Filter .....	314		
Low Freq Trimmer.....	314		
High Freq Trimmer .....	314		
Limiter.....	314		

# Introduction to the BR-1200CD

## Main Features

### ■ Ease of use

The BR-1200CD has been designed so that even beginners will be able to use it in the same way as a standard tape recorder.

Regardless of whether you want to record put together a demo, or create a finished audio CD, you will be able to put the BR-1200CD to use as soon as you take it out of the box. Novices and experts alike can fully enjoy the thrilling world of digital recording using this advanced digital audio workstation.

### ■ Digital processing of audio

In addition to a digital mixer and a digital hard-disk recorder, the BR-1200CD also features a programmable drum and bass sequencer and comes with a full complement of digital effects. All the steps needed for professional-level music recording, such as the editing of recorded performances, track bouncing, the application of effects, and mix-down can be carried out completely within the digital domain, thus ensuring that there will be no degradation in the quality of your audio.

### ■ CD-quality digital sound

The BR-1200CD records and plays back digital audio at a sampling rate of 44.1 kHz and with an uncompressed linear bit depth of 16 bits—exactly the same as commercially available music CDs. Thanks to this, you can record musical performances with no loss of audio quality whatsoever.

### ■ 12-track simultaneous playback

The BR-1200CD digital audio workstation features 8 tracks for mono recording and playback in addition to 4 tracks for recording and playback in stereo; furthermore, all 12 of these tracks can be played back at the same time.

### ■ V-Tracks

Each of the BR-1200CD's audio tracks provides 16 V-Tracks (or virtual tracks), allowing you to record as many as 192 (12 x 16) different performances. If, for example, you want to record multiple takes of a guitar solo so that the best can be chosen later on, this feature allows you to do so with ease.

### ■ A host of digital effects

The BR-1200CD provides you with a full range of powerful effects for many different situations. In specific terms, Insert Effects are used during recording, Loop Effects work like standard send/return effects, the Mastering Tool Kit allows you to master finished songs, the Vocal Tool Box cleans up vocal tracks, and Speaker Modeling allows you to hear how your songs would sound on different speaker systems. With this arsenal at your disposal, you will be able to make professional-sounding recordings using just the BR-1200CD—without having to rely on external effects processors. In addition to COSM amplifier modelings inherited straight from the BOSS GT-6/GT-6B, the Insert Effects feature a wealth of other modelings and effects algorithms. And rather than being restricted to use with guitars alone, the Insert Effects also provide wide-ranging support for 8-track simultaneous recording, microphone modeling, and many other applications. What's more, the Loop Effects include spatial effects such as chorus, delay and reverb, which are vital for proper stereo mixdown.

### ■ Vocal Tool Box for better-sounding vocals

The BR-1200CD's Vocal Tool Box empowers you with the ability to fix incorrect pitches in recorded vocal performances and to automatically apply vocal harmonies to your vocal tracks.

### ■ Creation of audio and backup CDs

The BR-1200CD comes with its own CD-R/RW drive already installed, and you can use this to easily create audio CDs by burning your finished songs onto CD-R discs. In addition, the CD-R/RW drive also allows you to use CD-R/RW discs to conveniently back up songs and song data.



Before you use the CD-R/RW drive, it is important that you first of all read "Before Using CD-R/RW Discs" (p. 8).

### ■ Mastering Tool Kit for professional-sounding CDs

The Mastering Tool Kit integrated into the BR-1200CD allows you to make final adjustments to the volume and other characteristics of mixed songs. Featuring an equalizer and limiter in addition to a 3-band compressor, this tool kit makes it easy to balance the volume and power of songs before they are written to an audio CD.

## ■ Powerful editing functions

With the BR-1200CD, you can copy, move, and erase audio, and perform many other editing operations that are only possible with full digital recorders. For example, you could repeat a certain four-measure drum pattern over and over to create a break-beats sound; alternatively, you could easily position the exact same chorus section at the beginning and end of a song. What's more, the BR-1200CD uses a process known as Non-Destructive Editing to store the data from before a edit, and as a result, you can use functions known as Undo and Redo to cancel and restore edits.



"Rectifying recording mistakes (Undo/Redo)" (p. 81)

## ■ Saving of mixer settings

The term Scene is used to describe a batch of BR-1200CD mixer and effect settings, and up to 100 scenes can be set up and stored for each song. Accordingly, these settings can be conveniently recalled whenever you are balancing volumes during mix-down, comparing the sound of different effects, or performing other similar operations. In addition, another BR-1200CD function known as Auto Scene allows registered scenes to be recalled automatically during playback.



"Registering and recalling mixer settings (Scene)" (p. 93)

## ■ Rapid relocation of the current position

The BR-1200CD's Marker function allows you to position as many as 100 different markers at various points within your song. For example, if you position markers at the end of the intro, the beginning of the guitar solo, and other similar points, you will be able to jump to these points in an instant whenever you want to listen to the corresponding sections again. You can also assign names to any or all of these markers, and this proves extremely helpful during involved editing sessions.



"Placing markers in your song (Marker)" (p. 90)

## ■ PCM Drum/Bass

A PCM Drum/Bass (p. 154) capable of sequencing drum and bass patterns has been integrated into the BR-1200CD, and you will find this extremely useful whenever you need to put together songs based on phrases or other ideas that can come to you at any time. Once you have chosen the drum and bass patterns that best suit your idea, you can easily set the tempo to the right speed. What's more, you can also combine different drum and bass patterns to create a rhythm-section performance with interesting variations at appropriate points during your song, and the PCM Drum/Bass also allows you to set up chord progressions for the bass part. Once you have played and recorded tracks along with the BR-1200CD's PCM Drum/Bass, it will then be very easy to perform edits at measure positions.



"Section 4 Using Rhythm" (p. 153)

## ■ Loop phrase functionality


The BR-1200CD lets you import commercially available loop phrase data using the CD- R/RW drive and then save this data on the internal hard disk. The tempo for these loop phrases can then be freely set to the required speed so that they can be played in sync with your recorded tracks. Using this function, you can easily create songs by layering performances over break beats or other rhythm patterns.

## ■ Chromatic tuner

Featuring a chromatic tuner covering the range from C1 to B6, the BR-1200CD allows you to quickly tune any guitar or bass guitar connected to it (p. 275).

# Panel Descriptions

## Top Panel

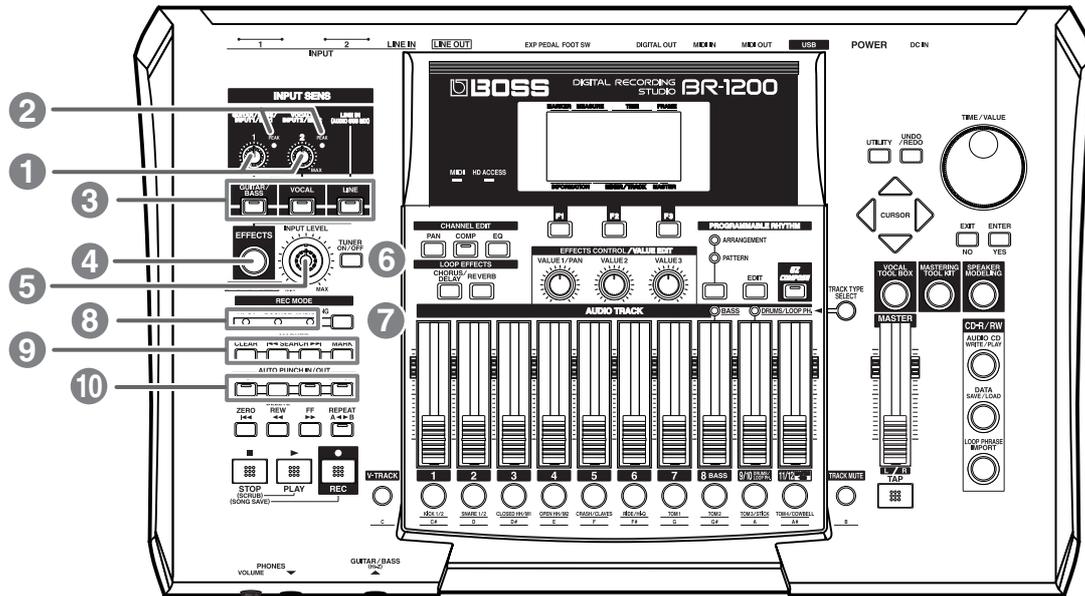

### 1. INPUT SENS knobs

These knobs are used to adjust the sensitivity of the corresponding input jacks. Note that the INPUT SENS 1 knob also adjusts the sensitivity of the GUITAR/BASS jack.

### 2. PEAK indicators

These indicators allow you to confirm whether or not the audio being input via the corresponding input jack is distorting, and they do this by lighting up when the volume reaches the distortion level of -6 dB. Use the INPUT SENS knobs to adjust the input sensitivity in such a way that each PEAK indicator only lights up occasionally when the corresponding instrument is being played hard.

### 3. INPUT SELECT buttons

Use these buttons to select the input source (input jack) that you wish to record. The indicator of the selected button will light. If a lit INPUT SELECT button is pressed, it will turn off and the corresponding input source(s) will be muted.

#### GUITAR/BASS:

This button is used to select either the GUITAR/BASS jack for recording guitar or bass or the MIC 1 jack for recording from a line-in or a microphone. Note that the GUITAR/BASS jack will be selected automatically when an instrument is connected to it.

\* When either [GUITAR/BASS] or [VOCAL] is alone selected, Adaptive Focus (AF) will be activated for recording.

#### MEMO

#### What is AF method (Adaptive Focus method)?

Adaptive Focus is a unique Roland/BOSS technology that allows the signal noise (S/N) ratios of AD and DA converters to be vastly improved.

#### VOCAL:

This button is used to select the MIC 2 jack for recording from a line-in or a microphone.

#### SIMUL:

SIMUL mode is activated by holding down [GUITAR/BASS] and pressing [VOCAL]. In this condition, either the GUITAR/BASS or the MIC 1 jack will be selected together with the MIC 2 jack. In other words, two inputs will be simultaneously selected. Note that the GUITAR/BASS jack will be selected automatically when an instrument is connected to it.

#### LINE:

This button is used to select the LINE jack. In this case, the audio from the input source recorded on the track selected for recording.

### 4. EFFECTS button

Use this button to select an insert effects' patch (p. 118) and to call up the screen for editing effects settings and the like.

## 5. INPUT LEVEL knob

Adjusts the volume of all input sources, and the volumes determined using this knob are the actual volumes that will be recorded on tracks.

## 6. TUNER ON/OFF button

Use this button to turn the tuner (p. 275) on and off.

## 7. REC MODE (recording mode) button

This is used to prepare the BR-1200CD for recording. In addition, it also allows you to select one of the following three recording modes:

### INPUT:

Allows you to record the instruments and microphones connected to the input jacks. The units is normally used in this mode.

### BOUNCE:

Allows you to mix the audio from several tracks and to record it on one or two different tracks.

### MASTERING:

Allows you to master your finished songs using the BR-1200CD's Mastering Tool Kit.

## 8. REC MODE (recording mode) indicators

Allow you to confirm which recording mode is currently selected. Whenever you change the recording mode using the REC MODE button, the INPUT, BOUNCE, or MASTERING indicator will light up accordingly.

## 9. MARKER

The MARKER section is used to make settings for the marker function.

### MARK button:

Use this button to position a marker at any point within your song. Each time this button is pressed, the BR-1200CD will place a marker at the current position.

Markers are numbered in sequence from the beginning of the song. In addition, you can also assign names to individual markers. If a marker has been placed at the current position, the corresponding number will appear in the display's Marker box; if no marker has been placed here, the Marker box will show the number of the last marker before the current position. Appropriately placed markers allow you to quickly confirm which section of the song is being played.



"Placing markers in your song (Marker)" (p. 90)

### SEARCH ◀◀ button:

Use this button to jump back to the previous marker before the current position.

### SEARCH ▶▶ button:

Use this button to jump forward to the next marker after the current position.

### CLEAR button:

Use this button to delete markers. Specifically, the marker currently being shown in the display's Marker box will be deleted when this button is pressed.

## 10. AUTO PUNCH IN/OUT

The AUTO PUNCH IN/OUT section is used to make settings for the auto punch in/out function.

### ON/OFF button:

This button is used to turn the auto punch function on and off. The button's indicator will light up when auto punch is on.

### IN button:

Sets the punch-in position. When pressed, the current position is registered as the punch-in position and the button's indicator lights up. Once a punch-in position has been registered, you can jump to this position at any time by pressing [IN].


### OUT button:

Sets the punch-out position. When pressed, the current position is registered as the punch-out position and the button's indicator lights up. Once a punch-out position has been registered, you can jump to this position at any time by pressing [OUT].

### DELETE button:

Deletes the current punch-in or punch-out position. To do this, hold down [DELETE] and then press either [IN] or [OUT] to delete the corresponding auto punch position. When the [IN] or [OUT] setting is cleared in this way, its indicator will be turned off.

## Panel Descriptions

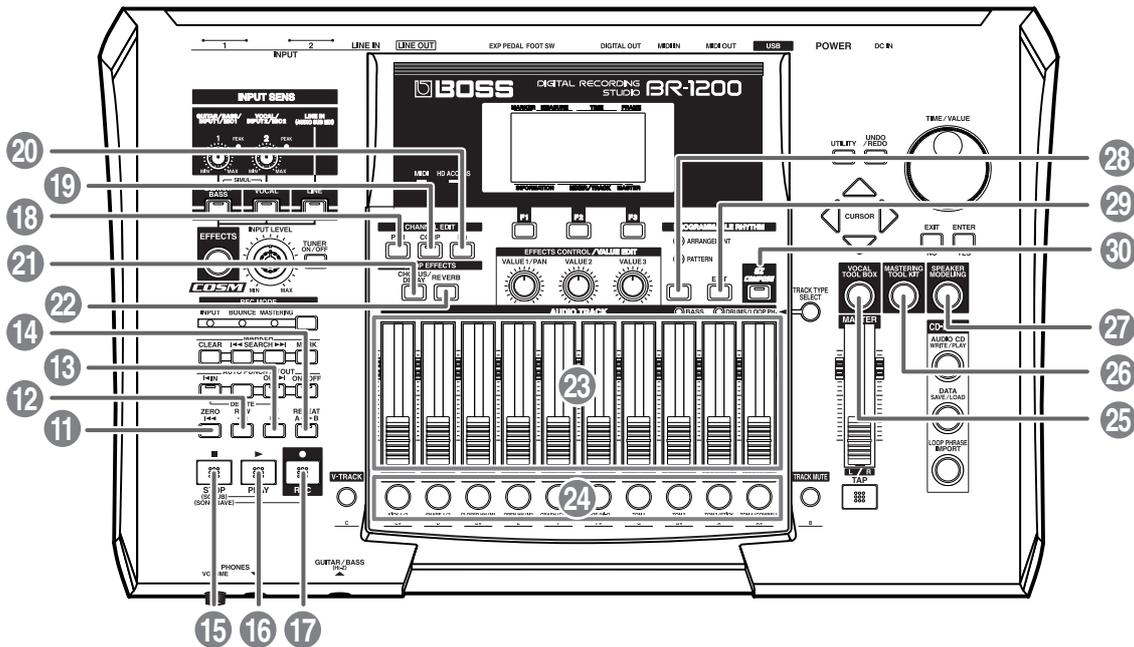

### 11. ZERO button

Press to jump to the very beginning of the song.

### 12. REW button

The song will rewind while you hold down this button.

### 13. FF button

The song will fast-forward while you hold down this button.

### 14. REPEAT button

Selects a section of your song to listen to repeatedly (“Playing back repeatedly (Repeat Function)” (p. 74)).

This function is useful when you want to record several times using punch-in and punch-out (p. 75) before saving the best performance.

### 15. STOP button

This button stops song playback or recording.

### 16. PLAY button

Starts playback of your song. Alternatively, if [REC] has been pressed and its indicator is flashing, you can also start recording by pressing [PLAY]. During playback or recording, this button’s indicator will light up in green.

### 17. REC (record) button

This is the BR-1200CD’s record button, and in addition to normal recording, it is also used to perform manual punch-in and punch-out. This button’s indicator will turn red and begin to flash when the BR-1200CD is standing by to start recording, and this will change to a steady red when recording is actually started.

### 18. PAN button

This calls up a screen that allows settings to be made for the pan (i.e., the left-right position) of each playback track and input source (p. 82).

### 19. COMP (compressor) button

This calls up a screen for setting of each track’s compressor parameters so that variations in volume may be suppressed (p. 82).

### 20. EQ (equalizer) button

This calls up a screen that allows setting of each track’s equalizer parameters so that the sound of the corresponding track can be adjusted (p. 83).

### 21. CHORUS/DELAY button

This calls up either a screen for setting of the send level from each track to the loop effects chorus/delay, or a screen that allows selection of chorus or delay effects and the setting of parameters for these effects (p. 125).

## 22. REVERB button

This calls up either a screen for setting of the send level from each track to the loop effect reverb, or a screen that allows reverb parameters to be set (p. 126).

## 23. AUDIO TRACK MIXER faders 1–8, 9/10, 11/12

These faders are used to control the volumes of the corresponding tracks during playback.

Since tracks 9/10 and 11/12 are fixed as stereo tracks, a single fader controls the volume of both tracks in the stereo pair simultaneously. In addition, the faders for tracks 8 and 9/10 are also used to control the volume of rhythm arrangement components such as loop phrases, bass, and drums.



In this manual, the term “track faders” is used to refer to the AUDIO TRACK MIXER faders.

## 24. Track buttons 1–8, 9/10, 11/12

Track buttons 1 through 8, 9/10, and 11/12 are used to select tracks for recording or for the setting of parameters.

Furthermore, they can also be used to select drum and/or bass-guitar sounds when you are creating a drum pattern or a bass pattern. Since tracks 9/10 and 11/12 are fixed as stereo tracks, a single button simultaneously selects both tracks in the stereo pair. When a track has been selected for recording, its track button will turn red and start to flash, and when recording is started, this will change to a steady red lighting pattern. Then, when recording has ended, the track button will flash in orange and green. The relationship between the type of illumination and the track status is as follows:

### Off:

The track contains no audio data (i.e., it has not been recorded on).

### Steady green:

The track contains (recorded) audio data.

### Flashing green:

The track contains (recorded) audio data but is currently muted.

### Flashing red:

The track has been selected for recording and the BR-1200CD is in standby mode for recording.

### Steady red:

The track is being recorded to.

### Flashing orange and green:

The track contains recorded audio data and is currently selected for recording.

### Flashing orange:

The track contains recorded audio data, is selected for recording, but is currently muted.

## 25. VOCAL TOOL BOX button

Use this button to turn the Vocal Tool Box on and off, and also to call up a screen for setting of its parameters.



“Fixing the pitch of vocals/Adding a backing chorus to vocals (Vocal Tool Box)” (p. 131)

## 26. MASTERING TOOL KIT button

Use this button to turn the Mastering Tool Box on and off, and also to call up a screen for setting of its parameters.



“Mastering” (p. 146)

## 27. SPEAKER MODELING button

Use this button to turn the Speaker Modeling on and off, and also to call up a screen for setting of its parameters.



“Recreating the characteristics of different monitor speakers (Speaker Modeling)” (p. 142)

## 28. ARRANGEMENT/PATTERN button

Use this button to switch between Arrangement mode and Pattern mode for rhythm arrangements. For more detailed information regarding these modes, refer to p. 156.

## 29. EDIT button

Used to input and set parameters for Drum, Bass, Loop Phrase and rhythm arrangements (p. 153).

### When ARRANGEMENT indicator is lit up:

Press [EDIT] to call up a screen for creating rhythm arrangements and editing the relevant parameters.


### When PATTERN indicator is lit up:

Press [EDIT] to call up a screen for creating drum and/or bass patterns and editing the relevant parameters.

## 30. EZ COMPOSE button

This enables the “Easy Compose function,” a handy feature that makes creating rhythm patterns and arrangements a snap (p. 213).

## Panel Descriptions

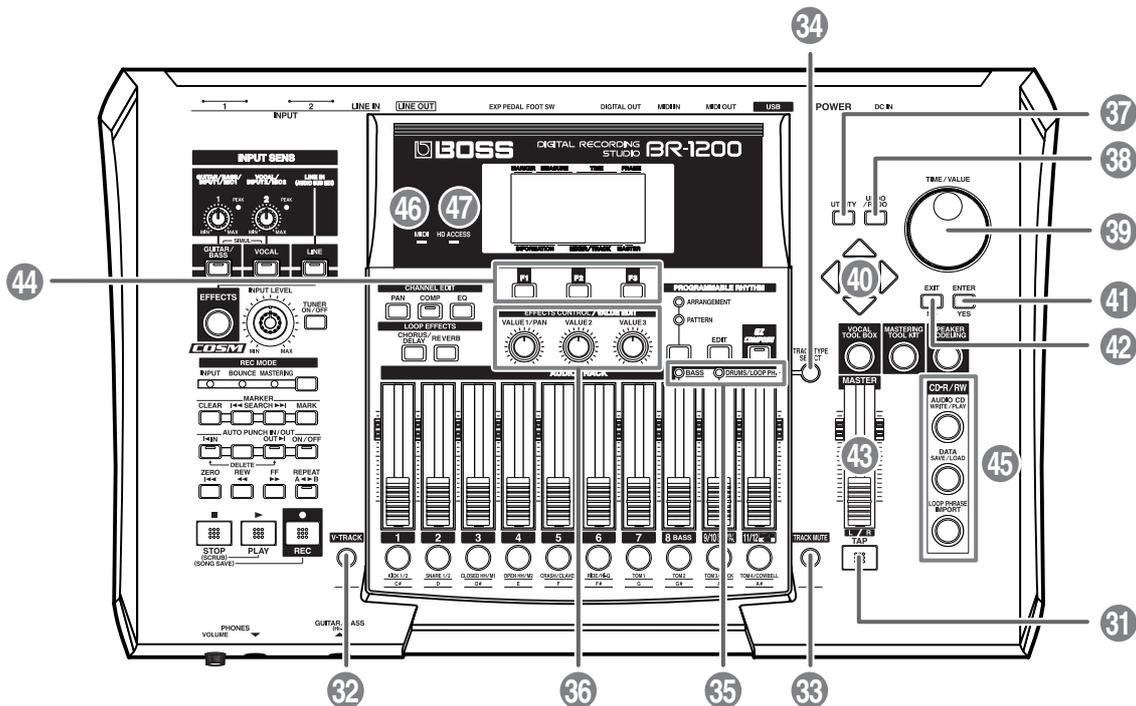

### 31. TAP button

By tapping this button along with your song, you can set the tempo for the Drum, Bass and Loop Phrases (p. 159, p. 173, p. 187).

### 32. V-TRACK button

Calls up a screen for selecting V-Tracks (p. 44).

### 33. TRACK MUTE button

If you hold down [TRACK MUTE] and press a track button that is currently lit in green, the corresponding track will be muted (or silenced) during playback. You can then perform the same procedure once again to cancel muting. While a track is muted, its track button will flash in green (p. 46).

#### MEMO

- If a track being recorded is muted, the BR-1200CD will automatically cancel muting when recording has ended.
- Track Mute is not enabled for tracks other than those whose Track Type is set to AUDIO (p. 157, p. 171, p. 185). The Track Mute is also cancelled with the track type is changed.

### 34. TRACK TYPE SELECT button

Calls up a screen for selecting track types. Tracks 8 and 9/10 can each be set to one of two track types—namely, tracks used for recording audio or tracks used for rhythm arrangement components such as Loop Phrases, Bass, and Drums. Possible settings for these tracks are as follows:

<b>Track 8</b>	Audio track or Bass track
<b>Track 9/10</b>	Audio track or Drum (metronome) & Loop Phrase track



“Section 4 Using Rhythm” (p. 153)

### 35. TRACK TYPE indicators

These indicators allow you to confirm the current track types for Tracks 8 and 9/10.

	Lit	Unlit
<b>Track 8</b>	Bass	Audio track
<b>Track 9/10</b>	Drum (metronome) & Loop Phrase track	Audio track

---

### **36. VALUE knobs**

When the icons for these knobs are displayed on-screen, use these knobs to change setting values.

---

### **37. UTILITY button**

Calls up a wide range of functions such as track editing, organization of songs, and the like.

---

### **38. UNDO/REDO button**

Use this button to restore your song's previous condition by canceling the last audio recording or editing operation. In addition, pressing [UNDO/REDO] a second time restores the canceled audio or edit ("Rectifying recording mistakes (Undo/Redo)" (p. 81)).

---

### **39. TIME/VALUE dial**

This dial is normally used to move the current position within the song (i.e., to perform fast forward or rewind). However, it is also used to modify values of the various function settings.

---

### **40. CURSOR buttons**

Press these buttons to move the cursor in the corresponding direction.

---

### **41. ENTER/YES button**

Press this button to confirm a selection or a value being entered.

---

### **42. EXIT/NO button**

Press this to return to the previous screen or to reject an operation.

---

### **43. MASTER fader**

Controls the overall volume of your song.

---

### **44. F1-F3 buttons**

Pressing these buttons while the functions are indicated in the bottom part of the screen executes the corresponding function.

---

### **45. CD-R/RW**

---

#### **AUDIO CD WRITE/PLAY button**

This button is used when you want to create or play an audio CD.

---

#### **DATA SAVE/LOAD button**

Use this button whenever you want to save recorded songs to a CD-R/RW disc or to reload the saved songs to the BR-1200CD.

---

#### **LOOP PHRASE IMPORT button**

Use this button to import break-beats and various other types of Loop Phrase.

---

### **46. MIDI indicator**

This indicator will light up whenever the BR-1200CD receives MIDI data via the MIDI IN connector.

---

### **47. HD ACCESS indicator**


This indicator will light up whenever the BR-1200CD is reading or writing on the hard disk.

---

#### **NOTE**

You should never turn off the power while this indicator is lit. Failure to observe this precaution can result in any or all of the data on the hard disk being permanently damaged or lost completely.

### Front Panel

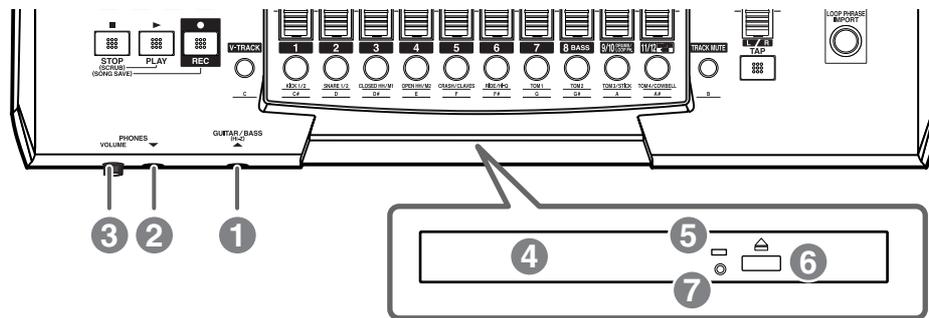

#### 1. GUITAR/BASS jack

This high-impedance input jack is used to directly connect guitar or bass.

##### NOTE

The MIC 1 jack (or XLR connector) and the GUITAR/BASS jack share the same internal circuitry, and when a connection has been made to both of these input jacks, the GUITAR/BASS jack will be selected automatically.

#### 2. PHONES jack

Use this jack to connect separately sold headphones.

#### 3. PHONES VOLUME knob

Adjusts the volume for headphones connected to the PHONES jack.

#### CD-R/RW drive

The BR-1200CD uses this drive unit to read from, write to, and play CD-R/RW discs.

##### NOTE

Before you use the CD-R/RW drive, it is important that you first of all read "Before Using CD-R/RW Discs" (p. 8).

#### 4. Disc tray

Place the CD-R/RW discs on this tray.

#### 5. Access indicator

This indicator will light up whenever data is being read from or written to a CD-R/RW disc.

#### 6. EJECT button

Press this button to eject a CD-R/RW disc from the drive unit. Note that it will only be possible to eject the CD-R/RW disc while the BR-1200CD is powered up.

If you need to eject the disc after the power has been turned off, turn the BR-1200CD back on and then press the EJECT button. If excessive force is used to extract a disc, you risk causing damage to the drive.

#### 7. Emergency eject hole


This hole is used when the disc tray must be opened in an emergency.

It must not, therefore, be used on a regular basis and should be treated as a last resort only when the disc cannot be ejected in any other way (p. 9).

## Display

Displays the menu screen, parameter setting screen, or other information, depending on the type of settings being made.

If the screen content is difficult to see, refer to “Adjusting the display’s contrast” (p. 274).

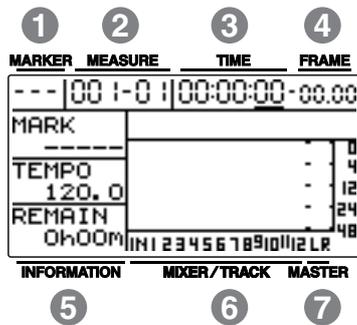

### 1. Marker

This box displays the number of the marker at the current position. If no marker has been placed at this position, the number of the last marker before the current position is shown. If, however, the current position is in front of Marker No. 001 or if no markers have been registered, “- - -” will be displayed here.

### 2. Measure

This box displays the current position in the song in terms of measures and beats. The measures are shown on the left; the beats, on the right.

### 3. Time

This box displays the current position in terms of hours, minutes, and seconds.

### 4. Frames

This box displays the current position in terms of the number of frames. At the time of purchase, the number of frames per second will initially be set to 30 (non-drop). This represents one type of MIDI Time Code (MTC) specification, and if you want to operate the BR-1200CD and other MIDI devices in synchrony with each other, all must be set to the exact same MTC specification.



“Synchronizing external MIDI sequencers and rhythm machines” (p. 245)

## 5. Information

The Information box displays various items of song data (such as effect patch, marker names, tempo, chord, and the remaining time available for recording).

## 6. Input/Track level meters


This area provides a graphic display of the volume levels, both of instruments connected to input jacks and of recorded tracks. At the time of purchase, these level meters will be set to show the volume levels after the corresponding audio has passed through the INPUT LEVEL knob or the track faders (i.e., the post-fader volume levels).

If you would like the level meters to show the volumes before passing through the faders (i.e., the pre-fader volume levels), refer to “Changing the content of the level meter display (Pre/Post Fader)” (p. 281).

## 7. Master level meter

This level meter provides a graphic display of the overall stereo volume after audio has passed through the MASTER fader.

### Rear Panel

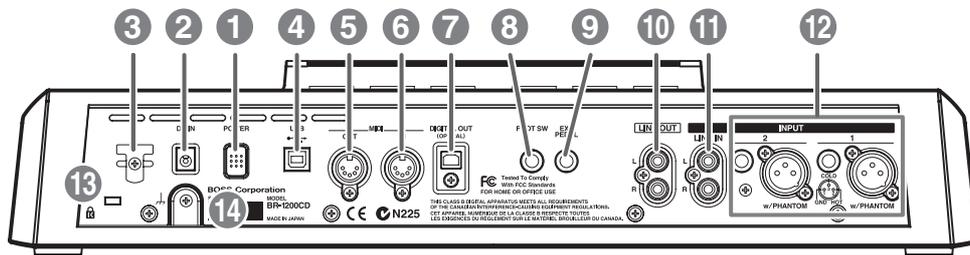

#### 1. POWER switch

Use this switch to turn the BR-1200CD on and off (p. 36).

#### 2. DC IN (AC adaptor) jack

Connect the BR-1200CD's AC adaptor to this jack. In order to prevent accidents, avoid using any AC adaptor other than the PSB-3U, which was included with this product.

#### 3. Cord hook

Loop the AC adaptor's cord around this hook in order to prevent its plug from being pulled out accidentally. If the AC adaptor should be disconnected while you are using the BR-1200CD, there is a danger of important audio data being permanently lost.

#### 4. USB connector

Plug a USB cable into this connector when you want to exchange data between the BR-1200CD and a PC.



"Section 7 Using USB" (p. 257)

#### 5. MIDI OUT connector

The BR-1200CD transmits MIDI data via this connector. Connect the MIDI IN connector of external MIDI devices such as rhythm machines, sequencers, and sound modules to this connector using a MIDI cable.



"Section 6 Using MIDI" (p. 241)

#### 6. MIDI IN connector

The BR-1200CD receives MIDI data via this connector. Connect the MIDI OUT connector of external MIDI devices such as sequencers to this connector using a MIDI cable.



"Section 6 Using MIDI" (p. 241)

#### 7. DIGITAL OUT connector

This optical-type connector is used to output digital audio signals from the BR-1200CD, and its output is identical to that of the LINE OUT jack. You can use the DIGITAL OUT connector to record the BR-1200CD's output on CD-R or MD recorders. In addition, it can also be used to make connections with amplifiers, speakers, and other devices with digital inputs.

#### 8. FOOT SW jack

Use this jack to connect a separately sold foot switch (such as the Roland DP-2 or BOSS FS-5U). With a foot switch connected, you can use it to carry out remote-control operations such as the start and stop of playback or punch-in/out.



"Using a foot switch" (p. 39)

#### 9. EXP (Expression) PEDAL jack

Use this jack to connect a separately sold expression pedal (such as the Roland EV-5). When connected, an expression pedal allows you to use the internal effects processor's pedal wah and other similar effects.



"Using an expression pedal" (p. 124)

## 10. LINE OUT jacks

The LINE OUT jacks are used to output an analog audio signal. Connect these jacks to a device such as a CD-R, MD, or tape recorder to make an analog recording of the BR-1200CD's output.

### MEMO

If necessary, you can make a setting that mixes the signals being input via LINE IN jacks with the signal being output via the LINE OUT jacks. (Audio Sub Mix: p. 277)

## 11. LINE IN jacks

The LINE IN jacks for analog audio signals. These jacks are used to connect CD/MD players and other audio devices and keyboards and other external sound sources, or tape recorder to make an analog recording of the BR-1200CD's output.

## 12. MIC 1-2 jacks

These input jacks and connectors are used with line sources and microphones. Each input can accept two different types of connections—namely, a balanced connection using the TRS 1/4" phone jack, and a balanced connection using the XLR connector.

In addition, phantom power at +48 V can be supplied via the XLR connectors.



"Using condenser microphones (Phantom Power)" (p. 278)

### MEMO

- If a connection is made to both the TRS 1/4" phone jack and the XLR connector, priority will be given to the TRS 1/4" phone jack.
- The MIC 1 jack (or XLR connector) and the GUITAR/BASS jack share the same internal circuitry, and when a connection has been made to both of these input jacks, the GUITAR/BASS jack will be selected automatically.

## 13. Security Slot ( SECURITY LOCK)

<http://www.kensington.com/>

Depending on the circumstances of a particular setup, you may experience a discomforting sensation, or perceive that the surface feels gritty to the touch when you touch this device, microphones connected to it, or the metal portions of other objects, such as guitars.

This is due to an infinitesimal electrical charge, which is absolutely harmless. However, if you are concerned about this, connect the ground terminal (rear panel: see figure 14 ) with an external ground. When the unit is grounded, a slight hum may occur, depending on the particulars of your installation.


If you are unsure of the connection method, contact the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" sheet.

Unsuitable places for connection


- Water pipes (may result in shock or electrocution)
- Gas pipes (may result in fire or explosion)
- Telephone-line ground or lightning rod (may be dangerous in the event of lightning)

# Common operations and display items

## Top screen

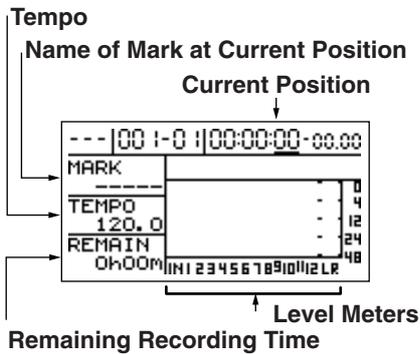

### Mastering Mode Top Screen

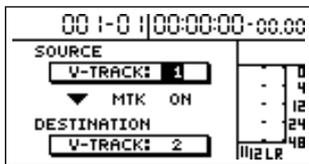


Displayed shortly after the power is turned on, this is the main BR-1200CD screen. Among other important information, the top screen presents the current position within the song, the level meters, and remaining recording time on the hard disk.

Regardless of the screen that you are currently in, you will always be able to return to this screen by pressing [EXIT/NO] several times (although you may sometimes have to wait until the BR-1200CD completes the current process). Unless otherwise specified, all procedures described in this manual will require you to return first of all to the top screen.

In Mastering mode (p. 146) only, the top screen changes to the screen like that shown to the left.

## Current position

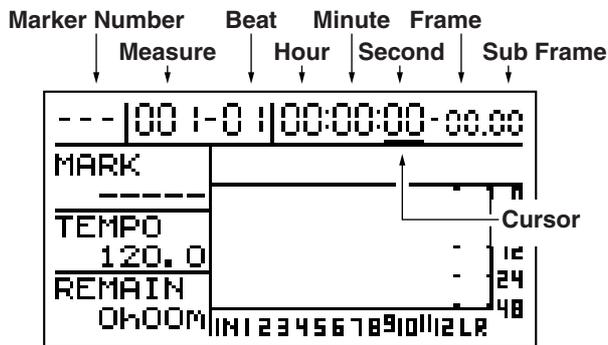


The current position within the song is indicated in terms of time at the top right of the display. In addition, this position is also indicated in terms of bars and beats to the left of this time value.

The displayed time is based on MIDI Time Code (MTC), and as such, it is presented in terms of hours, minutes, seconds, frames, and sub-frames. Note that different devices use different MTC specifications.

If you want to synchronize the BR-1200CD with another MIDI device using MTC, you will first of all need to set both to the same MTC specification. At the time of purchase, the number of frames per second will initially be set to 30 (non-drop) on the BR-1200CD (p. 247).

## FUNCTION buttons ([F1] through [F3])

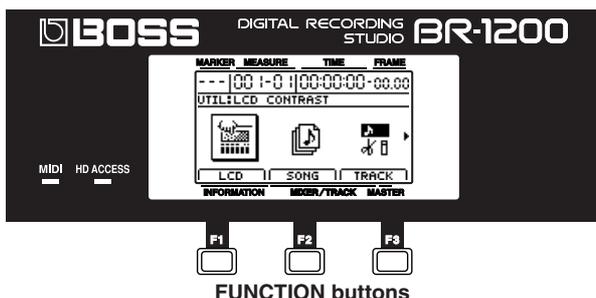


[F1] through [F3] are called the FUNCTION buttons.

At the bottom of the display, you will find the names of the functions that are assigned within the current screen to each of these buttons.

If an explanation from this manual were to refer to "[F1] (EDIT)", you would know that pressing [F1] would select the "EDIT" function as displayed immediately above the button.

## Page Scroll

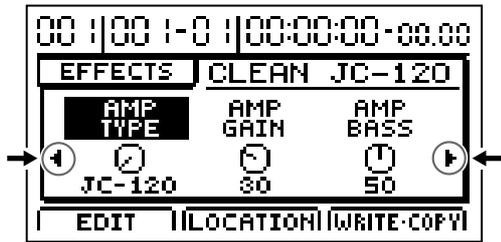


When “ ◀ ” and/or “ ▶ ” is displayed on the left and right of the screen, respectively, it will indicate that the BR-1200CD could not fit all of the relevant content on-screen and that some content is hidden in the direction of the arrow.

The CURSOR [ ◀ ] or [ ▶ ] are used to display this hidden content.

Press [ ◀ ] to scroll the screen to the left, and press [ ▶ ] to scroll the screen to the right.

## Scroll Bar

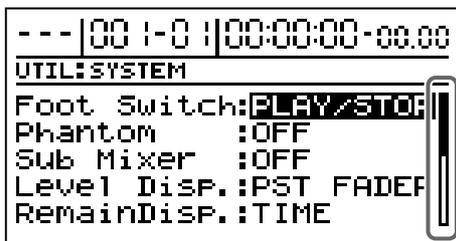

Scroll Bar ↑


When you see a scroll bar at the right of the screen, it means that the BR-1200CD could not fit all of the relevant content in one screen, and there is additional content hidden at the top or the bottom.

The scroll bar itself represents the entire display content, and the black portion represents the range of that content that is currently being displayed.

To view the hidden content, press CURSOR [ ▼ ] or [ ▲ ] to move the display area up or down respectively.

When the display area is moved up, the black area in the scroll bar will also move up, and when the display area is moved down, the black area moves down.

## Cursor

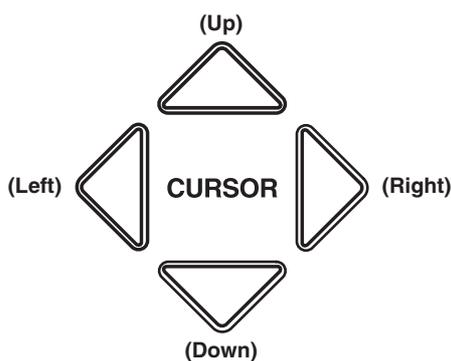

The BR-1200CD’s cursor is represented either as an inverted character, a frame, or an underline in a section of the screen that allows settings to be made. When represented as a knob icon, the knob is shown in black.

If the current screen contains a number of such sections, you can use [CURSOR] to move between the corresponding setting items. In addition, when you press and hold down [CURSOR], the on-screen cursor will move continuously in the corresponding direction. If you need to speed up the motion of the cursor, press and hold the CURSOR arrow for the required direction of movement, and then press the CURSOR arrow for the opposite direction. This action will cause the cursor to move more quickly around the screen.


### Example: To move the cursor quickly to the right

Press and hold CURSOR [ ▶ ], and then press [ ◀ ].

### Example: To move the cursor quickly downward

Press and hold CURSOR [ ▼ ], and then press [ ▲ ].

## TIME/VALUE dial

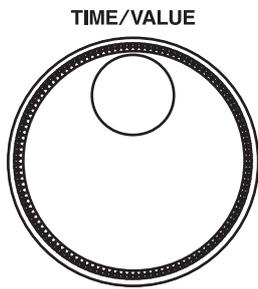

The TIME/VALUE dial is used to change the cursor position, values, or characters. In the case of values, these are increased when the dial is turned clockwise, and reduced when the dial is turned counterclockwise.

## VALUE 1/PAN, VALUE 2, and VALUE 3 knobs




These knobs can be used to change the values of parameters indicated by knob icons (  ) on-screen.

Turn clockwise to increase a value and counterclockwise to decrease it.

In addition, you can also use these knobs to make large changes in pattern and loop phrase numbers when a pattern selection screen for rhythm patterns, bass patterns, or loop phrases is displayed.

# **Basic Operation**


# Connecting other devices

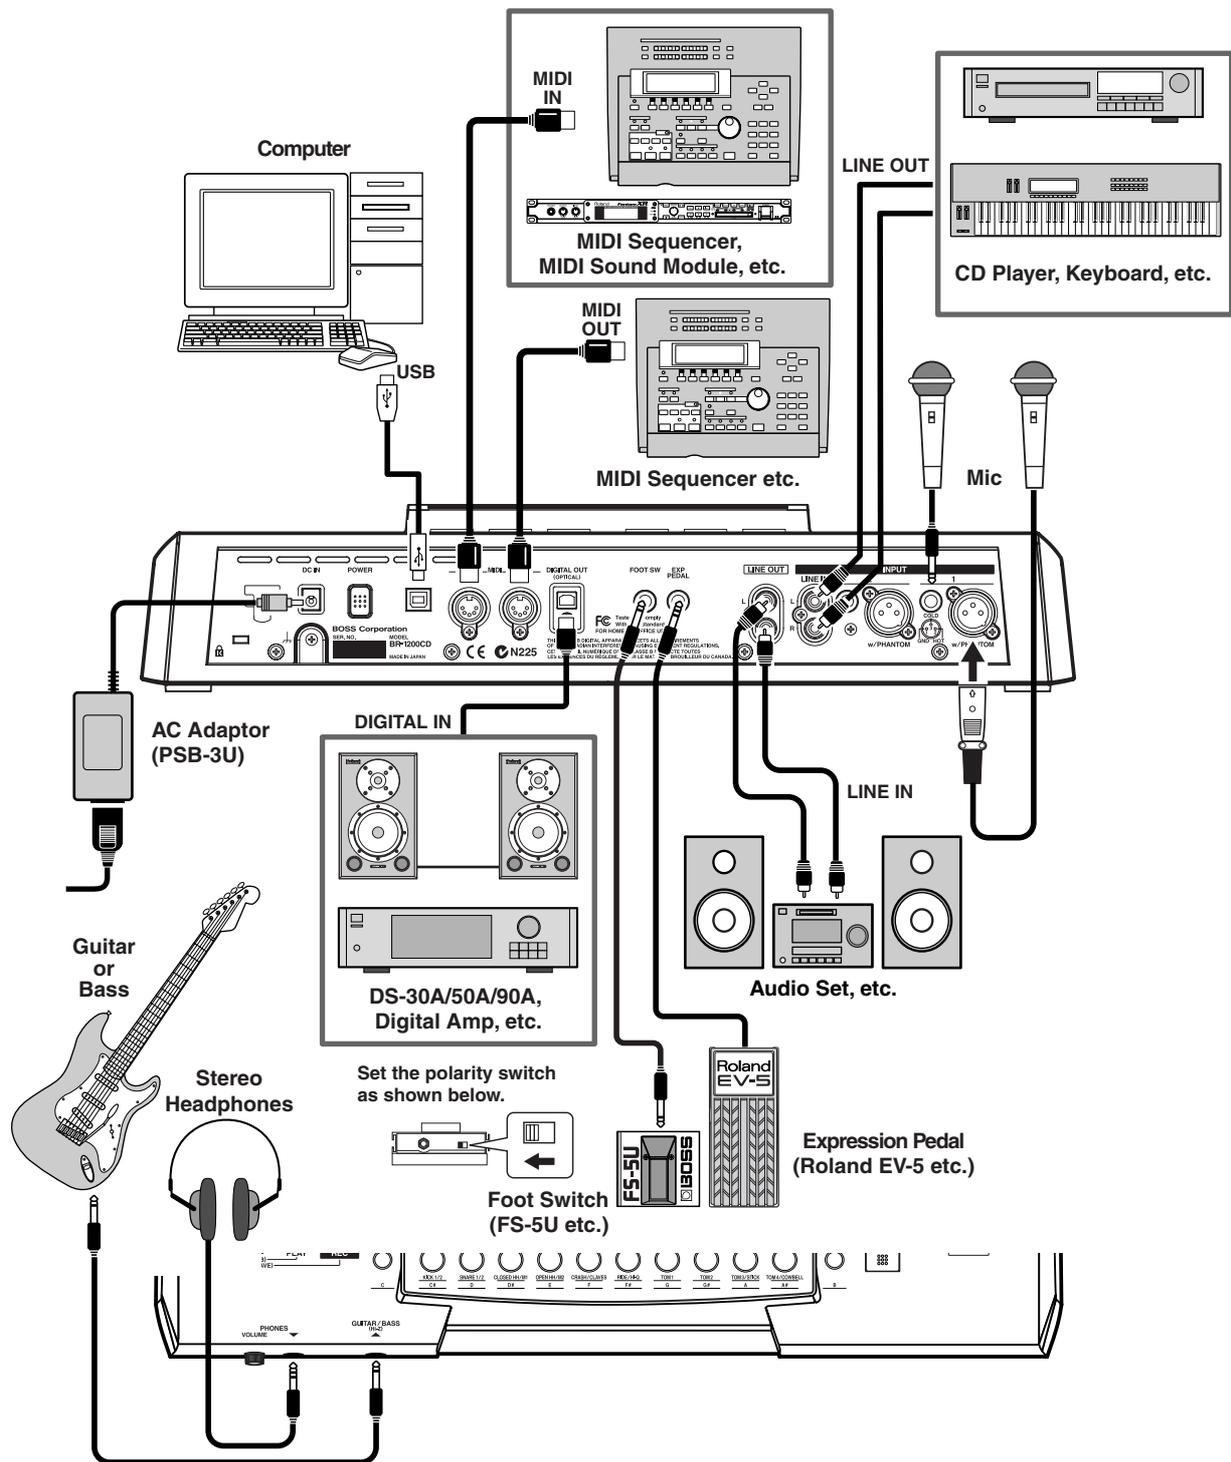

**NOTE**

To prevent malfunction and/or damage to speakers or other devices, always turn down the volume and turn off all devices before making any connections.

- This instrument is equipped with balanced (XLR/TRS) type input jacks. Wiring diagrams for these jacks are shown below. Make connections after first checking the wiring diagrams of other equipment you intend to connect.

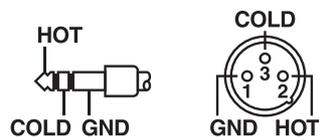

- 1** Connect the guitar, bass guitar, microphone, etc. to the BR-1200CD's input jacks.

**Guitar, bass, etc.:**

Connect to the GUITAR/BASS jack on the front panel.

**Microphone for solo vocals:**

Connect to the INPUT 2/MIC 2 input jack on the rear panel.

**CD player, keyboard, etc.:**

Connect to the LINE IN L and R jacks on the rear panel.

- 2** Connect the LINE OUT L and LINE OUT R jacks on the rear panel to your amplifier. If you will be using headphones, connect these to the PHONES 1 jack.

The BR-1200CD's LINE OUT L/R jacks must always be correctly matched with the amplifier's left and right inputs.

- 3** If necessary, connect an expression pedal or foot switch to the BR-1200CD. Any MIDI or USB connections should also be made.

### **Precautions When Making Connections**

- When a guitar or bass is connected to the GUITAR/BASS jack, the INPUT 1/MIC 1 input jack will be deactivated and will not accept any sound input.
- Noise may be generated when the pickup on your guitar or bass is close to the BR-1200CD. Move the BR-1200CD and guitar further apart to eliminate this noise.
- The location of microphones relative to speakers could result in feedback being produced. This can be remedied by:
  1. Changing the orientation of the microphone(s).
  2. Relocating the microphone(s) at a greater distance from the speakers.
  3. Lowering volume levels.

### **MEMO**


- For more detailed information regarding the operation and setting of expression pedals, refer to "Using an expression pedal" (p. 124).
- For more detailed information regarding the operation and setting of foot switches, refer to "Using a foot switch" (p. 39).
- For more detailed information regarding the operation and setting of MIDI devices, refer to "Section 6 Using MIDI" (p. 241).
- For more detailed information regarding USB operation and setting methods, refer to "Section 7 Using USB" (p. 257).
- When a condenser microphone is connected to an XLR input jack, phantom power at +48 V can be supplied from the BR-1200CD. For details on how this is done, see "Using condenser microphones (Phantom Power)" (p. 278).

# Turning on/off the BR-1200CD

## Turning on the BR-1200CD

Use the POWER switch to turn the BR-1200CD on and off.


Once the connections have been completed (p. 34), turn on power to your various devices in the order specified. By turning on devices in the wrong order, you risk causing malfunction and/or damage to speakers and other devices.

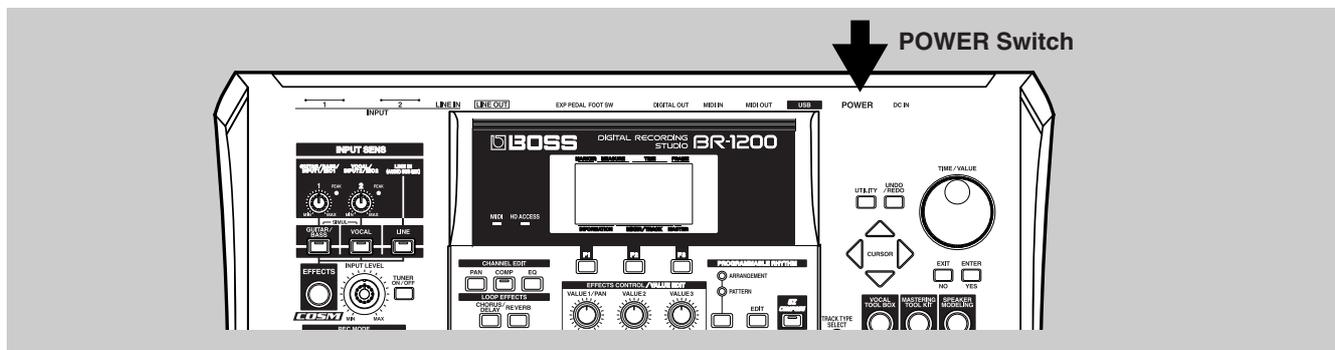

**1** Before turning on the power, the volume of all connected devices should be turned all the way down.

**2** Loop the AC adaptor's cord around the cord hook and connect its plug to the BR-1200CD's DC IN jack.

This will ensure that, even when the cord is accidentally pulled, the power will not turn off as a result of the plug being pulled out of the DC IN jack, and the jack itself will not be subjected to excessive force.

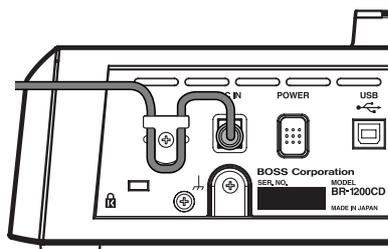

**3** Plug the AC adaptor into a power outlet.

**4** If any CD players, keyboards, etc. are connected to the BR-1200CD's input jacks, turn on these devices first.

**5** Press the BR-1200CD's POWER switch. The power will turn on and the opening screen will be displayed.



After a few moments, the message "Now Checking..." will appear, and this will be followed by the message "Now Loading...". When the top screen appears, it indicates that the BR-1200CD is ready for use.

**6** If an amplifier or any other similar device is connected to the BR-1200CD's output, this should be turned on last of all.

### **NOTE** IMPORTANT

- Noise may be output by the BR-1200CD when the AC adapter is connected or when the power is turned on. Although such noise does not indicate a malfunction, damage to devices and speakers may result if such actions are performed while audio amp volume levels are turned up. For this reason, make sure that the audio amp is the last piece of equipment that is turned on.
- In order to protect the BR-1200CD's circuits, no operation will be possible for a short period of time after the power is turned on.

## Turning off the BR-1200CD

- 1 If an amplifier or any other similar device is connected to the BR-1200CD's output, this should be turned off first of all.

- 2 Press the BR-1200CD's POWER switch.

The pressed button pops out.

The message "Shutdown OK?" will appear.



### MEMO

- When the currently selected song has been recorded or edited, the message "Save Current?" appears; press [ENTER/YES].

The message "Storing Current..." will appear and saving of the currently selected song will begin. When saving has been completed, the message "Now shutdown... Keep power ON!" is displayed, and the BR-1200CD will automatically turn off a few moments later.

If you do not want to save your song at this time, press [EXIT/NO]. The BR-1200CD will turn off without the song being saved. In such a case, however, all audio that was recorded and data that was edited since you last saved the song will be lost; accordingly, be careful not to press [EXIT/NO] by mistake.

- Song Protect is activated for the demo songs already included in the BR-1200CD at the time of purchase, and for this reason, the power will turn off without the message "Save Current?" being displayed.

### NOTE (IMPORTANT) Precautions when turning off the BR-1200CD

- Always use the POWER switch to turn off the BR-1200CD's power. Recorded audio data, mixer settings, etc. are not stored as the corresponding operations are completed; rather, they are stored when the song is saved or when the power is turned off automatically. Therefore, when the BR-1200CD is turned off by pulling out the AC adaptor's plug or by any other method not involving the POWER switch, all recorded audio data, mixer settings, and the like will be lost. This practice can also lead to song data being lost or to the hard disk being permanently damaged, and it should be avoided.
- Before removing the AC adaptor from the power outlet, be sure to confirm that the BR-1200CD has turned off fully (i.e., the display is not lit). The AC adaptor should not be disconnected while data is being saved as this will result in the loss of recorded audio data and other song contents (i.e., mixer settings, effect patch data, etc.).
- Do not move the BR-1200CD or subject it to shock or vibration before the screen backlighting turns off. If the backlighting is still on, it means that the hard disk motor has not stopped spinning. It is in this state that the hard disk's interior is unstable and the hard disk is most susceptible to damage.

### MEMO

#### What is meant by saving songs?


In the BR-1200CD, recorded or edited audio data is only temporarily stored on the hard disk until the song that contains it is saved. For this reason, if the power is turned off before the song has been saved, all of your recorded and edited data will be lost. The Save function prevents this from occurring by storing the recorded and edited data on the BR-1200CD's hard disk.

Note that songs can be saved at any time, not only when the power is being turned off. For more detailed information, refer to "Saving your song (Song Save)" (p. 70).

# Listening to the demo songs and selecting songs (Song Select)

When the BR-1200CD is turned on, the top song is automatically selected and all data necessary for playback is loaded. When the loading of this data has been completed, the name of the song will be displayed.

If you wish to work on a different song, you can select that song using the following procedure. Demo songs are stored on the BR-1200CD. Let's now select one of these songs to listen to. (Refer to the Demo Song List: p. 72.)

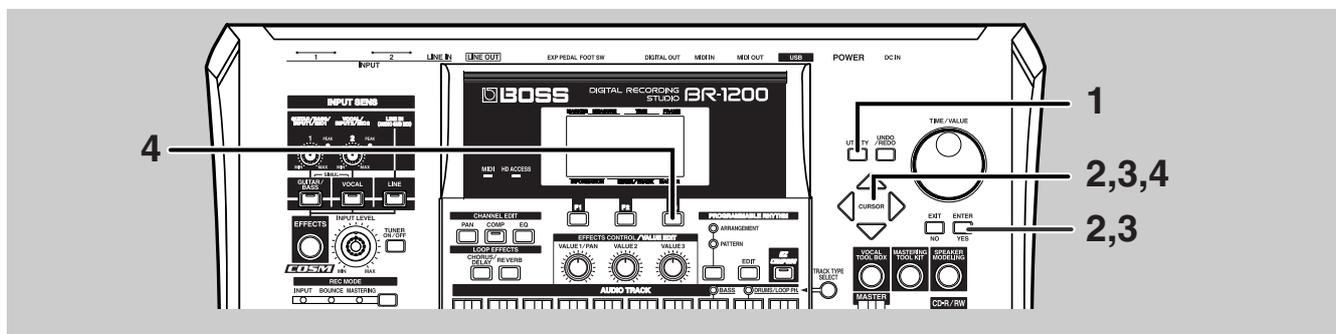

## 1 Press [UTILITY].


The Utility Menu screen will appear.



## 2 Move the cursor to the SONG icon and press [ENTER/YES].

Alternatively, you can press [F2] (SONG) if the SONG icon is currently displayed.


The Song Menu screen will appear.

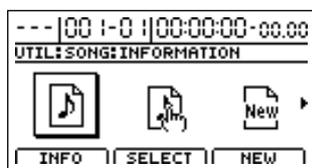

## 3 Move the cursor to the SELECT icon and press [ENTER/YES].

Alternatively, press [F2] (SELECT) if the SELECT icon is currently displayed.

The Song Menu Selection screen will appear.

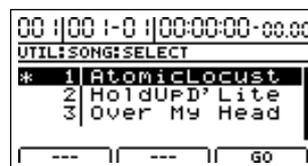

## 4 Move the cursor to the song you want to listen to and press [F3] (GO).


The message "Now Loading..." will appear and loading of song data from the hard disk will begin. After a few moments, the message "Complete!" is displayed to indicate that the data has been read.

### NOTE

- In certain cases, the message "Save Current?" will appear during the procedure described above. This indicates that the currently selected song contains recorded audio data and/or edited data that has not been saved. If you want to save the song, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO]. Note that if you press [EXIT/NO], the recorded audio data and/or edited data will be lost; accordingly, be careful not to press this button by mistake. In other cases, the message "Re-Load Current?" may appear. This indicates that although the currently selected song contains recorded audio data and/or edited data that has not been saved, all such changes are to be discarded and the song is to be restored to its previously saved condition. If you want to discard the changes and restore the song, press [ENTER/YES]; if you want to cancel loading, press [EXIT/NO]. Note that if you press [ENTER/YES], the recorded audio data and/or edited data will be lost; accordingly, be careful not to press this button by mistake.
- The demo songs contained in the BR-1200CD are intended for personal enjoyment only. Usage of these songs for any other purpose without the permission of the copyright holder is prohibited by law. The data contained in the demo songs may not be copied or used in secondary works without prior consent of the copyright holder.

# Basic operation of the recorder

## Playing and stopping

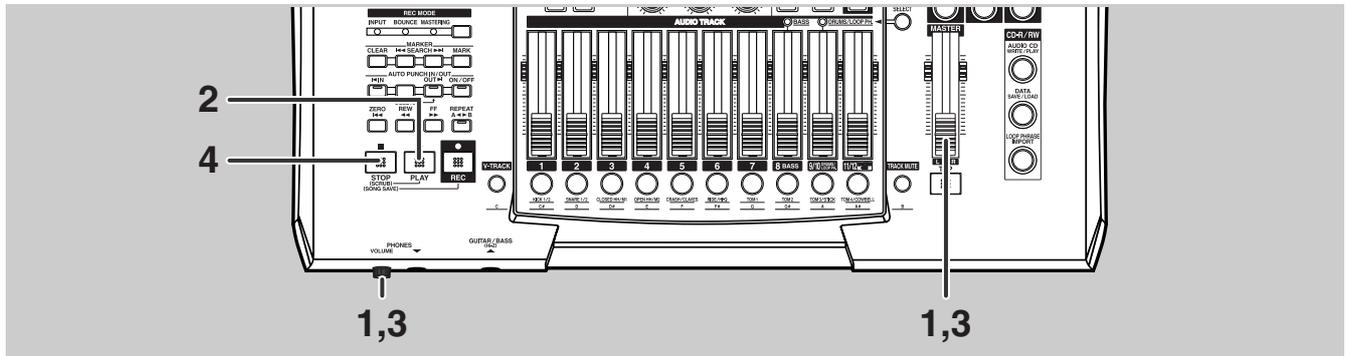

**1** In order to avoid being startled by sudden loud noises, turn the PHONES VOLUME knobs and the MASTER fader all the way down before proceeding.

**2** Press [PLAY].  
The BR-1200CD will start playback. The playback position is shown in real time at the top of the display. In addition, the playback volume for each track is indicated by the level meters.

**3** Slowly raise the PHONES VOLUME knob(s) and the MASTER fader until the playback can be heard at a suitable level.

**4** Press [STOP].  
The BR-1200CD will stop playback.

## Using a foot switch

With a foot switch (such as the optional BOSS US-5U or Roland DP-2) connected to the FOOT SW jack on the BR-1200CD's rear panel, you can use your foot to start and stop performance. Use the following procedure to set the function of the foot switch.

**1** Press [UTILITY].  
The Utility Menu screen will appear.



**2** Move the cursor to the SYSTEM icon and press [ENTER/YES].




**3** Move the cursor to Foot Switch and select "PLAY/STOP" using the TIME/VALUE dial.

**4** Press [EXIT/NO] several times to return to the top screen.

**5** Operate the foot switch.  
The song will alternate between play and stop each time you press the foot switch.

# Adjusting the volume

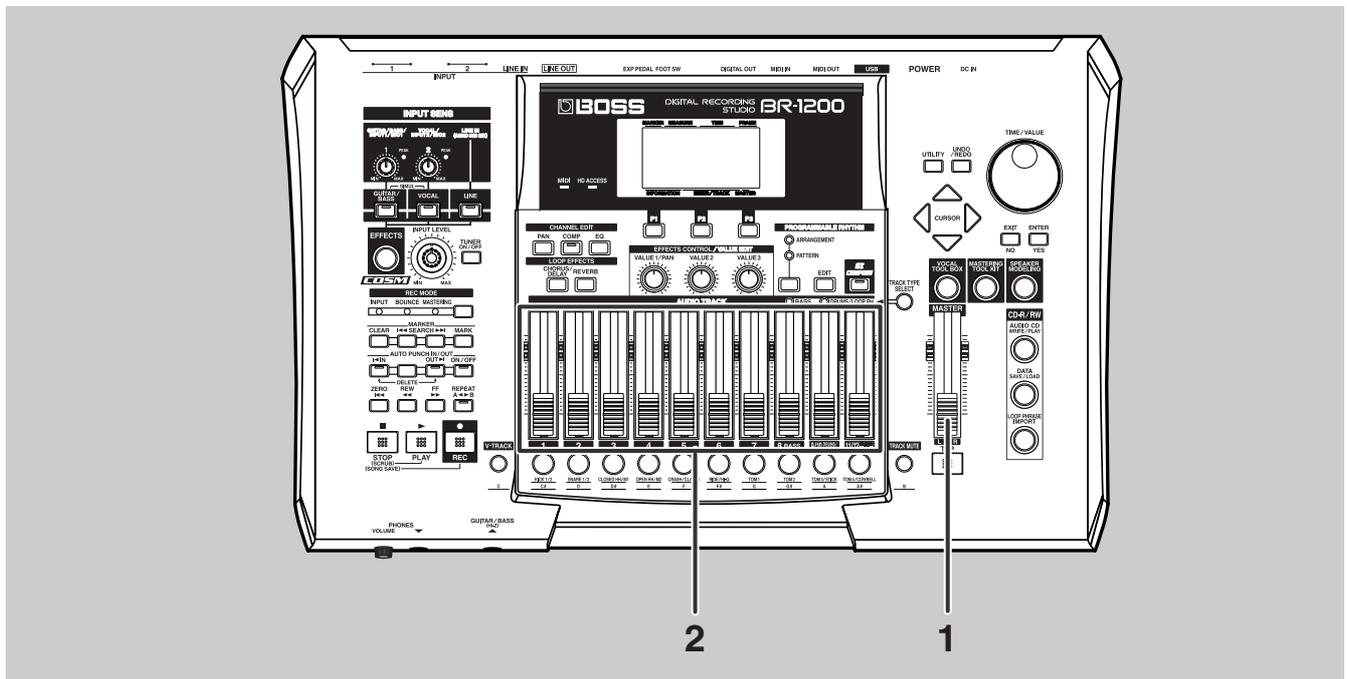

- 1** Move the MASTER fader up and down while the song is being played.

The overall volume changes in response to the position of this fader. The display on the MIX level meter changes in response to the volume.

- 2** Move the Track faders for each track up and down.

The volume of each track changes in response to the position of the corresponding fader. In addition, the display on each track's level meter changes in response to its volume.

### NOTE

In certain cases, distortion will occur when a fader is raised too high. In particular, this occurs when the corresponding level meter rises beyond the 0 dB point. In such a case, lower the fader until the distortion is no longer present.

## Changing the current position


The current position within a song can be moved regardless of whether or not the song is being played. Any one of a number of different methods can be used to change the current position.

### NOTE

- When the current position is changed, it takes a bit of time before you can carry out the next operation. This time is necessary for reading of data from the hard disk that will be needed for playback at the new song position.
- It is not possible to change the current position while recording.

## Using the transport buttons

The song position can be changed using the transport buttons located on the bottom left of the front panel.

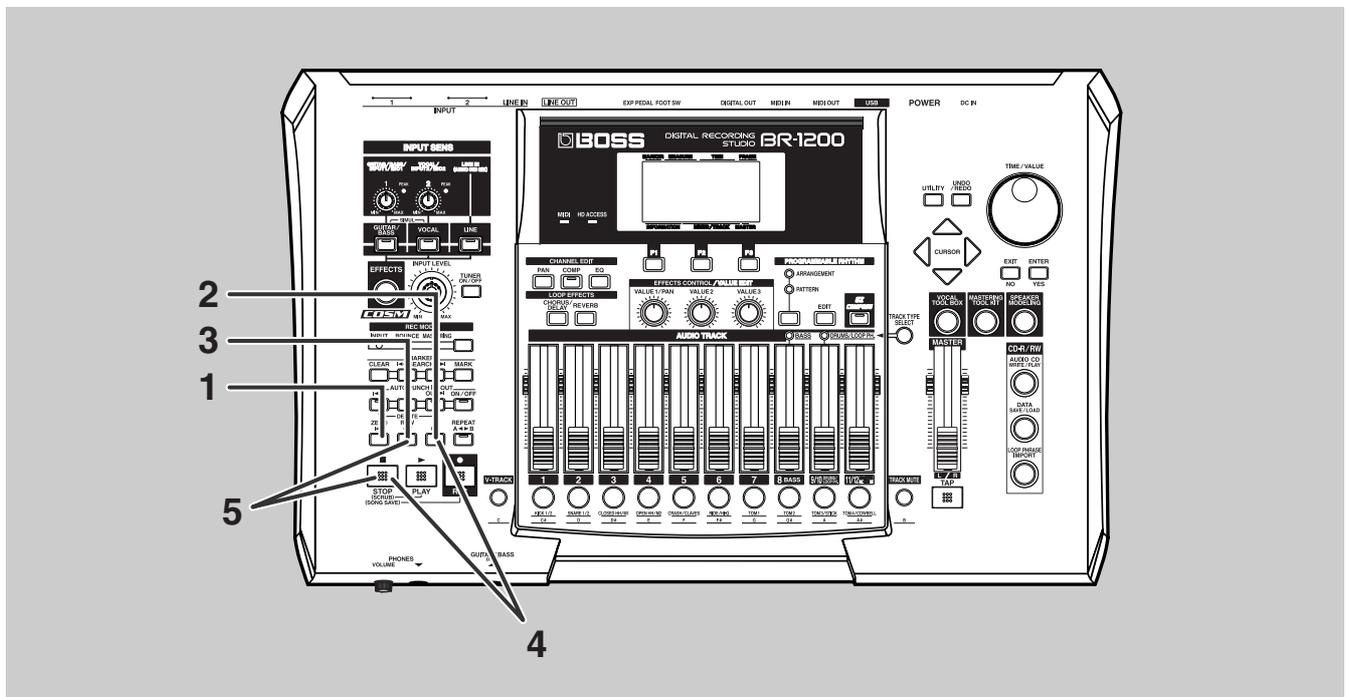

**1** Press [ZERO].  
Moves you to the time location 00:00:00-00.00.

**2** Press [FF].  
The current position will move forward by one second.

**3** Press [REW].  
The current position will move back by one second.


**4** Hold down [STOP] and press [FF].  
After the BR-1200CD has checked the V-Tracks currently selected for each track, the current position will jump to the point in the song at which the last recording was made.

**5** Hold down [STOP] and press [REW].  
After the BR-1200CD has checked the V-Tracks currently selected for each track, the current position will jump to the point in the song at which the first recording was made.


## Basic operation of the recorder

### Using TIME/VALUE dial

A cursor is displayed below the time for the current position on the top screen. Use the TIME/VALUE dial to change the time values and to move the current position.

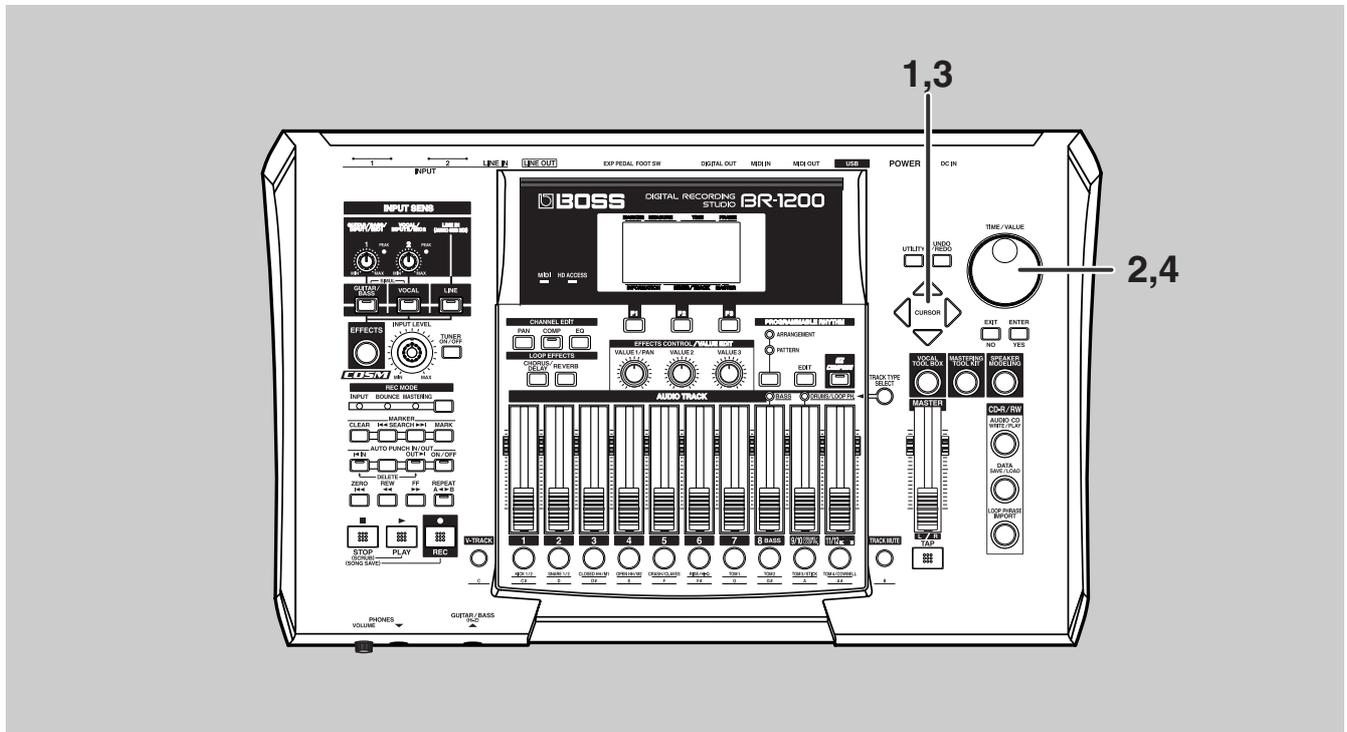


- 1 Move the cursor to the seconds, minutes or hours value.

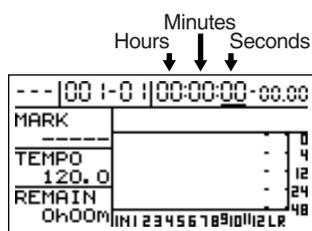

- 2 Turn the TIME/VALUE dial.  
The current position will change in units of seconds, minutes or hours.


- 3 Move the cursor to the measures or beats value.

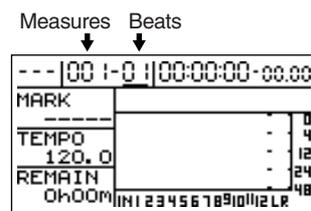

- 4 Turn the TIME/VALUE dial.  
The current position will change in units of measures or beats. " - - - " will be displayed after measure 999.

## Using markers

A number of song markers are set up in the demo songs in advance. These markers can be used to jump to the corresponding positions within the song.

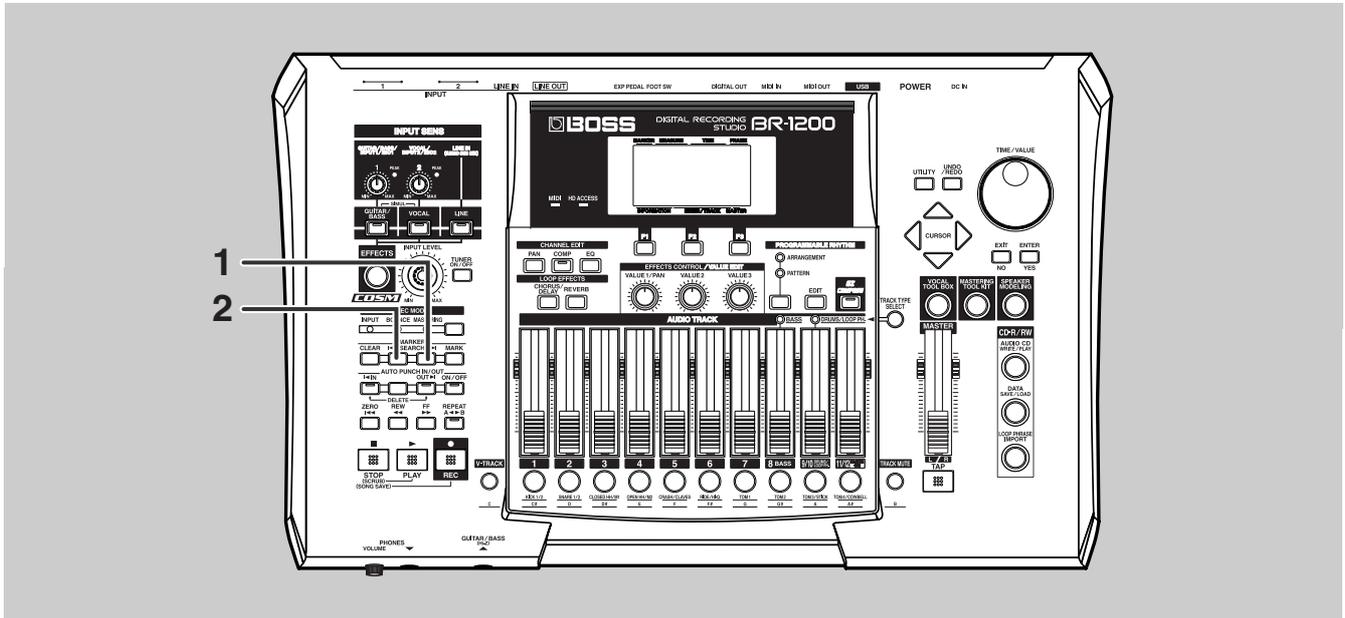

**1** Press **MARKER** [SEARCH ►►].  
The current position will jump to the location of one of the markers that has been set. Each time [SEARCH ►►] is pressed, the current position will jump forward to the next nearest marker. Note that the marker number corresponding to the current position is displayed at this time.

**2** Press **MARKER** [SEARCH ◀◀].  
The current position will jump back. Each time [SEARCH ◀◀] is pressed, the current position will jump back to the previous nearest marker.

**3** Move the cursor to the value in the Marker box, and then use the **TIME/VALUE** dial to specify a marker number.

The current position will jump to the location of the corresponding marker.

### MEMO

- Up to 100 markers can be set up at will within a song. For more detailed information, refer to “Placing markers in your song (Marker)” (p. 90).
- The number of the marker at the current position is shown in the display’s Marker box. If no marker has been set up at this position, “- - -” is displayed.



# Changing V-Tracks

Recorded variations that use V-Tracks are included in the demo songs. We will now change V-Tracks to listen to these variations.

**MEMO**


### What are V-Tracks?

Each BR-1200CD track comprises sixteen different virtual tracks, one of which is selected for recording and/or playback. In other words, performances can be recorded onto a total of 192 tracks (i.e., 12 x 16), and any sixteen of these tracks can be played back at any one time. The term “V-Track” is used to refer to the virtual tracks that make up each BR-1200CD track.

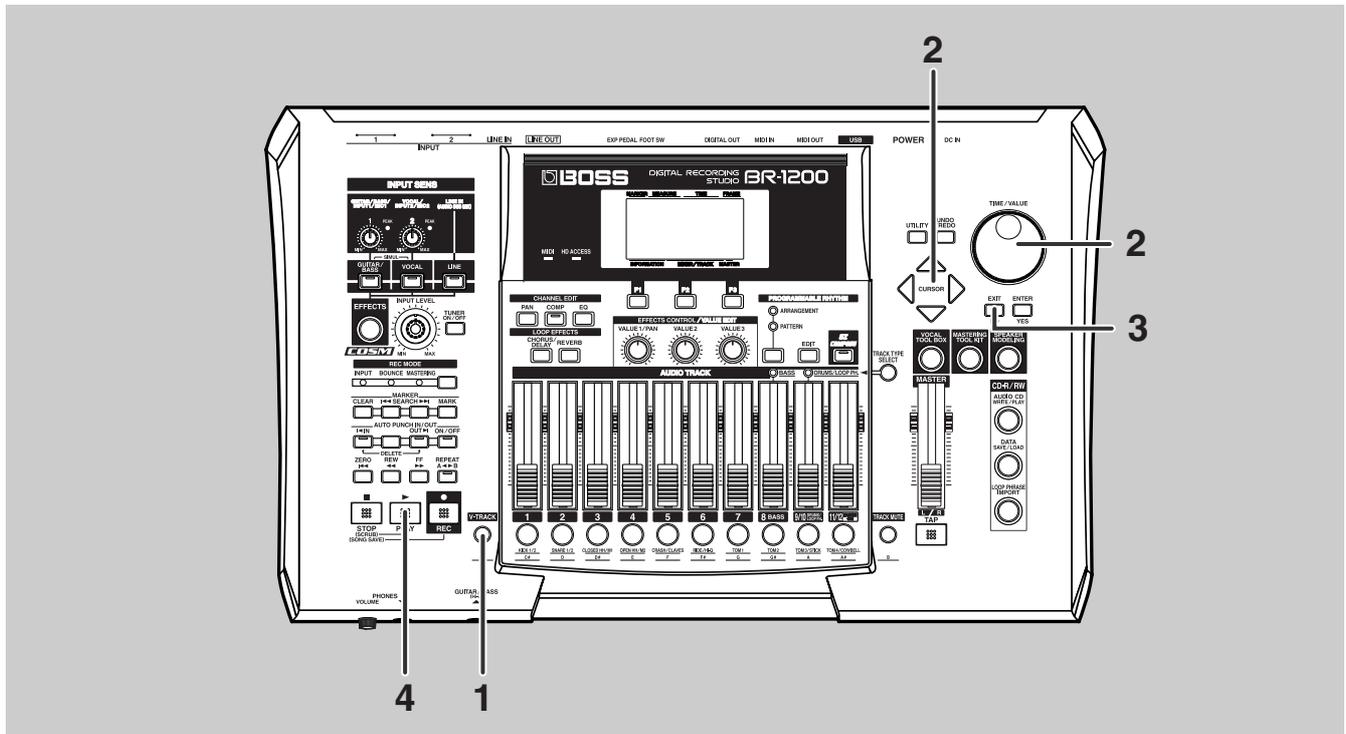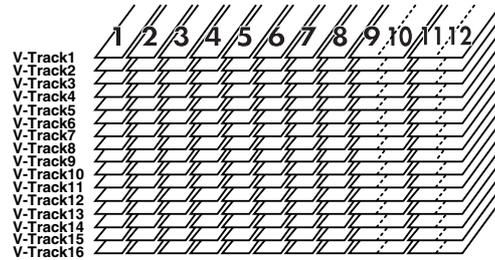

## 1 Press [V-TRACK].

The V-Track screen will appear.

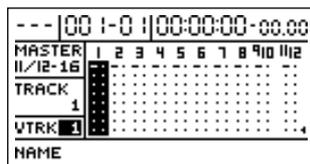

The V-Track currently selected for each track and the presence or absence of data in each V-Track are indicated on the V-Track screen.

- (■): Currently selected V-Track (containing recorded audio data)
- (▬): Currently selected V-Track (not containing recorded audio data)
- (▣): V-Track containing recorded audio data
- (□): V-Track not containing recorded audio data
- (▶): The V-Track from Track 11/12 last used for mastering (Final Mastering Track)

- 2 Move the cursor to the track whose V-Track is to be changed, and then use the TIME/VALUE dial to select a new V-Track.

The symbol indicating the currently selected V-Track will move to this new V-Track.

--- 00 1-0 1 00:00:00-00.00												
MASTER	1	2	3	4	5	6	7	8	9	10	11	12
11/12-16	.	.	.	.	.	.	.	.	.	.	.	.
TRACK	.	.	.	.	.	.	.	.	.	.	.	.
VTRK	.	.	.	.	.	.	.	.	.	.	.	.
NAME	.	.	.	.	.	.	.	.	.	.	.	.

- 3 Press [EXIT/NO] to return to the top screen.

- 4 Press [PLAY] to start playback.

You will now hear the song with the variation that has been recorded on the newly selected V-Track. However, if this V-Track contains no data, the corresponding track will be silent.


- 5 If you wish to store the modified settings, save the current song (p. 70).

**NOTE**

- It is not possible to change V-Tracks while recording.
- Tracks 9/10 and 11/12 are all set to stereo and each comprises two individual tracks; accordingly, V-Tracks can only be selected in sets of two for these tracks. In other words, it is not possible to select a different V-Track for the left track and the right track in a stereo pair.

# Turning tracks off temporarily (Track Mute)

When recording a band or the like, it is often necessary to turn off just the vocalist's track to listen to the combined sound of the instruments. In a situation like this, the BR-1200CD allows you to temporarily turn off the audio from specific tracks (Track Mute).

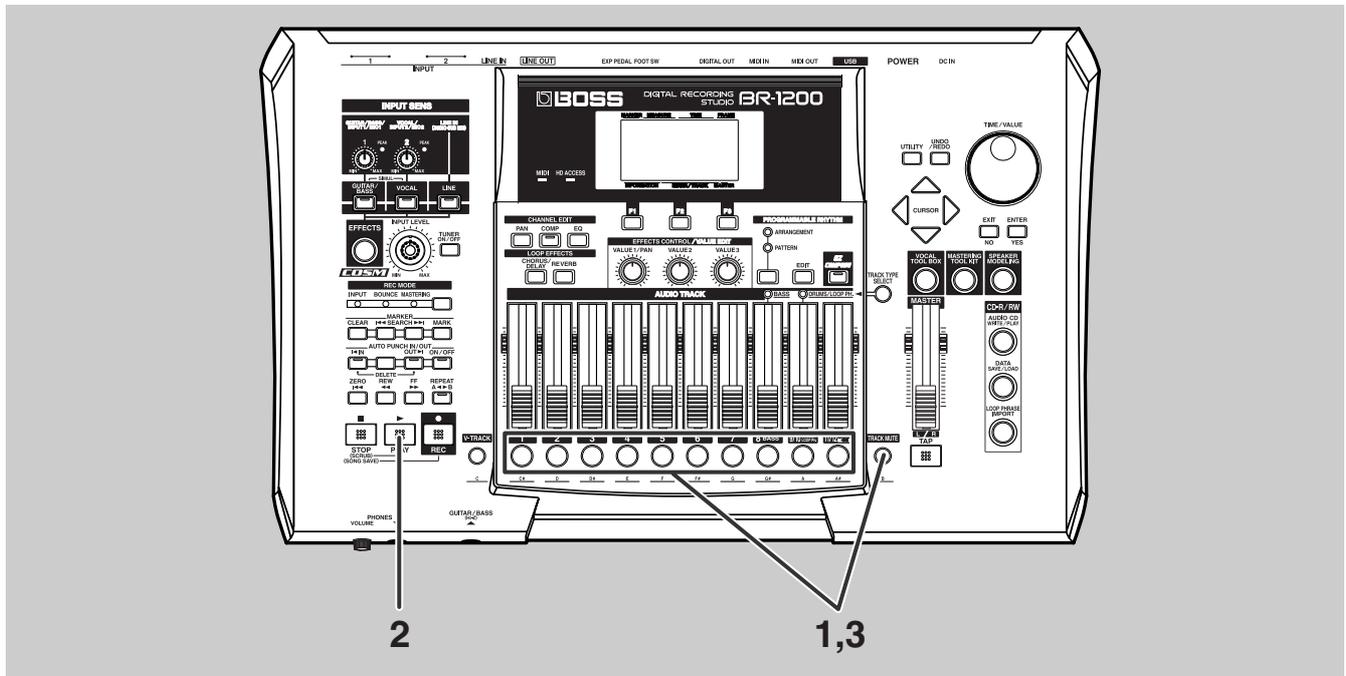

**1** Hold down [TRACK MUTE] and press the track button for the track(s) you want to mute. The track button(s) will start to flash to indicate that the corresponding track(s) are now muted.

**2** Press [PLAY] to start playback. No audio will be output from the muted track(s). Even if its fader is raised, the audio from a track will not be heard when it is muted.

**3** To cancel a muted condition, again hold down [TRACK MUTE] and press the track button for the track(s) for which muting is to be canceled. The track button(s) will stop flashing to indicate that the corresponding track(s) are no longer muted.

**4** If you wish to store the muted condition, save the current song (p. 70).


### MEMO

- When a track is muted, its condition will be the same as if its fader had been moved all the way down. Muting does not cause recorded audio data to be deleted.
- Track Mute is not enabled for tracks other than those whose Track Type is set to AUDIO (p. 54). The Track Mute is also cancelled with the track type is changed.

# MEMO

# Preparing a song for recording (Song New)


If you are going to record your own performance from scratch, you will first of all have to create a new song free of any recorded audio data. This operation is referred to as “Song New,” and it is carried out as follows.

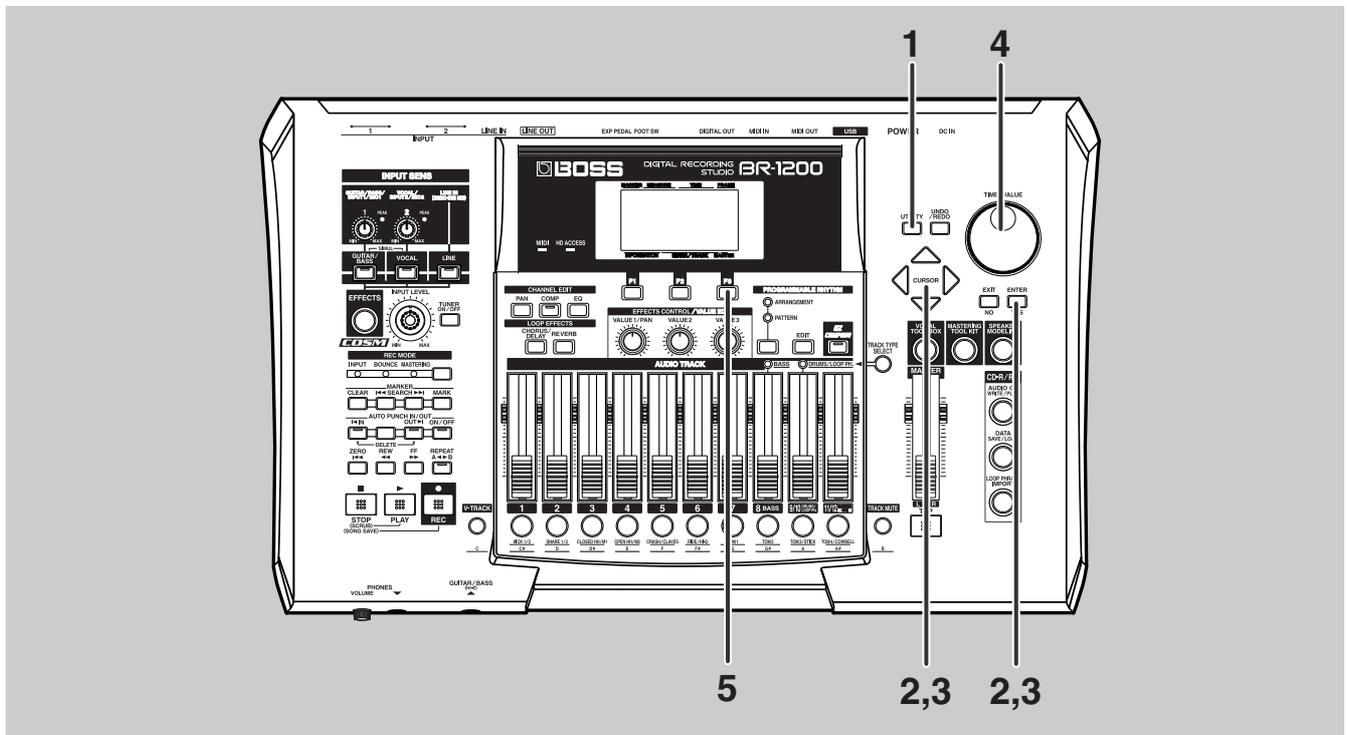

- 1 Press [UTILITY].  
The Utility Menu screen will appear.



- 2 Move the cursor to the SONG icon and press [ENTER/YES].  
Alternatively, you can press [F2] (SONG) if the SONG icon is currently displayed. The Song Menu screen will appear.

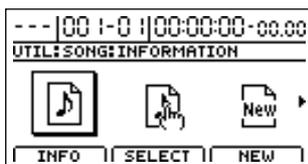

- 3 Move the cursor to the NEW icon and press [ENTER/YES].  
Alternatively, you can press [F3] (NEW) if the NEW icon is currently displayed. The screen for creating a new song will appear.



**4** Use the TIME/VALUE dial to select the song's initial track type.

For example, let's select USE DRUMS + LOOP PHRASE for this song.

**Initial Track Types**

<b>12 AUDIO TRACKS</b>	All tracks from 1 through 11/12 are set up as audio tracks.
<b>USE BASS</b>	Track 8 is used as a bass track, and the remaining tracks 1 through 7, 9/10, and 11/12 are used as audio tracks.
<b>USE DRUMS + LOOP</b>	Track 9/10 is used as a drum & loop phrase track, and the remaining tracks 1 through 8 and 11/12 are used as audio tracks.
<b>USE DRUMS + BASS + LOOP</b>	Track 9/10 is used as a drum & loop phrase track, Track 8 is used as a bass track, and the remaining tracks 1 through 7 and 11/12 are used as audio tracks.

**MEMO**

Track types can be freely changed even after Song New has been completed.

**5** Press [F3] (GO).


The message "New Song..." will appear on the display and a new song will be created. When finished, the message "Complete!" will appear and the display will automatically return to the top screen.

**NOTE**

In certain cases, the message "Save Current?" will appear during the procedure described above. This indicates that the currently selected song contains recorded audio data and/or edited data that has not been saved. If you want to save this new data, press [ENTER/YES]; if you don't want to, press [EXIT/NO]. Note that if you press [EXIT/NO], the recorded audio data and/or edited data will be lost; accordingly, be careful not to press this button by mistake.

# Selecting an input source for recording (Input Select)

Before you start recording an instrument, you will have to select the input source to which that instrument has been connected. Furthermore, when you select an input source, the appropriate insert effects for that input source will be automatically selected and applied to the input.

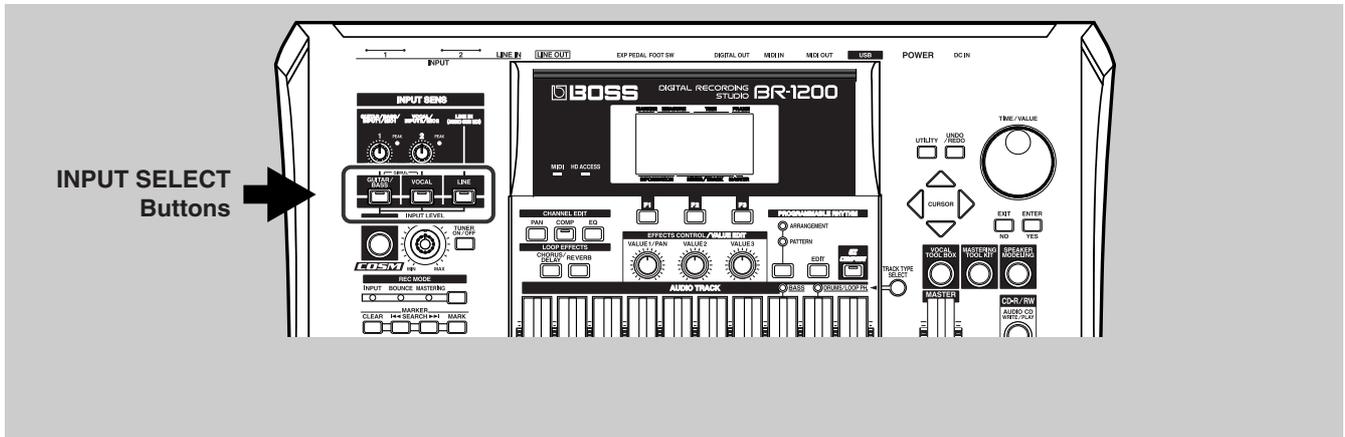

## Recording guitar or bass guitar

Press INPUT SELECT [GUITAR/BASS].

[GUITAR/BASS] will light up, indicating that either the INPUT 1/MIC 1 jack on the rear panel or the GUITAR/BASS jack on the front panel can be used as the input source. (Any time a plug is inserted into the GUITAR/BASS jack, this input source will be given priority and the INPUT 1/MIC 1 jack will be deactivated.)

In addition, an effect will be automatically selected from the insert effects' guitar bank.

## Recording a solo vocal microphone

Press INPUT SELECT [VOCAL].

[VOCAL] will light up, indicating that the INPUT 2/MIC 2 jack on the rear panel has been selected as the input source.

In addition, an effect will be automatically selected from the insert effects' microphone bank.

## Recording guitar + Vocal

Press INPUT SELECT [GUITAR/BASS] and [VOCAL] simultaneously. (SIMUL)

The INPUT SELECT [GUITAR/BASS] and [VOCAL] buttons will light up, indicating that INPUT 1/MIC 1 jack on the rear panel or GUITAR/BASS jack on the front panel has been selected as input sources. (The INPUT 1/MIC 1 jack and the GUITAR/BASS jack share the same internal circuitry.)

In this condition, an effect will be automatically selected from the insert effects' simul bank.

### NOTE

When connecting an electric guitar to the BR-1200CD, be sure to use the GUITAR/BASS jack. Note also that when an acoustic guitar is being recorded using a microphone, the microphone should be connected to the INPUT 1/MIC 1 jack. The INPUT 2/MIC 2 jack should be used for connecting the microphone used for vocals.

## When recording stereo inputs to a stereo track


Press INPUT SELECT [LINE].

INPUT SELECT [LINE] lights up, LINE IN L/R on the rear panel are selected as the inputs, and the BR-1200CD is enabled for stereo track recording.

In addition, at this point the insert effects Stereo bank effects are automatically selected.

# Adjusting the input source volume (Input Sensitivity)

The output from guitars, bass guitars, microphones, keyboards, and other instruments all enter the BR-1200CD as continuous electrical waves. This type of output is referred to as an analog signal. Inside the BR-1200CD, circuits known as A/D converters are used to convert these analog signals into digital signals. If the volume of an analog signal is too high, unpleasant distortion will occur in the corresponding digital signal; however, if the volume of this signal is too low, the noise that is generated during conversion to digital will become very noticeable. Once distortion or noise becomes obvious in a digital signal, it is extremely difficult to restore the quality of the sound using any amount of post-processing. In order to record with good sound quality, therefore, it is extremely important that you adjust the volume of the analog signal in such a way that the source can be made as loud as possible without distorting. Adjustment of a source's volume while it is still an analog signal is carried out using the INPUT SENS (Input Sensitivity) knob.

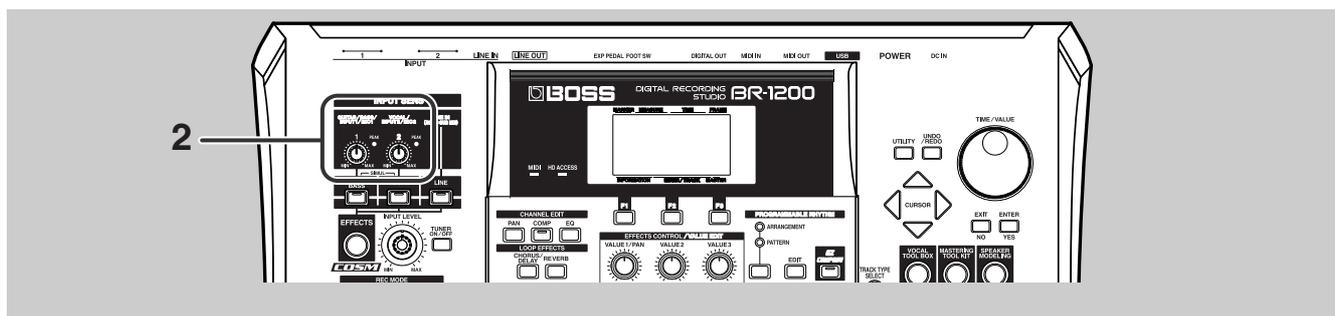

**1** Play the instrument to be recorded.

**2** Check whether the PEAK indicator for that instrument's input source lights up when the instrument is played hard.

### If it lights up frequently:

The volume is too loud. Turn the INPUT SENS knob for the corresponding input source counterclockwise to reduce the volume to a level where the PEAK indicator lights up only occasionally when the instrument is played hard.

### If it lights up occasionally when the instrument is played hard:

The volume is at a suitable level and does not need to be adjusted.

### If it never lights up:

The volume is too low. Turn the INPUT SENS knob for the corresponding input source clockwise to raise the volume to a level where the PEAK indicator lights up only occasionally when the instrument is played hard.

### NOTE

- If a suitable volume cannot be obtained even when the INPUT SENS knob is used, it is quite possible that the output volume of the instrument itself is improper level. In such a case, make sure that the instrument's volume is at a suitable level, and then repeat the adjustment procedure described above.
- If you are using a condenser microphone that requires phantom power, no sound will be output from the microphone until the phantom power is turned on. Refer to the user's manual that came with your microphone, and then turn on the phantom power if the manual indicates that it is necessary. For more detailed information regarding usage of phantom power, refer to "Using condenser microphones (Phantom Power)" (p. 278).


### MEMO

Each PEAK indicator lights up when the corresponding analog signal reaches -6 dB, and distortion occurs in the A/D converter when this signal rises beyond 0 dB.

# Recording with effects (Insert Effects)

When an input source is chosen, a suitable insert effect for that input source will be selected automatically by the BR-1200CD. For example, when GUITAR/BASS has been chosen, an effect will be selected from the guitar bank; when VOCAL has been chosen, an effect will be selected from the MIC bank; and so on.

Each bank contains a number of different effects (Effect Patches) with various different settings that affect the sound. Let's now select some of these patches.

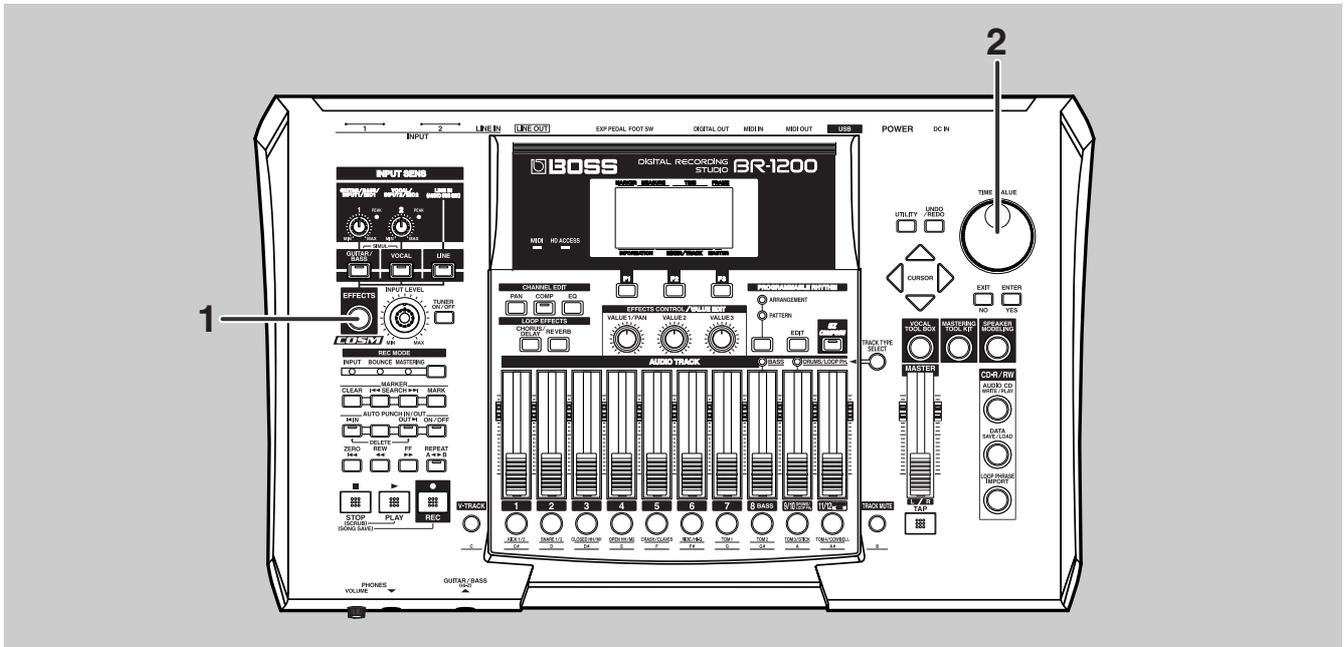

**1** Press [EFFECTS].  
The insert effects' patch screen will appear.



**2** Using the TIME/VALUE dial, change the patch number and select the desired effect.  
The sound of the insert effect will change each time a different patch is selected.

## NOTE


Whenever a patch is selected, the effect sound will be muted for a short period of time (i.e., 20 to 50 ms) in order to prevent switching noise being output.

## MEMO

At the time of purchase, the BR-1200CD's preset banks and user banks will contain the same effects.

## When you Want to Record the Input Sounds As Is

You may want to turn off an Insert Effect in order to record the input source as is. If this is the case, use the following procedure to turn off the effect (Effect Off).

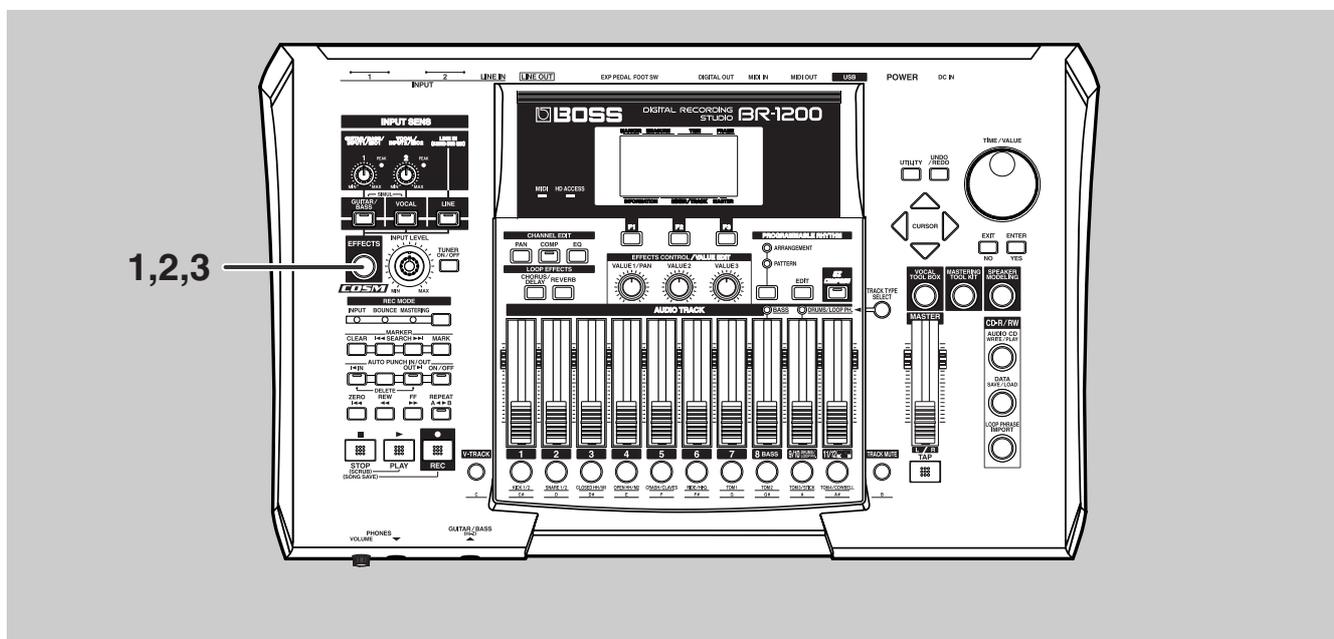

- 1 Press [EFFECTS].  
The insert effects' patch screen will appear.



- 2 Press [EFFECTS] once again.  
The insert effect has been turned off.  
[EFFECTS] will go out, indicating that the insert effect has been turned off.

- 3 If you would like to re-apply the insert effect, press [EFFECT] once again.  
The insert effect has been turned on.  
[EFFECTS] will light up, indicating that the insert effect has been turned on.  
[EFFECTS] is used to toggle the insert effect between on and off.

### NOTE

Even if an insert effect has been turned off, it will be automatically turned back on whenever a different INPUT SELECT button is pressed or a different patch is selected.

# Selecting drums to act as a guide for recording

It is often difficult to keep playing a part at a fixed tempo until you have become very familiar with it. If you play along with the BR-1200CD's internal drums, however, this type of variation in tempo can be dramatically reduced. Thanks to the highly realistic sound of the BR-1200CD's PCM drum samples, you'll be able to enjoy the great feeling of playing along with actual drums. What's more, if you record along with a drum track, you'll be able to perform editing in units of beats and bars later on.

## MEMO


You can use bass and loop phrase as well as drum as a guide. Please refer to "Section 4 Using Rhythm" (p. 153).

## Setting up a drum track (Track Type Select)

In order to set up the BR-1200CD to play drum sounds, use the following procedure to designate Track 9/10 as the drum & loop phrase track.

## NOTE

If USE DRUMS + LOOP or USE DRUMS + BASS + LOOP was selected during SONG NEW (p. 48), Track 9/10 will be already set up as the drum track and the following procedure will not be required.

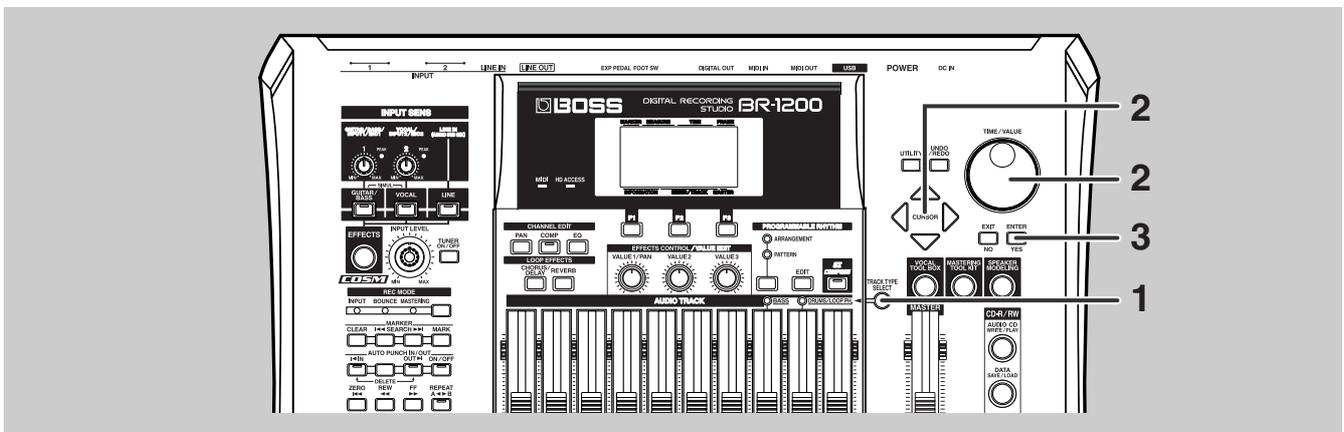

- 1 With the top screen displayed, press [TRACK TYPE SELECT].

The Track Type Select screen will appear.



## MEMO

For more detailed information regarding track types, refer to "Setting the track type" (p. 157).


- 2 Move the cursor to "TRACK 9/10" and use the TIME/VALUE dial to select the "DRUMS&LP."



- 3 Press [ENTER/YES].

This operation sets up Track 9/10 as the drum & loop phrase track.

## Playing drum sounds

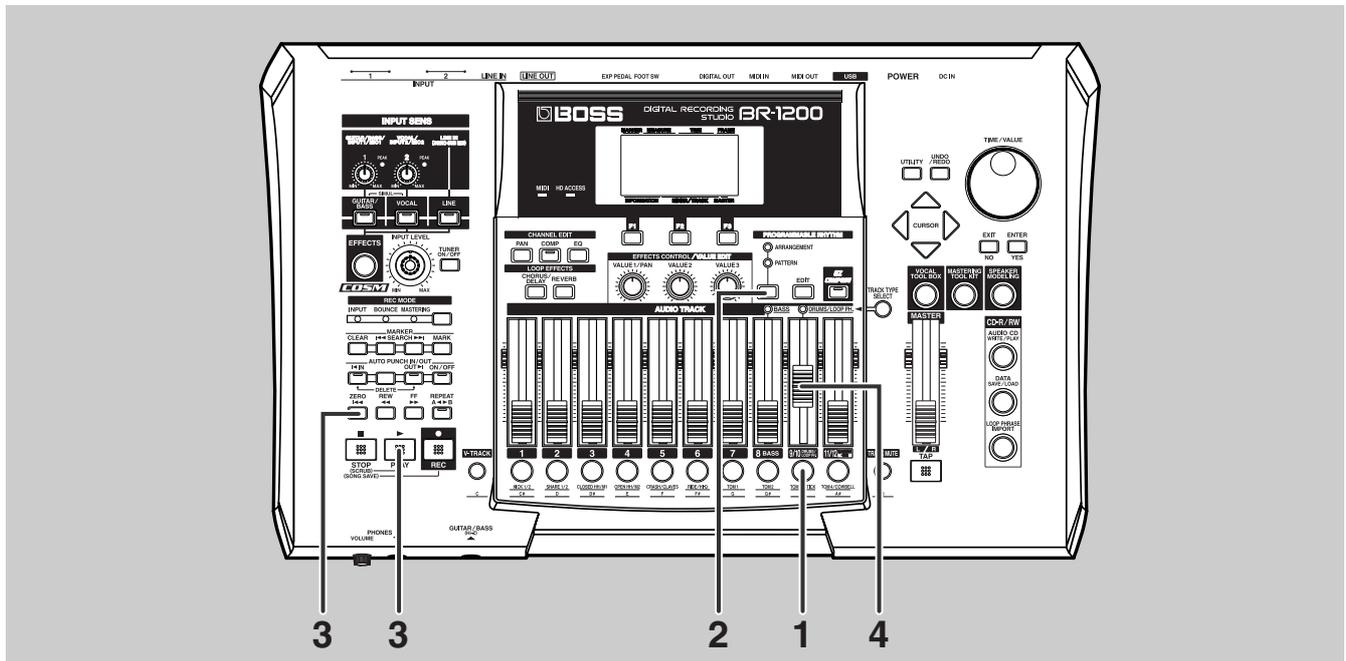

**1** Press the track button for Track 9/10 several times until it starts to flash.

You can press this button repeatedly to cycle through the available statuses, which are: Flashing → Lit → Unlit.

**Unlit:** No drum and loop phrase sounds will be played.

**Flashing:** Drum and loop phrase sounds will be played only when the BR-1200CD is recording or performing playback.

**Lit:** Drum sounds will be played even when the BR-1200CD is stopped.  
The loop phrase only plays during recording or playback with the recorder.

**2** Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the PATTERN indicator is lighted.

Each time this button is pressed, it toggles between lit and unlit.

**PATTERN indicator is lit: Pattern mode**

In this mode, a rhythm pattern of one or several bars in length is played repeatedly. This type of playback can be used instead of a metronome, and it can also provide a useful guide track when you are working on ideas for new songs.

**ARRANGEMENT indicator is lit: Arrangement mode**

In this mode, drum patterns can be arranged and played back in accord with a song structure comprising intro, verse, fill, bridge, break, and ending elements. Once you have an idea of your new song, this function allows the complete drum structure to be easily created.


**3** Play the song from the beginning.

The BR-1200CD will start playback of the drum track.

**4** Use the Track 9/10 fader to adjust to the appropriate volume.

## Selecting drum patterns



The BR-1200CD features preset drum patterns. Let's choose one of these patterns to play with.

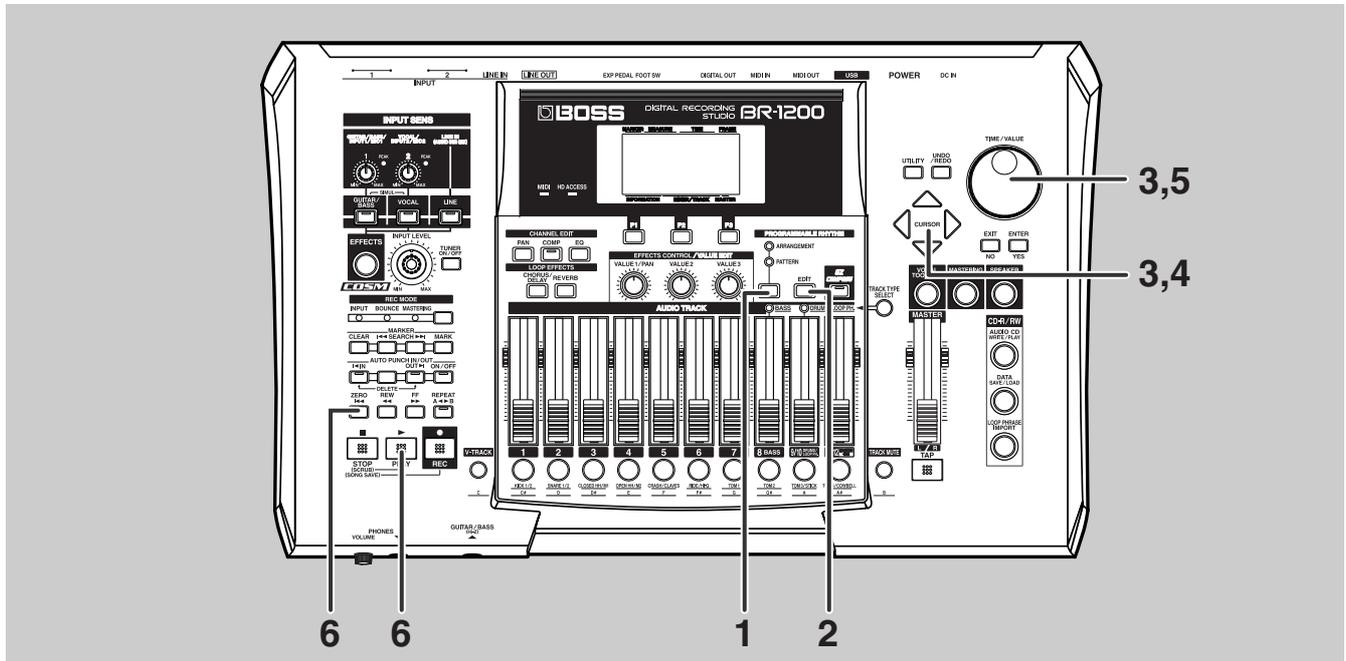

**1** Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the PATTERN indicator is lighted.


**4** Move the cursor to the drum pattern number.

**2** Press PROGRAMMABLE RHYTHM [EDIT].  
The Pattern Select screen will appear.

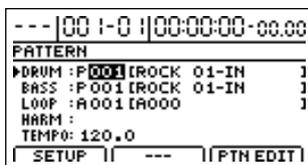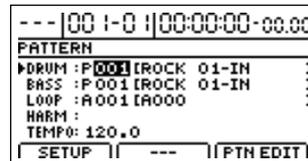

**5** Select a drum pattern number using the TIME/VALUE dial.

**3** Move the cursor to Drum Pattern Group in "DRUM," and turn the TIME/VALUE dial to "P" for the Drum Pattern Group.

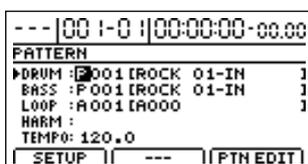

**6** Play the song from the beginning.  
The BR-1200CD will start playback of the selected drum pattern.

## Selecting drums to act as a guide for recording

### NOTE

At the time of purchase, the BR-1200CD contains drum patterns only in Preset patterns (P001–). User patterns (U001 –) and Song (S001–) are provided for you to freely create your own drum patterns, and these patterns are initially empty. If you select “U” or “S” at this time the BR-1200CD will not be able to play back a rhythm track.

### MEMO


Even while the drum pattern is being played, you can repeat Step 5 above to select a new pattern. In such a case, playback of the newly selected drum pattern will start as soon as the previously selected drum pattern has ended.

# Changing the drum pattern tempo

Two simple methods are available for changing the tempo of the drum track.

- Set the new tempo using the TIME/VALUE dial
- Tap the new tempo using [TAP]

## Set the new tempo using the TIME/VALUE dial

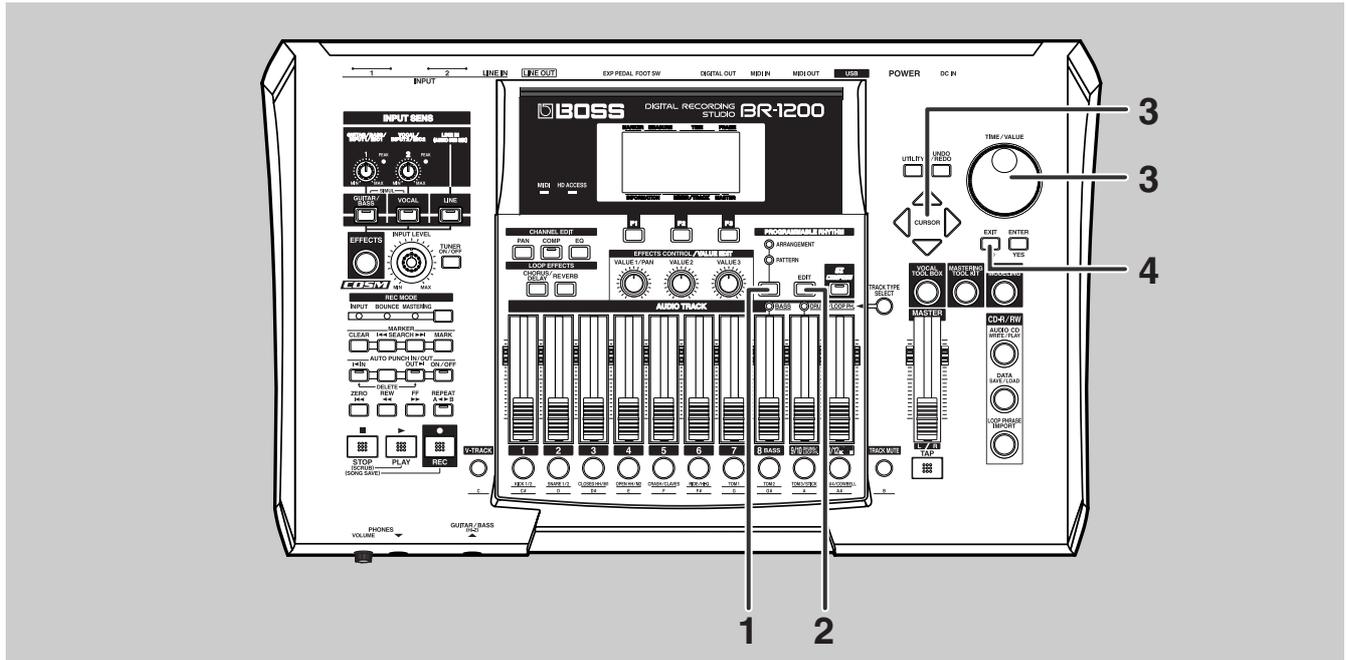

**1** Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the PATTERN indicator is lighted.

**2** Press PROGRAMMABLE RHYTHM [EDIT].  
The Pattern Selection screen will appear.

```

---|00 1-0 |00:00:00-00.00
PATTERN
▶DRUM : P001 (ROCK 01-IN) 1
BASS : P001 (ROCK 01-IN) 1
LOOP : A001 (A000) 1
HARM :
TEMPO : 120.0
SETUP || --- ||PTN EDIT|
    
```

**3** Move the cursor to “TEMPO” and select a suitable tempo using the TIME/VALUE dial.  
You will be able to hear how your new setting changes the playback tempo.

The tempo can be set anywhere within a range of 25.0 to 250.0 BPM. (Beats Per Minute—A value that indicates the tempo in terms of the number of quarter notes occurring in one minute.)


**4** After you have set the tempo, press [EXIT/NO] several times to return to the top screen.

**5** If you wish to store the pattern’s tempo, save the current song (p. 70).

## Setting the tempo using [TAP]

In addition to setting the tempo using [CURSOR] and the TIME/VALUE dial, you can also set it by tapping your finger on [TAP] at the desired tempo. (Tap Tempo)

This feature proves extremely useful when you want to match the playback tempo to that of an audio CD but don't know the actual BPM value.

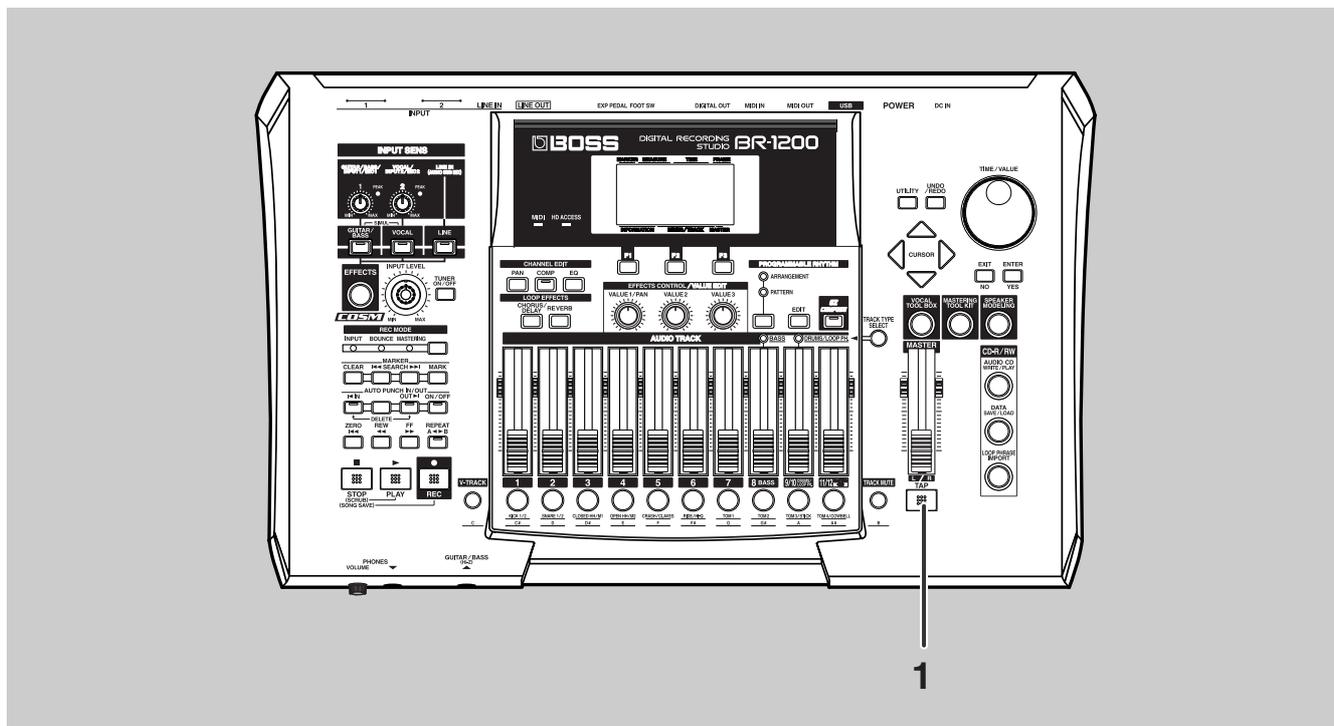

- 1 Tap your finger on [TAP] four times with approximately the same interval.

The tempo will be set based on the average tapping interval.


### MEMO

In addition to the two methods indicated above, it is also possible to specify tempos much more precisely for each individual measure. For more detailed information, refer to "Setting tempos and beats for individual measures (Tempo Map/Beat Map)" (p. 209).

And a further method also enables you to control the BR-1200CD's tempo by synchronizing it with the tempo of an external MIDI sequencer. For more detailed information, refer to "Synchronizing external MIDI sequencers and rhythm machines" (p. 245).


## Changing the drum sounds

Drum patterns can be given a completely new feel by changing the sounds of the drums that they use.

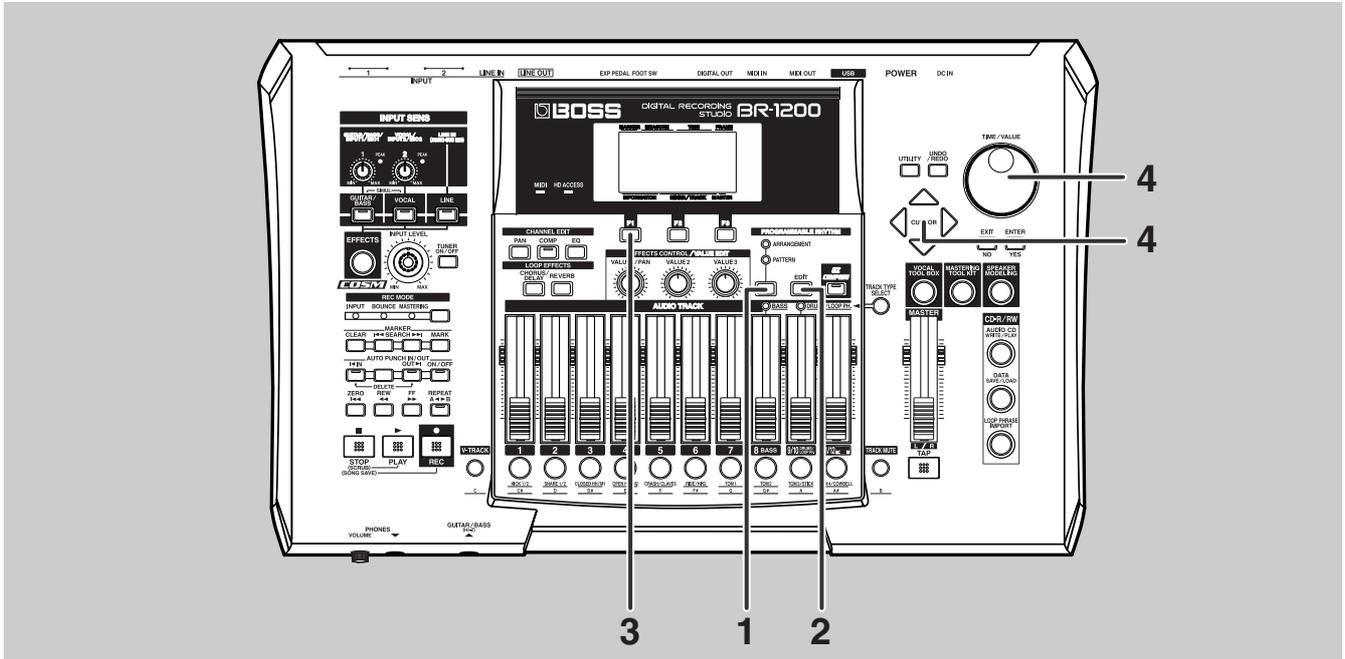

**1** Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the PATTERN indicator is lighted.

**2** Press PROGRAMMABLE RHYTHM [EDIT].  
The Pattern Select screen will appear.

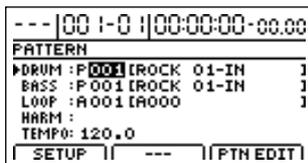

**3** Press [F1] (SETUP).  
The Pattern Setup screen will appear.



**4** Move the cursor to Drum and select a new drum kit using the TIME/VALUE dial.  
The drum pattern will be played using sounds from the newly selected drum kit.



## Selecting drums to act as a guide for recording


### NOTE

A short period of time (i.e., 1 or 2 seconds) is required for the switching of drum kits. Although you will not be able to hear the drum pattern during this period, this is normal and is not the result of a malfunction.


### MEMO

Although this section described a playback method where a basic rhythm (Drum Pattern) of one or several bars in length was repeated indefinitely, you can also arrange and play back drum patterns that have been matched to a song structure comprising Intro, Verse, Fill, Bridge, Break, and End Crash elements in any order. This type of combination is referred to as a “rhythm arrangement.” For more detailed information regarding rhythm arrangement operations, refer to “Using rhythm arrangements” (p. 197).

# Adjusting the recording level

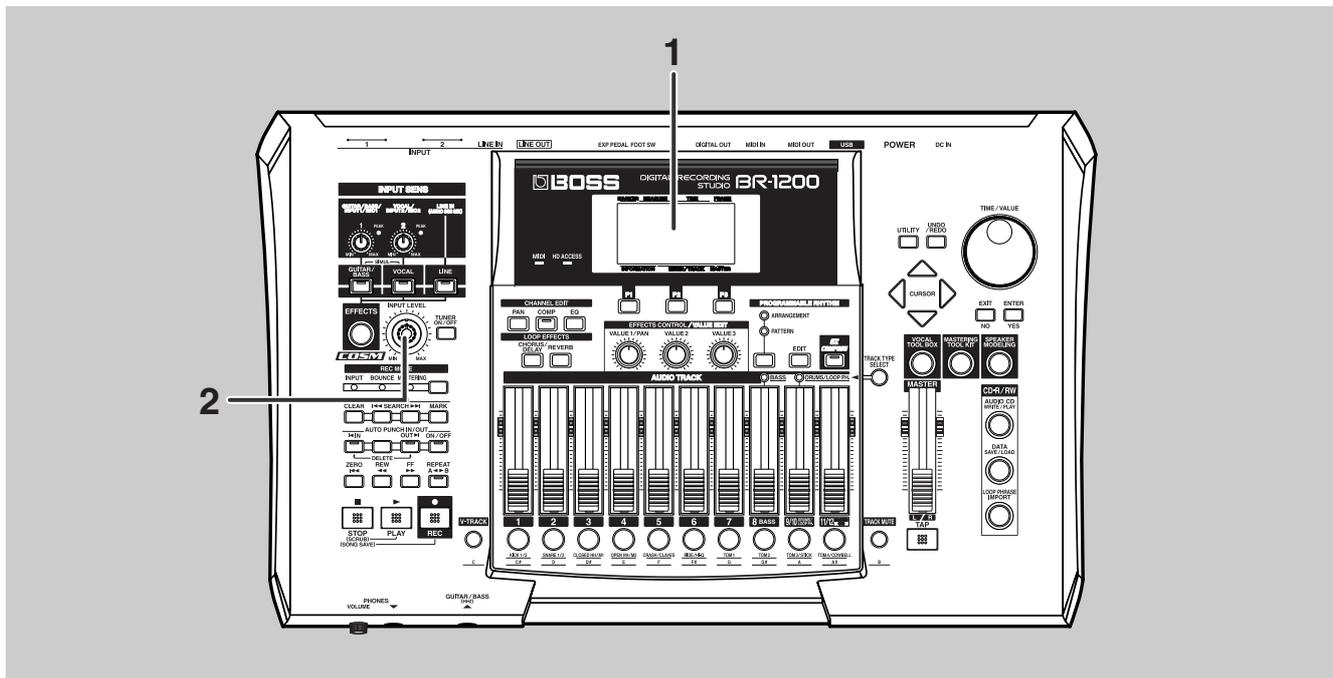

- 1 Play the instrument to be recorded.  
The level meters on the display change in response to the instrument's volume.

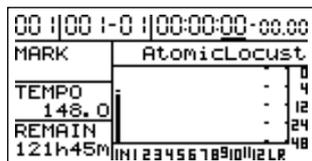


- 2 Use the INPUT LEVEL knob to ensure that the peak display for any level meter does not rise above 0 dB when the instrument is played hard.

## MEMO


Rather than changing the volume of effect inputs, the INPUT LEVEL knob adjusts the volume after effects have been applied. As a result, factors such as distortion and the effect of compressors are not influenced by this knob.

# Setting an audio input's left-right position (Input Pan)

When recording from a number of different microphones at the same time or in other similar situations, you can widen the overall sound by setting the left-right position (i.e., the pan) of each microphone before recording is started.

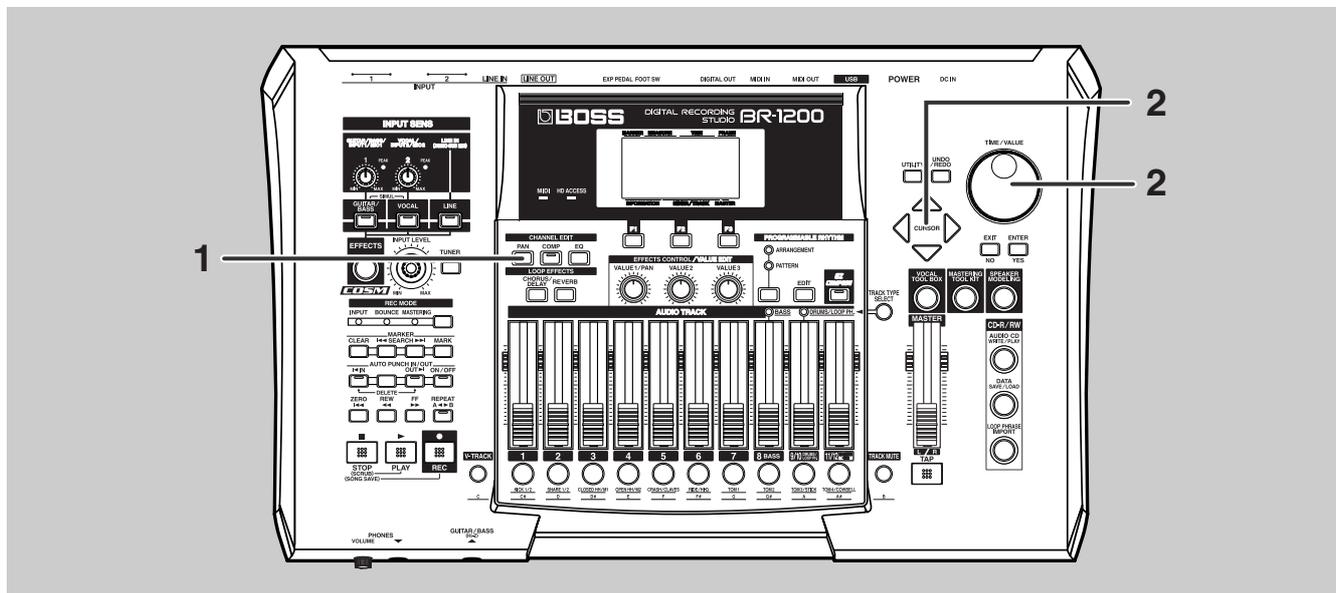

- 1 Press CHANNEL EDIT [PAN].  
The pan setting screen will appear.

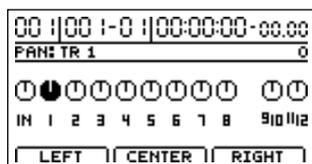

- 2 Move the cursor to "IN," and use the TIME/VALUE dial to make a new pan setting.

The setting can also be carried out using the VALUE1/PAN knob.

**L100:** Audio is moved to the extreme left.

**0:** Audio is moved to the center.

**R100:** Audio is moved to the extreme right.

You can press [F1]–[F3] at this point to set the pan at a single touch.

[F1] (LEFT): L100

[F2] (CENTER): 0


[F3] (RIGHT): R100

## MEMO

After recording, the pan values set here for each audio input are automatically copied to the corresponding recorded tracks.


# Applying reverb for a warmer sound during recording (Reverb)

Vocalists often find it easier to sing when a small amount of reverb is applied to their voice during recording. This does not apply to vocalists alone—in fact, you will find that the presence of reverb on other instruments can also lead to improved performances and better recordings, and this is particularly true in the case of instruments that play melodies. We will now apply reverb to our input sources to see how it sounds.

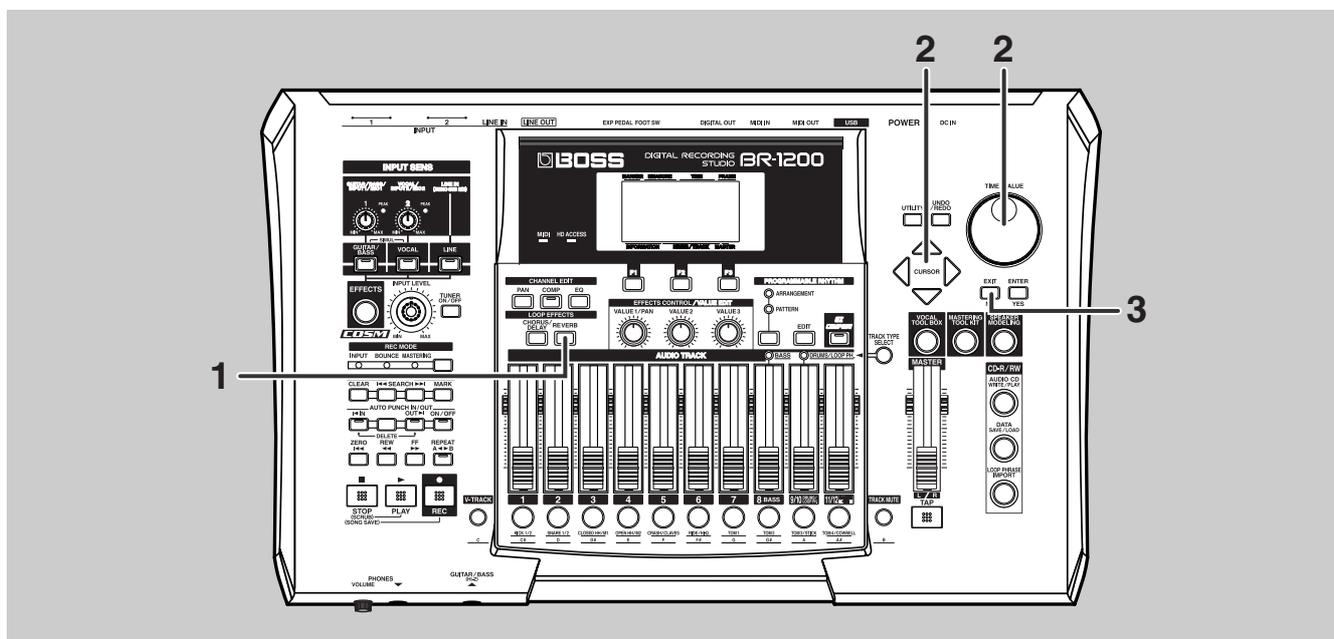

## 1 Press LOOP EFFECTS [REVERB].

The BR-1200CD will display a screen (Reverb Send) for adjusting the amount of the audio being sent from each track to the reverb.

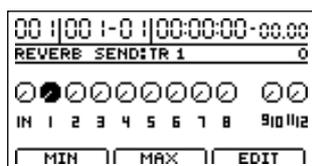

## 2 Move the cursor to "IN," and use the TIME/VALUE dial to set a pleasant reverb send level.

When the reverb send level is 0, no reverb will be applied; when it is 100, the maximum amount of reverb will be applied.

## 3 Press [EXIT/NO] to return to the top screen.


### MEMO

- Although the sound you hear will include reverb, this effect is not actually applied to the sound to be recorded. (Only the true sound of the performance will be recorded.)
- After recording, the values for reverb send levels set here for each audio input are automatically copied to the reverb send levels of the corresponding recorded tracks. As a result, when you play back a track that was recorded with reverb applied in this way, you will still be able to hear the same reverb. This may lead you to conclude that you accidentally recorded the reverb together with the input source, but this is not the case. In actuality, the true sound was recorded to the track, and reverb was reapplied to the recorded sound during playback. The BR-1200CD copies these settings to ensure that the same sound heard during recording will be heard during playback; however, if you no longer need to hear this reverb, set the corresponding reverb send level to zero. This will remove reverb from the playback sound.

# MEMO

# Recording

In the previous sections, you have made all the necessary preparations for recording instruments as they are played along with a drum pattern. We will now record one of these instruments.

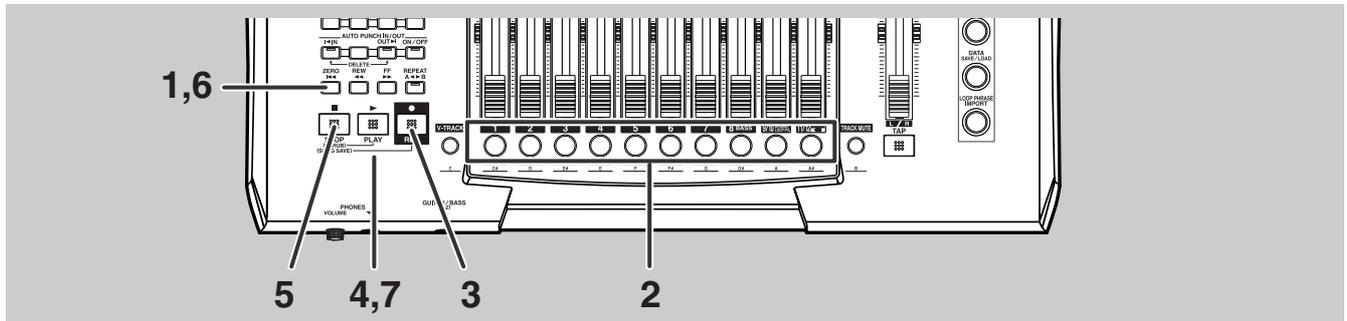

**1** Press [ZERO].  
The current position will jump to the beginning of the song.

**2** Press the track button for the track to be recorded (Recording Track).  
The track button will turn red and start flashing to indicate selection as a recording track.  
The track buttons function in a different way for each Input Select status. For more detailed information regarding the relationship between the Input Select status and the track buttons, refer to “Input select status and track button functions” below.

**3** Press [REC].  
[REC] will turn red and start to flash, indicating that the BR-1200CD is now ready for recording.

**4** Press [PLAY].  
Both [PLAY] and [REC] will light up and recording will start. The color of the track button for the recording track will change to red.  
Since the BR-1200CD plays the drum pattern during recording, the instrument can be played along with the drums. Note, however, that the drums will not be recorded onto the recording track. Only the instrument itself is recorded.

**5** Press [STOP] when you want to stop recording.  
Both [PLAY] and [REC] will turn off and recording will stop. Playback of the drum pattern will also stop at this time. The track button for the recording track will now start to flash green and orange.

**6** Press [ZERO].

**7** Press [PLAY].  
[PLAY] will light up and the recorded performance will be played back. Use the fader for the recorded track to change its volume during playback.

**8** If you wish to store the recorded audio, save the current song (p. 70).

## NOTE

- If you turn off the BR-1200CD without saving the current song, the recorded audio will be lost.
- If the track type (p. 54) for tracks 9/10 and 11/12 has been set to anything other than “AUDIO,” it will not be possible to select the tracks for recording. If you want to record to these tracks, the track type must be set to AUDIO.
- After recording has been stopped, a period of 1 or 2 seconds may elapse before you can carry out the next operation.
- The BR-1200CD allows a single, continuous recording of up to approximately 13 hours in length to be carried out. If a single recording reaches this limit, the message “Memory Full” will be displayed and recording will be stopped automatically. If you want to continue recording in such a case, hold down [REC] and press [PLAY] at the position where recording was stopped.



## Input Select status and track button functions

- \* The following section describes the selection of audio tracks using track buttons. When any of the TRACK TYPE indicators are lit up, Tracks 9/10 and 11/12 will each be selected for drum patterns, bass patterns, and loop phrases, respectively. It is important to remember that the operation of these tracks will differ from that of standard audio tracks.

### When the Input Select status is GUITAR/BASS:

Only one of the track buttons will flash, and the sound source will be recorded to the corresponding track.

If a pair of adjacent track buttons (such 1 and 2, or 3 and 4) are pressed simultaneously at this time, both of these buttons will begin to flash, indicating that the corresponding tracks have been selected as the destination for a stereo recording. If you then press one of these track buttons, things go back to the way they commonly are, with only one track button flashing. This means that the corresponding track has been selected to record in mono.

Note that whenever a pair of tracks from Track 9/10 or Track 11/12 is selected, the corresponding tracks will always be selected for stereo recording.

Certain effects applied to mono input sources produce a stereo output, and the BR-1200CD allows stereo tracks to be selected so that this audio can be recorded. If the output of such an effect were recorded to a mono track, the stereo nature of the sound would be lost.

### When the Input Select status is VOCAL:

Only one of the track buttons will flash.

If a pair of adjacent track buttons (such 1 and 2, or 3 and 4) are pressed simultaneously at this time, both of these buttons will begin to flash, indicating that the corresponding tracks have been selected as the destination for a stereo recording. If you then press one of these track buttons, things go back to the way they commonly are, with only one track button flashing. This means that the corresponding track has been selected to record in mono.

Note that whenever a pair of tracks from Track 9/10 or Track 11/12 is selected, the corresponding tracks will always be selected for stereo recording.

Certain effects applied to mono input sources produce a stereo output, and the BR-1200CD allows stereo tracks to be selected so that this audio can be recorded. If the output of such an effect were recorded to a mono track, the stereo nature of the sound would be lost.

### When the Input Select status is SIMUL:

A pair of tracks are selected for recording, and the track buttons for these tracks start flashing.

In this condition, the audio from the INPUT 1/MIC 1 jack or the GUITAR/BASS jack, and the audio from the INPUT 2/MIC 2 jack will be recorded separately on the two selected tracks.

If one of the flashing track buttons were to be pressed at this time, the other button would stop flashing and turn off, indicating that a mix of the two input sources will be recorded to the mono track corresponding to the flashing track button.

Note that whenever a pair of tracks from Track 9/10 or Track 11/12 is selected, the corresponding tracks will always be selected for the separate recording of each of the input sources.

### When the Input Select status is LINE:

A stereo track is selected for recording, and the track button for this track starts flashing.


Sounds input from LINE IN L/R are recorded to the selected audio tracks.

If one of the flashing track buttons were to be pressed at this time, the other button would stop flashing and turn off, indicating that a mix of the two input sources will be recorded to the mono track corresponding to the flashing track button.

Note that whenever a pair of tracks from Track 9/10 or Track 11/12 is selected, the corresponding tracks will always be selected for the separate recording of each of the input sources.

# Recording a new track while listening to an earlier recording (Overdubbing)

The BR-1200CD is a multi-track recorder, and in contrast to standard tape recorders, MD recorders, etc., multi-track recorders allow you to record new tracks while you listen to tracks that have been previously recorded. This capability is referred to as “overdubbing.” By recording the vocals, guitar, bass guitar, and other instruments onto individual tracks, you ensure that the relative levels of instruments and their left-right positioning can be optimized later on. In addition, it is also possible to replace entire performances for individual instruments.

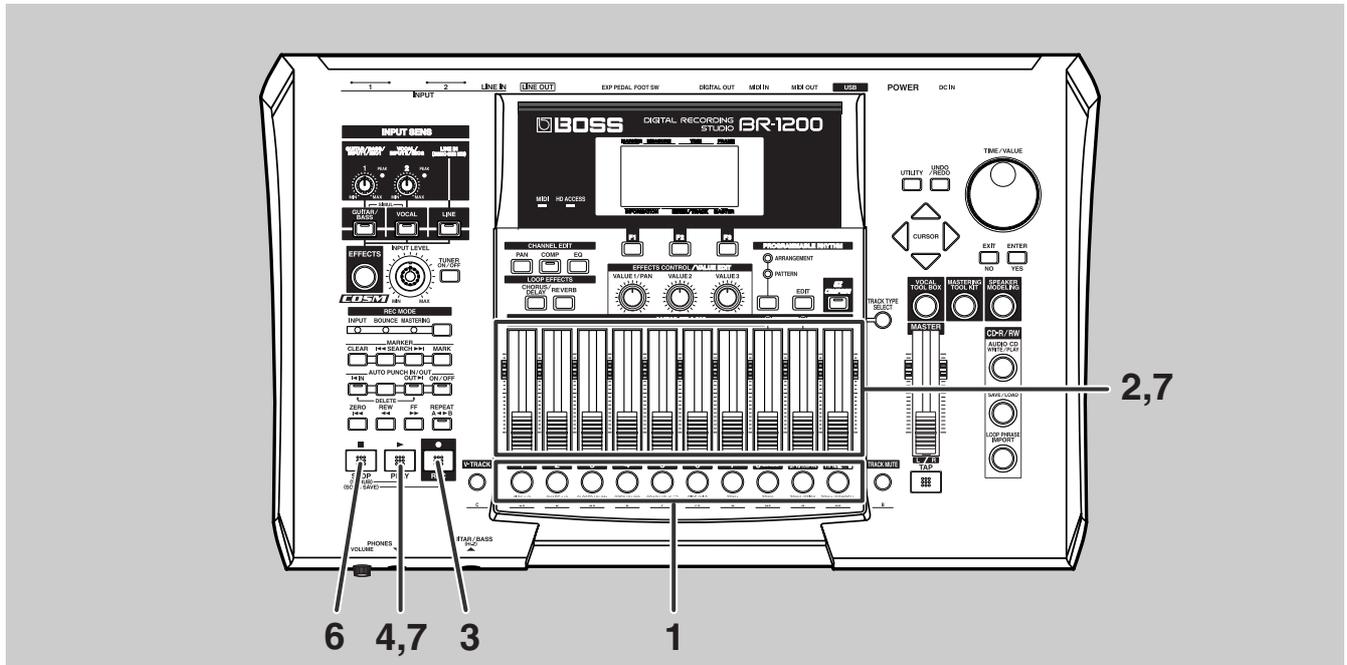

**1** Press the track button for a track that has not yet been recorded.

The corresponding track will be selected for recording, and the track button will turn red and start flashing. The track buttons for tracks that have been recorded will all be green.

**2** Move the faders for the previously recorded tracks to the positions that give suitable playback volumes.

**3** Press [REC].

[REC] will turn red and start to flash, indicating that the BR-1200CD is now ready for recording.

**4** Press [PLAY].

[PLAY] will turn green, [REC] will change to a steady red, and recording will start. Although you will be able to hear the previously recorded tracks at this time, none of this audio data will be recorded to the recording track.

**5** Play the instrument to be recorded this time along with the previously recorded tracks.

Only this instrument will be recorded.

**6** Press [STOP] at the point where you want to stop recording.

Both [PLAY] and [REC] will turn off, and the track button for the recording track will now start to flash green and orange.

## Recording a new track while listening to an earlier recording (Overdubbing)

**7** Move the recorded track's fader to a position that gives a suitable playback volume, and then press [PLAY].

[PLAY] will light up and the track just recorded will play back together with those tracks recorded earlier.

**8** Repeat Steps 1 to 7 as many times as necessary to make the required number of recordings.

**9** If you wish to store the recorded audio, save the current song (p. 70).

### NOTE

If you turn off the BR-1200CD without saving the current song, the recorded audio will be lost.

### MEMO

#### Useful tip for overdubbing

When you are making a new recording while listening to previously recorded tracks, these tracks can drown out the sound of the instrument currently being played, making it difficult to hear. In this type of situation, you can lower the faders of the playback tracks, use pan to move either these tracks or the instrument being played to the left or right, etc. to make it easier to hear this instrument.

 "Setting the left-right position of each track (Pan)" (p. 82)

 "Setting an audio input's left-right position (Input Pan)" (p. 63)


### MEMO

If you have constructed a song through repeated overdubbing, it is often the case that the recorded instruments will sound disjointed in terms of volume and position, giving the impression that they're not actually part of the same performance. Nevertheless, if you combine each of these tracks into a stereo mix while readjusting the balance of volume and pan settings, you will be able to convey the image of a single, complete song.

For more information and instructions on mixing down, refer to "Mixing audio from various tracks onto a stereo track (Bounce)" (p. 82).


# Saving your song (Song Save)

In the BR-1200CD, recorded or edited audio data is only temporarily stored on the hard disk until the corresponding song is saved. If the power is turned off without saving the song, all newly recorded audio data, edited data, modified mixer settings, etc. will be lost. The Save function prevents this from occurring by storing the recorded and edited data on the BR-1200CD's hard disk.

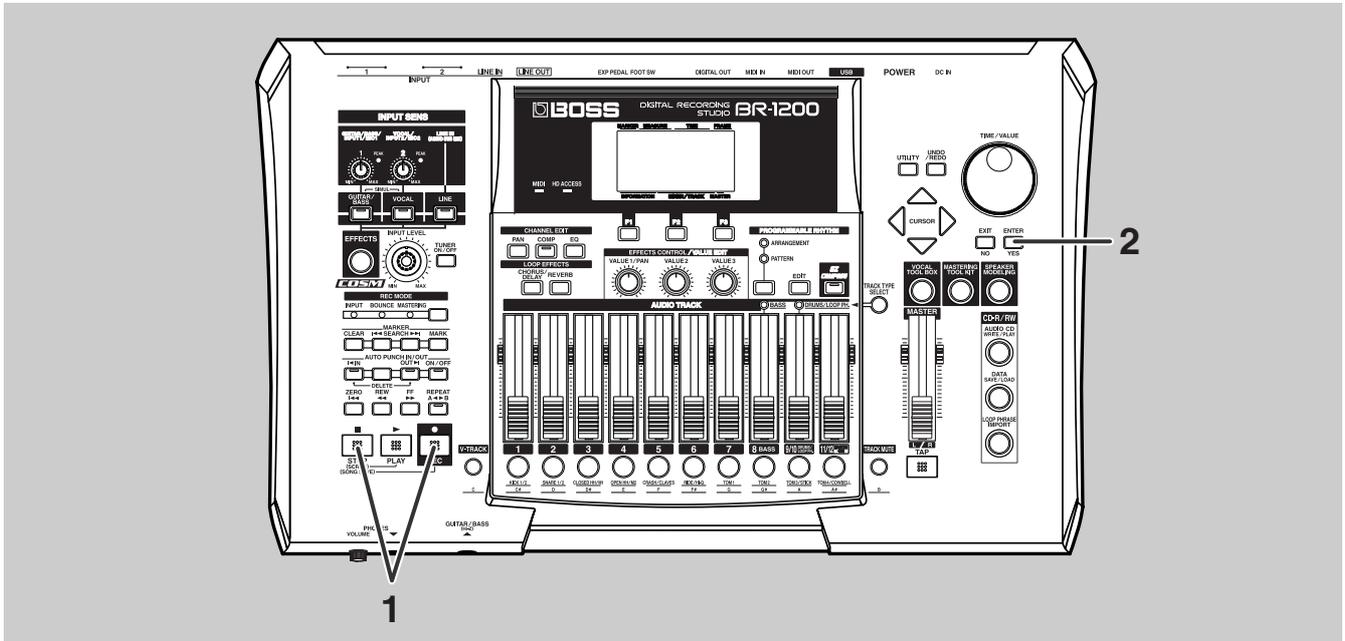

- 1 With the top screen displayed, hold down [STOP] and press [REC].

The message "Save Current?" will appear.

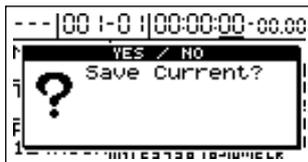

- 2 Press [ENTER/YES]. (If you do not want to save, press [EXIT/NO].)

The message "Storing Current..." will appear on the screen and saving of the song will begin. When saving has been completed, the message "Complete!" will appear.




**NOTE**

Song Protect has activated for the demo songs already included in the BR-1200CD at the time of purchase; accordingly, the message "Protected Song!" will be displayed at this time and it will not be possible to save the song.

## Saving your song from the Utility screen


In addition to the above method, songs can also be saved from the Utility screen. Note that both methods save songs in exactly the same way.

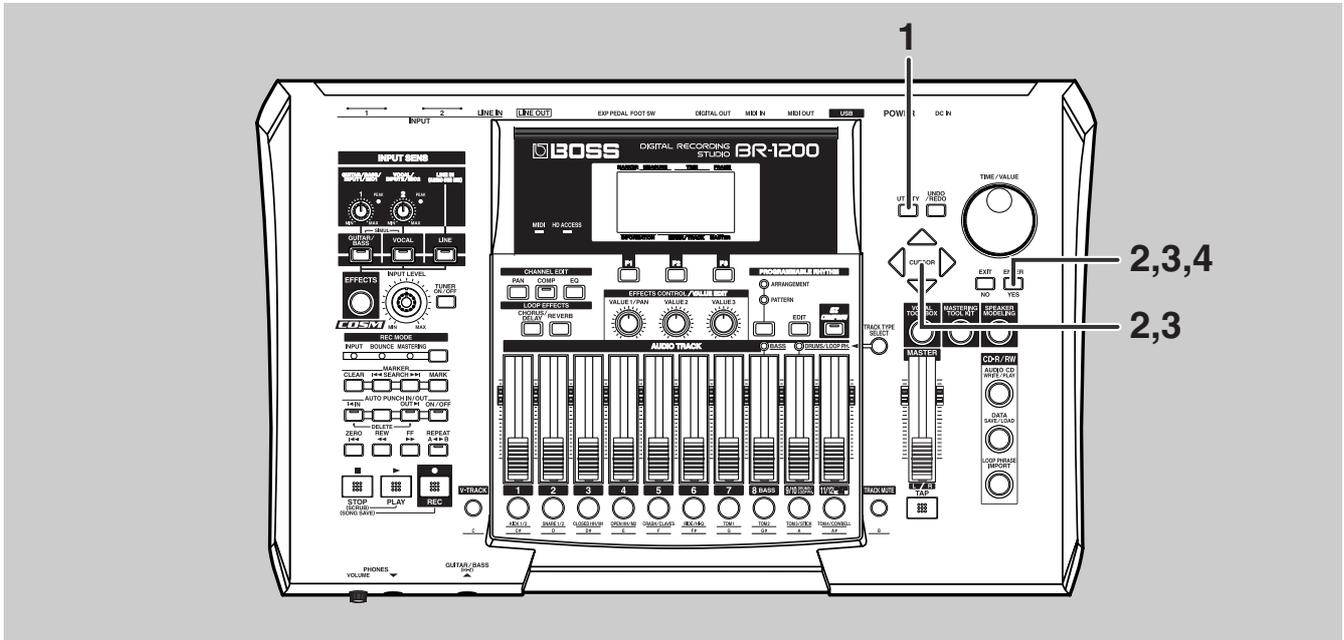

- 1 Press [UTILITY].  
The Utility Menu screen will appear.



- 2 Move the cursor to the SONG icon and press [ENTER/YES].  
Alternatively, you can press [F2] (SONG) if the SONG icon is currently displayed.  
The Song Menu screen will appear.

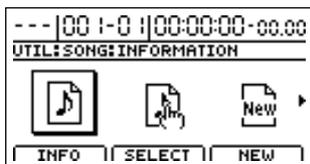

- 3 Move the cursor to the STORE icon and press [ENTER/YES].  
Alternatively, you can press [F1] (STORE) if the STORE icon is currently displayed. The message "Save Current?" will appear.

- 4 Press [ENTER/YES]. (If you do not want to save, press [EXIT/NO].)  
The message "Storing Current..." will appear on the display and saving of the song will begin.  
When saving has been completed, the message "Complete!" will appear.

## Demo Song List

Song Name	Composer
"Atomic Locust"	Music by Marty Friedman/Takeomi Matsuura Copyright © 2004 Marty Friedman, Takeomi Matsuura
"Hold Up the Light"	Composers: Percy Bady, Benjamin Winans Words and Music: Percy Bady, Words: Benjamin Winans Copyright © 1988 Bad Bady Music, Inc., Dasnice Music, Benny's Music, BMI
Over My Head	Music by Greg Peters and J.P. Charles Lyrics by J.P. Charles Copyright © 2004 JCP Music, ASCAP

\* No data for the music that is played will be output from MIDI OUT.


# **Section 1**

# **Recording and Playback**

# Playing back repeatedly (Repeat Function)

Use the Repeat function to play a certain section of the song in a repeated fashion.

This function can also be combined with punch-in and punch-out to carry out loop recording (p. 75).

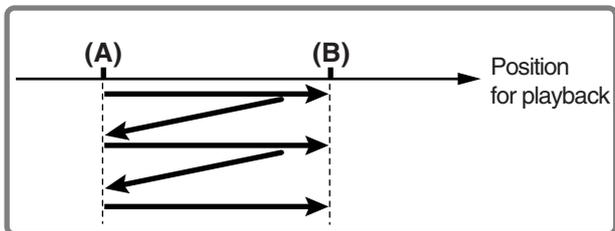


- 1. Move to the song position from which looped playback is to be started.**
- 2. Press [REPEAT].**  
[REPEAT] will start to flash and the current position will be specified as the start position (A) for repeat playback.
- 3. Move to the song position at which playback is to be looped back.**
- 4. Press [REPEAT].**  
[REPEAT] will start to light up and the current position will be specified as the end position (B) for repeat playback.
- 5. To redo these settings, press [REPEAT] once again, and turn it off.**  
In this condition, the start position (A) and end position (B) for repeat playback have been cleared. Repeat Steps 1 through 4 to set new positions.
- 6. Move the current position to a point before (B) and start playback.**  
When the song position reaches (B), it will automatically jump to (A), and the section between (A) and (B) plays back repeatedly.

## NOTE

- A gap of at least 0.5 seconds (approx.) is required between the start position (A) and the end position (B) for repeat playback. As a result, (B) cannot be set up at a position within 0.5 seconds (approx.) of (A).
- Playback is not repeated when the playback is started at a song position after (B).

# Re-recording only the portion that is mistaken (Punch In/Out)

You may occasionally make a mistake during a recording, or the performance may not turn out the way the musician intended. In such cases, you can use functions known as punch in and punch out to re-record specific parts of the performance. Specifically, punch in refers to an action where recording is started while listening to playback of a track, and punch out refers to the reverse situation where recording is stopped but playback of the track can still be heard. In other words, you punch in at the start of the section you want to re-record, and you punch out at the end of that section.

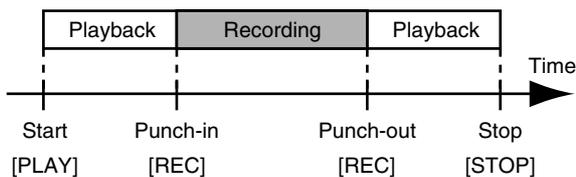

## MEMO

- If you are still not happy with the track after re-recording with punch in and punch out, you can use Undo (p. 81) to restore the track to its original condition.
- Even if a portion of a track has been re-recorded using punch in and punch out, the replaced audio data will remain on the BR-1200CD's hard disk. If this data will not be used again, Song Optimization (p. 112) allows you to delete it together with other unneeded data, thus ensuring that you make the most of the hard disk's storage capacity.

The BR-1200CD supports two different types of punch in/out procedures—namely, manual punch in/out and auto punch in/out.

## Manual punch in and punch out

Use [REC] or a foot switch to activate punch in and punch out. If you are both playing the instrument and operating the BR-1200CD, it can often be difficult to press [REC] at the right time. In such a case, a foot switch (such as the optional Roland DP-2 or BOSS FS-5U) can be used to activate punch in and punch out conveniently by foot.


## Performing manual punch in and punch out using [REC]

The following section will describe using manual punch in and punch out to re-record a portion of Track 1, which was recorded earlier.

1. Press the TRACK [1].

This track button will start to flash orange and green.

2. Move the fader for Track 1 to the position shown below.

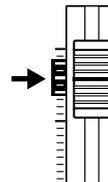

3. Confirm that [ON/OFF] from AUTO PUNCH is not lit up.

If this button is lit, it will need to be pressed to turn it off.

4. Start playback of your song and use the INPUT LEVEL knob to adjust the volume of the input to an appropriate level.

If you want to mute Track 1 during playback, hold down [TRACK MUTE] and press the track button for this track. You can then perform the same procedure once again to cancel muting.

Listen to both the recorded audio and the input to compare their volumes. If necessary, use the INPUT LEVEL knob to adjust the volume of the input so it is identical to that of the recording.

5. When the volume levels have been matched, confirm that Track 1 is not being muted before proceeding.

6. Move to a position before where you want to start re-record and press [PLAY] to start playback.

7. When playback reaches the beginning of this section, press [REC] to punch in and start recording.

To punch out after recording, press either [REC] or [PLAY].

[REC] can be used to punch in and punch out repeatedly, and if any other sections need to be re-recorded, you can use the same procedure described above without having to stop playback.

8. Press [STOP] when re-recording has been completed.

9. Listen to the performance with the re-recorded section.

Make sure that you move the current position to a point before the re-recorded section before starting playback.

If necessary, use the fader for Track 1 to adjust its volume.

## Performing manual punch in and punch out using a foot switch

If you intend to use a foot switch (such as the optional Roland DP-2 or BOSS FS-5U) to activate punch in and punch out, it should be connected to the BR-1200CD at this time. Use the following procedure to set the appropriate action for the foot switch jack.

### 1. Press [UTILITY].

The Utility Menu screen will appear.




### 2. Move the cursor to the SYSTEM icon and press [ENTER/YES].

Alternatively, you can press [F2] (SYSTEM) if the SYSTEM icon is currently displayed.

The System screen will appear.



### 3. Move the cursor to "Foot Switch" and select PUNCH IN/OUT using the TIME/VALUE dial.

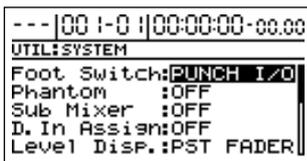

### 4. Press [EXIT/NO] several times to return to the top screen.

### 5. Start the recorder.

### 6. Operate the foot switch.

Each time the foot switch is depressed, the BR-1200CD either punches in or punches out.

## Auto punch in and punch out

The BR-1200CD supports a function known as Auto Punch In/Out, which will automatically activate punch in and punch out at specified locations within a song. This function is extremely useful in situations where punch in and punch out must be activated at exactly the right time, and where you need to concentrate on your performance, not the pressing of buttons.


## Specifying the section to be re-recorded

In order to activate punch in and punch out automatically, you will first of all need to set up the punch in and punch out positions as described below.

### ● Registering the punch in position

#### 1. Move the current position to the point at which you want the BR-1200CD to activate punch in and press AUTO PUNCH IN/OUT [IN].

The current position will now be registered as the position for punch in, and [IN] will light up to indicate that a punch in position has been registered.

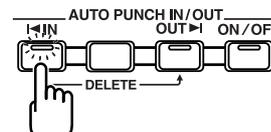


\* Once a punch in position has been registered, you can jump to this position at any time by pressing [IN].

\* If you want to cancel this position and/or register a new point for punch in, hold down [DELETE] and press [IN]. The punch in position will be cleared and [IN] will turn off.

### ● Registering the punch out position

#### 2. Move the current position to the point at which you want the BR-1200CD to activate punch out and press AUTO PUNCH IN/OUT [OUT].

The current position will now be registered as the position for punch out, and [OUT] will light up to indicate that a punch out position has been registered.

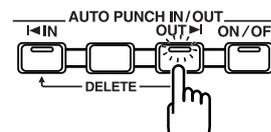

\* Once a punch out position has been registered, you can jump to this position at any time by pressing [OUT].

\* If you want to cancel this position and/or register a new point for punch out, hold down [DELETE] and press [OUT]. The punch out position will be cleared and [OUT] will turn off.

\* Note that the punch in and punch out positions must be at least 0.5 seconds apart. Accordingly, the punch out position cannot be set up within 0.5 seconds of the punch in position.

### MEMO


If you want to activate punch in and punch out at marker positions, first of all move the current position to the marker for punch in and press [IN]. Then, move to the marker for punch out and press [OUT]. For a description of the procedure for moving to marker positions, refer to "Moving to markers" (p. 90).

## Recording procedure

Once you have determined the segment you want to record, try actually recording using auto punch in/out.

For this example, we will use auto punch in and punch out to re-record a portion of Track 1, which was recorded earlier.

1. Press the TRACK [1].  
This track button will start to flash orange and green.
2. Move the fader for Track 1 to the position shown below.

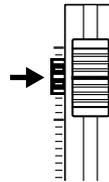

3. Confirm that AUTO PUNCH IN/OUT [ON/OFF] is not lit up.  
If this button is lit, it will need to be pressed to turn it off.
4. Start playback of your song and use the INPUT LEVEL knob to adjust the volume of the input to an appropriate level.
5. When the volume levels have been matched, confirm that Track 1 is not being muted before proceeding.
6. Move to a position before where you want to start re-record and press AUTO PUNCH IN/OUT [ON/OFF].  
This button will light up to indicate that auto punch in/out has been turned on.
7. Press [REC] to prepare the BR-1200CD for recording and then press [PLAY].  
Punch in will be activated automatically at the beginning of the section to be re-recorded so that you can perform your part without having to worry about pressing buttons. Similarly, when the end of this section has been reached, the BR-1200CD will automatically activate punch out and continue normal playback.
8. Press [STOP] when re-recording has been completed.
9. Listen to the performance with the re-recorded section.  
Make sure that you move the current position to a point before the re-recorded section before starting playback.  
If necessary, use the fader for Track 1 to adjust its volume. You can press [IN] at this time to jump straight to the punch in position.
10. To clear the settings for the auto punch in/out section, hold down [DELETE], press [IN] or [OUT].

### Repeating recording in a specific section (Loop Recording)

When the BR-1200CD's repeat function is used in combination with punch in and punch out, the recorded section will be played back automatically so you can hear what you have recorded. In addition, if you find that you are not happy with your recording, simply press [REC] without stopping playback to re-record once again. The combination of auto punch in/out with the repeat function in this way is referred to as Loop Recording.




For more detailed information regarding the repeat function, refer to p. 74.

### Specifying the section to be repeated

Before you start recording, you will first of all have to set up the start and end points of the section to be repeated.

At this time, it is important that you set up the section in such a way that it contains the section to be re-recorded (i.e., the section between the punch in and punch out positions). If the repeat section does not fully enclose the re-record section, recording may not start as required at the specified position or it may end abruptly in the middle of the re-record section.

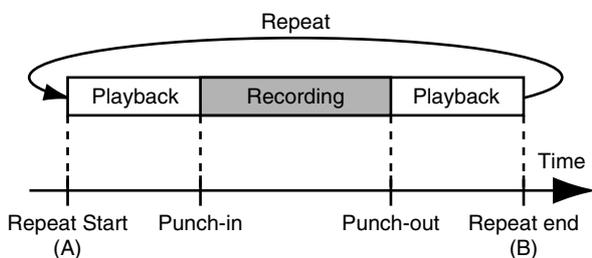

### Specifying the section to be recorded

Use "Auto punch in and punch out" (p. 76) to register the positions where the punch-in and punch-out are to be performed.


### Performing loop recording

As an example, the following section will describe usage of the repeat function together with auto punch in and punch out to re-record a portion of Track 1, which was recorded earlier.

**1. Press the TRACK [1].**

This track button will start to flash orange and green.

**2. Move the fader for Track 1 to the position shown below.**

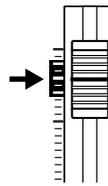

**3. Press AUTO PUNCH IN/OUT [ON/OFF].**

This button will light up to indicate that auto punch in/out has been turned on.

**4. Start playback of your song using the repeat function and use the INPUT LEVEL knob to adjust the volume of the input to a suitable level.**

**5. With repeat playback in progress, press [REC] just before the punch-in position.**

The BR-1200CD automatically switches to record mode at the punch-in position; recording stops automatically at the punch-out position, and the BR-1200CD reverts to playback mode.

After repeating, confirm the results just recorded.

If you were unable to get the recording to sound the way you wanted, press [REC] and record the passage over again.

**MEMO**

If you press [REC] within the segment between the punch-in and punch-out positions, the BR-1200CD immediately switches to record mode at that point, then automatically stops recording at the punch-out position.

**6. Press [STOP] when re-recording has been completed.**

Press [REPEAT]. This button will turn off, indicating that playback will not be repeated.

**7. Press AUTO PUNCH IN/OUT [ON/OFF].**

This button will turn off, indicating that the auto punch in/out has been deactivated.

# Using V-Tracks

Although the BR-1200CD is a 16-track multi-track recorder, you can select any one of sixteen V-Tracks for each of these tracks. In this way, you can use the BR-1200CD as if it were actually a 256-track multi-track recorder. In other words, V-Tracks can be used to make multiple recordings of guitar solos, vocals, etc. without having to delete any of these takes, and this ensures that the best performance can be selected later on. What's more, you can also choose the best parts from takes on a number of different V-Tracks and combine them onto a single track.




"Editing a recorded performance (Track Edit)" (p. 99)

## Switching V-Tracks

### 1. Press [V-TRACK].


The V-Track screen will appear.

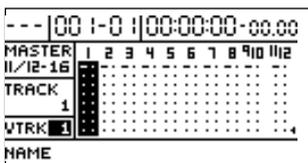

The currently selected track is shown on the top left of the display, together with the number of the V-Track that is selected for it. In addition, the name of the currently selected V-Track is shown on the middle left of the display.


- ( ■ ): Currently selected V-Track (containing recorded audio data)
- ( — ): Currently selected V-Track (not containing recorded audio data)
- ( ■ ): V-Track containing recorded audio data
- ( . ): V-Track not containing recorded audio data
- ( ▶ ): The V-Track from Track 11/12 last used for mastering (Final Mastering Track)

### 2. Move the cursor to the track containing the V-Track you want to change.

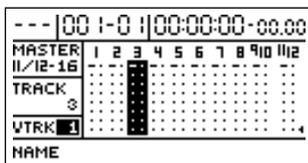

In addition to the cursor, the track buttons can also be used to directly choose the track whose settings are to be changed.

- ### 3. Use the TIME/VALUE dial to change the V-Track setting.
- The " ■ " is displayed when the V-Track containing recorded audio data is selected.

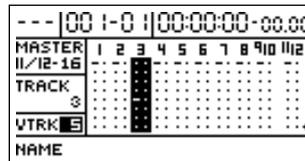

- ### 4. When you have finished selecting V-Tracks, press [EXIT/NO] to return to the top screen.
- ### 5. If you wish to store the currently selected V-Tracks, save the current song (p. 70).

#### NOTE


- If V-Tracks are changed during playback, this playback will be interrupted momentarily. Note, however, that this is normal and does not indicate a malfunction.
- You cannot use the track buttons in the V-Track screen to select tracks to be recorded.

### Assigning names to V-Tracks (Track Name)


Names can be assigned to any or all of the BR-1200CD's 192 V-Tracks. Although a name corresponding to the Input Select (i.e., Track Name) used for a V-Track is assigned automatically when it is initially recorded to, you can easily edit this name later on.

**1. Press [V-TRACK].**

The V-Track screen will appear.

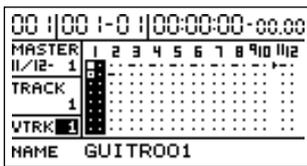


**2. Use [CURSOR] and the TIME/VALUE dial to choose the V-Track that you are going to name.**

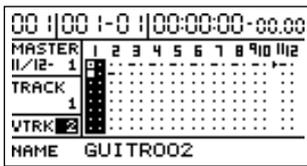

In addition to the cursor, the TRACK buttons can also be used to directly choose the track selected.

The name of the currently selected V-Track is shown on the bottom of the display.

**3. Move the cursor to the letter in the name that you want to change, and then use the TIME/VALUE dial to select a new letter.**

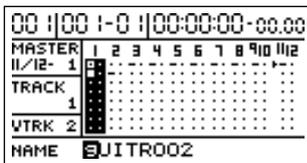

**4. When you have finished editing names, press [EXIT/NO] to return to the top screen.**

**5. If you wish to store the edited names, save the current song (p. 70).**

### Changing the Final Mastering Track

When in Mastering mode, the symbol [ ] will be automatically placed on the right of the V-Track from Track 11/12 that was most recently used for mastering. This V-Track is referred to as the Final Mastering Track. This V-Track is automatically selected for writing to a CD-R/RW disc during the creation of an audio CD, and you can speed up the entire process by setting the final mastering track correctly.




For more detailed information regarding mastering, refer to "Mastering" (p. 146).


Although the final mastering track is set automatically when mastering is carried out, you can change this to any other V-Track later on. Use the following procedure to do so.

**1. Press [V-TRACK].**

The V-Track screen will appear.

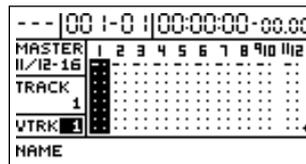

**2. Move the cursor to the "MASTER V-TRACK," and then use the TIME/VALUE dial to select the final mastering track.**

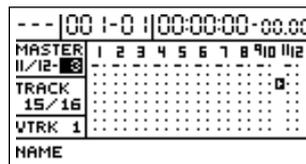

**3. If you wish to store the new setting for the final mastering track, save the current song (p. 70).**

**NOTE**

Only V-Tracks from Track 11/12 can be set as the final mastering track.

# Rectifying recording mistakes (Undo/Redo)


In cases where mistakes were made while playing the instrument or where volume levels could not be controlled as desired during recording, you will be able to cancel this recording and return the BR-1200CD to its condition before the start of this operation. (Undo)

In addition, if you then want to restore this recording, you can cancel the Undo and return the BR-1200CD to its condition at the end of recording. (Redo)

## Undo

1. Press [UNDO/REDO].

The message "Undo?" will appear.

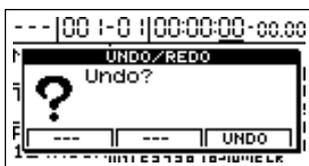

2. Press [F3] (UNDO).

The message "Complete!" will be displayed to indicate that the Undo has been completed.

3. Press [PLAY] to start playback, and confirm that the recording has been canceled.
  4. If you now want to cancel another recording before the one just canceled, repeat Steps 1 to 3.
- Each time an Undo is performed, the BR-1200CD will cancel the next newest recording.

### NOTE

- Once Song Optimization (p. 112) has been carried out, Undo will no longer be possible.
- The BR-1200CD is capable of performing up to approximately 10,000 Undo operations.
- Undo can only be used with recorded audio data and edits performed on this data.
- No other types of change can be canceled using this function.

## Redo

Use Redo to restore a recording that was canceled using Undo.

### MEMO

When a Redo is possible, the "☑" appears beside the song name of the top screen.

The procedure for Redo is as follows.

1. Press [UNDO/REDO].

The message "Redo?" will appear.



2. Press [F2] (REDO).

The message "Complete!" will be displayed to indicate that the Redo has been completed.

3. Press [PLAY] to start playback, and confirm that the recording canceled using Undo has now been restored.
- If you have used Undo more than once, Steps 1 to 3 can now be repeated to perform successive Redo operations. Each successive Redo will restore another canceled recording.

### NOTE

- Please note that you will no longer be able to use Redo, once recording or editing has been performed after an Undo.
- Once Song Optimization (p. 112) has been carried out, Redo will no longer be possible.

# Mixing audio from various tracks onto a stereo track (Bounce)

If you have constructed a song through repeated overdubbing, it is often the case that the recorded instruments will sound disjointed in terms of volume and position, giving the impression that they're not actually part of the same performance. Nevertheless, if you combine each of these tracks into a stereo mix while readjusting the balance of volume and pan settings, you will be able to convey the image of a single, complete song.

And if you intend to create an audio CD later on, your songs must be in the form of stereo tracks; consequently, you will need to perform a mix down for each one.


A mix down is carried out as follows.

- 1) Set the left-right position of each track (Pan).
- 2) Suppress variations in volume (Compressor).
- 3) Adjust the sound of each track (Equalizer).
- 4) Widen the overall sound (Loop Effects).
- 5) Mix the playback tracks onto a single stereo track (Bounce).

## Setting the left-right position of each track (Pan)

1. Press CHANNEL EDIT [PAN].

The pan setting screen will appear.

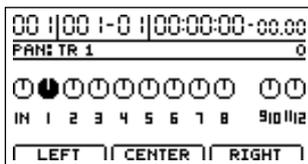

2. Move the cursor to the track to which pan setting is to be changed.

You can also select a track by pressing its track button. The track button for the selected track will light up.

3. Change the pan setting using the TIME/VALUE dial.

**L100:** Audio is moved to the extreme left.

**0:** Audio is moved to the center.

**R100:** Audio is moved to the extreme right.

4. Press [EXIT/NO] to return to the top screen.

### MEMO

- In addition to the cursor, the track buttons can also be used to directly choose the track to which settings are to be changed. Furthermore, if the track buttons for tracks 1 and 2, tracks 3 and 4, tracks 5 and 6, or tracks 7 and 8 are pressed in unison at this time, you will be able to modify the settings for the two selected tracks at the same time.


Note that since tracks 9/10 and 11/12 are fixed as stereo tracks, the parameters for the left and right sides of each of these tracks will always change in the same way. It is not possible to modify the settings of the left and right sides individually.

## Suppressing variations in volume (Compressor)

Each of the tracks 1 through 8 contains a built-in compressor, and these compressors can be used to smoothen out differences in the volumes and peak levels of the corresponding tracks.


1. Press [COMP].

The compressor setting screen will appear.

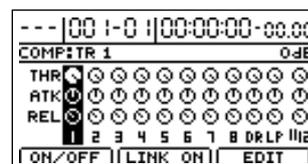


2. Move the cursor to the track to which compressor setting is to be changed.

The track button for the selected track will light up.

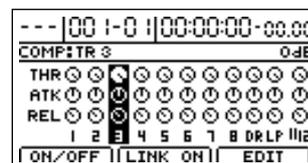

3. Move the cursor to the parameter to which setting is to be changed, and then use the TIME/VALUE dial to make a new setting.

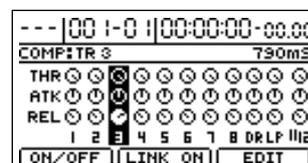

## THR (Threshold):

This parameter sets the volume level at which the compressor starts to affect the sound. As the setting is made smaller (or more negative), the compressor will become active at lower volumes.

## ATK (Attack):

This parameter adjusts the time it takes for the compressor to start affecting the sound after the volume exceeds the THR. Smaller values reduce the time until the compressor starts working.

## REL (Release):

This parameter adjusts the time it takes for the compressor to stop affecting the sound after the volume drops below the THR. Smaller values reduce the time until the compressor stops working.

The THR, ATK, and REL parameters can also be adjusted directly using the VALUE 1–3 knobs, respectively.

### 4. Press [EXIT/NO] to return to the top screen.

#### MEMO

- In addition to the cursor, the track buttons can also be used to directly choose the track to which settings are to be changed.

Furthermore, if the track buttons for tracks 1 and 2, tracks 3 and 4, tracks 5 and 6, or tracks 7 and 8 are pressed in unison at this time, you will be able to modify the settings for the two selected tracks at the same time. This function is extremely useful when you want to match the compressor settings of stereo tracks.

By changing compressor settings in this condition, all parameters can be set to the same values. And as the compressors from the two selected tracks will operate as a stereo compressor in this situation, differences in the balance of left and right volumes can be easily eliminated. This method of working in stereo is referred to as “Stereo Link.”

Note that since tracks 9/10 and 11/12 are fixed as stereo tracks, the parameters for the left and right sides of each of these tracks will always change in the same way. It is not possible to modify the settings of the left and right sides individually.


- In addition to the parameters displayed on-screen, the compressors also feature other detailed parameters. For more detailed information, refer to “Using track-specific compressors (Track Compressor)” (p. 128).

## Adjusting the sound of each track (Equalizer)

Each of the tracks contains a built-in three-band equalizer (EQ), and these can be used to adjust the low, mid, and high bands of audio recorded on the corresponding track.


### 1. Press [EQ].

The equalizer setting screen will appear.

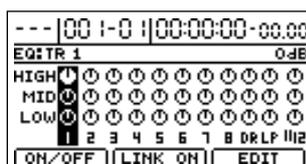


### 2. Move the cursor to the track to which equalizer setting is to be changed.

The track button for the selected track will light up.

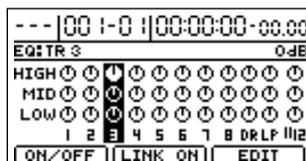

### 3. Move the cursor to the parameter to which setting is to be changed, and then use the TIME/VALUE dial to make a new setting.

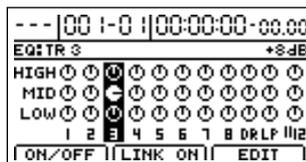

#### HIGH:

This parameter adjusts the sound of the high band. It is used to change the brightness or thinness of a sound. The high-band EQ can be used effectively on hi-hats, cymbals, etc., and it also used to adjust sibilance (the harsh “S” sound often present in vocals).

#### MID:

This parameter adjusts the sound of the mid band. It is mainly used to change an instrument’s degree of power or presence, and can be extremely useful when used on vocals, guitars, saxophones, and other instruments that play melodies. Human hearing is most sensitive in this mid-range and the main part of an instrument’s sound is usually found here; accordingly, the mid-band EQ can be used effectively on nearly all instruments.

## Mixing audio from various tracks onto a stereo track (Bounce)

### LOW:

This parameter adjusts the sound of the low band. It can be used to change the degree of punch in bass guitars, kick drums, and other instruments at the rhythmic core of a song. Note that low-band EQ has little effect on brighter instruments such as strings or cymbals.

The high, mid, low and parameters can also be adjusted directly using the VALUE1, VALUE2, and VALUE3 knobs, respectively.

4. Press [EXIT/NO] to return to the top screen.

### NOTE

If the setting is raised to an excessive level, the volume of the corresponding range will be too high, and there is a danger that this could damage your hearing. In addition, sound will become distorted and external audio devices such as headphones may be damaged. Accordingly, you should take extra care when making this setting, and if necessary, do so with the volume turned down.

### MEMO

- In addition to the cursor, the track buttons can also be used to directly choose the track to which settings are to be changed. Furthermore, if the track buttons for tracks 1 and 2, tracks 3 and 4, tracks 5 and 6, or tracks 7 and 8 are pressed in unison at this time, you will be able to modify the settings for the two selected tracks at the same time. This function is extremely useful when you want to match the EQ settings of stereo tracks. By changing EQ settings in this condition, all parameters can be set to the same values. This method of working in stereo is referred to as "Stereo Link."
- Note that since tracks 9/10 and 11/12 are fixed as stereo tracks, the parameters for the left and right sides of each of these tracks will always change in the same way. It is not possible to modify the settings of the left and right sides individually.
- In addition to the parameters presented on the display, the equalizers also feature other detailed parameters of sound settings. For more detailed information, refer to "Using track-specific equalizers (Track EQ)" (p. 130).

## Enhancing the sound (Loop Effects)

The BR-1200CD's mixer features CHORUS/DELAY/DOUBLING and REVERB as loop effects. When used correctly, these effects can add a feeling of spaciousness and depth to the sound.

### MEMO


### What are Loop Effects?

Effects that are connected between a mixer's effect-send and effect-return are referred to as Loop Effects. With this type of effect, you can adjust the degree to which the sound is affected by changing the send level for the corresponding mixer channel (or in our case, for the corresponding BR-1200CD track). Since each track has its own send level, the degree to which each track is affected can be easily changed—for example, a lot of reverb can be applied to vocals, a little reverb can be applied to drums, and so on. In contrast to insert effects (p. 116), which affect a particular sound, Loop Effects can be said to affect the overall sound.

## Applying reverb


1. Press LOOP EFFECTS [REVERB].

The BR-1200CD will display a screen (Reverb Send) for adjusting the amount of the audio being sent from each track to the reverb.

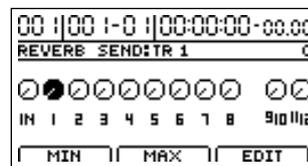

2. Move the cursor to the track to which reverb is to be applied.  
You can also move directly to a track by pressing the corresponding track button.
3. While listening to the playback from the selected track, use the TIME/VALUE dial to adjust the reverb send level until you like what you hear.

When the reverb send level is 0, no reverb will be applied; when it is 100, the maximum amount of reverb will be applied.

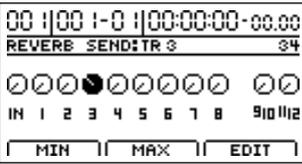

4. If necessary, repeat Steps 2 and 3.


## MEMO

- In addition to the cursor, the track buttons can also be used to directly choose the track to which settings are to be changed. Furthermore, if the track buttons for tracks 1 and 2, tracks 3 and 4, tracks 5 and 6, or tracks 7 and 8 are pressed in unison at this time, you will be able to modify the settings for the two selected tracks at the same time. This function is extremely useful when you want to match the reverb settings of stereo tracks.
- Note that since tracks 9/10 and 11/12 are fixed as stereo tracks, the parameters for the left and right sides of each of these tracks will always change in the same way. It is not possible to modify the settings of the left and right sides individually.
- In addition to the parameters presented on the display, the reverbs also feature other detailed parameters of sound settings. For more detailed information, refer to "Using loop effects" (p. 125).

## Applying chorus, delay or doubling


1. Press LOOP EFFECTS [CHORUS/DELAY].

The BR-1200CD will display a screen (Chorus/Delay Send) for adjusting the amount of the audio being sent from each track to the delay or chorus.

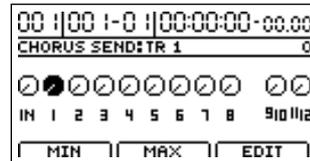

2. Press [F3] (EDIT).

The Chorus/Delay Edit screen will appear.

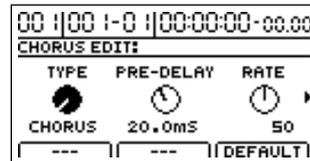

3. Move the cursor to TYPE and select the desired Loop Effect using the TIME/VALUE dial.

### CHORUS:

A chorus effect creates sound a little off, and by adding this to the original sound, it allows the sound to be thickened. You can have the effect seemed to be surrounded by the sound.

### DELAY:

A delay effect works like an echo by repeating the original sound after a specific delay time. You can apply this effect on instruments that play melodies to create a richer, thicker sound with no loss of presence.


### DOUBL'N:

A doubling effect is essentially the same as a delay with an extremely short delay time. You can use this effect to make an instrument recorded in mono sound like it was actually recorded in stereo.

4. Press [EXIT/NO] to return to the Chorus/Delay Send screen.

5. Move the cursor to the track to which chorus, delay, or doubling is to be applied.

You can also move directly to a track by pressing the corresponding track button.

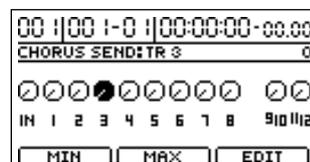

6. While listening to the playback from the selected track, use the TIME/VALUE dial to adjust the send level until you like what you hear.

When the send level is 0, no effect will be applied; when it is 100, the maximum amount of effect will be applied.

7. If necessary, repeat Steps 5 and 6.

### NOTE

You can only select one chorus, delay, or doubling effect. Different types of chorus, delay, and doubling effects cannot be used together.

### MEMO

- In addition to the cursor, the track buttons can also be used to directly choose the track to which settings are to be changed. Furthermore, if the track buttons for tracks 1 and 2, tracks 3 and 4, tracks 5 and 6, or tracks 7 and 8 are pressed in unison at this time, you will be able to modify the settings for the two selected tracks at the same time. This function is extremely useful when you want to match the chorus/delay/doubling settings of stereo tracks.
- Note that since tracks 9/10 and 11/12 are fixed as stereo tracks, the parameters for the left and right sides of each of these tracks will always change in the same way. It is not possible to modify the settings of the left and right sides individually.
- In addition to the parameters presented on the display, the chorus/delay/doubling also feature other detailed parameters of sound settings. For more detailed information, refer to "Using loop effects" (p. 125).

## Mixing the playback tracks to a single stereo track (Bounce)

If you have made all of the necessary track settings as described in the previous sections, all that now remains is to combine your tracks and record this mix in stereo.

In addition, you can also record from one track to a different track using just the BR-1200CD in a procedure known as "bouncing."

### MEMO

If you are using Drum, Bass or Loop Effects, these can be combined with the playback from the recorded tracks in the mix down process. To do this, first of all press the track button for the Drum, Bass or Loop Effect track (Track 8, 9/10) several times until it lights up or starts to flash. Then, use the track's fader to adjust its volume to a suitable level and bounce the Drum, Bass or Loop Effect track to a different track.

As you will probably want to master (p. 146) your song later on, let's bounce to Track 11/12.

1. Press [REC MODE] several times until the BOUNCE indicator lights up.

All inputs sources will be automatically muted at this time.

2. Press track button for Track [11/12].

This button will turn red and start to flash, indicating that Track [11/12] has been selected as the destination for bouncing. Note that the track buttons for tracks that have been recorded will all be green.

3. Press [REC], then press [PLAY].

Both [PLAY] and [REC] will light up and recording (bouncing) will start.

4. When you reach the end of the song, press [STOP].

Both [PLAY] and [REC] will turn off, indicating that bouncing has been completed.

5. To check the track recorded by bouncing, lower all faders except the one for Track 11/12, and move the fader for Track 11/12 to a position that gives a suitable playback volume.

6. Press [ZERO], then press [PLAY].

The audio data bounced to Track 11/12 will now be played back.

7. If you wish to store the track recorded by bouncing, save the current song (p. 70).

This process of adjusting the tone and balance for each track, and of then recording these to a single stereo track is referred to as a Mix Down.

### NOTE

- If you turn off the BR-1200CD without saving the current song, the track recorded by bouncing will be lost. It is important, therefore, that you save your songs regularly. Furthermore, if you intend to create an audio CD later on, you must save the bounced mix-down track at this time.
- If audio data already exists on the track selected for bouncing, this data will be overwritten during the bouncing process. If you want to prevent the data from being overwritten in this way, you should ensure during recording and overdubbing that an empty track is reserved for bouncing. Note that even if you accidentally overwrite audio data as a result of bouncing, you can use Undo to restore the data and cancel the bounce. "Undo" (p. 81)
- After bouncing has been completed, a period of 1 or 2 seconds may elapse before you can carry out the next operation.

### MEMO

- If you want to bounce an instrument being played live together with playback from previously recorded tracks, press the appropriate INPUT SELECT button. This button will light up and muting of the input sources will be canceled. You will now be able to record the instrument in combination with the playback tracks during the bounce process.
- Although the previous sections described a mix down in terms of bouncing within the BR-1200CD itself, you can also mix down to an external recording device as mentioned above. To do this, simply connect the BR-1200CD's LINE OUT to the recording device, start recording on that device, and then start playback on the BR-1200CD. Note that there is no need to set REC MODE to BOUNCE at this time and it is quite acceptable to leave it at INPUT.

## Bouncing directly to a CD-R/RW disc

With the BR-1200CD, you can bounce data directly to a CD-R/RW disc instead of the audio tracks. This is a convenient way to keep a copy of song sketches after recording them.

### NOTE

Due to differences in the characteristics of CDR-/RW discs, there is no way to ensure 100% error-free writing. For this reason, the bouncing may be discontinued if an error occurs in writing to the CD-R/RW disc. Never use this feature with your important recordings.

1. Prepare a blank CD-R/RW disk or a CD-R/RW disk to which data has been written using Track-At-Once (p. 219) on the BR-1200CD, but that is not yet finalized (p. 225).

2. Place the CD-R/RW disc in the tray.

The CD-R/RW drive's indicator begins flashing. Wait until the indicator stops flashing.

3. Press [REC MODE] a number of times until the BOUNCE indicator lights.

The BR-1200CD is switched to BOUNCE mode, and the cursor moves to the location corresponding to the bounce-destination track.

4. Turn the TIME/VALUE dial to select "CD-R/RW."

5. Press [REC].

The CD-R/RW drive's motor begins spinning.

"Now checking..." appears in the display, followed by "Create Track..." About ten seconds later, "Complete!" appears in the display, indicating that preparations for bouncing are complete.

### NOTE

- In contrast to normal recording, you cannot press [REC] (manual punch in) after first pressing [PLAY].
- The moment [REC] is pressed, a region with a minimum of one song is created on the disc. Note that even if you press [STOP] at this point without bouncing any tracks, the song cannot be deleted.

6. Press [PLAY].

[PLAY] and [REC] light, and bouncing to the CD-R/RW disc begins.

The sounds are written to the CD-R/RW disc exactly as they are played back.

## Mixing audio from various tracks onto a stereo track (Bounce)

7. Press [STOP] when you reach the end of the song.  
"Close Track..." appears in the display. Bouncing of the tracks is complete when "Complete!" appears.

### NOTE

Several seconds may be necessary before you can proceed with the next operation.

8. To check the results of the bouncing, play the disc back as an audio CD (p. 224).
9. To enable playback of the bounced tracks on a conventional audio CD player, finalize the disc (p. 225).

### NOTE

Finalizing the CD-R/RW disc allows the content to be heard using a regular CD player but prevents any further bouncing or writing of tracks to the disc. Do not finalize the disc if you want to bounce or write other tracks to it.

### MEMO


If using the BR-1200CD to play the disc, write to the disc in Track-At-Once format (p. 219).

# **Section 2**

## **Editing**

# Placing markers in your song (Marker)


The BR-1200CD's Marker function allows you to place markers at the required points in a song. You can then jump quickly to any registered marker position by simply indicating its number. In addition, this function also proves extremely useful during the editing process. Up to 100 markers can be positioned within a song, and these are numbered 1 to 100 from the beginning of the song. For this reason, whenever a new marker is positioned between two pre-existing markers, the number of all subsequent markers will increase by one. For example, numbers will change as follows when a new marker is inserted after Marker No. 2.

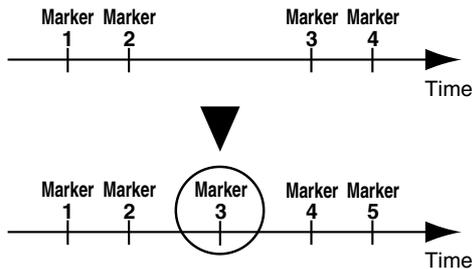

In addition, you can also assign names to individual markers. For more detailed information, refer to "Naming a marker" (p. 91).

## Positioning a marker

Press [MARK] to place a marker at the current song position.

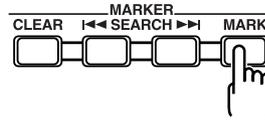


### NOTE

Note that markers must be at least 0.1 seconds (approx.) apart. Accordingly, it will not be possible to position a new marker within 0.1 seconds (approx.) of a pre-existing marker.

## Clearing markers

The marker box of the display will indicate the marker located earlier than the current position.

Press [CLEAR] if you want to delete this marker.

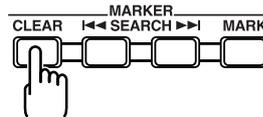

## Moving to markers

Use the SEARCH buttons to move forwards or backwards to the next nearest marker. Alternatively, if you press the CURSOR [◀] while on the following screen (i.e., the top screen), you will be able to change the marker number shown in the display's Marker box.



Use the TIME/VALUE dial to select the number of the marker you want to move to.

## Editing markers

### Moving markers


1. Press [UTILITY].

The Utility Menu screen will appear.



2. Move the cursor to the MARKER icon and press [ENTER/YES].

The Marker screen will appear.

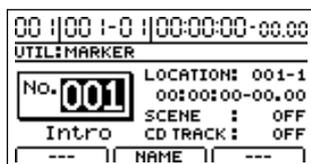

3. Use the TIME/VALUE dial to select the number of the marker you want to edit.



4. Move the cursor to "Location", and then use the TIME/VALUE dial to specify a position for that marker.




If you move the cursor to the measure display, you will be able to specify a marker position in terms of measures. Alternatively, you can move the cursor to the time display to move the marker based on the song time.

### Naming a marker

A name (Marker Name) can be assigned to any marker from the Marker screen.

1. On the Marker screen, move the cursor to "No." and then use the TIME/VALUE dial to select the number of the marker to be named.

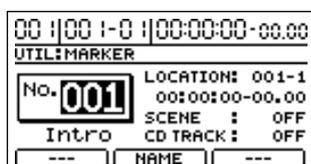

2. Press [F2] (NAME).

\* If not creating a marker, "NAME" will not appear.

3. Use [CURSOR] and the TIME/VALUE dial to change the marker name.



4. To save the changed name, save the song (p. 70).

### Assigning an audio-CD song division to a marker


When writing stereo tracks to an audio CD, you can use a special procedure to position markers within a track so that these markers can indicate the song division points on the finished CD. This method of creating audio CDs is referred to as Disc At Once By Marker.



For more detailed information regarding Disc At Once By Marker, refer to "Creating Audio CDs with Audio Tracks Separated by Markers (Disc At Once by Marker)" (p. 222).

When on the Marker screen, even normal markers that you have already positioned can be designated as song division markers.

1. On the Marker screen, move the cursor to "No." and then use the TIME/VALUE dial to select the number of the marker to be designated as a song division.
2. Move the cursor to "CD TRACK" and select "ON" using the TIME/VALUE dial.

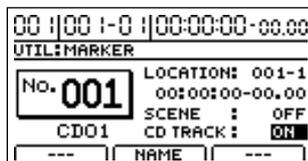

The selected marker will be designated as a song division marker for the audio CD. At the same time, the name to be displayed for the corresponding song on the audio CD (i.e., CD01 to CD99) is automatically set as the marker name.



Note that if a marker that has already been named is designated as a song division marker, the original name will be deleted.

3. Save the current song (p. 70).

## Placing markers in your song (Marker)

### NOTE

- Be sure to save your song before creating an audio CD. Settings will not be stored until your song is saved, and this can result in song divisions not being recognized correctly during the writing process.
- A maximum of 99 songs can be written to a single audio CD. If you try to set a song division marker that will result in this number being exceeded, the message "Marker Memory Full!" will be displayed and you won't be able to set it.
- Audio CD standards require that a CD track be at least four seconds long. CD track markers that define a CD track lasting less than four seconds are disregarded when the CD is being created.

## Changing scenes assigned to markers

The BR-1200CD allows you to assign scenes to markers so that they can be recalled automatically during playback. This operation is referred to as Auto Scene.



For more detailed information regarding Auto Scene, refer to "Recalling scenes automatically during recording or playback (Auto Scene)" (p. 94).

The allocation of scenes to markers can be modified from the Marker screen at any time.

1. On the Marker screen, move the cursor to "No." and then use the TIME/VALUE dial to select the number of the marker in question.
2. Move the cursor to "Scene" and select the number of the scene to be assigned using the TIME/VALUE dial.



The selected scene will be assigned to the marker.

3. If you wish to store the modified settings, save the current song (p. 70).

### NOTE

If you do not save the song, your settings will not be stored.

## Stopping automatically at a marker (Marker Stop)

The BR-1200CD can be made to automatically stop recording or playback at marker positions. If the operation (i.e., recording or playback) is then restarted, it will continue to the next marker, where it will again be stopped automatically.

1. Press [UTILITY].


The Utility Menu screen will appear.



2. Move the cursor to the SYSTEM icon and press [ENTER/YES].

Alternatively, you can press [F2] (SYSTEM) if the SYSTEM icon is currently displayed.

The System Parameter screen will appear.

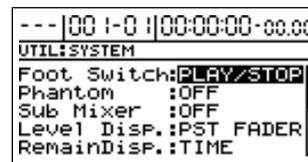

3. Move the cursor to "Marker Stop" and select "ON" using the TIME/VALUE dial.



If you set this to "OFF", the Marker Stop function will be deactivated.

# Registering and recalling mixer settings (Scene)

The BR-1200CD allows you to register up to 100 batches of mixer and effect settings per song. Each of these batches of settings is referred to as a Scene, and they can be quickly and easily recalled whenever needed.

For example, if you wish to compare different mix balances during mixdown, it is convenient to register each of the different mixer settings as a scene.

In addition, you can also assign scenes to markers (p. 90) to have them recalled automatically during recording or playback, and this function is referred to as Auto Scene.

## Registering, recalling, and deleting scenes

### 1. Press [UTILITY].

The Utility Menu screen will appear.




### 2. Move the cursor to the SCENE icon and press [ENTER/YES].

Alternatively, you can press [F2] (SCENE) if the SCENE icon is currently displayed.

The Scene screen will appear.



### 3. Use the TIME/VALUE dial to select the number of the scene to be registered, recalled, or deleted.

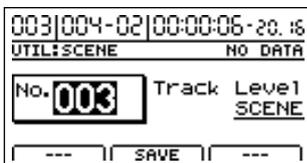

If you select the number of a scene that has already been registered, an asterisk (\*) will be displayed before the number to inform you of this fact.

### 4. Register, recall, or delete a scene.

#### To recall:

Press [F3] (CALL).

#### To register:

Press [F2] (SAVE).

An asterisk (\*) indicates that a scene has already been registered. If you select such a scene, it will be overwritten using the current settings.

#### To delete:

Press [F1] (DELETE).

The asterisk (\*) indicating a registered scene will disappear to show that the scene is no longer registered.

5. Press [EXIT/NO] several times to return to the top screen.
6. If you wish to store the scene settings, save the current song (p. 70).

## Recalling a scene without changing track volumes

When you recall a scene, the track volumes change to the levels stored in that scene, but the positions of the faders remain the same. As a result, fader positions and actual volumes will no longer match. However, the following procedure can be used in situations where you want to recall a scene without changing the track volumes from those matching the current fader positions.

### 1. Move to the Scene screen.

### 2. Move the cursor to "Track Level" and select "FADER" using the TIME/VALUE dial.



#### Track Level

This setting determines how track volumes will be treated when a scene is recalled.

#### SCENE:

When a scene is recalled, the track volumes will change to the levels stored in that scene. As a result, it is quite possible that the front panel's fader positions will no longer match the actual track volumes.

#### FADER:

Even if a scene is recalled, the track volumes will stay at the levels matching the positions of the front panel's faders.

### 3. Press [EXIT/NO] several times to return to the top screen.

### 4. If you wish to store the modified settings, save the current song (p. 70).

#### NOTE

If you do not save the song, your settings will not be stored.

### Recalling scenes automatically during recording or playback (Auto Scene)

The BR-1200CD allows you to assign scenes to markers so that they can be recalled automatically when recording or playback reaches the corresponding marker positions. Referred to as Auto Scene, this function makes it possible for track faders, effects, etc. to be controlled automatically.

### Setting an Auto Scene

**1. With the top screen displayed, move to the position in the song where you want settings to be changed automatically.**

**2. Hold down [STOP] and press [MARK].**

A new marker will be created at the current position. Also at this time, a new scene will be created and assigned to the marker. All settings for track faders, effects, and the like will be stored in this scene.

In addition, an "S" will appear in the Marker name area on the top screen to indicate that a scene has been assigned to the marker.

004 0 13-0  00:00:24-00.00	
MARK 8	SONG 001
TEMPO	04
120.0	12
REMAIN	24
125h57m	48
1 1 2 3 4 5 6 7 8 9 10 11 12 L R	

**3. Press [ZERO] to return to the beginning of the song and then press [PLAY] to start playback.**

When playback reaches the position of the new marker, the scene that you have assigned to it will be automatically recalled. In addition, an "S" will appear in the top screen's Marker name area.

#### MEMO

Automatic recalling of scenes is not restricted to playback and recording; in fact, scenes are recalled automatically whenever the current position is moved to the position of the corresponding marker, even if playback is stopped at the time. It is important to note that not all parameter settings stored in a scene will be restored when it is recalled automatically. Settings are restored for the following parameters.

- Faders for Tracks 1 through 11/12
- Track mute
- The MASTER fader
- Pan (for Tracks 1 through 11/12)
- Compressors and limiters
- EQ (for Tracks 1 through 11/12) (p. 130)
- Insert effects (p. 118), Vocal Tool Box (p. 131), Speaker Modeling (p. 142), Mastering Tool Kit (p. 146)

- Chorus/delay sends (for Tracks 1 through 11/12)
  - Reverb sends (for Tracks 1 through 11/12)
- \* Settings can be made to indicate whether or not EQ and effect parameters will be restored by Auto Scene (p. 95). This is set to OFF in the factory settings.
- 4. If you wish to store the modified settings, save the current song (p. 70).**

#### MEMO

The allocation of scenes to markers for Auto Scene can be modified later on. For more detailed information regarding the modification of scene assignments, refer to "Changing scenes assigned to markers" (p. 92).

#### NOTE

- A maximum of 100 markers can be created in a single song, and this includes both markers with scenes assigned and those without. Furthermore, a maximum of 100 scenes can be registered. If you try to create a marker or scene that will result in the corresponding limit being exceeded, the message "Marker Memory Full!" or "Scene Memory Full!" will be displayed and this action will not be possible.
- When a new marker and scene are created as described in Step 2, the lowest available number will be assigned to this new scene.
- Markers cannot be created within 100 ms of one another. In such instances, first clear the existing marker, and then carry out Step 2 (p. 90).
- When a scene is recalled, there may be a delay of several hundredths of a second before the stored settings are actually applied to your song. Please note that this delay is intentional and is intended to prevent noise being generated as a result of sudden changes in parameters.
- If you do not save the song as indicated in Step 4, your settings will not be stored.

## Clearing an Auto Scene

1. Press MARKER [SEARCH ◀◀] or [SEARCH ▶▶] to move to the marker with the scene assignment you wish to clear.

This marker will be shown in the display's Marker box.

2. Press MARKER [CLEAR].

The current marker will be cleared together with the scene that was assigned to it.

### NOTE

If a scene has also been assigned to some other marker, the scene itself won't be erased; only the current marker will be erased.

## Disabling Auto Scene

Auto Scene can actually hinder your work in certain situations if settings are automatically restored while you are manually operating track faders and the like.

In such cases, use the following procedure to disable Auto Scene and prevent it from changing your settings.

1. Press [UTILITY].

The Utility Menu screen will appear.



2. Move the cursor to the SYSTEM icon and press [ENTER/YES].


Alternatively, you can press [F2] (SYSTEM) if the SYSTEM icon is currently displayed.

The System parameter setting screen will appear.



3. Move the cursor to "Auto Scene" and select "OFF" using the TIME/VALUE dial.

Auto Scene will now be disabled.

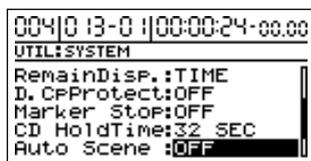

### MEMO

To enable Auto Scene once again, return the above setting to "ON."

4. If you wish to store the modified settings, save the current song (p. 70).

### NOTE

Take care not to forget if "Auto Scene" is set to "OFF" when saving a song, or Auto Scene will not function afterwards. We recommend returning this setting to "ON" as often as possible when saving songs.

## Setting Auto Scene control of effects and track EQ

Use the following procedure to allow or forbid the control of effects (i.e., insert effects, Vocal Tool Box, Speaker Modeling, and Mastering Tool Kit) and of track EQ by Auto Scene.

1. Press [UTILITY].


The Utility screen will appear.

2. Move the cursor to the SYSTEM icon and press [ENTER/YES].

Alternatively, you can press [F2] (SYSTEM) if the SYSTEM icon is currently displayed.

The System Parameter screen will appear.

3. Move the cursor to "Effects" or "Track EQ" and select "ON" or "OFF" using the TIME/VALUE dial.

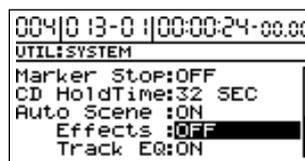

**ON:** Control by Auto Scene is allowed.

**OFF:** Control by Auto Scene is forbidden.

4. If you wish to store the modified settings, save the current song (p. 70).

### MEMO

- When playback reaches a location where a marker has been set, the scene assigned to the marker is called up automatically, and the settings change to those recorded in the scene, including the track EQ and effects patch parameters.
- Be sure to note that application of the effects in the performance may be delayed from several hundred milliseconds to one second from the point at which the marker is set.
- Patch switching will be possible for similar algorithm of effects (for example, patches from "COSM OD GUITAR AMP"), but not for different types. In addition, this type of change will not be possible for different insert effect connections (p. 123).
- Depending on the sounds used in a performance recorded on a track, noise may be audible when the EQ is being adjusted.

# Finding the start or end of a section of audio (Scrub/Preview)

## The Scrub function:

When you are editing a song, you will often need to know exactly where a section of audio starts or exactly where to set up the punch in position for the automatic start of recording. The BR-1200CD provides a convenient Scrub function that you can use to locate these positions.

When you play back your song using Scrub, an extremely short section of audio (i.e., 45 ms) either immediately before or immediately after the current position will be played back repeatedly. Furthermore, when Scrub is combined with another function known as Preview, you can search for breaks between phrases using a longer repeat time (i.e., 1.0 s).


### NOTE

You cannot use the Scrub function with Track 8 and Track 9/10 when the track type is set to anything other than "AUDIO."

## The Preview function

Preview is a function that allows you to play the one-second section of audio either before or after the current position. By combining Preview and Scrub, you can move the current position in small increments to easily locate breaks between phrases.

For more detailed information regarding the usage of Preview, refer to "Using Scrub and Preview to find the end of a section of audio" (p. 98).

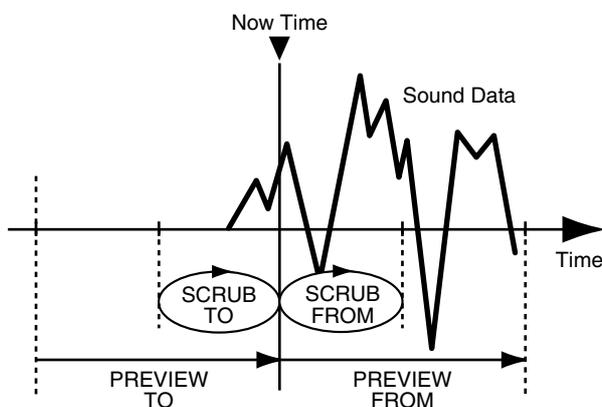

## Using Scrub to find the start of a section of audio


1. Hold down [STOP] and press [PLAY].

[PLAY] will start flashing and scrubbing will begin.

The level meter for the currently selected track will also be shown on the display at this time.

In addition, the track that is currently being scrubbed will be indicated at the top of the screen.

The BR-1200CD will display either [ → ] (SCRUB TO) or [ ← ] (SCRUB FROM) beside "SCRUB" to indicate whether scrubbing is being performed to or from the current position. For more detailed information regarding changing of this scrubbing direction, refer to "Changing the scrubbing direction."

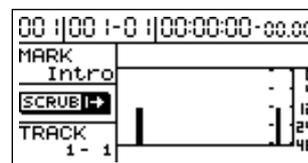

2. Press the TRACK button for the track you want to scrub.
3. Move the current position little by little using the TIME/VALUE dial, searching for the point at which the next phrase begins (i.e., the start of the section of audio).
4. When you have located the start of the section of audio, press [STOP] to stop scrubbing.

In order that this point may be easily found again later on, it is a good idea to press [MARK] at this time to place a marker at the current position.

### MEMO

Muting of all tracks will be canceled whenever you use the Scrub function.

### HINT

In order that this point may be easily found again later on, it is a good idea to press [MARK] at this time to place a marker at the current position.

### Changing the scrubbing direction

The BR-1200CD allows you to perform scrubbing either to or from the current position.

Use the following procedure to change this scrubbing direction.

1. Press [UTILITY].


The Utility Menu screen will appear.



2. Move the cursor to the SCRUB icon and press [ENTER/YES].

Alternatively, you can press [F3] (SCRUB) if the SCRUB icon is currently displayed.

The Scrub/Preview screen will appear.

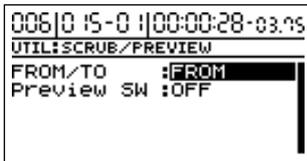

3. Move the cursor to "FROM/TO" and use the TIME/VALUE dial to change the scrubbing direction.

#### FROM:

Scrubbing is performed from the current position.

#### TO:

Scrubbing is performed to the current position.

4. Press [EXIT/NO] several times to return to the top screen.

### Using Scrub and Preview to find the end of a section of audio

#### Enabling Preview

You must first of all set up the BR-1200CD to use the Preview function.


1. Press [UTILITY].

2. Move the cursor to the SCRUB icon and press [ENTER/YES].

Alternatively, you can press [F3] (SCRUB) if the SCRUB icon is currently displayed.

The Scrub/Preview screen will appear.

3. Move the cursor to "Preview SW" and select "ON" using the TIME/VALUE dial.

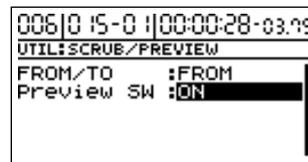

The Preview function will be enabled.

4. Press [EXIT/NO] several times to return to the top screen.

#### Using Scrub and Preview

1. Hold down [STOP] and press [PLAY].

[PLAY] will start flashing and scrubbing will begin.

2. While scrubbing, press either [REW] or [FF].

If you press [REW], the one-second period of audio in front of the current position will be played (PREVIEW TO); if you press [FF], the one-second period of audio after the current position will be played (PREVIEW FROM).

3. Use Scrub and Preview to find the end of the section of audio.

4. Move the current position little by little using the TIME/VALUE dial, searching for the point at which the phrase ends (i.e., the end of the section of audio).

If you press [REW] at this time, you can check whether or not the phrase cuts in suddenly during playback.

5. When you have located the end of the section of audio, press [STOP] to stop scrubbing.

#### HINT

In order that this point may be easily found again later on, it is a good idea to press [MARK] at this time to place a marker at the current position.

# Editing a recorded performance (Track Edit)

The BR-1200CD allows you to edit the makeup of your song using a host of functions such as the copying or moving of sections of audio within a track or to different tracks.

## NOTE

### Precautions when editing tracks

- Remember to always save your song if you want to store the track edits that you have made. In the BR-1200CD, edited track data is only temporarily stored on the hard disk, and unless the corresponding song is saved, it will be lost when the power is turned off or a new song is loaded.
- If audio data exists at the copy or move destination, it will be overwritten.
- Be sure to set the length of audio to be copied or moved to more than 0.5 seconds. If a section of audio of less than this length is copied or moved, you will not be able to hear it upon playback.
- Please ensure that no audio of less than 0.5 seconds in length is left behind after a move, insert, delete, or erase operation. If a section of audio of less than this length is created in front of or behind this type of edit, you will not be able to hear it upon playback.

## Copying audio data (Track Copy)

The Track Copy function allows you to copy a specified section of audio data to a new location.


In addition, you can copy audio data to multiple tracks in a single operation, and you can also copy data repeatedly, creating a sequence of identical audio sections starting at the specified location.

This function allows you to create songs quickly and conveniently when, for example, you want to reuse a recorded phrase from a certain track or when you want to repeat the same phrase again and again.


When copying audio data, you will normally want the start of the copied section to be aligned with the destination that you specify. However, it may sometimes be necessary to align a point somewhere along the section of copied audio data with this destination point. The BR-1200CD allows you to copy data in this way using the "FROM" parameter.

For example, if you are copying an effect sound comprising a ticking bomb followed by an explosion, you will probably want to align the start of the explosion sound with the specified destination. Normally, you would have to calculate the length of time from the start of the sound effect until the explosion before you could determine the correct copy destination. With this function, however, you can specify the start point of the explosion in the original data using "FROM," and the copy destination where you want the explosion to be heard using "TO." As a result, it is easy to copy the entire sound effect with the explosion positioned exactly where you want it.


### Example 1: Copying to the same track twice

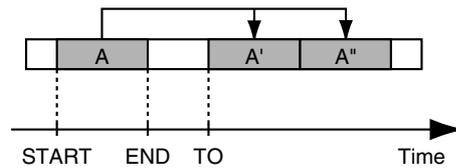

### Example 2: Copying to a different track twice

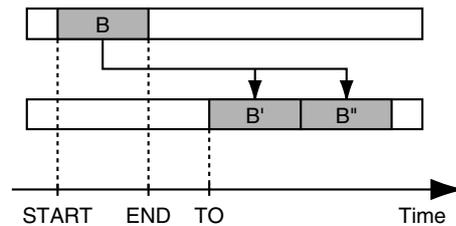

### Example 3: Copying audio data using "FROM"

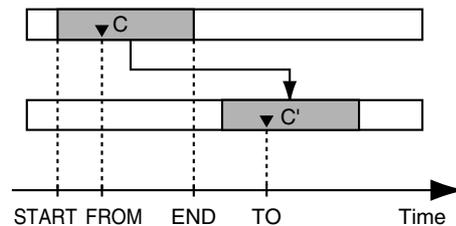

1. Press [UTILITY].


The Utility Menu screen will appear.



2. Move the cursor to the TRACK icon and press [ENTER/YES].


Alternatively, you can press [F3] (TRACK) button if the TRACK icon is currently displayed.

The Track Menu screen will appear.

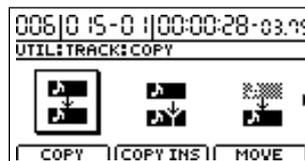


3. Move the cursor to the COPY or COPY INS icon and press [ENTER/YES].

### COPY

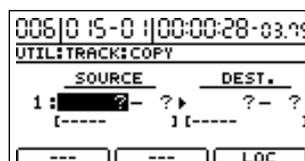

## Editing a recorded performance (Track Edit)


### COPY INS (insert)

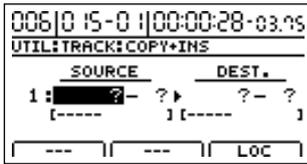

The Track Copy screen will appear, allowing you to select the tracks and V-Tracks to be used as the copy source and destination.

If you select COPY INS, an empty space of the required length will first of all be inserted at the copy destination, and then the source audio will be copied.

#### Example 4: Copying audio data with COPY + INS

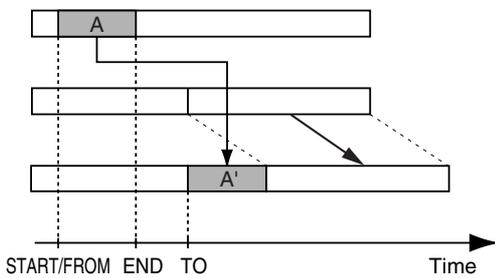


#### NOTE


If you are using COPY + INS, it will not be possible to specify the same track as the source and destination of copying.

#### 4. Use [CURSOR] and the TIME/VALUE dial to choose the tracks and V-Tracks to be used as the copy source and destination.

If a name has been assigned to the selected track, it will be displayed at this time.

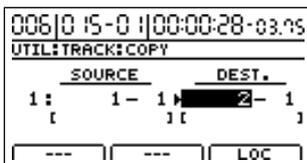

#### 5. If you want to copy audio on other tracks using the same settings (for range, position, etc.), move the cursor to the position shown below and turn the TIME/VALUE dial.

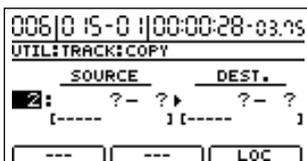


You will now be able to specify other tracks as the source and destination of other copy operations. However, any track that has elsewhere already been targeted as a copy-destination track cannot be newly selected as the copy-destination track.

If you want to cancel the copy for a specific track, turn the TIME/VALUE dial counterclockwise until a question mark (?) is displayed.


Copying will not be performed for any line containing one or more question marks. As Tracks 9/10 and 11/12 are stereo tracks, it will not be possible to select either of their mono tracks independent of the other.

#### 6. Press [F3] (LOC).

The Time Setting screen will appear.

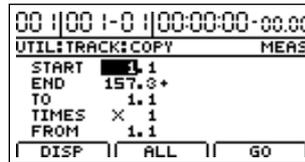

#### 7. Use [CURSOR] and the TIME/VALUE dial to specify the copy range and copy destination positions.

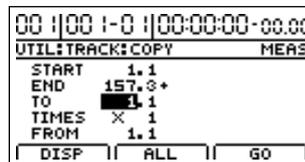

Pressing [F1] (DISP) at this time will allow you to select how positions will be specified (i.e., by measure, time, or marker). The following parameters should now be set.

#### START (Start point):

This parameter is used to specify the start point of the audio data to be copied.

#### END (End point):

This parameter is used to specify the end point of the audio data to be copied.

#### TO (To point):

This parameter is used to specify the basic destination point.

#### TIMES (copy time):

This parameter is used to specify the number of copies to be made (between 1 and 99).

#### FROM (From point):

This parameter is used to specify the point within the source audio data to be aligned with the To point.

Normally, this is set to the same value as the Start point.

#### NOTE

- If time values are used to specify the above points and you then switch the specification method to measures or markers, a plus (+) character may be displayed to warn that the indicated positions and actual positions are not the same. If you want to specify points using measures or markers, this discrepancy can be eliminated by using the TIME/VALUE dial to make settings in each of the relevant screens.
- If you want to set the copy range as extending from the start to the end of the song, press [F2] (ALL).

#### 8. When you have made all of the necessary settings, press [F3] (GO).

The audio data will now be copied, and when the message "Complete!" appears, it indicates that this operation has been completed.

9. Press [EXIT/NO] several times to return to the top screen.

## Moving audio data (Track Move)

The Track Move function allows you to move a specified section of audio data to a new location.


When audio data has been moved from its original position, a blank space will be left behind.

You can also use this function to move audio data from a number of tracks in a single operation.


When moving audio data, you will normally want the start of the relocated section to be aligned with the destination that you specify. However, it may sometimes be necessary to align a point somewhere along the section of relocated audio data with this destination point. The BR-1200CD allows you to move data in this way using the "FROM" parameter.

For example, if you are moving an effect sound comprising a ticking bomb followed by an explosion, you will probably want to align the start of the explosion sound with the specified destination. Normally, you would have to calculate the length of time from the start of the sound effect until the explosion before you could determine the correct destination. With this function, however, you can specify the start point of the explosion in the original data using "FROM," and the destination where you want the explosion to be heard using "TO." As a result, it is easy to move the entire sound effect with the explosion positioned exactly where you want it.


### Example 1: Moving data within a specific track

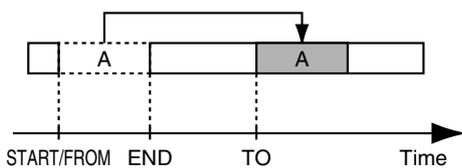

### Example 2: Moving data to a different track

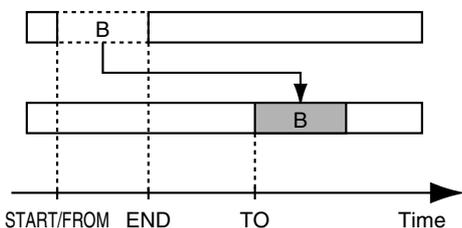

### Example 3: Moving data using "FROM"

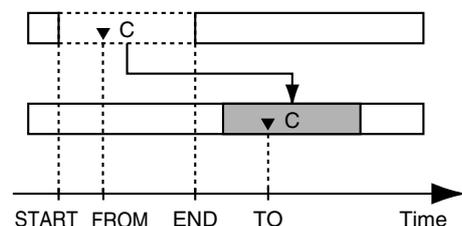

1. Press [UTILITY].


The Utility Menu screen will appear.



2. Move the cursor to the TRACK icon and press [ENTER/YES].


Alternatively, you can press [F3] (TRACK) if the TRACK icon is currently displayed.

The Track Menu screen will appear.

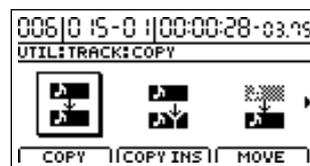


3. Move the cursor to the MOVE or MOVE INS icon and press [ENTER/YES].

### MOVE

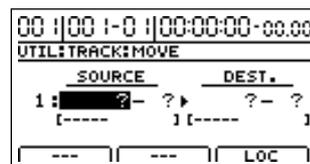


### MOVE INS (insert)

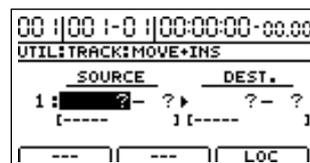

The Track Move screen will appear, allowing you to select the tracks and V-Tracks to be used as the source and destination.

If you select MOVE INS, an empty space of the required length will first of all be inserted at the destination, and then the source audio will be moved.

### Example 4: Moving audio data with MOVE + INS

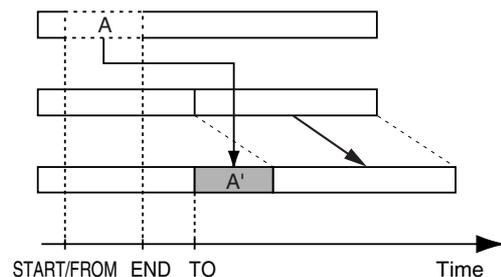

## Editing a recorded performance (Track Edit)

### NOTE

If you are using MOVE + INS, it will not be possible to specify the same track as the source and destination.

- Use [CURSOR] and the TIME/VALUE dial to choose the tracks and V-Tracks to be used as the source and destination.

```

00 | 100 | 1-0 | 100:00:00-00.00
UTIL: TRACK: MOVE          MEAS
-----
SOURCE          DEST.
1:  1- 1▶      2- 2
  [GUITR001] 1t
-----
[ --- ] [ --- ] [ LOC ]
    
```

If a name has been assigned to the selected track, it will be displayed at this time.

- If you want to move audio on other tracks using the same settings (for range, position, etc.), move the cursor to the position shown below and turn the TIME/VALUE dial.

```

00 | 100 | 1-0 | 100:00:00-00.00
UTIL: TRACK: MOVE          MEAS
-----
SOURCE          DEST.
2:  ?- ?▶      ?- ?
  [-----] 1 [-----]
-----
[ --- ] [ --- ] [ LOC ]
    
```

You will now be able to specify other tracks as the source and destination of other move operations.

However, any track that has elsewhere already been targeted as a move-destination track cannot be newly selected as the move-destination track.

If you want to cancel the move for a specific track, turn the TIME/VALUE dial counterclockwise until a question mark (?) is displayed.

### NOTE

- A move operation will not be performed for any line containing one or more question marks.
  - As Tracks 9/10 and 11/12 are stereo tracks, it will not be possible to select either of their mono tracks independent of the other.
- Press [F3] (LOC).  
The Time Setting screen will appear.

```

00 | 100 | 4-0 | 100:00:06-00.00
UTIL: TRACK: MOVE          MEAS
-----
START  1.1
END    4.1
TO     1.1
FROM   1.1
-----
[ DISP ] [ ALL ] [ GO ]
    
```

- Use [CURSOR] and the TIME/VALUE dial to specify the move range and destination positions.

```

002 | 005 | 0 | 100:00:08-00.00
UTIL: TRACK: MOVE          MEAS
-----
START  1.1
END    4.1
TO     5.1
FROM   1.1
-----
[ DISP ] [ ALL ] [ GO ]
    
```

Pressing [F1] (DISP) at this time will allow you to select how positions will be specified (i.e., by measure, time, or marker).

The following parameters should now be set.

#### START (Start point):

This parameter is used to specify the start point of the audio data to be moved.

#### END (End point):

This parameter is used to specify the end point of the audio data to be moved.

#### TO (To point):

This parameter is used to specify the basic destination point.

#### FROM (From point):

This parameter is used to specify the point within the source audio data to be aligned with the To point.

Normally, this is set to the same value as the Start point.


### NOTE

- If time values are used to specify the above points and you then switch the specification method to measures or markers, a plus (+) character may be displayed to warn that the indicated positions and actual positions are not the same. If you want to specify points using measures or markers, this discrepancy can be eliminated by using the TIME/VALUE dial to make settings in each of the relevant screens.
  - If you want to set the move range as extending from the start to the end of the song, press [F2] (ALL).
- When you have made all of the necessary settings, press [F3] (GO).  
The audio data will now be moved, and when the message "Complete!" appears, it indicates that this operation has been completed.
  - Press [EXIT/NO] several times to return to the top screen.

## Exchanging audio data (Track Exchange)

The Track Exchange function allows you to exchange the all recorded data between two different tracks.

### Example: Exchanging all data between Tracks 1 and 2

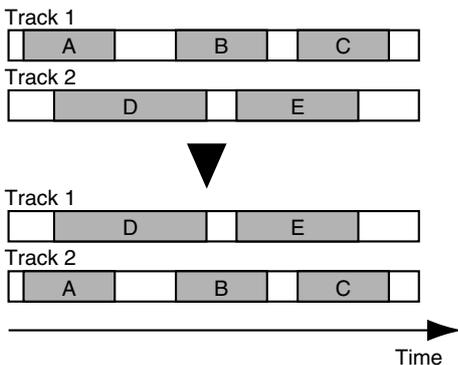

**1. Press [UTILITY].**


The Utility Menu screen will appear.



**2. Move the cursor to the TRACK icon and press [ENTER/YES].**

Alternatively, you can press [F3] (TRACK) if the TRACK icon is currently displayed.


The Track Menu screen will appear.

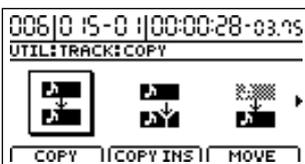

**3. Move the cursor to the XCHANGE icon and press [ENTER/YES].**


Alternatively, you can press [F2] (XCHANGE) if the XCHANGE icon is currently displayed.

The Track Exchange screen will appear, allowing you to select the tracks and V-Tracks to be used as the exchange source and destination.

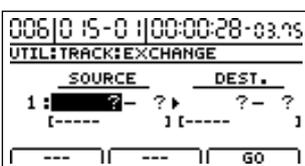


**4. Use [CURSOR] and the TIME/VALUE dial to choose the tracks and V-Tracks between which you want to exchange audio data.**

If a name has been assigned to the selected track, it will be displayed at this time.

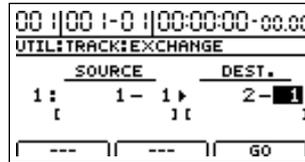

**5. If you want to exchange audio data between other tracks, move the cursor to the position shown below and turn the TIME/VALUE dial.**

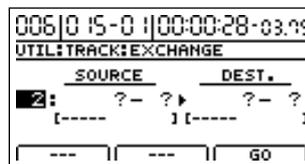

You will now be able to specify other tracks as the source and destination of another exchange operation.

However, any track that has elsewhere already been targeted as a exchange-destination track cannot be newly selected as the exchange-destination track.

If you want to cancel the exchange of data between specific tracks, turn the TIME/VALUE dial counterclockwise until a question mark (?) is displayed.

**NOTE**

- Data exchange will not be performed for any line containing one or more question marks.
- As Tracks 9/10 and 11/12 are stereo tracks, it will not be possible to select either of their mono tracks independent of the other.


**6. When you have made all of the necessary track selections, press [F3] (GO).**

The audio data will now be exchanged, and when the message "Complete!" appears, it indicates that this operation has been completed.

**7. Press [EXIT/NO] several times to return to the top screen.**

## Inserting a blank space between audio data (Track Insert)

The Track Insert function allows you to insert a blank space at a specific location. If you want to add a new phrase to the middle of a section of audio data, use this function to add a blank space of the same length as the new phrase, and then record the phrase into this space.

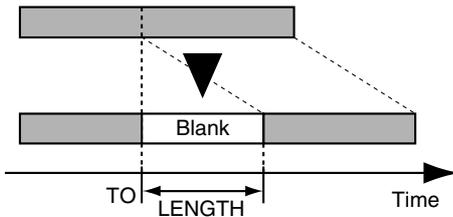

**1. Press [UTILITY].**


The Utility Menu screen will appear.



**2. Move the cursor to the TRACK icon and press [ENTER/YES].**

Alternatively, you can press [F3] (TRACK) if the TRACK icon is currently displayed.


The Track Menu screen will appear.

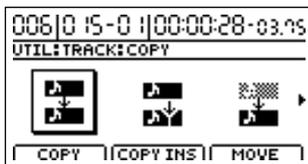

**3. Move the cursor to the INSERT icon and press [ENTER/YES].**


Alternatively, you can press [F3] (INSERT) if the INSERT icon is currently displayed.

The Track Insert screen will appear, allowing you to select the track and V-Track where the blank space will be inserted.

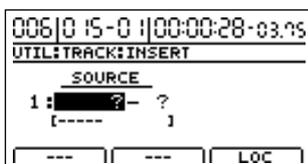


**4. Use [CURSOR] and the TIME/VALUE dial to choose the track and V-Track where you want to insert a blank space.**

If a name has been assigned to the selected track, it will be displayed at this time.

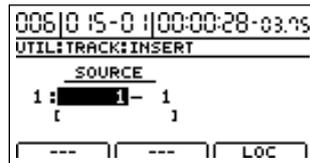

**5. If you want to insert a blank space into other tracks using the same settings (for position, length, etc.), move the cursor to the position shown below and turn the TIME/VALUE dial.**

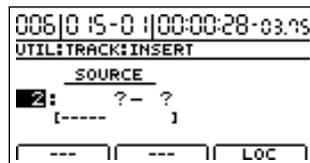


You will now be able to specify other tracks for insertion of the same blank space. If you want to cancel the insertion for a specific track, turn the TIME/VALUE dial counterclockwise until a question mark (?) is displayed.

**NOTE**

- Insertion will not be performed for any line containing one or more question marks.
- If you want to insert the same blank space into all V-Tracks or all tracks, turn the TIME/VALUE dial clockwise until "\*" is selected.
- If you want to select all V-Tracks from all tracks, select "\*\_\*\_\*".
- As Tracks 9/10 and 11/12 are stereo tracks, it will not be possible to select either of their mono tracks independent of the other.

**6. Press [F3] (LOC).**

The Time Setting screen will appear.

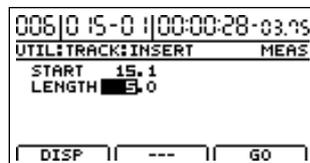

**7. Use [CURSOR] and the TIME/VALUE dial to specify the position and length of the blank space to be inserted.**

Pressing [F1] (DISP) at this time will allow you to select how the position will be specified (i.e., by measure, time, or marker).

The following parameters should now be set.

**START (Start point):**

This parameter is used to specify the position at which the blank space will be inserted.

**LENGTH:**

This parameter is used to specify the length of the blank space.

**NOTE**

If a time value is used to specify the Start point and you then switch the specification method to measures or markers, a plus (+) character may be displayed to warn that the indicated position is not the same as the actual position. If you are specifying these items as measure locations, you can eliminate this discrepancy by using the TIME/VALUE dial in measures screen to specify the location.

8. When you have made all of the necessary settings, press [F3] (GO).  
The blank space will be inserted, and when the message "Complete!" appears, it indicates that this operation has been completed.
9. Press [EXIT/NO] several times to return to the top screen.


## Maximizing the volume levels of data recorded to the tracks (Normalize)

The Normalize function raises the volume of prerecorded track data to the highest level possible.


**MEMO**

**What Normalize does:**

The maximum values for wave data handled in digital recording are predetermined. Since exceeding these levels even slightly causes the sound to become distorted, recording levels are normally set so that the sound does not distort. However, this lowers the overall volume of the recorded data.

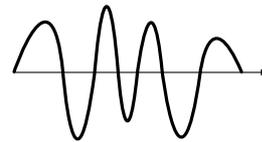

But there is a process that digitally calculates the recorded data in order to extend the waveforms to the maximum values for the wave data being treated. This process is called "normalization." After normalization, the waveform looks like this:

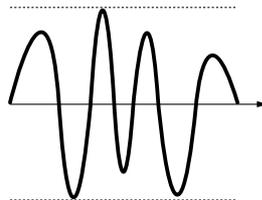

This allows you to ensure you are getting full volume within the allowable range of values for the data you are working with. Furthermore, even if any other tracks have been recorded at relatively low volume levels, you can use this function to increase volume later on.

1. Press [UTILITY]

The Utility Menu screen will appear.




## Editing a recorded performance (Track Edit)

2. Move the cursor to the TRACK icon and press [ENTER/YES].

Alternatively, you can press [F3] (TRACK) if the TRACK icon is currently displayed.

The Track Menu screen will appear.

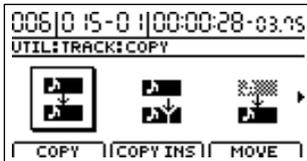


3. Move the cursor to the NORMALIZE icon and press [ENTER/YES].

Alternatively, you can press [F1] (NORMALIZE) if the NORMALIZE icon is currently displayed.

The Normalize screen will appear.




4. Select the track you want to normalize with the TIME/VALUE dial.

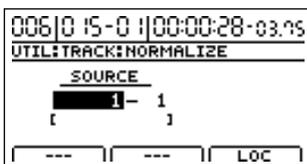

You can select mono or stereo tracks. With stereo tracks selected, you can increase the volume level while maintaining the balance between the left and right tracks.

5. Press [F3] (LOC).


The Normalize Time Setting screen will appear.

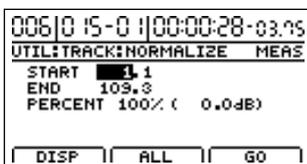

6. Use [CURSOR] and the TIME/VALUE dial to specify the start point and end point for the segment you want to normalize.

If you are normalizing the entire track from beginning to end, press [F2] (ALL).

7. Use [CURSOR] to move the cursor to "PERCENT" then set the normalization volume with the TIME/VALUE dial.

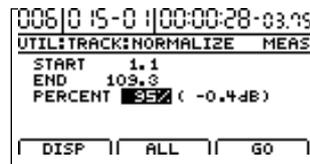

### PERCENT:

This parameter sets the amplitude (1 to 100%) with respect to the digital maximum. When set to 100%, the amplitude of the wave data is digitally converted to the maximum value that can be handled. A setting of 50% cuts the amplitude in half.

8. Press [F3] (GO).

"Track: Normalize..." appears in the screen, and normalization begins. The process is finished when "Complete!" is displayed.

If you don't like the results of the normalization, you can undo them (p. 81).


9. Save the song to store the results of the normalization in memory (p. 70).

### NOTE

- Set a minimum length of 0.5 seconds for the segment to be normalized. No sound will play back if the segment is shorter than 0.5 seconds.
- The sound is interrupted for an instant (about twenty milliseconds) immediately before and after the normalized segment. For this reason, we recommend setting the start and end points at locations where this will not be noticed, such as during breaks in performances.
- If normalization is run with the "PERCENT:" setting of 100%, note that the sound during playback may become distorted when the volume is raised further, such as when effects are used.
- If there is wave data in the normalized segment that approaches the maximum amplitude, even for an instant, then you cannot expect to achieve much with the normalize effect. This tendency is especially pronounced with sounds such as drums in which the amplitude of their loudest passages differ greatly from other sections. Be sure to keep this in mind.
- If after normalization you load another song or turn off the BR-1200CD without saving the current song, the results of normalization will be lost.

## Deleting audio data and closing the resulting gap (Track Cut)

The Track Cut function allows you to delete audio data from a specified range, and when audio data is deleted in this way, the section of audio data positioned behind it is moved forwards to fill the resulting gap.

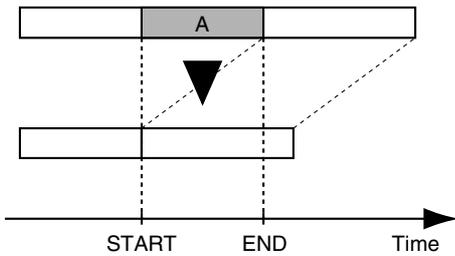

1. Press [UTILITY].


The Utility Menu screen will appear.



2. Move the cursor to the TRACK icon and press [ENTER/YES].


Alternatively, you can press [F3] (TRACK) if the TRACK icon is currently displayed.

The Track Menu screen will appear.

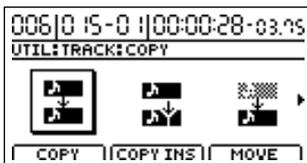

3. Move the cursor to the CUT icon and press [ENTER/YES].


Alternatively, you can press [F2] (CUT) if the CUT icon is currently displayed.

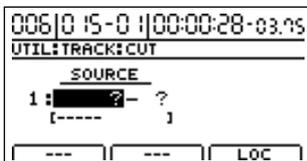


The Track Cut screen will appear, allowing you to select the track and V-Track from which audio data is to be deleted.

4. Use [CURSOR] and the TIME/VALUE dial to choose the track and V-Track containing the unwanted audio data.

If a name has been assigned to the selected track, it will be displayed at this time.

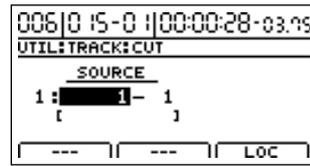

5. If you want to delete audio data from other tracks using the same settings (for range, etc.), move the cursor to the position shown below and turn the TIME/VALUE dial.

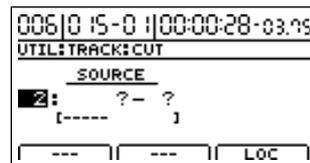


You will now be able to specify other tracks for deletion of audio data over the same range. If you want to cancel the deletion for a specific track, turn the TIME/VALUE dial counterclockwise until a question mark (?) is displayed.

### NOTE

- Deletion will not be performed for any line containing one or more question marks.
- If you want to delete audio data from all V-Tracks or all tracks, turn the TIME/VALUE dial clockwise until "\*" is selected.
- Alternatively, if you want to select all V-Tracks from all tracks, select "\*- \*."
- As Tracks 9/10 and 11/12 are stereo tracks, it will not be possible to select either of their mono tracks independent of the other.

6. Press [F3] (LOC).

The screen for setting the segment to cut appears.

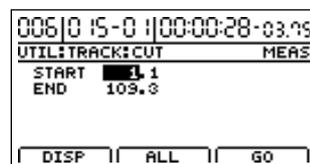

Pressing [F1] (DISP) at this time will allow you to select how the positions will be specified (i.e., by measure, time, or marker).

The following parameters should now be set.

#### START (Start point):

This parameter is used to specify the start point of the audio data to be deleted.

#### END (End point):

This parameter is used to specify the end point of the audio data to be deleted.

## Editing a recorded performance (Track Edit)

### NOTE

- If time values are used to specify the above points and you then switch the specification method to measures or markers, a plus (+) character may be displayed to warn that the indicated positions and the actual positions are not the same. If you want to specify points using measures or markers, this discrepancy can be eliminated by using the TIME/VALUE dial to make settings in each of the relevant screens.
- If you want to set the deletion range as extending from the start to the end of the song, press [F2] (ALL).


### 7. When you have made all of the necessary settings, press [F3] (GO).

The audio data will now be deleted, and when the message "Complete!" appears, it indicates that this operation has been completed.

### 8. Press [EXIT/NO] several times to return to the top screen.

## Erasing audio data (Track Erase)

The Track Erase function allows you to erase audio data from a specified range; however, when audio data is erased in this way, the section of audio data positioned behind it is not moved forwards to fill the resulting gap.

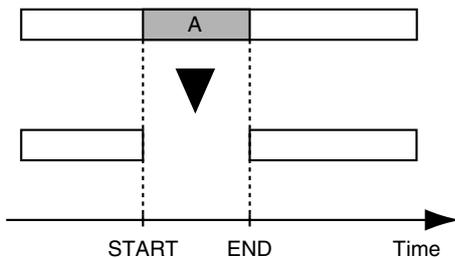

### 1. Press [UTILITY].


The Utility Menu screen will appear.



### 2. Move the cursor to the TRACK icon and press [ENTER/YES].

Alternatively, you can press [F3] (TRACK) if the TRACK icon is currently displayed.


The Track Menu screen will appear.

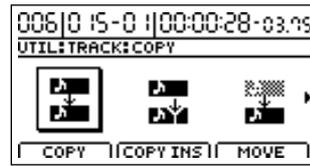

### 3. Move the cursor to the ERASE icon and press [ENTER/YES].


Alternatively, you can press [F3] (ERASE) if the ERASE icon is currently displayed.

The Track Erase screen will appear, allowing you to select the track and V-Track from which audio data is to be erased.

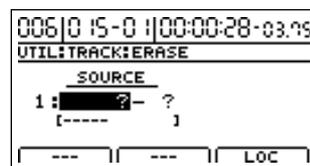


### 4. Use [CURSOR] and the TIME/VALUE dial to choose the track and V-Track containing the unwanted audio data.

If a name has been assigned to the selected track, it will be displayed at this time.

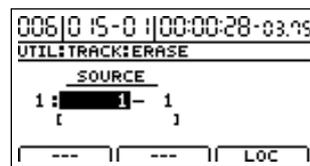

### 5. If you want to erase audio data from other tracks using the same settings (for range, etc.), move the cursor to the position shown below and turn the TIME/VALUE dial.

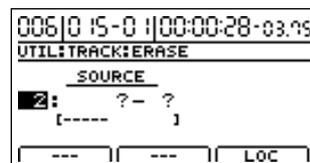

You will now be able to specify other tracks for the removal of audio data over the same range.

If you want to cancel the erase operation for a specific track, turn the TIME/VALUE dial counterclockwise until a question mark (?) is displayed.


### NOTE

- Erase will not be performed for any line containing one or more question marks.
- If you want to erase audio data from all V-Tracks or all tracks, turn the TIME/VALUE dial clockwise until "\*" is selected.
- Alternatively, if you want to select all V-Tracks from all tracks, select "\*- \*."

- As Tracks 9/10 and 11/12 are stereo tracks, it will not be possible to select either of their mono tracks independent of the other.

**6. Press [F3] (LOC).**

The screen for setting the segment to delete appears.

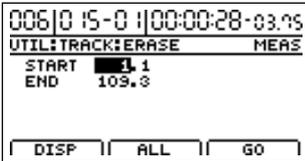

**7. Use [CURSOR] and the TIME/VALUE dial to specify the erase range.**

Pressing [F1] (DISP) at this time will allow you to select how the positions will be specified (i.e., by measure, time, or marker).

The following parameters should now be set.

**START (Start point):**

This parameter is used to specify the start point of the audio data to be erased.

**END (End point):**

This parameter is used to specify the end point of the audio data to be erased. If you want to set the erase range as extending from the start to the end of the song, press [F2] (ALL).

**8. When you have made all of the necessary settings, press [F3] (GO).**

The audio data will now be erased, and when the message "Complete!" appears, it indicates that this operation has been completed.

**9. Press [EXIT/NO] several times to return to the top screen.**

# Organizing your songs

## Displaying song details (Song Information)

Use Song Information to display the following information for the currently selected song.

- Song number
- Song name
- Song protection (on or off)
- Whether recording or editing has been carried out
- Disk memory used for the song

Disk memory is displayed in units of 1 MB (i.e., 1,048,576 bytes) and should be treated as a general guide rather than an exact figure.

### 1. Press [UTILITY].


The Utility Menu screen will appear.



### 2. Move the cursor to the SONG icon and press [ENTER/YES].

Alternatively, you can press [F2] (SONG) if the SONG icon is currently displayed.


The Song Menu screen will appear.

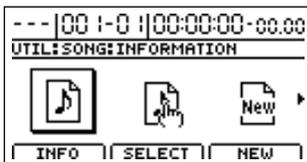

### 3. Move the cursor to the INFO icon and press [ENTER/YES].

Alternatively, you can press [F1] (INFO) if the INFO icon is currently displayed.

The Song Information screen will appear.

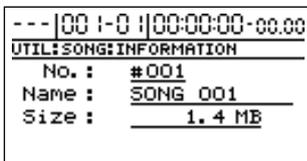

#### No.:

Shows the song's number.

#### Name:

Shows the song's name.

If song protection is turned on, "PROTECTED" will be displayed here.

If the song is recorded or edited, "EDITED" will be displayed here.

#### Size:

Shows the disk memory used for the current song (in MB).

4. Press [EXIT/NO] several times to return to the top screen.

## Copying songs (Song Copy)

Songs that you have saved on your hard disk can be copied to create new songs.

### 1. Press [UTILITY].


The Utility Menu screen will appear.



### 2. Move the cursor to the SONG icon and press [ENTER/YES].

Alternatively, you can press [F2] (SONG) if the SONG icon is currently displayed.

The Song Menu screen will appear.

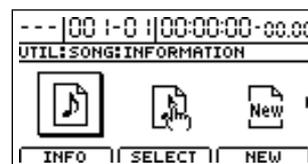

### 3. Move the cursor to the COPY icon and press [ENTER/YES].

Alternatively, you can press [F1] (COPY) if the COPY icon is currently displayed.


A list of the songs currently stored on the hard disk will appear.

In addition, an asterisk (\*) is used to indicate the song that is currently loaded.



4. Move the cursor to the song to be copied and press [F3] (GO).

The message "Sure?" will appear.

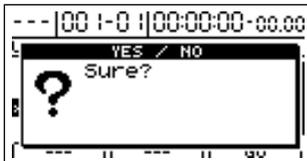

5. Press [ENTER/YES].

Copying of the selected song will now begin.

The lowest unused song number will be assigned to the song newly created in the copy process.

When copying has finished, the message "Complete!" will appear and the display will automatically return to the top screen.

#### NOTE

- The message "Save Current?" may appear if you have recorded new audio data, performed editing, modified mixer settings in the current song. If you want to save the current mixer settings, etc., before copying, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO].  
If Song Copy is used without first of all saving the current song, any changes made since the last time it was saved, including recorded audio data, edits, mixer settings, and the song patch selection will be lost. It is important, therefore, that the appropriate care be taken.
- If the message "Disk Full!" appears during the copy process, it will indicate that there is insufficient space on the hard disk to save the copied song. In such a case, you will not be able to copy your song until you have deleted unwanted data from the hard disk.

## Erasing songs (Song Erase)

Use this function to erase songs from your hard disk.

1. Press [UTILITY].


The Utility Menu screen will appear.



2. Move the cursor to the SONG icon and press [ENTER/YES].

Alternatively, you can press [F2] (SONG) if the SONG icon is currently displayed.

The Song Menu screen will appear.

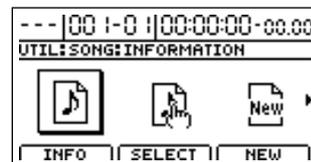

3. Move the cursor to the ERASE icon and press [ENTER/YES].

Alternatively, you can press [F2] (ERASE) if the ERASE icon is currently displayed.

A list of the songs currently stored on the hard disk will appear.

In addition, an asterisk (\*) is used to indicate the song that is currently loaded.



4. Move the cursor to the song to be erased and press [F3] (GO).

The message "Erase Song OK?" will appear.



5. Press [ENTER/YES].

The selected song will be erased.

If you erase the song that is currently loaded, the BR-1200CD will select and load the song with the lowest song number.

If no songs remain on the hard disk, a new song will be created automatically.

### NOTE

The message “Save Current?” may appear if you have recorded new audio data, performed editing, modified mixer settings, or changed the effects’ song patch (p. 118, p. 132, p. 143, p. 146) in the current song.

If you want to save the current mixer settings, song patch, etc., before erasing a different song, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO].

If Song Erase is used without first of all saving the current song, any changes made since the last time it was saved, including recorded audio data, edits, mixer settings, and the song patch selection will be lost. It is important, therefore, that the appropriate care be taken.

## Making the most of hard disk capacity (Song Optimize)

When you overwrite or erase audio data by overdubbing, punch in/out recording, or track editing, this audio data will not actually be deleted from the BR-1200CD’s hard disk. In certain cases, the amount of hard disk space used to store this unneeded audio data may become quite large, and you will not be able to record as much new audio data as you would expect.

Use the Song Optimize function to increase the amount of free space on your hard disk by permanently erasing this type of unneeded data.

### 1. Press [UTILITY].


The Utility Menu screen will appear.



### 2. Move the cursor to the SONG icon and press [ENTER/YES].

Alternatively, you can press [F2] (SONG) if the SONG icon is currently displayed.


The Song Menu screen will appear.

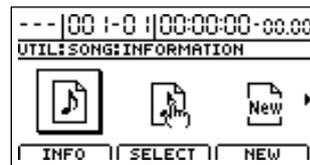

### 3. Move the cursor to the OPTIMIZE icon and press [ENTER/YES].

Alternatively, you can press [F3] (OPTIMIZE) if the OPTIMIZE icon is currently displayed.

The message “Optimize Song?” will appear.

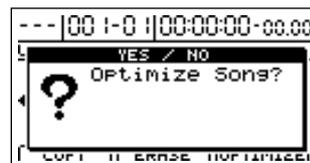

### 4. Press [ENTER/YES].

The song optimization process will now begin, and when the message “Complete!” appears, it indicates that this has been completed.

### NOTE

- In certain cases, a relatively long period of time will be required for song optimization to be completed; however, this is normal and does not indicate a malfunction. Please do not turn off the BR-1200CD during the song optimization process. The amount of time required will depend on the amount of data contained in the song and the degree to which editing has been carried out.
- If the BR-1200CD is turned off forcibly during the song optimization process by, for example, pulling out the AC adaptor’s plug, there is a possibility that the audio data contained in all songs—not just the song being optimized—will be irreparably damaged.
- Song optimization also clears the song’s edit history, and for this reason, you will not be able to use the Undo function for any edits carried out before this process. It is also important to note that if you use Undo after saving a song that has just been optimized, all audio data will be deleted.

## Protecting a song (Song Protect)

Even if you have saved an important song to the BR-1200CD's hard disk, there is always a possibility that you can accidentally overwrite audio data and loose irreplaceable recordings. However, you can use the Song Protect function to ensure that valuable audio data is protected from being overwritten.

### NOTE

The message "Save Current?" may be displayed during the following process. This occurs when the current song contains audio data, edits, or settings that have not been saved, and you should press [ENTER/YES] if you want to save these now. If this will not be necessary, press [EXIT/NO]. It is important to note, however, that if you do not save the song at this time, all such audio data, edits, and settings will be lost and the song will be restored to its last saved condition.

## Protecting a song (Song Protect)

1. Press [UTILITY].


The Utility Menu screen will appear.



2. Move the cursor to the SONG icon and press [ENTER/YES].

Alternatively, you can press [F2] (SONG) if the SONG icon is currently displayed.


The Song Menu screen will appear.

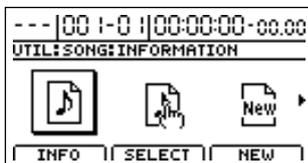

3. Move the cursor to the PROTECT icon and press [ENTER/YES].

Alternatively, you can press [F3] (PROTECT) if the PROTECT icon is currently displayed.

The message "Protect On?" will appear.

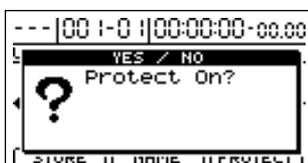

4. Press [ENTER/YES].

The current song will be protected.

When finished, the message "Complete!" will appear and the display will automatically return to the top screen.

When a song has been protected in this way, the song protection mark (  ) will be shown on the display.

## Removing song protection

1. Carry out Steps 1 through 3 as described above in "Protecting a song."

The message "Protect Off?" will appear.



2. Press [ENTER/YES].

Protection will be removed from the current song.

When this process has finished, the message "Complete!" will appear and you'll automatically be returned to the top screen.


3. If you wish to store the Protect Off setting, save the current song (p. 70).

## Naming a song (Song Name)

When you create a new song, the BR-1200CD will automatically name it "SONG 001" or something similar. If all songs are named in this way, however, it will be difficult to tell them apart. It is recommended that you name your songs appropriately so that they can be conveniently managed later on.

### 1. Press [UTILITY].


The Utility Menu screen will appear.

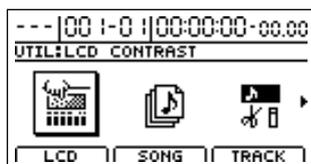

### 2. Move the cursor to the SONG icon and press [ENTER/YES].

Alternatively, you can press [F2] (SONG) if the SONG icon is currently displayed.

The Song Menu screen will appear.

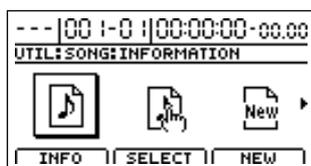


### 3. Move the cursor to the NAME icon and press [ENTER/YES].

Alternatively, you can press [F2] (NAME) if the NAME icon is currently displayed.

The Song Name screen will appear.



### 4. Move the cursor to the character you want to change and select a new character using the TIME/VALUE dial.

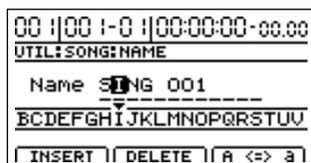

### 5. Press [EXIT/NO] several times to return to the top screen.

## Saving your song (Song Save)

Note, however, that the BR-1200CD stores the following when songs are saved.

- Audio data
- Mixer settings
- The Insert Effects' song patch (i.e., S001 through S050\*)
  - \* S001 through S120 in the case of the Guitar Bank
- The Vocal Tool Box's song patch (i.e., S01 through S10)
- The Mastering Tool Kit's song patch (i.e., S001 through S019)
- The Speaker Modeling's song patch (i.e., S001 through S044)
- Rhythm Arrangement settings (i.e., S001 through S010)
- Loop Phrase sequence (i.e., S001 through S050)
- Bass pattern (i.e., S000 through S999)
- Drum pattern (i.e., S000 through S999)
- Loop Effect settings (i.e., S001 through S050)
- Compressor and 3 Band EQ settings
- Tuner settings
- Utility settings (with the exception of LCD contrast, phantom, and sub mixer)

### 1. With the top screen displayed, hold down [STOP] and press [REC].

The message "Save Current?" will appear.



### 2. Press [ENTER/YES]. (If you do not want to save, press [EXIT/NO].)

The message "Storing Current..." will appear on the screen and saving of the song will begin. When saving has been completed, the message "Complete!" will appear.

#### HINT

In addition to the above method, songs can also be saved from the Utility screen. Please refer to "Saving your song from the Utility screen" (p. 71).

# **Section 3**

## **Using Effects**

# Makeup of BR-1200CD effects

The BR-1200CD contains the following types of effects.

## ● Insert effects (p. 118)

Insert effects are applied to input audio and are capable of changing the sound in a wide range of different ways. By changing the way an insert effect is connected, you can have it be applied not only to the input audio, but also to a track's playback or to the Master output. Furthermore, a host of different insert effects can be chosen to match the instrument or input in question.

### **GUITAR/BASS effects:**

These effects are used with audio from guitars and bass guitars. In addition to COSM amp modeling and COSM overdrive for electric guitars, the BR-1200CD features acoustic guitar simulators, bass guitar simulators, and many other effects for a range of different purposes.

### **MIC effects:**

These effects are used with audio from solo vocal microphones. The BR-1200CD features COSM compressors, COSM microphone modeling, de-esser, and a variety of other MIC effects that will prove very useful when recording from microphones.

### **SIMUL effects:**

These effects are used to record a guitar track and a vocal track simultaneously. For this reason, they allow effects for electric guitar or acoustic guitar to be used at the same time as vocal effects.

In terms of guitar effects, you can make use of amplifier modeling, acoustic guitar simulators, acoustic processors, and many other algorithms.

And in terms of vocal effects, compressors, equalizers, noise suppressors, delay, and the like have been made available.

Note that when SIMUL effects are used, the guitar effect will be applied to the GUITAR/BASS/MIC 1 audio source; the vocal effect, to the MIC 2 audio source.

### **STEREO effects:**

As the name suggests, these effects are applied to stereo inputs. The STEREO bank features stereo compressors, Lo-Fi processor, ring modulators, and a range of other effects.

#### **MEMO**

#### **What is COSM (Composite Object Sound Modeling)?**

Technology that virtually reconstructs an actually existing structure or material using a different means is called "modeling" technology. COSM is proprietary Roland/BOSS technology that creates new sounds by combining various sound modeling technologies.

## ● Track-specific compressors (p. 128)

This type of effect is used to suppress variations in volume. If the volume of a track fluctuates widely, you can make it more uniform using a compressor. In addition, when compressors are applied heavily, they can suppress the dynamic volume variations that are characteristic of musical instruments, thus allowing you to create distinctive new sounds.

#### **NOTE**

- Compressors can be used on all tracks (i.e., 1 through 8, 9/10, and 11/12)
- You cannot use the insert effects, Vocal Tool Box, speaker modeling, or Mastering Tool Kit while the compressor is being used.

## ● Track-specific equalizers (p. 130)

This type of effect is used to modify the tone of an audio signal. To do this, it separates the range of frequencies that make up a sound into low, mid, and high bands, allowing the volume of each of these bands to be adjusted independently. Three-band equalizers (or EQs) can be used on all tracks (i.e., 1 through 8, 9/10, and 11/12). Note also that the EQs for Tracks 9/10 and 11/12 are stereo effects.

#### **NOTE**

You cannot use individual track equalization while the Mastering Tool Kit is being used.

## ● Loop effects (p. 125)

Applied to playback from tracks and to input audio being monitored, loop effects are used to add a sense of spaciousness and depth. The following types of loop effects are available on the BR-1200CD.

### **Reverb:**

By adding reverberation to a sound, this effect imbues the sound with a sense of spaciousness and depth.

### **Chorus:**

A chorus effect copies the original (direct) sound, changes its pitch slightly, and then adds this back to the original to make it swell or feel more like a stereo sound.

### **Delay:**

A delay is a little bit like an echo. It can add a sense of spaciousness and depth to the sound. In addition, when this effect is applied to instruments that play melodies, it can make their performance sound smoother or can add an extra bounce to their rhythm.

### **Doubling:**

This effect sets up a tiny time deviation (or delay) between the left and right sides of a signal to give the sound a stereo feel.

#### **NOTE**

You cannot use the loop effects while the Mastering Tool Kit is being used.

### ● **Vocal Tool Box (p. 131)**

The Vocal Tool Box is used with the playback from tracks on which solo vocal performances have been recorded, and it allows you to correct variations in pitch and to add a backing chorus.

The following two effects can be selected from the Vocal Tool Box.

#### **Pitch Correction**

The pitch correction function allows you to correct the pitches of vocal performances recorded on a track in real time and in units of semitones.

#### **Harmony Sequence**

This effect adds a backing chorus to the playback of a vocal performance recorded on a track based on the chord sequence specified for your rhythm arrangement (p. 156).

#### **NOTE**

If this effect is applied to a track not containing a solo vocal performance, it will not be possible to achieve the desired result.

### ● **Mastering Tool Kit (p. 146)**

The BR-1200CD's Mastering Tool Kit is used during the creation of an audio CD to improve the quality of the finished songs by balancing volumes and compression levels. When commercially available CDs are originally created, data is written to them in such a way that the loudest point in each song is close to the maximum volume that can be recorded on the CD. A good balance among the volumes of different performances is the most important factor in allowing data to be written in this way. However, a special process known as Mastering is generally carried out to adjust the overall volume. The Mastering Tool Kit provided in the BR-1200CD allows you carry out this special processing simply and quickly.

#### **NOTE**

A good balance of the volumes of different performances is the most important factor when creating audio CDs that sound loud and powerful. If performances have not been mixed and balanced well, no amount of processing using the Mastering Tool Kit will produce the desired effect.

### ● **Speaker Modeling (p. 142)**

This effect allows the acoustical characteristics of various types of monitor speakers to be modeled for playback.

In professional recording studios, recorded audio is played through various types and sizes of monitor speakers so that the sound from each can be compared, and this ensures that the final mix-down will sound good on any type of speaker. Even if you only use one set of monitor speakers with the BR-1200CD, the Speaker Modeling effect allows you to compare the sound of different speakers in the same way.

#### **MEMO**

##### **Supported combinations of effects**

Of the insert effects, the Vocal Tool Box, the Mastering Tool Box, Speaker Modeling, and the track compressors only one of them can be used at a time.

# Using insert effects

This section will provide a description of the methods for changing and saving the various parameters for insert effects.

Rather than being restricted to usage only during recording, the BR-1200CD's insert effects can also be used with a specific track during playback or with the mix created from various tracks. For more detailed information, refer to "Changing insert effect connections (Insert Effect Location)" (p. 123).

## Effect patches and banks

The specific effect used as an insert and the parameters set for this effect are changed by selecting what is called as an Effect Patch. The BR-1200CD contains a wide range of preset effect patches that have been set up for guitars, vocals, and many other instruments.

An effect patch is a named set of data that specifies the various audio parameters for a single effect algorithm.

Meanwhile, each effect algorithm consists of a series of effect blocks that have been combined in a manner that achieves the algorithm's purpose. For example, the COSM OD GUITAR AMP algorithm is configured as follows:

### Example: COSM OD GUITAR AMP algorithm



OD•DS: COSM Overdrive / Distortion


AMP•SP: COSM Amp Modeling

EQ: 4-band Equalizer

:

In total, the BR-1200CD contains 18 such algorithms.

These patches are grouped by input source, and each grouping is referred to as a Bank. The makeup of banks is as follows:

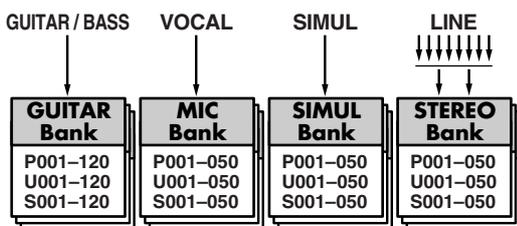

Whenever you press INPUT SELECT buttons, the appropriate bank of effects will be automatically selected. For example, when you press [GUITAR/BASS], a patch from the Guitar bank will be automatically loaded, and when you press [VOCAL], a patch from the MIC bank will be automatically selected.

The relationship between INPUT SELECT buttons and the selected bank is as follows:

[GUITAR/BASS]	Guitar bank
[VOCAL]	MIC bank
[SIMUL]	Simul bank
[LINE]	Stereo bank

Furthermore, each of these banks contains various different patches, as shown below.

### Preset patches

Guitar bank	P001 through P120
MIC bank	P001 through P050
Simul bank	P001 through P050
Stereo bank	P001 through P050

Preset patches contain data that has been set up in advance, and it will not be possible to write new settings to them.

### User patches

Guitar bank	U001 through U120
MIC bank	U001 through U050
Simul bank	U001 through U050
Stereo bank	U001 through U050

User patches are stored on the BR-1200CD's hard disk, and their settings can be modified and saved. As a result, you will be able to access these patches from any song. If you have created an effect patch that you also want to use in a different song, you should save it as a user patch.

### Song patches

Guitar bank	S001 through S120
MIC bank	S001 through S050
Simul bank	S001 through S050
Stereo bank	S001 through S050

Song patches can be modified and saved in the same way as user patches; however, their data is stored on the hard disk as part of the song that they are used in. As a result, these patches prove extremely useful when you want each song to maintain the specific effect settings that were used during recording of its tracks.

### MEMO

At the time of purchase, the user patches in each of the BR-1200CD's effect banks will contain the same settings as the corresponding preset patches. Furthermore, when you create a new song (Song New), the song patches in each effect bank will be set up by copying the corresponding user patches.

## Modifying insert effect settings

To create a new effect, find the preset patch that is closest to what you are looking for, and then change the settings to get the sound just right. When you are saving a preset patch with modified settings, you should save it as a user patch or a song patch.

### 1. Press [EFFECTS].

The Effects Patch screen will appear.




### 2. Move the cursor to the patch number field and select a patch using the TIME/VALUE dial.

#### MEMO

When you move the cursor to the bank field and turn the TIME/VALUE dial, you will be able to select a bank other than that specified with the INPUT SELECT button.

### 3. Press [F1] (EDIT).

The Effects Edit screen will appear.

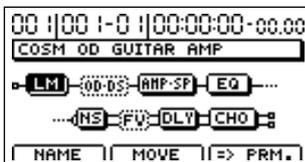


### 4. Move the cursor to the effect block you want to edit.



If the TIME/VALUE dial is turned counterclockwise at this time, the solid lines indicating the effect block at the current cursor position will switch to dotted lines, indicating that the corresponding effect has been turned off. Similarly, if the TIME/VALUE dial is turned clockwise, the dotted lines will switch back to solid lines, indicating that the effect has been turned on.

### 5. Press [F3] (=>PRM.).

The Parameter screen will appear.

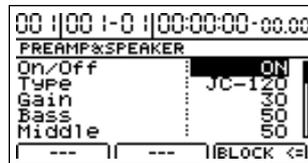


### 6. Move the cursor to the parameter whose setting you want to change and select a new value using the TIME/VALUE dial.

### 7. If you also want to edit other effect blocks, press [F3] (BLOCK<=) to return to the effects edit screen, and then repeat Steps 4 and 6.

Note that you can press CURSOR [◀] or [▶] while on a parameter setting screen to jump to the parameter setting screen for the next effect block to the left or right, respectively.

### 8. Press [EXIT/NO] to return to the Effects Patch screen.

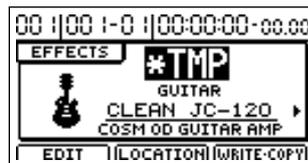


In order to indicate that the effect settings have been temporarily changed, the bank number will be displayed as “\*TMP.” If you select a different patch, load a different song, or turn off the BR-1200CD while “TMP” is being displayed, all of the patch settings will return to their previous condition. As it may not be possible to restore these settings, the appropriate care should be taken.

### 9. To save your modified settings, carry out the procedure described in “Saving insert effect settings” (p. 122).

## Changing the sound of insert effects using the VALUE knobs

When you move the cursor to the right of the insert effects patch selection screen, a screen allowing you to edit parameters with the VALUE knobs appears.

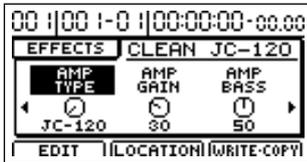


The text above each icon indicates the parameter that has been assigned to it, and the text below each icon indicates the current value of that parameter.

The value knobs VALUE 1 through VALUE 3 can now be used to directly edit the values of the corresponding parameters.


**1. Press [EFFECTS].**

The Effects Patch screen will appear.

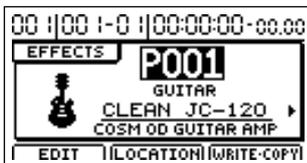

**2. Press CURSOR [▷].**

The screen allowing you to edit parameters with the VALUE dial appears.

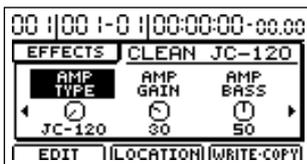


**3. Move one of the value knobs VALUE 1 through VALUE 3.**

The icon for that knob will change in response to this movement. In addition, the value of the parameter assigned to the knob will also change, and this will modify the sound of the effect accordingly.

**4. Move the cursor to the right again.**

The screen for editing parameters with the VALUE dial appears.

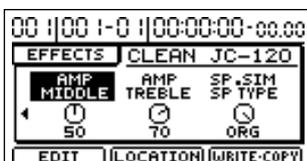

5. Make changes in the parameters in the same manner with the VALUE 1–VALUE 3 knobs.
6. To save the modified sound, carry out the procedure described below in “Saving insert effect settings” (p. 122).

## Changing parameters assigned to VALUE knobs

Use the following procedure to change the effect parameters that are assigned to each of the VALUE knobs.


**1. Press [EFFECTS].**

The Effects Patch screen will appear.




**2. Press CURSOR [▷].**

The screen allowing you to edit parameters with the VALUE dial appears.

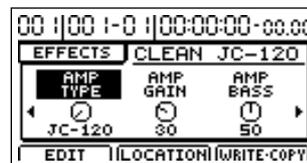

**3. Move the cursor above the icon for the parameter you want to change.**

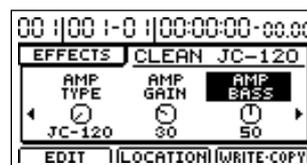

**4. Select the parameter to be assigned using the TIME/VALUE dial.**

**5. To save the settings, carry out the procedure described below in “Saving insert effect settings” (p. 122).**

**NOTE**

The parameters that can be assigned will depend on the selected effect algorithm. For more detailed information, refer to “Effect parameters assigned to VALUE knobs” (p. 318).

## Changing effect block connections

When you have selected the COSM OD GUITAR AMP or COSM OD BASS AMP effects algorithm, you will be able to freely modify the way in which the algorithm's internal effect blocks are connected. As a result, you will be able to try out a wide range of different effect sequences in the same way as if you were using compact pedal effects and audio cables.

In order to change sequences in this way, you will first of all need to select a patch using the COSM OD GUITAR AMP or COSM OD BASS AMP algorithm.


**1. Press [EFFECTS].**

The Effects Patch screen will appear.



**2. Press [F1] (EDIT).**

The Effects Edit screen will appear.

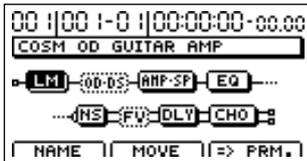

**3. Move the cursor to the effect block whose connection sequence is to be modified, and then press [F2] (MOVE).**

The effect block's icon will change and "▲" will appear at the current connection position.




**4. Using [CURSOR], move the "▲" to the new connection position.**



If you want to cancel the operation, press [EXIT/NO] or [F1] (CANCEL).

**5. Press [ENTER/YES] or [F2] (INSERT).**

The effect block will be connected at the new position.

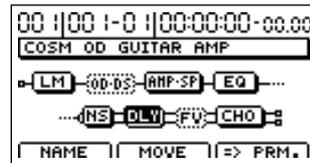

- 6. If you want to reposition any of the other effect blocks, repeat Steps 3 through 5.**
- 7. To save your modified connections, carry out the procedure described in "Saving insert effect settings" (p. 122).**

## Saving insert effect settings

Modified effect settings are saved by writing them together with a new patch name.

1. Press [F1] (NAME) on the Effects Edit screen.



2. Move the cursor to the characters in the patch name you want to change and select new characters using the TIME/VALUE dial.

At this time, the FUNCTION buttons operate as follows.

**[F1] (INSERT):**

An empty space of one character in length will be inserted.

**[F2] (DELETE):**

A single character will be deleted.


**[F3] (A<=>a):**

The character type will toggle between uppercase and lowercase.


3. Press [EXIT/NO] twice to return to the Effects Edit screen.

4. Press [F3] (WRITE•COPY).

The Effects Patch Write/Copy screen will appear.

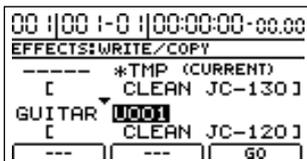

5. Move the cursor to the destination patch number and select a destination patch using the TIME/VALUE dial.

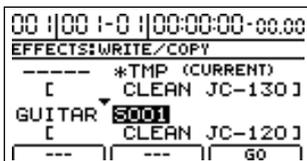

Note that you can also move the cursor to the bank field and turn the TIME/VALUE dial to select a new destination bank.

**NOTE**

This field should be left unchanged at “\*TMP(CURRENT)” If a different message is displayed, however, move the cursor to this field and turn the TIME/VALUE dial counterclockwise to restore “\*TMP(CURRENT).”

**TO:**

This field sets the effect patch to which your new settings are to be written. Whenever you call up the Effects Patch Write/Copy screen, the cursor will be automatically positioned here. Note that you can also move the cursor to the bank field and turn the TIME/VALUE dial to select a new destination bank.

6. Press [F3] (GO).

The effect patch will be written. When finished, the message “Complete!” will appear and the display will automatically return to the Effects Patch screen.

If you selected a different destination bank than that specified with the INPUT SELECT button, this new bank selection will be maintained after writing has been completed.

7. Press [EXIT/NO] several times to return to the top screen.

## Copying insert effect settings

The BR-1200CD's function for copying patches proves extremely useful when you want to create a number of effect patches with slightly different settings.

1. Press [F3] (WRITE•COPY) on the Effects Edit screen.

The Effects Patch Write/Copy screen will appear.



2. Move the cursor to the copy-source patch number and select the effect patch to be copied using the TIME/VALUE dial.

Note that you can also move the cursor to the bank field and turn the TIME/VALUE dial to select a source bank.

### NOTE

“\*TMP(CURRENT)” may be displayed in this field when you call up the Effects Patch Write/Copy screen after modifying patch settings, this may be freely changed.

3. Move the cursor to the destination patch number and select a destination patch using the TIME/VALUE dial.

Note that you can also move the cursor to the bank field and turn the TIME/VALUE dial to select a new destination bank.

4. Press [F3] (GO).

The effect patch will be copied. When finished, the message “Complete!” will appear and the display will automatically return to the Effects Patch screen.

### MEMO

If you selected a different destination bank than that set by pressing the INPUT SELECT button, this new bank selection will be maintained after copying has been completed.

5. Press [EXIT/NO] several times to return to the top screen.

### NOTE

It is important to remember that the destination patch will be completely overwritten by the patch specified with copy-source patch. Care should be taken to ensure that important patches are not accidentally overwritten in this way.

## Changing insert effect connections (Insert Effect Location)

Whenever you create a new song, the insert effects will be initially inserted into the input channels, and this is done to ensure that performances can be monitored and recorded with the effects applied. You can, however, modify this connection pattern if so required. By changing the insert effect connections as described below, you can set up the BR-1200CD for use in various different situations.


1. Press [EFFECTS].

The Effects Patch screen will appear.



2. Press [F2] (LOCATION).

The Effects Location screen will appear.

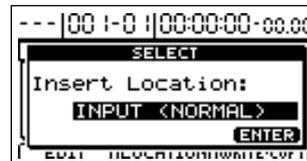

3. Change the connection using the TIME/VALUE dial.



4. Press [ENTER/YES] to close the message.

5. Press [EXIT/NO] several times to return to the top screen.


6. If you wish to store the modified connections, save the current song (p. 70).

### NOTE

- When the track type for Track 9/10 is set to “DRUMS&LP,” the effects are applied only to the drums when “TRACK 9/10” is selected. The effects are not applied to Loop Phrases. Also note that the effects are not applied to the metronome or Loop Phrases when the Track 9/10 track type is set to “METRO&LP.”
- If you load another song or turn off the BR-1200CD without saving the current song, your changes will be lost.

### Using an expression pedal

When you connect an expression pedal (such as the Roland EV-5 or BOSS FV-300L) to the rear panel's EXP PEDAL jack, you will be able to control certain effect parameters using your feet.

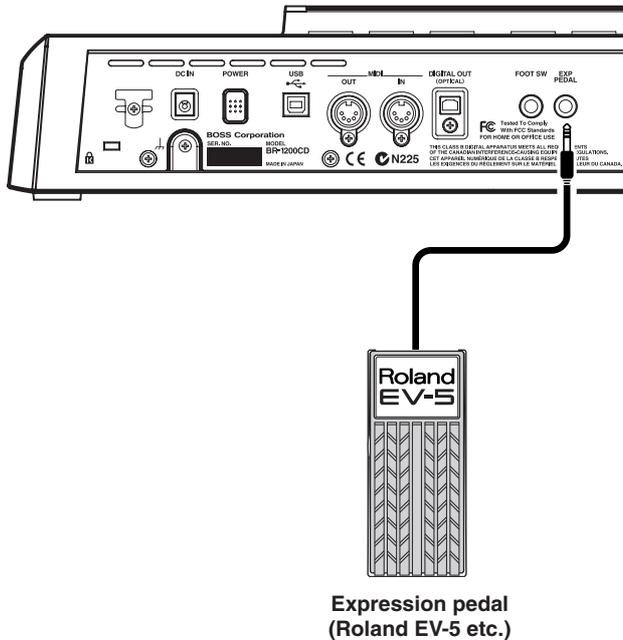

#### NOTE

- It is important that you use the specified type of expression pedal (such as the separately available Roland EV-5 or BOSS FV-300L). Connection of any other product can cause the BR-1200CD to malfunction.
- Both the Roland EV-5 and BOSS FV-300L have a minimum volume setting of 0.

Depending on effect settings, the following operations can be carried out using an expression pedal. Refer to the indicated pages for more detailed information regarding setting methods.

- Wah pedal ("Wah" (p. 310))
- Volume pedal ("Foot Volume" (p. 302))
- Pitch Shifter pedal ("Pitch Shifter" (p. 306))
- Vibrato pedal ("Vibrato" (p. 310))

# Using loop effects

Effects that are connected between the effect-send and effect-return points of input channels and tracks are referred to as loop effects. This type of effect is generally used to change the spatial nature of a song using reverberation, stereo processing, and the like. You can specify how much of an input or track to send to a loop effect by setting the corresponding send level, and naturally, this will change the degree to which the effect is applied to that input or track. And since send levels can be set independently for each different input and track, it is easy to set up conditions where, for example, a lot of reverb is applied to a vocal line but only a little is applied to the drums.

The BR-1200CD features CHORUS/DELAY/DOUBLING and REVERB as loop effects, and using these, you can easily and effectively add breadth and depth to the sound.

## Reverb:

Reverb (or reverberation) is the result of countless reflections from the floor, walls, and ceiling of the room in which the musician is performing. Think of the sound that lingers and fades away after you clap your hands in a church—this is reverb. The actual sound of this effect can vary widely as a result of factors such as the size of the performance space (whether it be a room, hall, etc.), the shape of this space, and the material of the walls or other surfaces that reflect the sound waves.

## Chorus:

A chorus effect creates a copy of the original sound with a very slight change in pitch, and by superimposing this on top of the original sound, it lets you add fatness and breadth to the sound.

## Delay:

A delay is a little bit like an echo, and by repeating the original sound after it is played, this effect can add a sense of spaciousness and depth to the sound. In addition, when this effect is applied to instruments that play melodies, it can make their performance sound smoother or can add an extra bounce to their rhythm.

## Doubling:

A doubling effect sets up a tiny time deviation (or short delay) between the left and right sides of a signal to give the sound a stereo feel.

### NOTE

You can only select and use one chorus, delay, or doubling effect—two or more of these effects cannot be used at the same time. Note, however, that reverb can be used at the same time as a chorus, delay, or doubling effect.

## Changing the Loop Effect Settings


### Chorus/Delay/Doubling

Although you can make settings for the chorus, delay, and doubling in screens they share, they cannot be used simultaneously; you must select one of them before it can be used.

The procedures for selecting chorus, delay, and doubling and adjusting the tone are described below.

#### 1. Press [CHORUS/DELAY].


The Chorus/Delay/Doubling Send screen will appear.

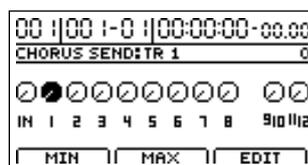

Pressing [F1] (MIN) at this time sets the chorus/delay/doubling send level to the minimum value (0). Conversely, pressing [F2] (MAX) sets the chorus/delay/doubling send level to the maximum value (100).

#### 2. Press [F3] (EDIT).

The Chorus/Delay/Doubling Edit screen will appear.

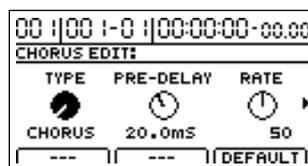

#### 3. Move the cursor to the parameter that you want to change and select a new setting using the TIME/VALUE dial.

You will be able to hear how your new settings change the chorus/delay/doubling sound.

### TYPE CHORUS, DELAY, DOUBL'N

This parameter selects the type of effect.

### ■ When CHORUS is selected

#### PRE-DELAY 0.5-50.0 ms (Default: 20.0 ms)

This adjusts the delay between output of the direct sound and output of the effect sound.

#### RATE 0-100 (Default: 50)

Adjusts the rate of the chorus.

#### DEPTH 0-100 (Default: 50)

Adjusts the depth of the chorus.

#### LOW CUT FLAT, 40 Hz-800 Hz (Default: FLAT)

This parameter sets the low-band cutoff characteristic of the chorus sound.

## Using loop effects

### **LEVEL** 0-100 (Default: 50)

Adjusts the overall volume of the effect sound. If you set this to 0, the chorus will have no effect.

### ■ When DELAY is selected

#### **TIME** 10-1000 ms (Default: 500 ms)

This parameter adjusts the delay time (i.e., the interval over which sound is delayed).

#### **FEEDBACK** 0-100 (Default: 0)

This parameter adjusts the amount of feedback. Changing the amount of feedback also causes the number of individual repetitions of the delayed sound to change.

#### **NOTE**

If the feedback is set to too large a value, individual delays will overlap, the delay volume will increase, and distortion may occur as a result. In such a case, lower the feedback level.

#### **HF DAMP** 0-100 (Default: 0)

This parameter adjusts the speed at which the high frequency portion of the delay sound dies away. Higher values cause the high frequencies to die away quicker, and this produces a darker sound.

#### **LEVEL** 0-100 (Default: 50)

This adjusts the overall volume of the delay sound.

#### **REV SEND** 0-100 (Default: 0)

Adjusts the amount of reverb that is applied to the delayed sound.

### ■ When DOUBL'N is selected

#### **DELAY TIME** 0.5-50.0 ms (Default: 17.0 ms)

This parameter adjusts the delay time (i.e., the interval over which sound is delayed).

#### **LEVEL** 0-100 (Default: 50)

This parameter adjusts the volume of the delayed sound.

If [F3] (DEFAULT) is pressed, the selected parameter is set to the default value marked above.

4. Press [EXIT/NO] several times to return to the top screen.
5. If you wish to store the modified settings, save the current song (p. 70).

#### **MEMO**

Only one set of chorus/delay/doubling settings can be saved per song.

#### **HINT** Doubling

In situations where professional engineers want to make a strummed guitar performance sound equally present on both the left and right speakers, they generally use a technique called doubling. Specifically, this involves recording the same performance twice on different tracks and then panning one of the tracks to the left and the other to the right.


The BR-1200CD provides you with a doubling-type send effect that allows you to achieve the same effect without having to make two separate recordings. And since this makes it possible to apply doubling even to single-track mono performances, you can make more effective use of your available tracks.

This type of doubling is achieved by copying the original sound (or direct sound), panning the copied sound away from the original sound, and playing back both of these with the copied sound delayed slightly, thus creating a pseudo-stereo sound. When using this effect, therefore, you will need to pan the playback track to either the left or the right. The copied sound will then be played with a short delay on the opposite side. Doubling will have no effect if the track pan is set to the center, and the appropriate care should be taken.

## Reverb

1. Press [REVERB].

The Reverb Send screen will appear.

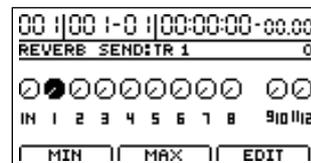


Pressing [F1] (MIN) at this time sets the reverb send level to the minimum value (0).

Conversely, pressing [F2] (MAX) sets the reverb send level to the maximum value (100).

2. Press [F3] (EDIT).

The Reverb Edit screen will appear.

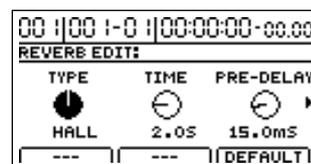

3. Move the cursor to the parameter that you want to change and select a new setting using the TIME/VALUE dial.

You will be able to hear how your new settings change the reverb sound.

#### **TYPE** ROOM, HALL, PLATE (default: HALL)

Selects the type of reverb to be used.

#### **ROOM:**

Simulates the reverberation of a small room.

#### **HALL:**

Simulates the reverberation of a concert hall.

**PLATE:**

Simulates the reverberation of reverb devices using large metal plates that have been constant favorites in professional studios.

**TIME**                    **0.1 s - 10.0 s (Default: 2.0 s)**

This parameter adjusts the duration (time) of the reverb.

**PRE-DELAY**    **1.0 ms - 100.0 ms (Default: 15.0 ms)**

This parameter adjusts the delay between the direct sound and the start of the reverb.

**STONE**                                **-12-+12 (Default: 0)**

This parameter adjusts the overall tone of the reverb sound. Negative values produce a darker tone; positive values, a brighter tone.

**DENSITY**                                **0-10 (Default: 5)**

This parameter adjusts the density of the reverb, with larger values producing a denser sound.

**HF DAMP**    **DARK, NORMAL, BRIGHT (Default: NORMAL)**

This parameter sets the brightness of the reverb sound.

**DARK:**

High frequencies die away relatively quickly to produce a darker sounding reverb.

**NORMAL:**

This setting produces reverb with a standard sound.

**BRIGHT:**

High frequencies die away relatively slowly to produce a brighter sounding reverb.

**LOW CUT**    **FLAT, 40 Hz-800 Hz (Default: FLAT)**

This parameter sets the low-band cutoff characteristic of the reverb sound.

**LEVEL**                                **0-100 (Default: 50)**

This parameter adjusts the volume of the reverb.

If [F3] (DEFAULT) is pressed, the selected parameter is set to the default value marked above.

4. Press [EXIT/NO] several times to return to the top screen.
5. If you wish to store the modified settings, save the current song (p. 70).

**MEMO**

Only one set of reverb settings can be saved per song.

# Using track-specific compressors (Track Compressor)

A compressor is used to smooth out volume fluctuations in the track's playback, thus making it easier to hear at all times.

## NOTE

You cannot use the insert effects, Vocal Tool Box, speaker modeling, or Mastering Tool Kit while the track compressor is being used.




For details regarding basic track compressor operations, refer to "Suppressing variations in volume (Compressor)" (p. 82).

The following section will deal with the finer points of compressor setting methods.

### 1. Press [COMP].

The Track Compressor screen will appear.

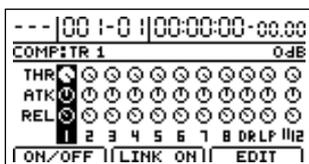


[COMP] lights up at this time, indicating that the track compressor is switched on. The lights in the insert effects, Mastering Tool Kit, Vocal Tool Box, and speaker modeling buttons go off.

\* When you next want to use these effects, press the button for the effect you want. The track compressor is then switched off, and the effect you have selected is switched on.

### 2. Press [F3] (EDIT).

The Compressor Edit screen will appear.

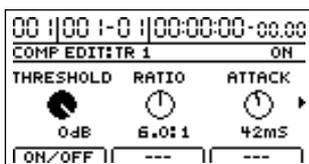

### 3. Move the cursor to the parameter that you want to change and select a new setting using the TIME/VALUE dial.

You will be able to hear how your new settings change the sound.

#### THRESHOLD **-48 dB-0 dB**

Adjust this parameter to match the input signal. Compression will be applied to input levels in excess of this level. The smaller the value set here, the lower the level at which the compressor kicks in.

#### RATIO **2.0: 1-40.0: 1, INF: 1**

This adjusts the compression ratio. Higher ratios produce a stronger compression effect.

#### ATTACK

**0.1 mS-100 mS**

This parameter adjusts the amount of time it takes for the compression ratio set by "Ratio" to be reached once the input level exceeds the set threshold level and compression begins. The smaller the value set here, the more rapidly compression will be applied.

#### RELEASE

**50 mS-2500 mS**

This adjusts the time it takes for compression to be removed once the signal level drops below the threshold. Lower values cause the compression to be released more rapidly, making it easier to distinguish the sound from successively played strings.

#### KNEE

**SOFT, MEDIUM, HARD**

This parameter affects the way in which compression is applied (i.e., the knee) in the vicinity of the threshold.

#### SOFT:

With this knee setting, compression is applied gently and is gradually increased as the level of the audio signal approaches the threshold.

#### MEDIUM:

With this knee setting, compression is applied a little gently and is a little gradually increased as the level of the audio signal approaches the threshold.

#### HARD:

With this knee setting, no compression whatsoever is applied until the level of the audio signal reaches the threshold, and once the threshold has been crossed, compression will be applied fully in accordance with the ratio setting.

#### LEVEL

**0.0dB-24.0dB**

This adjust the volume of the compression.

### 4. Press [F1] (ON/OFF) to switch the compressor on and off.

[F1] is used to toggle between on and off.

### 5. Press [EXIT/NO] several times to return to the top screen.

### 6. If you wish to store the modified settings, save the current song (p. 70).

#### MEMO

Only one set of track compressor settings can be saved per song.



# Using track-specific equalizers (Track EQ)

## Setting the Track EQ




For details regarding basic equalizer operations, refer to “Adjusting the sound of each track (Equalizer)” (p. 83).

The following section will deal with the finer points of equalizer setting methods.

1. Press [EQ].


The Equalizer screen will appear.

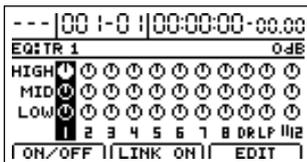

2. Press [F1] (ON/OFF) to toggle the equalizer between on and off.

3. Press [F3] (EDIT).

The Equalizer Edit screen will appear.

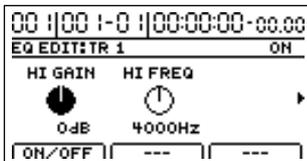

4. Move the cursor to the parameter that you want to change and select a new setting using the TIME/VALUE dial.

You will be able to hear how your new settings change the sound.

### HI GAIN -12--+12 dB

This parameter sets the gain (amount of boost or cut) for the high-range equalizer.

### HI FREQ 500 Hz–18000 Hz

This parameter sets the frequency for the high range equalizer.

### MID GAIN -12--+12 dB

This parameter sets the gain (amount of boost or cut) for the midrange equalizer.

### MID FREQ 200 Hz–4000 Hz

This parameter sets the central frequency for the midrange equalizer.

### MID Q 0.3–16.0

This parameter sets the range of change in gain for the frequency set by “MID FREQUENCY.” A larger value results in a narrower range of change.

### LOW GAIN -12--+12 dB

This parameter sets the gain (amount of boost or cut) for the low range equalizer.

### LOW FREQ 40 Hz–1500 Hz

This parameter sets the frequency for the low range equalizer.

5. Press [EXIT/NO] several times to return to the top screen.

6. If you wish to store the modified settings, save the current song (p. 70).

#### MEMO

Only one set of equalizer settings can be saved per song.


## Switching equalizers between stereo and mono (Stereo Link)

If you intend to apply an equalizer to a stereo-recorded track, you will need to align the left and right EQ settings in order to prevent differences in tone occurring on the left and right (Stereo Link).

Use the following procedure to turn Stereo Link on and off.

1. Press [EQ].

The Equalizer screen will appear.

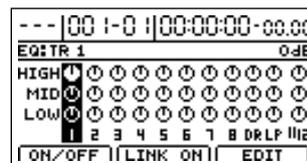

2. Use the track buttons or [CURSOR] to select one or both tracks from a stereo pair.

3. Press [F2] (LINK ON).

Stereo Link will be toggled between on and off.

#### MEMO

- Whenever Stereo Link is turned on, the parameters for the equalizers on both of the linked tracks will use the same values. When one of these parameters is modified, the same parameter for the adjacent track will be automatically and simultaneously modified.
  - You can switch on Stereo Link by simultaneously pressing two adjacent track buttons.
4. If you wish to store the modified settings, save the current song (p. 70).

#### NOTE

Tracks 9/10 and 11/12 are fixed as stereo tracks, and therefore, Stereo Link will always be on for the corresponding equalizers. It will not be possible to turn Stereo Link off for these tracks.

# Fixing the pitch of vocals/Adding a backing chorus to vocals (Vocal Tool Box)

## The Vocal Tool Box

The term Vocal Tool Box is used to describe a group of effects that are used on recorded vocal tracks to fix incorrect pitches and to automatically apply a backing chorus. When compared with guitars, pianos, and other musical instruments, the human voice generally produces a relatively unstable tone. And when recording unprepared vocalists, this can often lead to considerable difficulties in the form of notes sung out of tune and poor sound quality.

Even if you have recorded a skilled vocalist, however, applying a backing chorus can further enhance the level of the overall performance. When properly used, the BR-1200CD's Vocal Tool Box will help to ensure that your vocal tracks will always sound great.

## Makeup of the Vocal Tool Box

The following two types of effects make up the BR-1200CD's Vocal Tool Box.

### ● Pitch Correction


This effect automatically fixes incorrect pitches in solo vocal tracks. Specifically, it detects incorrect pitches within (50 cents and adjusts them to the correct pitch in real time and in units of semitones.

### ● Harmony Sequence

In order to apply a simple backing chorus, this effect creates a three-piece harmony by modifying the pitch of the original solo vocal track. Furthermore, the harmony pitches are automatically created in accordance with the chord sequence or harmony pattern specified for your rhythm arrangement (p. 200).

Both of these effects are intended for use with the playback of recorded audio tracks and cannot be used on input sources.

The Vocal Tool Box and audio tracks are connected as shown below.

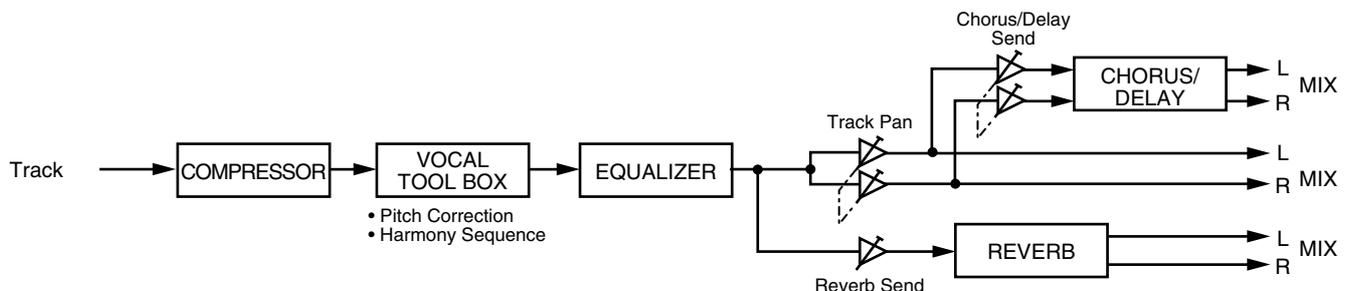

## Vocal Tool Box patches

In the case of both pitch correction and harmony sequence, you can set up the way in which the effect is to be applied and can then save these settings. A group of such settings is referred to as a Patch.

At the time of purchase, a total of 10 pitch correction and harmony sequence patches (i.e., preset patches) will be stored in the BR-1200CD. In addition, 10 user patches can be freely set up and used within any song, and 10 song patches can be set up for use within a specific song.

### NOTE

#### Precautions for Vocal Tool Box usage

- When you are using the Vocal Tool Box, you will not be able to use insert effects, the Mastering Tool Kit, or speaker modeling.
- The Vocal Tool Box is intended for use with recorded vocal tracks and it cannot be applied to input sources or the Master output.
- Pitch correction and harmony sequence are separate effects. For this reason, they cannot both be used at the same time.
- These effects will function when applied to solo performances other than vocals; however, the fundamental differences between the character of the human voice and that of musical instruments makes it highly unlikely that the desired result will be achieved.
- In the following situations, the Vocal Tool Box may not be able to accurately detect the pitch, and normal operation will not be possible.
  - When other sounds are mixed in with the solo vocal part.
  - When the volume of the vocal part is excessively loud or quiet.
  - When the vocal part contains a lot of sibilance or is very breathy (such as a singer that whispers, or one with a husky voice).
  - When the vocal part contains an excessive number of different pitches (such as fast, deep vibrato or fast speech)
  - When the part is sung with a very low voice containing a lot of harmonics.
- \* *If the BR-1200CD is frequently incorrect when detecting the pitch, either change the "Type" setting for the pitch correction function or the "Input Type" setting for the harmony sequence function. In certain cases, this will reduce the number of incorrect detections.*

## Fixing the pitch of vocals (Pitch Correction)

Let's now use the BR-1200CD's pitch correction feature to clean up some mistakes in a solo vocal part.

Using this feature, we will be able to correct pitches in real time and in semitone units.


1. **Before using pitch correction, record a solo vocal track to work with.**
2. **Press [REC MODE] several times until the BOUNCE indicator lights up.**

The BR-1200CD will now enter Bounce mode.

3. **Press [VOCAL TOOL BOX].**

This button will light up to indicate that the Vocal Tool Box is turned on.


The Vocal Tool Box's patch selection screen will appear.

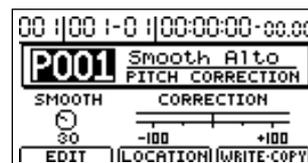

4. **Move the cursor to the patch number field and select a patch using the TIME/VALUE dial.**

You should select a patch for which "PITCH CORRECTION" is displayed on-screen as the algorithm name here.

5. **Press [F2] (LOCATION).**

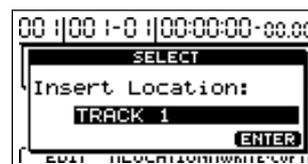

6. **Use TIME/VALUE dial to select the track containing the solo vocal recording.**

The following tracks can be selected at this time:  
Tracks 1 through 8, Tracks 9/10, or Tracks 11/12

7. **Start playback on the BR-1200CD.**

Pitches will be corrected in the solo vocal part as it is played. A real-time display of the amount of pitch correction in units of cents will be provided at the top right of the screen. Listen to the part to confirm that it is now completely in tune, and if necessary, adjust the volume of the part using the corresponding track fader. Press [STOP] to end playback.

8. Press a track button to select the track for recording the corrected vocal part.

The track button will turn red and start flashing to indicate selection as the recording track.

Although the tracks will be selected as the stereo tracks when track buttons are first pressed, if one of the flashing buttons for Tracks 1 through 8 is pressed while flashing, the corresponding track will be selected as a mono track.

9. Move the faders for all tracks except the track containing the solo vocal recording all the way down.  
Note that this also applies to faders for Drums, Bass, and Loop Phrases.
10. Press [ZERO] to jump to the start of the song and then press [REC].  
[REC] will turn red and start to flash, indicating that the BR-1200CD is now ready for recording.

11. Press [PLAY].  
Both [PLAY] and [REC] will light up and recording will start. The solo part will be played and any incorrect pitches will be fixed. At the same time, the corrected part will be recorded on the selected track.

12. Press [STOP] at the point where you want to stop recording.  
The BR-1200CD will stop playback.

13. Press [ZERO] to jump to the start of the song once again and then start playback of the recorded track.  
Move the fader for the track containing the original vocal part all the way down, and raise the fader for the track containing the corrected vocal part to an appropriate point. As you listen to the corrected part, confirm whether or not you are happy with the corrections.

**MEMO**

If you do not like the way the vocal part was corrected, use Undo (p. 81) to cancel the recording.


14. If you wish to store the corrected track, save the current song (p. 70).

## Setting the correction method for vocal pitch (Pitch Correction Edit)

Each of the preset patches 1 through 5 uses a slightly different method for correcting pitches. Normally, it will be sufficient to select the patch that gives the results you like best; however, if you cannot achieve favorable results using any of these patches, you can change the pitch correction settings to create a patch of your own.


1. Select a preset patch to base your new patch on.
2. Press [F1] (EDIT).

The Pitch Correction Edit screen will appear.

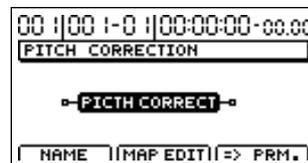


3. Press [F3] (=PRM.).

The Pitch Correction Parameter screen will appear.

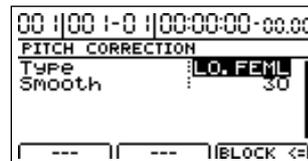

4. Move the cursor to the setting you want to change and select a new value using the TIME/VALUE dial.

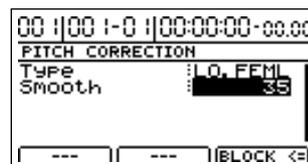

**Type LO.MALE, HI.MALE, LO.FEML, HI.FEML**

Set this parameter to match the type of voice in the original vocal part. If this parameter is not set correctly, problems will be more likely to occur in pitch detection and correction.

**LO.MALE (Low Male)**

Select this setting for a low-pitched, male voice.

**HI.MALE (High Male)**

Select this setting for a high-pitched, male voice.

**LO.FEML (Low Female)**

Select this setting for a low-pitched, female voice.

**HI.FEML (High Female)**

Select this setting for a high-pitched, female voice.

\* If the BR-1200CD is frequently incorrect when detecting the pitch, either change the type setting. In certain cases, this will reduce the number of incorrect detections.

**Smooth**

**0-100**

This setting determines how quickly pitch correction will react to changes of pitch in the original vocal part. Large values result in a longer time before correction is applied; consequently, changes in pitch will be more gradual. Small values produce rapid changes in pitch.

- 5. Press [F3] (BLOCK<=).

The Pitch Correction Edit screen will appear.



- 6. To save your modified settings, carry out the procedure described in "Saving Vocal Tool Box settings (Patch Write)" (p. 140).

**Making Detailed Settings for Pitch Correction (Correction Event Map)**

In the procedures described thus far, what has been explained is how to correct the overall pitch for the entire song, from start to finish, in semitone increments.

In actual practice, however, there may be situations where you want to correct only a certain section or adjust the pitch differently. In such instances, use the following procedure.


1. Start by switching to BOUNCE mode and selecting the patch to which pitch correction is to be applied.
2. Press [F1] (EDIT) in the Vocal Tool Box pitch selection screen.

The Pitch Correction Edit screen appears




3. Press [F2] (MAP EDIT).

The Correction Event Map screen appears.

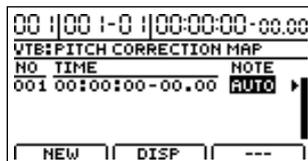

In the Correction Event Map screen, you can input the time at which you want the pitch correction to start as well as the pitch.

Taken together, this timing and pitch data is referred to as a "correction event."

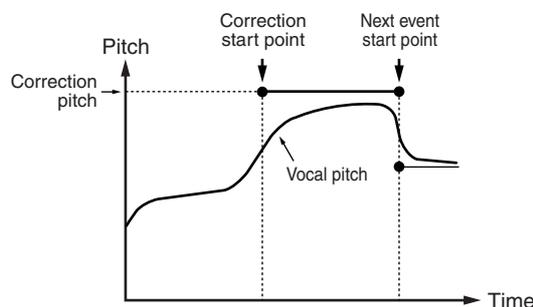

You can make corrections freely at the desired points in the song by arranging correction events in the sequence they occur.

The sequence of correction events with the information they contain is called a "correction event map."


Initially, only one correction event, "AUTO," is input at the beginning of the correction event map.

**AUTO:**


After the specified point in the song, all pitches are corrected in semitone increments.

4. Press [F1] (NEW).

A new correction event is inserted.

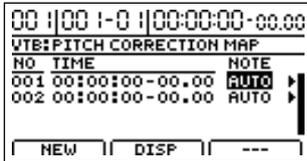


5. Move the cursor to "TIME" and specify the time at which you want the correction to start with the TIME/VALUE dial.

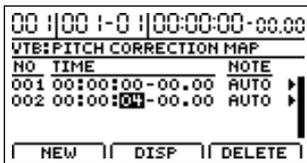
**NOTE**

You cannot change the time of the correction event at the start of the song.

6. Move the cursor to "NOTE" and specify the pitch you want to correct with the TIME/VALUE dial.

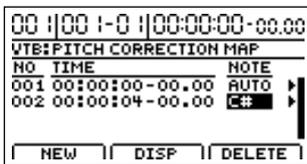
**NOTE:**
**OFF**

No correction is made after the specified point in the song. The song is played using the original pitch.


**AUTO**

After the specified point in the song, all pitches are corrected in semitone increments.

**C, C#, -A#, B**

The performance after the specified point in the song is adjusted to the specified pitch.

7. Move the cursor to "SMOOTH" and specify the correction speed.

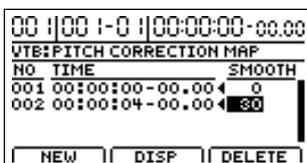
**SMOOTH**
**0-100**

The correction is fastest when this is set to 0.

The correction is applied more smoothly from the specified point as the selected value is increased.

**MEMO**


Corrections that are made too rapidly seem robotic.

However, if the correction is too smooth, in some cases it may appear as if no correction has been applied. For natural sounding pitch corrections, set the value in a range between 20 and 40.


8. Press [F1] (NEW).

Another new correction event is inserted.

9. Move the cursor to "TIME" and specify the time at which you want the correction to end with the TIME/VALUE dial.

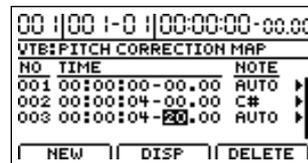

10. Move the cursor to "NOTE" and specify "OFF."

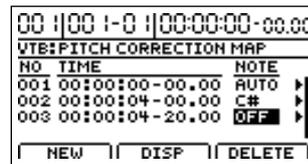

11. Have the Recorder play the song from the beginning.

The correction is first applied at the point in the song specified in Step 3, with the correction ending at the point specified in Step 6.

12. To delete any unnecessary correction events, move the cursor to the event and press [F3] (DELETE).

The correction event is deleted.

**NOTE**

You cannot delete the correction event at the beginning of the song. If this correction event is unneeded, rather than deleting it, just set the function to "OFF."

13. Repeat Steps 2-12 as needed to specify the edited range.

14. To save the correction events you have input, save the song (p. 70).

**NOTE**

You can only save a Correction Event Map to a single song. Even if you switch the patch with the pitch correction, the Correction Event Map remains unchanged.

## Applying a backing chorus to vocals (Harmony Sequence)

Lets now use the BR-1200CD's harmony sequence feature to apply a backing chorus to a solo vocal performance. A three-part backing chorus will be created based on the chord sequence specified for your rhythm arrangement.

### NOTE

Backing chorus parts are created by modifying the pitch of the original solo vocal track. As a result, it will not be possible to create a backing chorus that uses different lyrics or a different rhythm than the original part.

1. Before using harmony sequence, record a solo vocal track to work with.
2. Enter a chord sequence for your rhythm arrangement.



"Inputting chords" (p. 200)

3. Press [REC MODE] several times until the BOUNCE indicator lights up.

The BR-1200CD will now enter Bounce mode.

4. Press [VOCAL TOOL BOX].

This button will light up to indicate that the Vocal Tool Box is turned on. The Vocal Tool Box's patch selection screen will appear.



5. Move the cursor to the patch number field and select a patch using the TIME/VALUE dial.

You should select a patch for which "HARMONY SEQUENCE" is displayed on-screen as the algorithm name here.

6. Press [F2] (LOCATION).



7. Use TIME/VALUE dial to select the track containing the solo vocal recording.

The following tracks can be selected at this time:  
Tracks 1 through 8, Tracks 9/10, or Tracks 11/12

8. Press [ENTER/YES].

Backing chorus will now be added to the selected track.

9. Start playback on the BR-1200CD.

Listen to the backing chorus that will now be applied to the solo vocal part during playback. If necessary, adjust the volume using the corresponding track fader. Press [STOP] to end playback.

10. Press a track button to select the track on which the solo vocal and backing chorus will be recorded.

The track button will turn red and start flashing to indicate selection as the recording track.

11. Move the faders for all tracks except the track including solo vocal recording all the way down.

Note that this also applies to faders for Drums, Bass, and Loop Phrases.

12. Press [ZERO] to jump to the start of the song and then press [REC].

[REC] will turn red and start to flash, indicating that the BR-1200CD is now ready for recording.

13. Press [PLAY].

Both [PLAY] and [REC] will light up and recording will start. The solo part will be played and the backing chorus will be applied. At the same time, the solo vocal and backing chorus will be recorded on the selected track.

14. Press [STOP] on the point where you want to stop recording.

The playback on the BR-1200CD will stop.

15. Press [ZERO] to jump to the start of the song once again and then start playback of the recorded track.

Move the fader for the track containing the original vocal part all the way down, and raise the fader for the track containing the solo vocal and backing chorus to an appropriate point. You will now be able to hear just the backing chorus.

### MEMO

If you do not like the way the backing chorus was applied, use Undo (p. 81) to cancel the recording.

16. If you wish to store the backing chorus, save the current song (p. 70).

## Inserting rests in a backing chorus

Whenever you use Harmony Sequence, a continuous backing chorus is played from the beginning to the end of the song. In certain cases, however, you will probably need the backing chorus to stop at certain points within your song. To do this, specify "non-chord" for corresponding chords input in the chord input screen (p. 200).

Non-chord can be specified by selecting "---" (N.C.) during Step 5 in the procedure described in "Inputting chords" (p. 200).

Playback of the backing chorus will be stopped for chords that have been specified as "non-chord," and this makes it possible to set up rests.

Example: Inputting the chords Cmaj → C --- → Fmaj

Chorus	Cmaj backing chorus	Rest	Fmaj backing chorus	Time →
Chord	Cmaj	C ---	Fmaj	


## Setting the application method for backing choruses (Harmony Sequence Edit)

Each of the preset patches 6 through 10 uses a slightly different method for applying harmonies. Usually it will be sufficient to select the patch that gives the results you like best; however, if you cannot achieve favorable results using any of these patches, you will be able to change harmony sequence settings to create a patch of your own.

**1. Select a preset patch to base your new patch on.**

**2. Press [F1] (EDIT).**

The Harmony Sequence edit screen will appear.

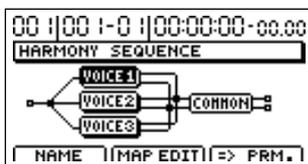


If the TIME/VALUE dial is turned counterclockwise at this time, the solid lines indicating the effect block at the current cursor position will switch to dotted lines, indicating that the corresponding effect has been turned off. Similarly, if the TIME/VALUE dial is turned clockwise, the dotted lines will switch back to solid lines, indicating that the effect has been turned on.

**3. Press [F3] (=>PRM.).**

The Parameter screen will appear.

Note that you can press CURSOR [◀] or [▶] while on a parameter setting screen to jump to the parameter setting screen for the next effect block to the left or right, respectively.

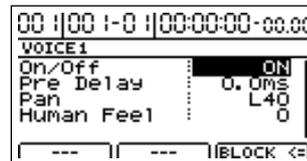

**4. Move the cursor to the setting you want to change and select a new value using the TIME/VALUE dial.**

### VOICE1-VOICE3

These parameters are used to make settings for each of the voices comprising the backing chorus.

#### On/Off

**OFF, ON**

This is used to turn each of the voices in the backing chorus on or off. When a voice is turned off, it will produce no audio.

Note that if all voices 1 through 3 are turned off, no audio will be produced for the backing chorus.

#### Pre Delay

**0.0 ms-50.0 ms**

This sets the amount of time that passes between the original vocal part and the backing chorus voice. By setting longer delays and setting a different delay for each of the voices, you can make the backing chorus sound more realistic.

By setting shorter delay times, the backing chorus can be made to sound more artificial.

#### Pan

**L100-R100**

This adjusts the left-right position of the corresponding voice.

By setting a different pan value for each voice, a backing chorus with a wider sound can be produced.

#### Human Feel

**0-100**

This adjusts the degree of pitch instability that is unique to human voices.

The higher this setting, the greater the degree of pitch instability in the backing chorus voice, and the more like a human voice it will sound. If settings are excessively high, however, the backing chorus will sound amateurish.

With lower settings, the pitches of the voice become more stable and the overall backing chorus starts to sound more artificial.

#### COMMON

These parameters are used to make settings for the overall backing chorus.

#### Input Type

**LO.MALE, HI.MALE, LO.FEML, HI.FEML**

Set this parameter to match the type of voice in the original vocal part. If this parameter is not set correctly, problems will be more likely to occur in pitch detection and correction.

#### LO.MALE (Low Male)

Select this setting for a low-pitched, male voice.

## HI.MALE (High Male)

Select this setting for a high-pitched, male voice.

## LO.FEML (Low Female)

Select this setting for a low-pitched, female voice.

## HI.FEML (High Female)

Select this setting for a high-pitched, female voice.

- \* If the BR-1200CD is frequently incorrect when detecting the pitch, either change the type setting. In certain cases, this will reduce the number of incorrect detections.

## Balance 100:0-0:100

This sets the balance of volumes between the original vocal part and the backing chorus. A setting of 0:100 results in only the backing chorus being heard. Similarly, a setting of 100:0 results in only the original vocal being heard.

## Chorus Send 0-100

This adjusts the amount of the backing chorus that is sent to chorus, delay, or doubling. Higher values result in a larger amount of the backing chorus being sent to the selected effect. Alternatively, a value of 0 should be used when no chorus, delay, or doubling is to be applied to the backing chorus.

## Reverb Send 0-100

This adjusts the amount of the backing chorus that is sent to reverb. Higher values cause reverb to be applied to a greater degree. Alternatively, a value of 0 should be used when no reverb is to be applied to the backing chorus.

5. Press [BLOCK<=] to return to the Harmony Sequence Edit screen.

6. Press [EXIT/NO] to return to the Harmony Sequence patch selection screen.

In order to indicate that the effect settings have been temporarily changed, the bank number will be displayed as “\*TMP.”

### NOTE

If you select a different patch, load a different song, or turn off the BR-1200CD while “\*TMP” is being displayed, all of the patch settings will return to their original condition. As it may not be possible to restore these settings, due caution should be observed.

7. To save your modified settings, carry out the procedure described below in “Saving Vocal Tool Box settings (Patch Write)” (p. 140).


## Making More Detailed Backing Chorus Settings (Harmony Event Map)

In the procedures described thus far, what has been explained is how to add the backing chorus automatically to all of the vocals in the song, from start to finish.

In actual practice, however, there may be situations where you want to have the backing chorus only a certain section or make detailed adjustments to the composition of the harmony. In such instances, use the following procedure.


1. Start by switching to BOUNCE mode and selecting the patch to which you want to apply the harmony sequence.
2. Press [F1] (EDIT) in the Vocal Tool Box pitch selection screen.

The Harmony Sequence Edit screen appears

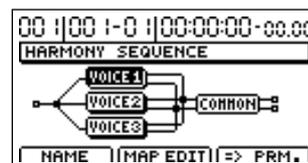


3. Press [F2] (MAP EDIT).

The Harmony Event Map screen appears.

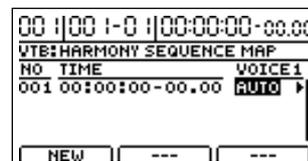

In the Harmony Event Map screen, you can input the time at which you want addition of the backing chorus to start as well as the pitch for each of the three voices comprising the harmony.

Taken together, this timing and pitch data is referred to as a “harmony event.”

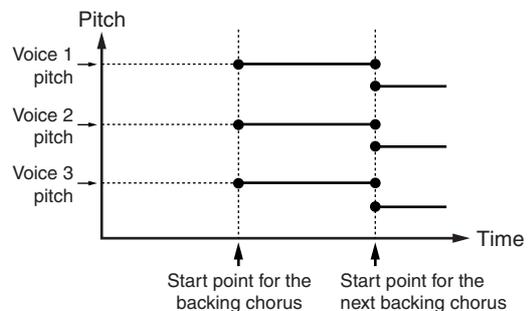

You can freely add backing chorus wherever you want in the song by arranging harmony events in the preferred sequence.

## Fixing the pitch of vocals/Adding a backing chorus to vocals (Vocal Tool Box)

The sequence of harmony events with the information they contain is called a “harmony event map.”

Initially, only one harmony event, “AUTO,” is input at the beginning of the harmony event map.

### AUTO:

After the specified point in the song, the backing chorus is automatically added in accordance with the rhythm arrangement’s chord map.

4. Press [F1] (NEW).

A new harmony event is inserted.

00   00   1-0   00:00:00-00.00		
VTB:HARMONY SEQUENCE MAP		
NO	TIME	VOICE1
001	00:00:00-00.00	AUTO
002	00:00:00-00.00	AUTO
NEW   ---   ---		

5. Move the cursor to “TIME” and specify the time at which you want the backing chorus to start with the TIME/VALUE dial.

00   00   1-0   00:00:00-00.00		
VTB:HARMONY SEQUENCE MAP		
NO	TIME	VOICE1
001	00:00:00-00.00	AUTO
002	00:00:00-00.00	AUTO
NEW   ---   DELETE		

### NOTE

You cannot change the time of the harmony event at the start of the song.

6. Move the cursor to “VOICE1” and specify the pitch for the first voice with the TIME/VALUE dial.

### NOTE:

#### OFF

The first voice is not played after the specified point in the song.

#### AUTO

After the specified point in the song, the voice is played in accordance with the rhythm arrangement’s chord map.

#### C, C#, -A#, B

After the specified point in the song, the voice is played at the specified pitch.

7. Specify the settings for “VOICE2” and “VOICE3” in the same manner.

8. Press [F1] (NEW).

Another new harmony event is inserted.

9. Move the cursor to “TIME” and specify the time at which you want the backing chorus to end with the TIME/VALUE dial.

00   00   1-0   00:00:00-00.00		
VTB:HARMONY SEQUENCE MAP		
NO	TIME	VOICE1
001	00:00:00-00.00	AUTO
002	00:10:00-00.00	C
003	00:20:00-00.00	AUTO
NEW   ---   DELETE		

10. Move the cursor to “VOICE1” and specify “OFF.”

11. Specify “OFF” for “VOICE2” and “VOICE3” in the same manner.

12. Have the Recorder play the song from the beginning.

The backing chorus is first added at the point in the song specified in Step 5, then ends at the point specified in Step 9.

13. To delete any unnecessary harmony events, move the cursor to the event and press [F3] (DELETE).

The harmony event is deleted.

You cannot delete the harmony event at the beginning of the song. If this harmony event is unneeded, rather than deleting it, just set the function to “OFF.”

14. Repeat Steps 4–13 as needed to specify the backing chorus.

15. To save the harmony events you have input, save the song (p. 70).




You can only save a Harmony Event Map to a single song. Even if you switch the patch with the harmony sequence, the Harmony Event Map remains unchanged.

## Saving Vocal Tool Box settings (Patch Write)

Modified Vocal Tool Box settings are saved by writing them together under a new patch name.

1. Press [F1] (NAME) on the Pitch Correction or Harmony Sequence screen.


The patch name setting screen will appear.

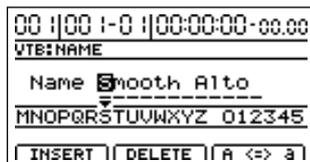

2. Move the cursor to the characters in the patch name you want to change and select new characters using the TIME/VALUE dial.




3. Press [EXIT/NO] twice to return to the Vocal Tool Box Patch Selection screen.

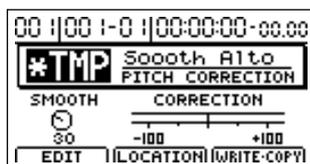


4. Press [F3] (WRITE•COPY).

The Vocal Tool Box Write/Copy screen will appear.

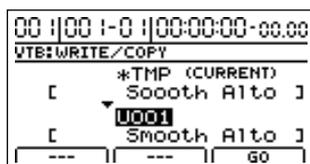

5. Move the cursor to the destination patch number and select a destination patch using the TIME/VALUE dial.

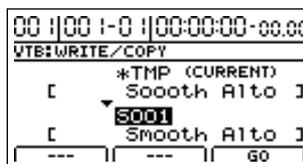

### NOTE

This field should be left unchanged at “\*TMP(CURRENT).”

If a different message is displayed, however, move the cursor to this field and turn the TIME/VALUE dial counterclockwise to restore “\*TMP(CURRENT).”

6. Press [F3] (GO).

The Vocal Tool Box patch will be written. When this process has been completed, the Vocal Tool Box patch screen will be displayed once again.


7. Press [EXIT/NO] several times to return to the top screen.

## Copying Vocal Tool Box settings (Patch Copy)


The BR-1200CD's function for copying patches proves extremely useful when you want to create a number of effect patches with slightly different settings.

1. Press [F3] (WRITE•COPY) on the Pitch Correction or Harmony Sequence screen.

The Vocal Tool Box Write/Copy screen will appear.

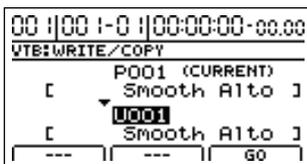


2. Move the cursor to the copy-source patch number and select the patch to be copied using the TIME/VALUE dial.

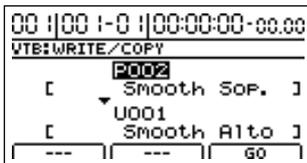

### NOTE

Although “\*TMP(CURRENT)” may be displayed in this field when you call up the Patch Write/Copy screen after modifying patch settings, this may be freely changed.

3. Move the cursor to the destination patch number and select a destination patch using the TIME/VALUE dial.

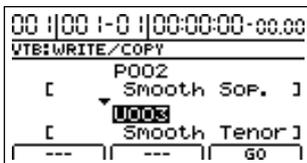

4. Press [F3] (GO).  
The patch will be copied. When the message “Complete!” appears, it indicates that copying has been completed.
5. Press [EXIT/NO] several times to return to the top screen.

### NOTE

It is important to remember that the destination patch will be fully overwritten by the patch specified with copy-source patch.

# Recreating the characteristics of different monitor speakers (Speaker Modeling)

In order to allow you to recreate the characteristics of various different types of monitor speakers, the BR-1200CD provides a function known as Speaker Modeling. Using this function, you can hear how your songs will sound on different monitoring systems; furthermore, by comparing these different sounds as you search for the best balance, you can achieve mix-downs of a much higher quality.

## MEMO

Speaker Modeling comprises the following effect blocks.



### SP Modeling

### Bass Cut Filter

### Low Freq Trimmer

### High Freq Trimmer

### Limiter

The most important of these is SP MODELING, and it is this effect block that actually performs the modeling of speaker characteristics.

The BASS CUT FILTER block is used to filter out any unwanted low-band signals resulting from, for example, pop noise produced by the vocalist in an otherwise fine performance.

The LOW FREQUENCY TRIMMER and HIGH FREQUENCY TRIMMER effect blocks are used to adjust the tone of the low and middle frequency bands, respectively.

Finally, the LIMITER block prevents distortion by suppressing any rise in volume beyond a specified level.

## MEMO

### Connecting external monitor speakers


To obtain the best results using the BR-1200CD's Speaker Modeling feature, it is recommended that you used digitally connected Roland CM-30 Cube Monitor.

In case you own the DS-30A/50A/90A, you can get best possible performance by the DS-30A/50A/90A.


If you are using any other type of monitor speakers, please note that speaker modeling may not produce the desired result.

\* The DS-30A/50A/90A is out of production.


The CM-30 monitor speakers are to be connected to the BR-1200CD as shown below.

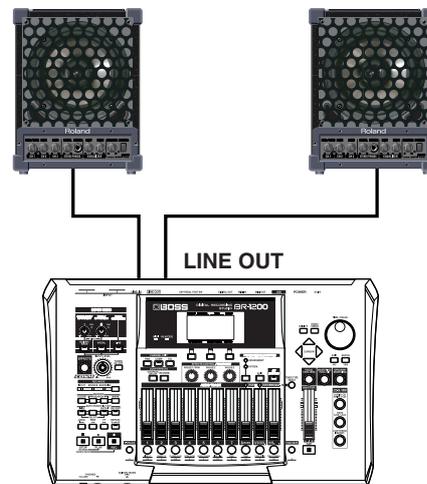

The DS-30A/50A/90A monitor speakers are to be connected to the BR-1200CD as shown below.

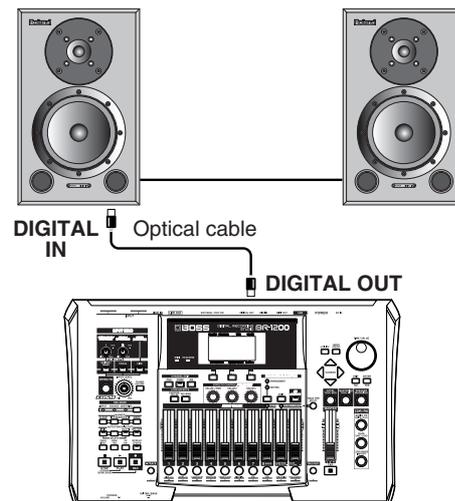

Monitor speakers other than the above are to be connected as follows.

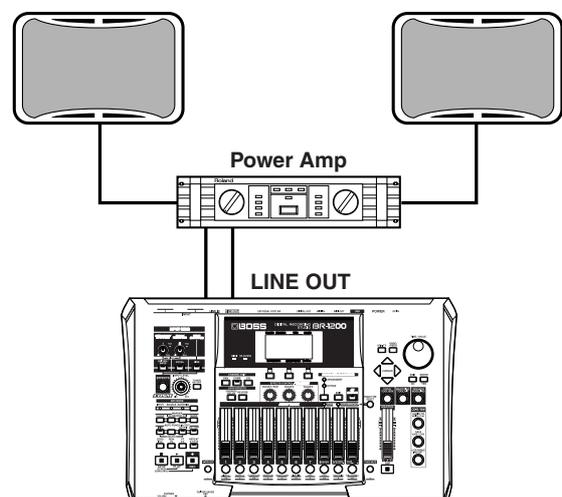

## Speaker Modeling patches

At the time of purchase, the BR-1200CD's Speaker Modeling already contains 44 preset patches that cannot be overwritten (P001 through P044), 44 user patches that can be used in any song (U001 through U044), and 44 song patches that are stored together with a specific song (S001 through S044). User patches and song patches can be overwritten.

For each monitor speaker, following patches are ready in preset bank.


Please use proper patch in accordance with your monitor speaker.

P001-011	DS-90A
P012-022	DS-50A
P023-033	DS-30A
P034-044	CM-30

## Using Speaker Modeling

1. Press [SPEAKER MODELING].

This button will light up and the Speaker Modeling patch screen will appear.

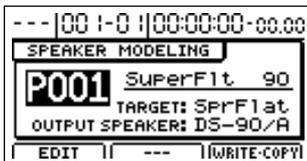

\* Note that this action will cause insert effects, the Vocal Tool Box, the Mastering Tool Kit, and the track compressor to be turned off automatically.

2. Move the cursor to the patch number field and select a patch using the TIME/VALUE dial.

The BR-1200CD's output sound will now be modeled based on the selected speaker.



"Speaker Modeling Patch List" (p. 330)

## Turning off Speaker Modeling

Use the following procedure if you want to temporarily turn off Speaker Modeling.

1. Press [SPEAKER MODELING] on the Speaker Modeling patch screen.

Speaker Modeling will be turned off.


Press [SPEAKER MODELING] once again to turn Speaker Modeling back on.

## Modifying Speaker Modeling settings

Each of the effect blocks that make up the Speaker Modeling feature can be fine-tuned by making the appropriate settings. Before starting, however, you will need to select the Speaker Modeling patch that you would like to change.

1. Press [F1] (EDIT) on the Speaker Modeling patch screen.


The Speaker Modeling edit screen will appear.

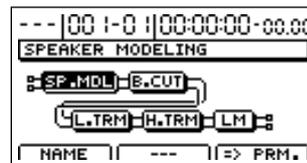

If the TIME/VALUE dial is turned counterclockwise at this time, the solid lines indicating the effect block at the current cursor position will switch to dotted lines, indicating that the corresponding effect has been turned off. Similarly, if the TIME/VALUE dial is turned clockwise, the dotted lines will switch back to solid lines, indicating that the effect has been turned on.


2. Move the cursor to the effect block you want to edit and press [F3] (=PRM.).

The Parameter screen will appear.

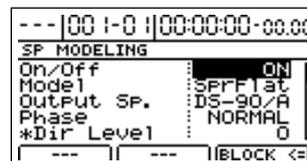

For more detailed information regarding settings, refer to "Speaker Modeling parameter functions" (p. 313).

3. Move the cursor to the parameter that you want to change and select a new value using the TIME/VALUE dial.

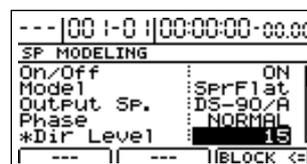


4. If you also want to edit other effect blocks, press [F3] (BLOCK<=>) to return to the Speaker Modeling edit screen, and then repeat Steps 2 and 3.

Note that you can press CURSOR [◀] or [▶] to jump to the parameter setting screen for the next effect block to the left or right.

5. Press [F3] (BLOCK<=>) to return to the Speaker Modeling edit screen.

- Press [EXIT/NO] to return to the Speaker Modeling patch screen.

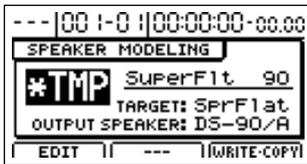

In order to indicate that the Speaker Modeling settings have been temporarily changed, the patch number will be displayed as “\*TMP.” If you select a different patch, load a different song, or turn off the BR-1200CD while “\*TMP” is being displayed, all of the patch settings will return to their original condition. As it may not be possible to restore these settings, due caution should be observed.

To save your modified settings, carry out the procedure described below in “Saving Speaker Modeling settings.”


## Saving Speaker Modeling settings

Modified Speaker Modeling settings are saved by writing them together under a new patch name.

- Press [F1] (NAME) on the Speaker Modeling edit screen.



- Move the cursor to the characters in the patch name you want to change and select new characters using the TIME/VALUE dial.

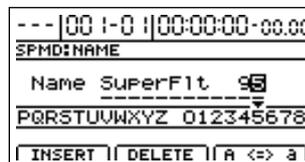


- Press [EXIT/NO] twice to return to the Speaker Modeling patch screen.

- Press [F3] (WRITE•COPY).

The Speaker Modeling Patch Write/Copy screen will appear.



- Move the cursor to the destination patch number and select a destination patch using the TIME/VALUE dial.

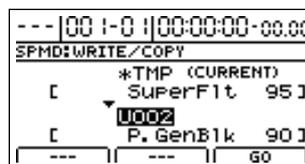

### NOTE

This field should be left unchanged at “\*TMP(CURRENT).” If a different message is displayed, however, move the cursor to this field and turn the TIME/VALUE dial counterclockwise to restore “\*TMP(CURRENT).”

- Press [F3] (GO).

The Speaker Modeling patch will be written. When the message “Complete!” appears, it indicates that writing has been completed.

- Press [EXIT/NO] several times to return to the top screen.

## Copying Speaker Modeling settings


The BR-1200CD's function for copying patches proves extremely useful when you want to create a number of effect patches with slightly different settings.

1. Press [F1] (WRITE•COPY) on the Speaker Modeling edit screen.

The Speaker Modeling Patch Write/Copy screen will appear.



2. Move the cursor to the copy-source patch number and select the patch to be copied using the TIME/VALUE dial.

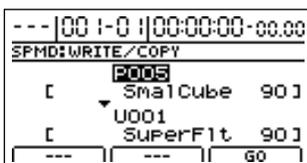


Note that you can also move the cursor to the bank field and turn the TIME/VALUE dial to select a new patch number to be copied.

### NOTE

Although “\*TMP(CURRENT)” may be displayed in this field when you call up the Patch Write/Copy screen after modifying patch settings, this may be freely changed.

3. Move the cursor to the destination patch number and select a destination patch using the TIME/VALUE dial.

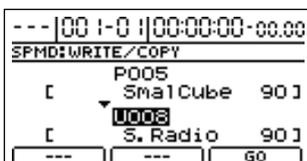

Note that you can also turn the TIME/VALUE dial to select a new destination patch number.

4. Press [F3] (GO).

The patch will be copied. When the message “Complete!” appears, it indicates that copying has been completed.

5. Press [EXIT/NO] several times to return to the top screen.

### NOTE

It is important to remember that the destination patch will be fully overwritten by the patch specified by copy-source patch number. As it will not be possible to restore these, care should be taken to insure that important patches are not accidentally overwritten in this way.

# Mastering

When creating a CD, it is crucial that the overall volume of the song be reduced in order to allow its loudest parts to be recorded without any degradation of sound quality. However, this reduction in volume can often result in CDs that lack power and punch.

In addition, since our ears are not as sensitive to sound in the lower range of frequencies, it may be difficult to hear these sounds even if the level meter indicates maximum volume, and this factor also hinders the production of powerful-sounding CDs.

The Mastering Tool Kit contained within the BR-1200CD provides a means of eliminating this type of problem so that you can easily create great-sounding CDs. When you use this Mastering Tool Kit, you will be able to smooth out volume fluctuations in your songs and balance the sound in the lower range of frequencies. It is highly recommended, therefore, that you always use the Mastering Tool Kit to master your songs before creating audio CDs.

## MEMO

Audio CDs can be created without using the Mastering Tool Kit, and you can choose whether or not to use it.

## Before using the Mastering Tool Kit

At the time of purchase, the BR-1200CD's Mastering Tool Kit already contains 19 preset patches (P 001 through P019) that cannot be overwritten, 19 user patches (U001 through U019) that can be used in any song, and 19 song patches (S001 through S019) that are stored together with a specific song. User patches and song patches can be overwritten.

## MEMO

The Mastering Tool Kit can only be used with Track 11/12. If you have made recordings on tracks 1 through 8 and 9/10, you should first of all mix these tracks down to Track 11/12 as described in "Mixing audio from various tracks onto a stereo track (Bounce)" (p. 82).

## Selecting the Mastering Tool Kit

To use the Mastering Tool Kit, you will need to set REC MODE to MASTERING.

1. Press [REC MODE] several times until the **MASTERING** indicator lights up.

The Mastering Mode top screen will appear.



[MASTERING TOOL KIT] will also light up at this time, indicating that the Mastering Tool Kit has been applied to Track 11/12.

2. Press [MASTERING TOOL KIT].

The Mastering Tool Kit patch screen will appear.



3. Select a Mastering Tool Kit patch using the TIME/VALUE dial.

Start playback on the BR-1200CD, and select the patch that gives the best sound for your song.



"Mastering Tool Kit Patch List" (p. 330)

## MEMO

For more information regarding the modification of Mastering Tool Kit settings, refer to "Modifying Mastering Tool Kit settings (Edit)" (p. 149).

## Adjusting the Mastering Tool Kit Effects and Volume

Although you can do your mastering just by selecting patches, you can adjust effects with more detail using the VALUE 1–3 knobs.

Moreover, adjustment of the volume in mastering is important in ensuring that music CDs are burned with the proper volume levels.

1. Press [PLAY], and while playing back Track 11/12, adjust the Track 11/12 fader until the level meter generally fluctuates just under the full level. The volume adjusted here affects the sound quality and the amount of effects applied in Mastering Tool Kit.

Pegging the level meter can cause the sound to distort, while setting the level too low may dilute the sound of the Mastering Tool Kit's effects. Use your ears as well when adjusting the volume to achieve the sound you want while confirming there is no distortion.

2. Adjust the VALUE 1–3 knobs while playing back Track 11/12 to get the sound you want.



### VALUE 1 Knob: DYNAMICS

This adjusts the difference between the high and low volume levels during the performance. The range in volume decreases as the knob is turned to the right (clockwise). Although this is convenient for achieving an overall volume level, it results in a loss of some of the natural dynamics of music.

The range in volume increases as the knob is turned to the left (counterclockwise). Although this results in a loss of the overall volume level, it provides a natural dynamic range that is close to that of the actual performance.

Setting this to the center position maintains the patch's original effect.

### VALUE 2 Knob: TONE

Turning this knob to the right boosts the low-frequency and high-frequency ranges.

Turning this knob to the left produces a more subdued tone whereby the low-frequency and high-frequency ranges are not emphasized.

Setting this to the center position maintains the patch's original effect.

### VALUE 3 Knob: NATURALITY

Turning this knob to the right causes the Mastering Tool Kit to be applied more slowly for a more natural effect. Since sudden peaks in volume are played back as is, this condition makes it more difficult to achieve a good overall volume level.

When the knob is turned to the left, the Mastering Tool Kit is applied more rapidly in response to sudden volume peaks. However, this negatively impacts the naturalness of the sound.

Setting this to the center position maintains the patch's original effect.

#### NOTE

The VALUE 1–3 Knob settings are not saved to the patches, but rather are applied to all patches.

3. Adjust the MASTER fader until the MIX L/R level meter fluctuates just under the full level.

The volume adjusted here determines the volume level for mastering. This becomes the volume used in CDs created afterwards.

#### NOTE

The sound may be distorted depending on your setting. Use your ears as well when adjusting the VALUE 1–3 knobs to achieve the sound you want while confirming there is no distortion.

## Mastering

1. Move the current position back to the beginning of the song.
2. Press [EXIT/NO] to return to the Mastering Mode top screen.



3. Use [CURSOR] and the TIME/VALUE dial to choose the V-Tracks to be used as the source and destination of mastering.



4. Press [REC].  
[REC] will turn red and start to flash, indicating that the BR-1200CD is now ready for recording.
5. Press [PLAY].  
Both [PLAY] and [REC] will light up and mastering will begin.
6. When you reach the end of the song, press [STOP].  
Both [PLAY] and [REC] will turn off and mastering will stop.  
When mastering has been completed, the current V-Track used as source will automatically switch to the V-Track that you chose as the destination for mastering. In addition, the BR-1200CD will also turn off the Mastering Tool Kit (the [MASTERING TOOL KIT] indicator goes out) to prevent the mastered track from passing through the kit a second time.
7. Start playback from the beginning of the song and listen to the mastered track.  
If you are not happy with the results of mastering, press [UNDO/REDO] to cancel the recording that you have just made. ("Undo" (p. 81))
8. If you wish to store the mastered track, save the current song (p. 70).

### NOTE


If you turn off the BR-1200CD without saving the current song, the mastered track will be lost.

### MEMO

The V-Track for Track 11/12 that was most recently used for mastering is set as the final mastering track. When you subsequently use Disc At Once (p. 220) to create an audio CD, the BR-1200CD will give priority to the selection of final mastering track for songs that you want to write to the CD. For more detailed information regarding final mastering track, refer to "Changing the Final Mastering Track" (p. 80).

## Modifying Mastering Tool Kit settings (Edit)

The Mastering Tool Kit comprises the following effect blocks.

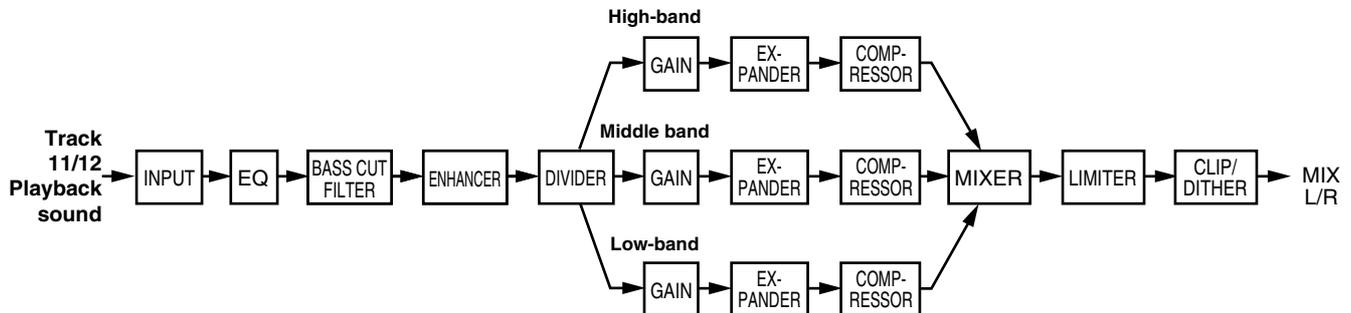

Of these, the effect block that plays the most important role is the three-band compressor. Broadly speaking, the frequencies in a musical performance can be separated into the following three bands or regions:

- The low-band, which contains the sounds of the kick drum, bass guitar, and other instruments that provide the basic song rhythm.
- The middle band, which contains the sounds of the vocals, and the lead guitars and other instruments that play melodies.
- The high-band, which contains the sounds of the hi-hats, cymbals, and the like.

In order to do what is required of them, instruments must be played with varying rhythms and volumes. All of these different performances are combined to produce the music played by a band (or ensemble).

If a compressor were to be applied over the complete frequency range of such a group performance in order to keep its volume within the limits suitable for burning to an audio CD, the natural-sounding nature of some of the performances could be impaired. For example, the volume of the kick drum could cause the compressor to modify the volume of melodic instruments, or the volume of the lead guitar could cause the compressor to modify the volume of the bass guitar. By dividing the overall performance into three frequency bands and using a different compressor with each band, volume peaks can be suppressed without making the performances sound processed or unnatural. In addition to this type of three-band compressor, the BR-1200CD's Mastering Tool Kit also features a number of other effect blocks that will come in handy when you are adjusting the volume and presence of your songs.


## Editing patch settings

Each of the effect blocks that make up the Mastering Tool Kit can be fine-tuned by making the appropriate settings.

Before starting, however, you will need to select the Mastering Tool Kit patch whose settings you would like to change.

1. Press [F2] (EDIT) on the Mastering Tool Kit patch screen.

The Mastering Tool Kit edit screen will appear.

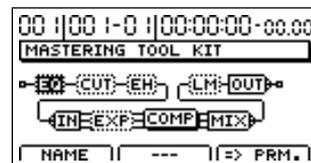

2. Move the cursor to the effect block you want to edit and press [F3] (= >PRM.).

The Mastering Tool Kit parameter screen will appear.



For more detailed information regarding settings, refer to "Mastering Tool Kit parameter functions" (p. 315).

3. Move the cursor to the parameter that you want to change and select a new value using the TIME/VALUE dial.
4. If you also want to edit other effect blocks, press [F3] (BLOCK=>) to return to the Mastering Tool Kit edit screen, and then repeat Steps 2 and 3.

Note that you can press CURSOR [ < ] or [ > ] to jump to the parameter setting screen for the next effect block to the left or right.

5. Press [F3] (BLOCK<=) to return to the Mastering Tool Kit edit screen.
6. Press [EXIT/NO] to return to the Mastering tool Kit Patch screen.



In order to indicate that the Mastering Tool Kit settings have been temporarily changed, the patch number will be displayed as "TMP." If you select a different patch, load a different song, or turn off the BR-1200CD while "\*TMP" is being displayed, all of the patch settings will return to their original condition. As it may not be possible to restore these settings, due caution should be observed.

To save your modified settings, carry out the procedure described below in "Saving Mastering Tool Kit settings."

## Saving Mastering Tool Kit settings

Modified effect settings are saved by writing them together under a new patch name.

1. Press [F1] (NAME) on the Mastering Tool Kit edit screen.




2. Move the cursor to the characters in the patch name you want to change and select new characters using the TIME/VALUE dial.



3. Press [EXIT/NO] twice to return to the Mastering Tool Kit edit screen.
4. Press [F3] (WRITE•COPY).

The Mastering Tool Kit Patch Write/Copy screen will appear.

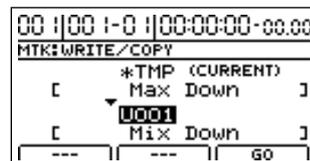

5. If you want to change the write destination, select a destination patch with the TIME/VALUE dial.

### NOTE

This field should be left unchanged at "\*TMP(CURRENT)." If a different message is displayed, however, move the cursor to this field and turn the TIME/VALUE dial counterclockwise to restore "\*TMP(CURRENT)."

6. Press [F3] (GO).

The Mastering Tool Kit patch will be written. When the message "Complete!" appears, it indicates that writing has been completed.


7. Press [EXIT/NO] several times to return to the top screen.

## Copying Mastering Tool Kit settings

The BR-1200CD's function for copying patches proves extremely useful when you want to create a number of effect patches with slightly different settings.

1. Press [F3] (WRITE•COPY) on the Mastering Tool Kit edit screen.

The Mastering Tool Kit Patch Write/Copy screen will appear.

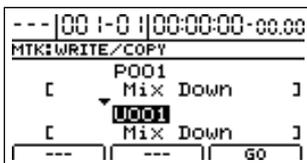

2. Move the cursor to the copy-source patch number and select the patch to be copied using the TIME/VALUE dial.



### NOTE

Although “\*TMP(CURRENT)” may be displayed in this field when you call up the Patch Write/Copy screen after modifying patch settings, this may be freely changed.

3. Move the cursor to the destination patch number and select a destination patch using the TIME/VALUE dial.



4. Press [F3] (GO).

The patch will be copied.

When the message “Complete!” appears, it indicates that copying has been completed.

5. Press [EXIT/NO] several times to return to the top screen.

### NOTE

It is important to remember that the destination patch will be fully overwritten by the patch specified by copy-source patch. As it will not be possible to restore these, care should be taken to insure that important patches are not accidentally overwritten in this way.

## Using Auto Fade In/Out

The term Fade-In is used to describe the way in which the volume is gradually raised from silence to the standard level at the beginning of a song. The opposite effect, where the volume is gradually reduced to silence at the end of a song, is referred to as a Fade-Out. Although you can use the Master fader to fade in or fade out manually, an Auto Fade In/Out function is available in Mastering mode so that these effects can be reproduced automatically.

### NOTE

The Auto Fade In/Out function can only be used in Mastering mode. In addition, this can be used only when the Mastering Tool Kit is ON (FX: ON is displayed).

### MEMO

Settings made for the Auto Fade In/Out function are shared by all of the Mastering Tool Kit's patches and are stored together with the corresponding song.

## Performing automatic fade-in (Auto Fade In)

1. Press [MASTERING TOOL KIT].


The Mastering Tool Kit patch screen will appear.



2. Move the cursor to “AUTO FADE IN” and select “ON” with the TIME/VALUE dial.

3. Press [F1] (AT.FADE).

The Auto Fade In setting screen will appear.

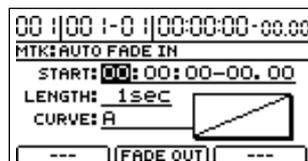

4. Move the cursor to the setting you want to change and select a new value using the TIME/VALUE dial.

### START:

This parameter sets the start time for fade in.

**NOTE**

When the current position is in front of the START point, you will not be able to hear the BR-1200CD's playback as the volume will be set to zero. The volume will start to increase little by little when the current position reaches the START point.

**LENGTH:**

The parameter sets the time (in seconds) from the start of fade-in until the standard volume is reached.

**CURVE:**


This parameter sets the shape of the volume increase curve during fade-in.

- A The volume will be perceived as increasing at a steady rate.
- B The volume will be perceived initially as increasing at a faster rate, and this rate will level off as the fade-in progresses.

5. Press [EXIT/NO] to return to the Mastering Tool Kit patch screen.
6. Move the current position to before the START point and begin playback.  
When the current position reaches the START point, the fade-in will begin.

## Performing automatic fade-out (Auto Fade Out)

1. On the Mastering Tool Kit patch screen, move the cursor to OUT, and select "ON" with the TIME/VALUE dial.
2. Press [F1] (AT.FADE).  
The Auto Fade In setting screen will appear.
3. Press [F2] (FADE OUT).  
The Auto Fade Out setting screen will appear.

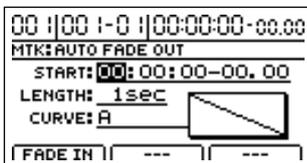

4. Move the cursor to the setting you want to change and select a new value using the TIME/VALUE dial.

**START:**

This parameter sets the start time for fade out.

**LENGTH:**

The parameter sets the time (in seconds) from the start of fade-out until the volume reaches zero.

**NOTE**

- If the end point of the song is positioned before the point corresponding to START + LENGTH, the song will end abruptly mid-way through fade-out. Adjust the START and LENGTH settings to ensure that the volume smoothly reduces to zero before the end of the song.
- When the current position is after the point corresponding to START + LENGTH, you will not be able to hear the BR-1200CD's playback as the volume will be set to zero.

**CURVE:**

This parameter sets the shape of the volume reduction curve during fade-out.

- A The volume will be perceived as being reduced at a steady rate.
- B The volume will be perceived initially as dropping at a slower rate, and this rate will increase as the fade-out progresses.

5. Press [EXIT/NO] to return to the Mastering Tool Kit patch screen.
6. Move the current position to before the START point and begin playback.  
When the current position reaches the START point, the fade-out will begin.

**NOTE**

If you wish to store the Auto Fade In/Out settings, save the current song (p. 70). Unless the song is saved, any new settings will be lost when the power is turned off or a new song is loaded.

# **Section 4**

## **Using Rhythm**

# Makeup of Drum/Bass/Loop Phrase

The BR-1200CD's programmable rhythm section comprises tracks for Drum Patterns, Bass Patterns, and Loop Phrases. When used, you will be able to have your favorite rhythms automatically played over and over to provide a convenient guide for recording and practicing. In addition, you can arrange different rhythm performances for the intro, the verse, the chorus, and other sections in a sequence that matches your song, and this makes it much easier to produce great-sounding demos (Rhythm Arrangement, p. 156).

This chapter will provide a description of Drum Patterns, Bass Patterns, and Loop Phrases. In addition, rhythm arrangements will also be described.

## Drums

---

On the BR-1200CD, tracks 9/10 are designated as the drum tracks, and can be used to automatically play drum parts. By selecting realistic drums sounds from the internal PCM drum samples and by setting a suitable tempo, you can have the BR-1200CD automatically play drum parts that are perfect for making demo songs.

Drum tracks usually contain a variety of percussion instrument sounds, such as kick drums, snares, hi-hats, etc. The BR-1200CD features a broad variety of these sounds, which are organized into sets called "drum kits." There are nine drum kits in all on the BR-1200CD, and these reflect a wide range of different musical styles.

Furthermore, drum tracks can also be made to automatically play basic drum performances of one or several measures in a repetitive fashion.

At the time of purchase, the BR-1200CD contains 600 preset drum patterns, which cannot be overwritten. In addition, the BR-1200CD can also store 999 user drum patterns, which can be used in any song, and 999 song drum patterns, which are stored together with a specific song. User drum patches and song drum patches can be overwritten.

### MEMO

- For details on how drums are actually used, refer to "Using drums" (p. 157).
- Drums can only be used when Track 9/10 has been set up as a Drum & Loop Phrase track using its track type setting (p. 157).
- The same track is used as both the drum track and the Loop Phrase track. For more detailed information regarding Loop Phrase, refer to next page.
- Up to five individual drums sounds can be played simultaneously. If an attempt is made to play more than five such sounds at any one time, any previous sounds that are still being played will be silenced before new sounds are played.

## Bass

---

On the BR-1200CD, track 8 is designated as the bass track, and can be used to automatically play bass parts. By selecting realistic bass sounds from the internal PCM bass samples and by setting a suitable tempo, you can have the BR-1200CD automatically play bass parts that are perfect for making demo songs.

The BR-1200CD comes complete with twelve different bass guitar sounds including fingered, picked, and slap bass, thus allowing you to recreate a wide range of different musical styles and genres.

In addition, bass tracks can also be made to automatically play basic bass performances in a repetitive fashion. The data used to create these basic bass performances is known as a bass pattern.

At the time of purchase, the BR-1200CD contains 583 preset bass patterns, and these cannot be overwritten. In addition, the BR-1200CD can also store 999 user bass patterns that can be used in any song and 999 song bass patterns that are saved together with a specific song. User bass patterns and song bass patterns can be overwritten.

### MEMO

- For details on how bass are actually used, refer to "Using bass" (p. 171).
- Bass can only be used when Track 8 has been set up as a bass track using its track type setting (p. 171).
- The BR-1200CD uses mono bass sounds.
- Only one sound can be played simultaneously. If an attempt is made to play more than two such sounds at any one time, any previous sounds that are still being played will be silenced before new sound is played.


## Loop Phrases

One method often used when putting songs together involves the creation first of all of a section of basic audio data of one or two measures in length, and the basic song structure is then formed by repeating this section the required number of times. The term Loop Phrase is used to describe one of these sections of basic audio data.

The most appropriate Loop Phrases for your tunes can be selected, placed on the Loop Phrase track, and then played back as many times as you like.

You can also create your own original Loop Phrases using portions of recorded audio tracks or by importing audio data from commercially available sampling CDs and the like.

On the BR-1200CD, you can specify that Track 9/10 be the Loop Phrase track, then arrange the Loop Phrases sequentially in measure units on the track for performance.

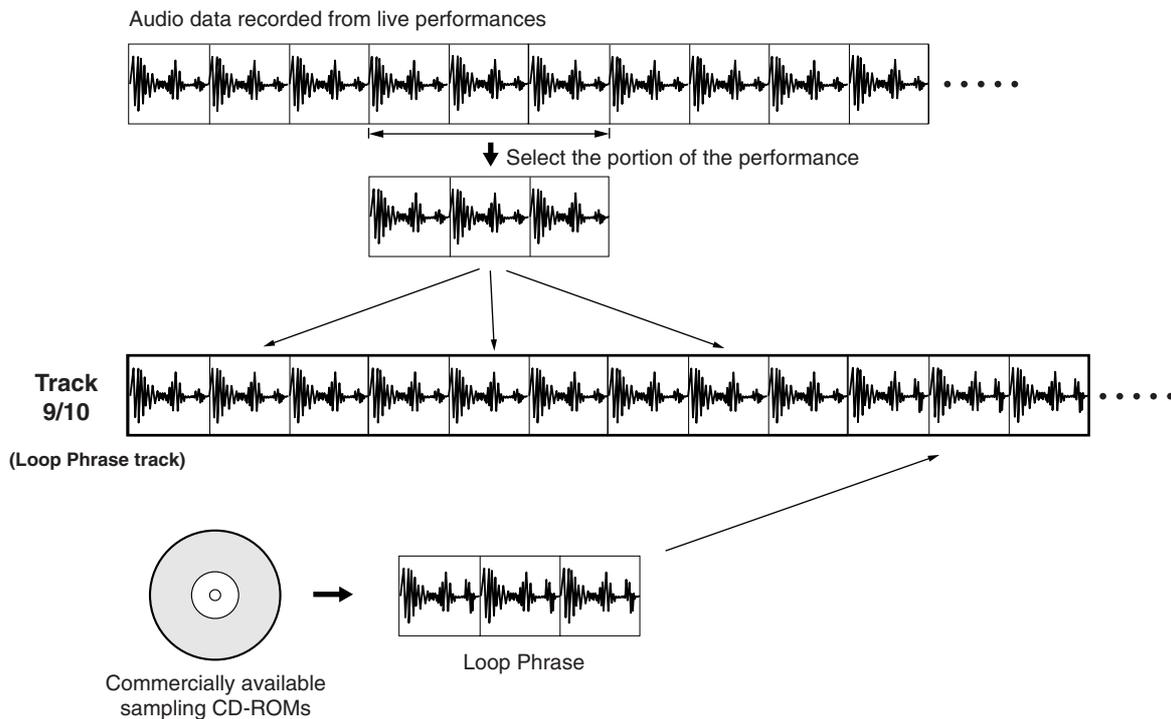

The BR-1200CD can store 400 user Loop Phrases (in banks A through H) for use in any song and 50 song Loop Phrases that are saved together with a specific song. User Loop Phrases and song Loop Phrases can be overwritten.

At the time of purchase, the BR-1200CD will contains 190 user Loop Phrases that are ready for immediate use.

**MEMO**

- For details on how Loop Phrases are actually used, refer to "Using Loop Phrases" (p. 185).
- Loop Phrases can only be used when Track 9/10 has been set up as a Loop Phrase track using its track type setting (p. 185).
- The same track is used as both the Loop Phrase track and the drum track.

**MEMO**


The Bass track and Drum/Loop Phrase track are used together with audio Track 8 and Track 9/10, respectively. The track type can be set independently for each track; for example, you can use just the Bass track, or use Track 9/10 as audio tracks.

# Rhythm arrangements

The drum, bass, and Loop Phrase elements described above can only repeat a single basic pattern; nevertheless, they can be extremely useful when practicing or putting together ideas for songs.

Once you have decided on the structure of your song, however, simple repeating patterns will begin to sound uninteresting, and you will probably want to use different patterns for sections such as the intro, verse, chorus, fill, and ending.

Luckily, the BR-1200CD's rhythm arrangement function makes this very easy to do. Using rhythm arrangements, you will be able to freely arrange a variety of different drum patterns, bass patterns, and Loop Phrases in units of one or more measures.

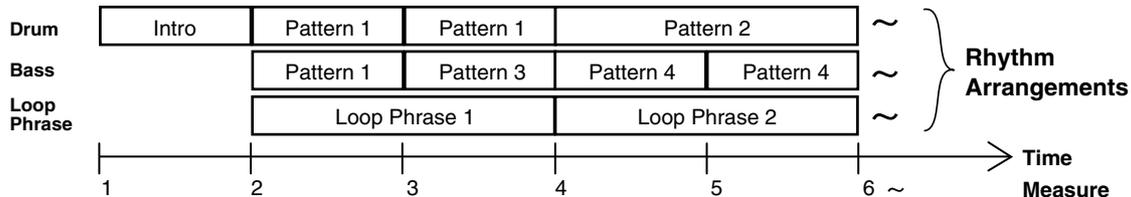

For example, you can prepare separate patterns for the intro, the verse, the chorus, the fill, and the ending, and these can then be arranged in the appropriate order for your song. In addition, a rhythm arrangement also lets you specify a chord progression for the bass pattern to play along with.

What's more, rhythm arrangements allow tempos to be set up on a measure-by-measure basis (Tempo Map), and beats can also be set up in the same way (Beat Map).

At the time of purchase, the BR-1200CD contains 100 preset rhythm arrangements, and these cannot be overwritten. In addition, it can also store 10 user rhythm arrangements that can be used in any song and 10 song rhythm arrangements that are saved together with a specific song. User rhythm arrangements and song rhythm arrangements can be overwritten.

## NOTE

Loop Phrases are not used in preset rhythm arrangements—in other words, these arrangements contain only drum patterns and bass patterns.

## Pattern mode and Arrangement mode

In order to allow patterns and rhythm arrangements to be worked on separately, the BR-1200CD provides two different modes for rhythm sessions—namely, Pattern mode and Arrangement mode.


To use rhythm arrangements, press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN], so the ARRANGEMENT indicator is lighted. With this, Arrangement mode is activated, and you will be able to use the BR-1200CD's rhythm arrangement feature. In this mode, patterns and Loop Phrases arranged to form a rhythm arrangement will provide accompaniment whenever you start playback.

If, on the other hand, you want to activate Pattern mode, press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN], so the PATTERN indicator is lighted. In this mode, only the currently selected drum pattern, bass pattern, and/or Loop Phrase will be played back, and this will be done repetitively.

# Using drums

## Setting the track type

To use drums, you must first of all set up Track 9/10 as a Drum & Loop Phrase track using its track type setting.

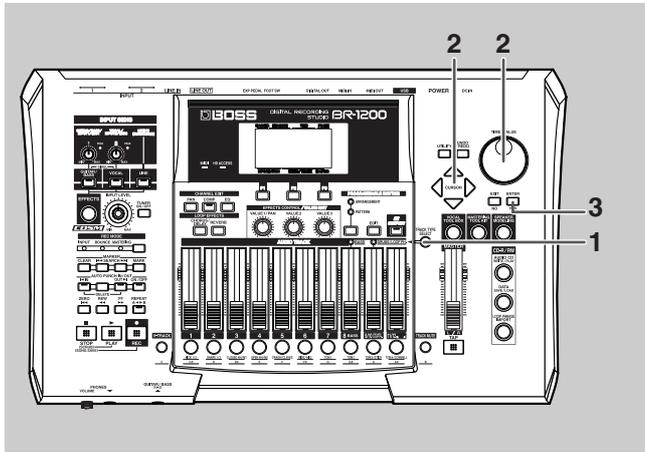

1. Press [TRACK TYPE SELECT].

The Track Type Select screen will appear.



2. Move the cursor to "TRACK 9/10" and select "DRUMS&LP" using the TIME/VALUE dial.



### AUDIO:

The track will be used for recorded audio.

### DRUMS&LP:

The track is used as a drum and Loop Phrase track.

### METRONOME:

The track is used as a metronome and Loop Phrase track.

3. Press [ENTER/YES].

The Track Type Select screen closes.

The DRUMS/LOOP PH. indicator from TRACK TYPE SELECT will light up to indicate that Track type has been set up for use as a Drum & Loop phrase track.

You will now be able to use drums.

4. If you wish to store the track type setting, save the current song (p. 70).

## Playing drum sounds

Simply changing the track type may not be sufficient to allow drums to be played. Use the following procedure in such cases.

1. Press the track button for Track 9/10 several times until it lights up.

Pressing the button repeatedly allows you to cycle through the available choices, which are: Flashing → On → Off.

### Off:

No drum and loop phrase sounds will be played.

### Flashing:

Drum and loop phrase sounds will be played only when the BR-1200CD is recording or performing playback.

### On:

Drum sounds will be played even when the BR-1200CD is stopped.

The sound of the Loop Phrase is played during recording and playback.

2. Raise the fader for Track 9/10 to a suitable level.

You will now be able to hear the drum sounds.


## Selecting a drum kit

Now that we can hear the drums, let's select a drum kit to work with.

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the PATTERN indicator is lighted. (Pattern mode)

2. Press PROGRAMMABLE RHYTHM [EDIT].

The Pattern Selection screen will appear.

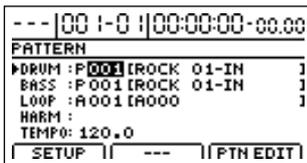

3. Press [F1] (SETUP).

The dialog for pattern setup will appear.



4. Move the cursor to "Drum" and select a new drum kit using the TIME/VALUE dial.

Press [PLAY]; the drum pattern is played.

### NOTE

Although playback may stop for a period of 2 to 3 seconds when the drum kit is changed, this is normal and is not the result of a malfunction.

5. When you have selected the drum kit you want to use, press [EXIT/NO].

The pattern Selection screen will appear once again.

6. If you wish to store the drum kit selection, save the current song (p. 70).

### NOTE


The drum kit selection is common to all drum patterns. It is not possible to store a different drum kit for each different pattern.

## Selecting drum patterns

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the PATTERN indicator is lighted. (Pattern mode)

2. Press PROGRAMMABLE RHYTHM [EDIT].

The Pattern Selection screen will appear.

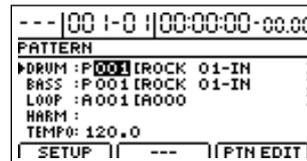

3. Move the cursor to the drum pattern field and select a pattern using the TIME/VALUE dial.

Playback of the newly selected drum pattern will start as soon as the previously selected drum pattern has ended.

4. When you have selected the drum pattern that you want to use, press [EXIT/NO] several times to return to the top screen.

5. If you wish to store the drum pattern selection, save the current song (p. 70).

### NOTE

The user drum patterns and song drum patterns contained in the BR-1200CD at the time of purchase are empty; you won't hear anything if you select one of them. If you want to hear drum sounds immediately after setting up the BR-1200CD for the first time, select a preset drum pattern.

## Changing the drum pattern tempo

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the PATTERN indicator is lighted. (Pattern mode)
2. Press PROGRAMMABLE RHYTHM [EDIT].  
The Pattern Selection screen will appear.

```

---|00 1-0 |00:00:00-00.00
PATTERN
▶DRUM : P 001 IROCK 01-IN  ]
BASS  : P 001 IROCK 01-IN  ]
LOOP  : A 001 IROCK 01-IN  ]
HARM  :
TEMPO : 120.0
[ SETUP ] | --- | [ PTH EDIT ]

```

3. Move the cursor to “TEMPO” and select a suitable tempo using the TIME/VALUE dial.

You will be able to hear how your new setting changes the playback tempo.

The tempo can be set anywhere within a range of 25.0 to 250.0 BPM. (Beats Per Minute—A value that indicates the tempo in terms of the number of quarter notes occurring in one minute.)

4. After you have set the tempo, press [EXIT/NO] several times to return to the top screen.
5. If you wish to store the pattern’s tempo, save the current song (p. 70).

### NOTE

The tempo is common to all drum patterns, bass patterns, and Loop Phrases.

## Setting the tempo using [TAP]

In addition to setting the tempo using [CURSOR] and the TIME/VALUE dial, you can also set it by tapping your finger on [TAP] at the desired tempo. (Tap Tempo)

This feature proves extremely useful when you want to match the playback tempo to that of an audio CD but don’t know the actual BPM value.

To set the tempo in this way, tap your finger on [TAP] four times with approximately the same interval between each tap. The tempo will be set based on the average tapping interval.

### NOTE

#### About the Drum Pattern Beat

Although every drum, bass, and Loop Phrase pattern has its own beat setting, there is also a universal beat setting that can be applied to all drum and bass patterns and Loop Phrases as a whole.

When drum, bass, and Loop Phrase patterns are played simultaneously in Pattern mode, they are not played according to any of their individual beat settings, but instead conform to one beat setting that is applied to them all.

For more detailed information, refer to “Setting the Universal Beat for Drums, Bass, and Loop Phrases” (p. 196).

# Creating drum patterns

If you cannot find a drum pattern that suits your song among the BR-1200CD's preset drum patterns, you can easily create an original pattern as described below.

Either one of the following two methods can be used to do this.

## ● Real-time recording

Real-time recording allows you to tap the track buttons in time with a metronome and to record the performance data produced. The drum pattern will be repeated over and over, with new performance data being constantly mixed into it. Furthermore, the quantize function can be used to fix any slight deviations in the timing of your performance.

## ● Step recording

When you use step recording, individual drum timings are displayed on a grid representing a single measure, and these timings can be edited at will. By allowing you to actually see the drum pattern, this method makes pattern recording a much simpler task.

### NOTE


- “\*TMP” appears for the drum pattern immediately after its data is recorded or edited. If you try to select a different drum pattern with the TIME/VALUE dial while the cursor is positioned above this, the cursor turns white. If you press [ENTER/YES] at this point, the cursor reverts to black, and the drum pattern number is confirmed. If you do not want to confirm it, press [EXIT/NO]; “\*TMP” is indicated again, and the drum pattern reverts to the state it was in immediately after editing. This allows you to avoid inadvertently erasing data you have edited.
- From now on, you cannot use the Undo function (p. 81) for creating or editing drum patterns. Please make sure to create or edit data with a special care.

## Preparing for recording


Before you use either real-time recording or step recording, you will need to select the drum pattern to be recorded.

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the PATTERN indicator is lighted. (Pattern mode)

2. Press PROGRAMMABLE RHYTHM [EDIT].  
The Pattern Selection screen will appear.

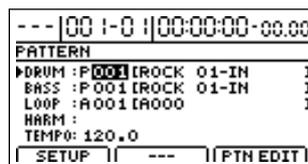

3. Move the cursor to “DRUM” and press [F3] (PTN EDIT).  
The Drum Pattern Edit screen will appear.

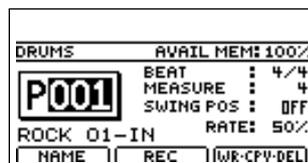

4. Move the cursor to “Pattern” and select the number of the drum pattern to be recorded using the TIME/VALUE dial.


If you press [PLAY] at this time, you will be able to hear the selected drum pattern.

### NOTE

The user drum patterns and song drum patterns contained in the BR-1200CD at the time of purchase are empty; you won't hear anything if you select one of them.

5. Use [CURSOR] and the TIME/VALUE dial to set the number of beats and measures in the drum pattern.

The display for the drum pattern will change to “\*TMP.”

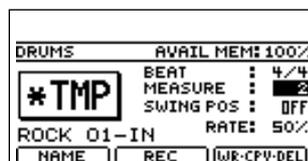

# Creating drum patterns using real-time recording

**MEMO**

When a MIDI keyboard is connected to the MIDI IN port, you will be able to use this keyboard to perform real-time recording. Note that there is no need to set a MIDI channel for the MIDI keyboard in such a case (p. 254).

1. After carrying out the steps described in “Preparing for recording,” press [F2] (REC).

The Pattern Recording screen will appear.



2. Press [F2] (REALTIME).

The Real-Time Recording standby screen will appear and the metronome will start.



3. Move the cursor to “BPM” and select a suitable tempo for recording using the TIME/VALUE dial.



Note that this only sets the tempo for recording—the drum pattern is not recorded at this tempo. (It is not possible to set a specific tempo for a drum pattern.)

If you tap your finger on [TAP] four or more times, the tempo will be set accordingly.

4. Move the cursor to “METRO” and set the metronome volume using the TIME/VALUE dial.
5. Press [PLAY].

Real-time recording will start after a one-measure countdown.



6. Use the track buttons to play the desired drum pattern and use the track faders to set the velocity (dynamics) of the sounds.

The relationship between track buttons and drum sounds is as follows.

Track button	Drum sound	Note number
[1]	Kick 1	C 2 (36)
[2]	Snare 1	D 2 (38)
[3]	Closed hi-hat	F#2 (42)
[4]	Open hi-hat	A#2 (46)
[5]	Crash cymbal	C#3 (49)
[6]	Ride cymbal	D#3 (51)
[7]	Tom 1	F 2 (41)
[8]	Tom 2	A 2 (45)
[9/10]	Tom 3	C 3 (48)
[11/12]	Tom 4	D 3 (50)
[V-TRACK]+[1]	Kick 2	B 1 (35)
[V-TRACK]+[2]	Snare 2	E 2 (40)
[V-TRACK]+[3]	Metronome (click)	A 1 (33)
[V-TRACK]+[4]	Metronome (bell)	A#1 (34)
[V-TRACK]+[5]	Claves	D#5 (75)
[V-TRACK]+[6]	High Q	D#1 (27)
[V-TRACK]+[9/10]	Stick	G 1 (31)
[V-TRACK]+[11/12]	Cow bell	G#3 (56)

7. If you want to erase an error in the recorded pattern, press [F3] (ERASE).




The message “ERASE:ON” will appear and drum erase mode will be activated. In this mode, hold down the track button corresponding to the drum sound you want to erase. Any of these drum sounds played in the pattern while you are pressing the track button will be erased.

When you have finished erasing drum sounds, press [F3] (ERASE) once again.


8. Press [STOP] at the point where you want to stop recording.  
The Pattern Recording screen will appear once again.
9. Press [EXIT/NO].  
The Drum Pattern Edit screen will appear once again.
10. Press [F3] (WR•CPY•DEL).

The Write screen for drum patterns will appear.

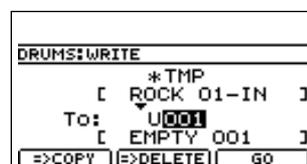

## Creating drum patterns

11. Move the cursor to "To:" Use the TIME/VALUE dial to select the drum pattern to which the data is to be saved.

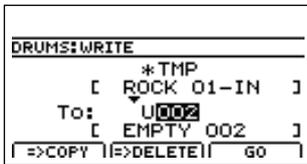

### NOTE

Only user drum patterns and song drum patterns may be selected for saving drum pattern data. You will not be able to select a preset drum pattern at this time.

12. Press [F3] (GO).

The drum pattern will be saved. When the message "Complete!" appears, it indicates that saving has been completed.

### NOTE

If you select a different drum pattern or load a new song without saving the current pattern, all of the newly recorded data will be lost. This data will also be lost if you turn off the BR-1200CD before saving.

## Practicing before recording (Rehearsal)

Whenever rehearsal is turned on, you will be able to play drum sounds without recording them, even if real-time recording is in progress. This feature comes in very handy when you want to practice playing a drum pattern.

1. Press [F2] (REHEARSAL) in real-time recording mode.

The message "REHEARSAL:ON" will appear and rehearsal mode will be activated.



In this mode, you can press a track button to play its drum sound without the corresponding data being recorded.

2. When you have finished rehearsing, press [F2] (REHEARSAL) once again to return to real-time recording mode.

The message "REHEARSAL:OFF" will appear and real-time mode will be reactivated. When you now press a track button to play a drum sound, the corresponding performance data will be recorded.

## Recording in perfect time (Quantize)

With real-time recording, the data generated by pressing a track button is recorded as is, and any imperfections in timing will be reflected in the performance data. If you don't want to hear these imperfections during playback, you can use the BR-1200CD's quantize feature to automatically move performance data to the nearest quarter note, eighth note, sixteenth note, etc., before the data is actually recorded.

1. Move the cursor to "QTZ" on the Real-Time Recording standby screen.



2. Select a quantization setting using the TIME/VALUE dial.



### QTZ:

- (♩) Moves drum sounds to the nearest quarter note.
- (♩₃) Moves drum sounds to the nearest quarter-note triplet.
- (♪) Moves drum sounds to the nearest eighth note.
- (♪₃) Moves drum sounds to the nearest eighth-note triplet.
- (♫) Moves drum sounds to the nearest sixteenth note.
- (♫₃) Moves drum sounds to the nearest sixteenth-note triplet.
- (♫₃₃) Moves drum sounds to the nearest thirty-second note.
- (♫₃₃₃) Moves drum sounds to the nearest thirty-second-note triplet.
- OFF Quantization will not be carried out, and performance data will be recorded as is.

3. Press [PLAY].


The BR-1200CD will start recording.

Even during the recording process, you can select a new quantization setting by changing the "QTZ" value using the TIME/VALUE dial.

# Creating drum patterns using step recording


1. After carrying out the steps described in "Preparing for recording," press [F2] (REC).

The Pattern Recording screen will appear.

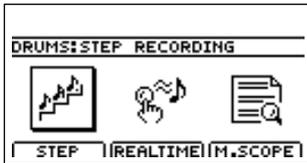

2. Press [F1] (STEP).

The Step Recording screen will appear.

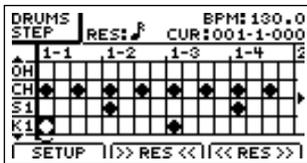


"CUR" indicates the current input position (in measures, beats, and clock units). This value will change whenever you move the input position using [CURSOR].

In addition, the abbreviated names of the various drum sounds are displayed on the left-hand side of this screen. The actual names corresponding to these abbreviations are as follows.

Drum name	Note number	Abbreviation
High tom	D 3 (50)	T4
Hi- Mid tom	C 3 (48)	T3
Mid tom	A 2 (45)	T2
Low tom	F 2 (41)	T1
Crash cymbal	C#3 (49)	CY
Ride cymbal	D#3 (51)	RC
Open hi-hat	A#2 (46)	OH
Closed hi-hat	F#2 (42)	CH
Snare 1	D 2 (38)	S1
Kick 1	C 2 (36)	K1
Kick 2	B 1 (35)	K2
Cow bell	G#3 (56)	CB
Claves	D#5 (75)	CL
Stick	G 1 (31)	ST
Snare 2	E 2 (40)	S2
High Q	D#1 (27)	HQ
Metronome (click)	A 1 (33)	M1
Metronome (bell)	A#1 (34)	M2

3. Press [F2] (>>RES<<) or [F3] (<<RES>>) as many times as necessary to change the step recording resolution.

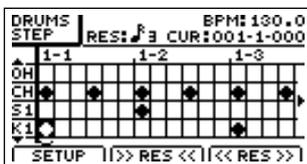

### [F2] (>>RES<<)

Each time this button is pressed, magnification of the step recording grid is decreased.

### [F3] (<<RES>>)


Each time this button is pressed, magnification of the step recording grid is increased.

As the degree of grid magnification changes, the resolution indicated by "RES" changes as follows.

### RES:

- ( ♩ ) Allows input in quarter-note units.
- ( ♩₃ ) Allows input in quarter-note triplet units.
- ( ♪ ) Allows input in eighth-note units.
- ( ♪₃ ) Allows input in eighth-note triplet units.
- ( ♫ ) Allows input in sixteenth-note units.
- ( ♫₃ ) Allows input in sixteenth-note triplet units.
- ( ♮ ) Allows input in thirty-second-note units.
- ( ♮₃ ) Allows input in thirty-second-note triplet units.
- OFF Allows input at the finest resolution—i.e., 96 clock units per quarter note.

4. Move the cursor to the position where a drum sound is to be input, and then use the TIME/VALUE dial to insert a "●" at that position.

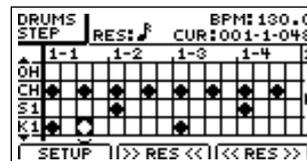

- ( ● ) The drum will be played at a high volume.
- ( ◐ ) The drum will be played at a moderately high volume.
- ( ◑ ) The drum will be played at a medium volume.
- ( ◒ ) The drum will be played at a moderately low volume.
- ( ◓ ) The drum will be played at a low volume.
- Nothing (empty) No drum sound will be played.

\* The drum sounds are alternately input or not input (blank) where the cursor is positioned each time you press [ENTER].

The following buttons can also be used to move the input position at this time.

- [ZERO] Moves the input position to the start of the song.
- [FF] Moves the input position forward by one resolution unit as set using "RES."
- [REW] Moves the input position backward by one resolution unit as set using "RES."

## Creating drum patterns

When working with long patterns or high resolutions, it is likely that all of the step recording data will not fit into a single screen. In such a case, you can press one of the CURSOR [◀] or [▶] to scroll the display to the left or the right.

In addition, if you want to program a drum not currently shown on the left of the screen, move the cursor up or down accordingly. This action will cause the step-recording grid to scroll up or down, displaying other drum sounds.

### NOTE

When working on drum patterns created using a method such as real-time recording, drum sounds may be positioned at a resolution greater than that set using "RES." In this type of situation, the "●" may appear to be superimposed in the display. In order to edit this type of data, you will first of all need to increase the resolution to match the drum sound's input position.

5. Press [PLAY] to check whether the pattern is as required.

[PLAY] will light up and the drum pattern will be played back.

Press [STOP] at the point where you want to stop playback.

6. To change the pattern tempo or input position or the test-use drum kit, press [F1] (SETUP).


The Step Recording Setup screen will appear.



7. Move the cursor to "Measure," then set the input position with the TIME/VALUE dial.



8. Move the cursor to "Tempo" and use the TIME/VALUE dial to select a suitable tempo for checking your pattern.

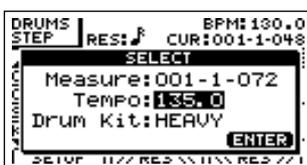

The tempo can be set anywhere within a range of 25.0 to 250.0 BPM. (Beats Per Minute—A value that indicates the tempo in terms of the number of quarter notes occurring in one minute.)

Note that the tempo set here is used only for checking that the drum pattern is as required. In other words, this tempo will not be saved with the drum pattern. (It is not possible to set a specific tempo for a drum pattern.)

9. Move the cursor to "Drum Kit" and select a new drum kit using the TIME/VALUE dial.



10. Press [ENTER/YES].

The Step Recording Setup screen will be closed and the original Step Recording screen will appear.


11. Press [EXIT/NO] to end step recording.

The Pattern Recording Selection screen will appear once again.




12. Press [EXIT/NO] once again.

The Drum Pattern Edit screen will appear once again.

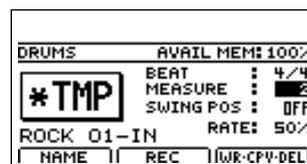

13. Press [F3] (WR•CPY•DEL).

The Write screen for drum patterns will appear.

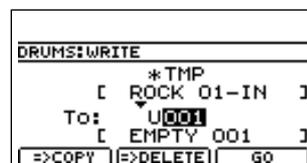

14. Use the TIME/VALUE dial to select the drum pattern to which the data is to be saved.

### NOTE

Only user drum patterns and song drum patterns may be selected for saving drum pattern data. You will not be able to select a preset drum pattern at this time.

15. Press [F3] (GO).

The drum pattern will be saved. When the message "Complete!" appears, it indicates that saving has been completed.

**NOTE**


If you select a different drum pattern or load a new song without saving the current pattern, all of the newly recorded data will be lost. This data will also be lost if you turn off the BR-1200CD before saving.

## Correcting drum patterns (Microscope)

Microscope is used to make detailed corrections to drum patterns. In specific terms, this function displays a drum pattern's performance data in list format so that any of the corresponding parameters can be corrected as required.


1. Press [F2] (REC) on the Drum Pattern Edit screen.

The Pattern Recording Selection screen will appear.

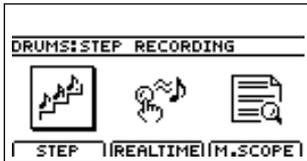


2. Press [F3] (M.SCOPE).

The Microscope screen will appear.

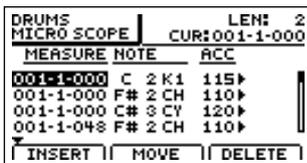


Performance data is displayed on this screen as follows.

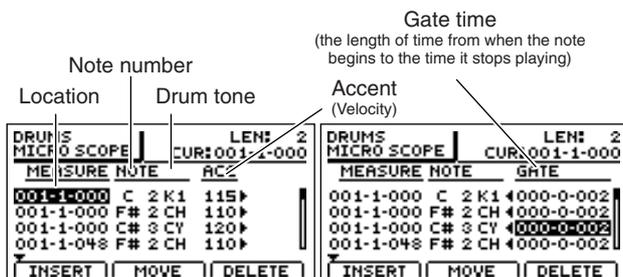

**MEMO**

- When the BR-1200CD's internal drum sounds are being played, the Gate Time setting is ignored and all sounds continue for the same amount of time; accordingly, the Gate Time setting may be left at "1."
- When the BR-1200CD is playing drum sounds by transmitting MIDI data to an external drum machine connected to the MIDI OUT port, it is important that the gate time be set to match the specifications described in the drum machine's manual.

3. Move the cursor to the item of performance data to be modified.

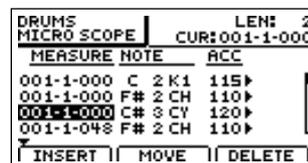


4. Modify the performance data as described below.

You can confirm the sound where the cursor is positioned by pressing [ENTER].

**To change a drum sound:**

1) Move the cursor to the drum sound field.

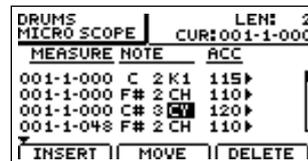


2) Select a new drum sound using the TIME/VALUE dial.

The performance data will be updated with this new drum sound setting.

**To change a drum's volume:**

1) Move the cursor to "ACC" field.

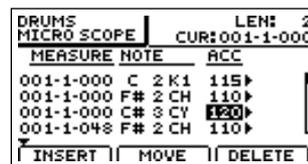


2) Set a new velocity value using the TIME/VALUE dial.

Larger velocity values produce higher volumes and vice versa.

**To change a drum's gate time:**

1) Move the cursor to the right edge of the screen; when you move it even further to the right, "GATE" appears.

## Creating drum patterns

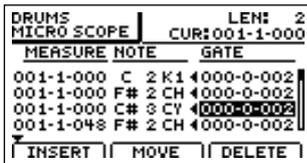


- Set a new value using the TIME/VALUE dial.  
The performance data will be updated with this new gate time setting.

### MEMO

In general, the gate time specifies the amount of time a sound continues to play. However, drum tones on the BR-1200CD continue to play for a fixed length of time, regardless of the gate time setting, making adjustment of the gate time unnecessary. Adjusting the gate time may be necessary when playing an external MIDI device that's been connected to the BR-1200CD.

### To move an item of performance data:

- Press [F2] (MOVE).

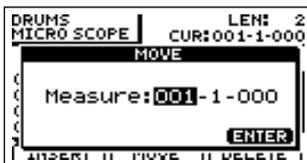

- Use the TIME/VALUE dial to select the time position to which the performance data is to be moved.
- Press [ENTER/YES].  
The performance data will be moved to this new position.

### To delete an item of performance data:

Pressing [F3] (DELETE) deletes the performance data at the position of the cursor.

### To insert a new item of performance data:

Pressing [F1] (INSERT) inserts the performance data at the current position.


- Press [EXIT/NO] to end Microscope editing.

The Pattern Recording Selection screen will appear once again.




- Press [EXIT/NO] once again.

The Drum Pattern Edit screen will appear once again.

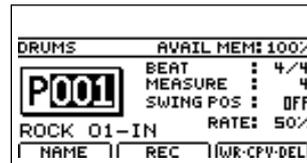

- Press [F3] (WR•CPY•DEL).

The Write screen for drum patterns will appear.

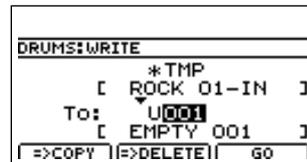

- Use the TIME/VALUE dial to select the drum pattern to which the data is to be saved.

### NOTE

Only user drum patterns and song drum patterns may be selected for saving drum pattern data. You will not be able to select a preset drum pattern at this time.

- Press [F3] (GO).

The drum pattern will be saved. When the message "Complete!" appears, it indicates that saving has been completed.


### NOTE

If you select a different drum pattern or load a new song without saving the current pattern, all of the corrected data will be lost. This data will also be lost if you turn off the BR-1200CD before saving.

## Changing the drum pattern's groove (Swing)

The Swing function allows you to produce a swing-type groove in your drum patterns by delaying the timing at which notes with weaker beats are played.


1. Move the cursor to "SWING POS" on the Drum Pattern Edit screen.

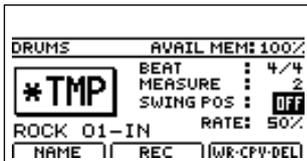

2. Select the type of note used to generate swing using the TIME/VALUE dial.


- OFF: No swing will be applied.
- (♪): Swing will be generated in units of eighth notes.
- (♩): Swing will be generated in units of sixteenth notes.

3. Move the cursor to "RATE" and set the desired amount of swing.

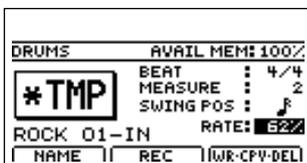

- 50%: No swing will be applied. Weaker beats will be played exactly halfway between the stronger beats.

- 51%–100%: Swing will be generated in accord with the specified value. A setting of 100% delays the weak beats by the greatest possible degree, placing them at almost exactly the same time position as the stronger beats that follow them.

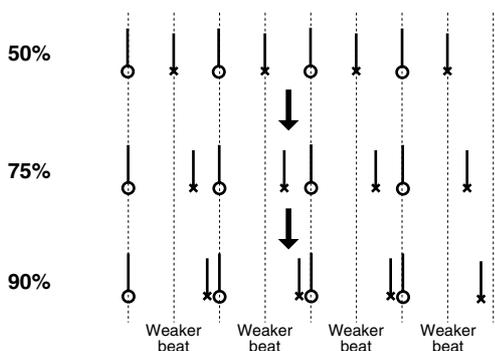


4. Press [PLAY] to check whether the degree of swing is correct for your song.

Playback of the drum pattern will start. Press [STOP] to end playback.

5. If you want to store the swing setting you have just made, press [F3] (WR•CPY•DEL).

The Write screen for drum patterns will appear.

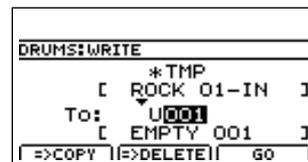

6. Use the TIME/VALUE dial to select the drum pattern to which the data is to be saved.

**NOTE**

Only user drum patterns and song drum patterns may be selected for saving drum pattern data. You will not be able to select a preset drum pattern at this time.

7. Press [F3] (GO).

The swing settings will be saved together with the drum pattern. When the message "Complete!" appears, it indicates that saving has been completed.

**NOTE**

If you select a different drum pattern or load a new song without saving the current pattern, your new swing setting will be lost. This setting will also be lost if you turn off the BR-1200CD before saving.

**MEMO**

Applying swing does not change the actual performance data stored in a drum pattern. Regardless of whether or not swing is actually applied, performance data will always be displayed at the same positions when you are using Microscope.

## Changing a drum pattern's name

1. Press [F1] (NAME) on the Drum Pattern Edit screen.  
The Drum Pattern name screen will appear.

```

DRUMS:NAME
-----
Name  ROCK 01-IN
-----
LMNOPQRSTUVWXYZ 01234
-----
INSERT | DELETE | A <=> a |
    
```

2. Use [CURSOR] and the TIME/VALUE dial to change the name character by character.

```

DRUMS:NAME
-----
Name  ROCK 01-IN
-----
^ ( ) ~ * ABCDEFGHIJKLMN
-----
INSERT | DELETE | A <=> a |
    
```

At this time, the FUNCTION buttons operate as follows.

### [F1] (INSERT):

An empty space of one character in length will be inserted.

### [F2] (DELETE):

A single character will be deleted.

### [F3] (A<=>a):

The character type will toggle between uppercase and lowercase.

3. Press [EXIT/NO].

The Drum Pattern Selection screen will appear once again.

4. Press [F3] (WR•CPY•DEL).

The Write screen for drum patterns will appear.

```

DRUMS:WRITE
-----
      *TMP
      [ ROCK 01-IN ]
To:   [ U001 ]
      [ EMPTY 001 ]
-----
=>COPY | =>DELETE | GO |
    
```

5. Use the TIME/VALUE dial to select the drum pattern to which the data is to be saved.

### NOTE

Only user drum patterns and song drum patterns may be selected for saving drum pattern data. You will not be able to select a preset drum pattern at this time.

6. Press [F3] (GO).

The new name will be saved together with the drum pattern. When the message "Complete!" appears, it indicates that saving has been completed.

### NOTE

If you select a different drum pattern or load a new song without saving the current pattern, the new name will be lost. This name will also be lost if you turn off the BR-1200CD before saving.

## Copying drum patterns

1. Press [F3] (WR•CPY•DEL) on the Drum Pattern Edit screen.

The Write screen for drum patterns will appear.

```

DRUMS:WRITE
-----
      *TMP
      [ ROCK 01-IN ]
To:   [ U001 ]
      [ EMPTY 001 ]
-----
=>COPY | =>DELETE | GO |
    
```

2. Press [F1] (=>COPY).

The Copy screen for drum patterns will appear.

```

DRUMS:COPY
-----
From:  P001 (CURRENT)
      [ ROCK 01-IN ]
To:    [ U001 ]
      [ EMPTY 001 ]
-----
=>WRITE | =>DELETE | GO |
    
```

3. Move the cursor to the "From:" field and select the drum pattern to be copied using the TIME/VALUE dial.

```

DRUMS:COPY
-----
From:  P002
      [ ROCK 01-V1 ]
To:    [ U001 ]
      [ EMPTY 001 ]
-----
=>WRITE | =>DELETE | GO |
    
```

4. Move the cursor to "To:" and use the TIME/VALUE dial to select the drum pattern to which the data is to be copied.

```

DRUMS:COPY
-----
From:  P002
      [ ROCK 01-V1 ]
To:    [ U002 ]
      [ EMPTY 002 ]
-----
=>WRITE | =>DELETE | GO |
    
```

### NOTE

Only user drum patterns and song drum patterns may be selected as destinations for copying. In other words, you will not be able to select a preset drum pattern at this time.

5. Press [F3] (GO).

Copying of the drum pattern will begin. When the message "Complete!" appears, it indicates that copying has been completed.


**NOTE**

The drum pattern selected as the copy destination will be overwritten in this process. As it will not be possible to restore the corresponding data, care should be taken to ensure that important patterns are not accidentally overwritten in this way.

## Deleting drum patterns


1. Press [F3] (WR•CPY•DEL) on the Drum Pattern Edit screen.

The Write screen for drum patterns will appear.

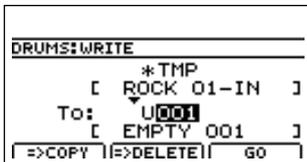

2. Press [F2] (=>DELETE).

The Delete screen for drum patterns will appear.

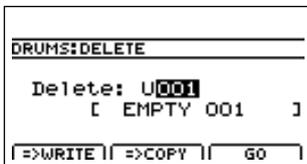

3. Use the TIME/VALUE dial to select the drum pattern to be deleted and press [F3] (GO).

The message "Sure?" will appear.



4. Press [ENTER/YES].

Deletion of the drum pattern will begin. When the message "Complete!" appears, it indicates that deletion has been completed.

**NOTE**


- Preset drum patterns cannot be deleted.
- As it will not be possible to restore deleted drum patterns, care should be taken to ensure that important patterns are not accidentally deleted.

## Loading drum patterns from the CD-R/RW drive (SMF Import)

The BR-1200CD allows you to read Standard MIDI Files (or SMFs) from CD-R/RW discs into user drum patterns and song drum patterns.

### Precautions for SMF import

- CD-R/RW discs of ISO9660 Level 2, Mode 1 format are supported for import. It will not be possible to import data from discs of any other format.
- SMFs of up to 240 KB in size and 999 measures may be imported. It will not be possible to import files that exceed this size and the number of measures limit.

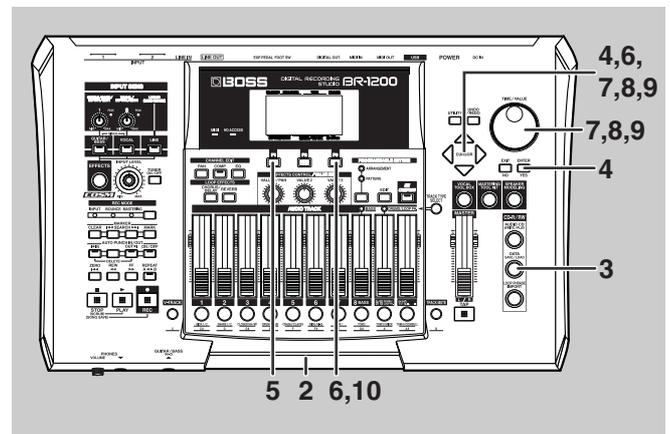

1. Using a PC, burn a CD-R/W disc containing the SMFs you want to import.

2. Insert this CD-R/W disc into the BR-1200CD's CD-R/RW drive.

The drive's access indicator will begin to flash. Wait until this indicator stops flashing and turns off before proceeding.

3. Press CD-R/RW [DATA SAVE/LOAD].


The Data CD screen will appear.



4. Move the cursor to the SMF icon and press [ENTER/YES].


The SMF Menu screen will appear.

## Creating drum patterns

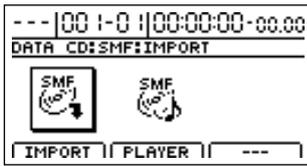

**5. Press [F1] (IMPORT).**

The SMF Import screen will appear, displaying a list of the SMFs contained on the CD-R/RW.

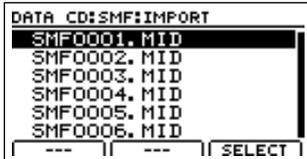

If files are grouped into different folders on the current CD-R/RW, the folder names will be displayed together with the folder icon (  ). To view the list of files within a folder, move the cursor to the corresponding folder name and press [ENTER/YES].

**6. Move the cursor to the SMF to be imported and press [F3] (SELECT).**

The import setting screen will appear.



**7. Move the cursor to "Type" and use the TIME/VALUE dial to select "DRUMS."**



**8. Move the cursor to "MIDI Ch." and select the MIDI channel of the data to be imported using the TIME/VALUE dial.**

Only data associated with the specified MIDI channel will be extracted from the selected SMF and imported as a drum pattern.



### MEMO

In the case of SMFs supporting the GM, GS, or XG standards, drum-type performance data is generally assigned to MIDI channel 10. By setting the MIDI channel to 10 in such a case, you can ensure that only the drum data will be extracted from the SMF. (Note that drum-type data will not necessarily be assigned to channel 10, and it will be important to confirm the actual channel in advance.)

**9. Move the cursor to "Pattern" and use the TIME/VALUE dial to select the drum pattern to which the data is to be imported.**



### NOTE

It will not be possible to select preset drum patterns as destinations for SMF import.


**10. Press [F3] (ENTER).**

Importing of the selected SMF will begin. When the message "Complete!" appears, it indicates that the import has been completed.

# Using bass

## Setting the track type

To use bass, you must first of all set up Track 8 as a Bass track using its track type setting.

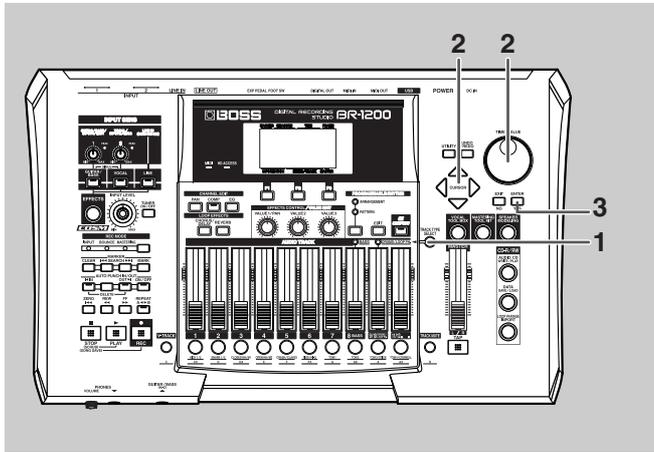

1. Press [TRACK TYPE SELECT].  
The Track Type Select screen will appear.



2. Move the cursor to "TRACK 8" and select "BASS" using the TIME/VALUE dial.



### AUDIO:

The track will be used for recorded audio.

### BASS:

The track will be used for bass.

3. Press [ENTER/YES].  
The Track Type Select screen closes.  
The BASS indicator from TRACK TYPE SELECT will light up to indicate that Track type has been set up for use as a bass track.  
You will now be able to use bass.
4. If you wish to store the track type setting, save the current song (p. 70).

## Playing bass

Simply changing the track type may not be sufficient to allow bass to be played. Use the following procedure in such a case.

1. Press the track button for Track 8 several times until it lights up.

Pressing the button repeatedly allows you to cycle through the available choices, which are: Flashing → On → Off.

### Off:

No bass sounds will be played.

### Flashing:

Bass sounds will be played only when the BR-1200CD is recording or performing playback.

### On:

Bass sounds will be played even when the BR-1200CD is stopped.


2. Raise the fader for Track 8 to a suitable level.  
You will now be able to hear the bass sounds.

## Selecting bass sounds

Now that we can hear the bass, let's select a bass sound to work with.

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the PATTERN indicator is lighted. (Pattern mode)
2. Press PROGRAMMABLE RHYTHM [EDIT].

The Pattern Selection screen will appear.

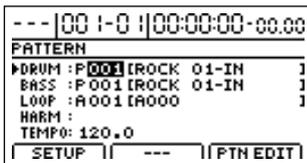

3. Press [F1] (SETUP).

The dialog for pattern setup will appear.



4. Move the cursor to "Bass" and use the TIME/VALUE dial to select a bass sound.

The bass sound selection will change.



### NOTE

Although playback may stop for a period of 1 to 2 seconds when the bass sound is changed, this is normal and is not the result of a malfunction.


5. When you have selected the bass sound that you want to use, press [ENTER/YES].  
The Bass Pattern Selection screen will appear once again.
6. If you wish to store the bass sound selection, save the current song (p. 70).

### NOTE

The bass sound selection is common to all bass patterns. It is not possible to store a different bass sound for each different pattern.

## Selecting bass patterns

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the PATTERN indicator is lighted. (Pattern mode)
2. Press PROGRAMMABLE RHYTHM [EDIT].  
The Pattern Selection screen will appear.

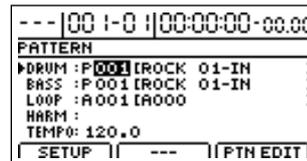

3. Move the cursor to "BASS" and select a pattern using the TIME/VALUE dial.  
Playback of the newly selected bass pattern will start as soon as the previously selected bass pattern has ended.
4. When you have selected the bass pattern that you want to use, press [EXIT/NO] to return to the top screen.
5. If you wish to store the bass pattern selection, save the current song (p. 70).

### NOTE

The user bass patterns and song bass patterns contained in the BR-1200CD at the time of purchase are empty; you won't hear anything if you select one of them. If you want to hear bass immediately after setting up the BR-1200CD for the first time, select a preset bass pattern.

## Specifying bass pattern chords

You can specify bass pattern chords as described below to hear how the bass pattern will sound playing different chords.

### MEMO

All preset bass patterns have been created based on the chord C. When you specify a chord, however, the individual notes that make up the bass pattern will be automatically adjusted so that the specified chord will now be played.

Note that simply specifying a chord does not result in the bass pattern being permanently changed. This action only causes the final performance to be matched to the specified chord. As a result, there is no need to worry about permanently changing bass pattern data by specifying chords.

### NOTE


Chord specifications are common to all bass patterns. It is not possible to store a different chord specifications for each different pattern.

Chord specification is carried out as follows:

1. Press **PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN]** so the **PATTERN** indicator is lighted. (Pattern mode)

2. Press **PROGRAMMABLE RHYTHM [EDIT]**.

The Pattern Selection screen will appear.

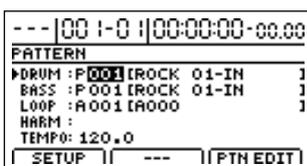

3. Press **[F1] (SETUP)**.

The dialog for pattern setup will appear.



4. Move the cursor to "Chord" and select the desired chord using the **TIME/VALUE** dial.

You will be able to hear the bass performance change to match the selected chord.

5. Press **[EXIT/NO]** several times to return to the top screen.

6. If you wish to store the chord specification, save the current song (p. 70).

### MEMO

If you want to add further chord progressions, use the rhythm arrangement's chord map. For more information about chord maps, refer to p. 200.

## Changing the bass pattern's tempo

The tempo for the playback of bass patterns will be the same as that used for the playback of drum patterns and Loop Phrases.

For details on how to specify a tempo, refer to "Changing the drum pattern tempo" (p. 159).

### NOTE

#### About the Bass Pattern Beat

Although every drum, bass, and Loop Phrase pattern has its own beat setting, there is also a universal beat setting that can be applied to all drum and bass patterns and Loop Phrases as a whole.

When drum, bass, and Loop Phrase patterns are played simultaneously in Pattern mode, they are not played according to any of their individual beat settings, but instead conform to one beat setting that is applied to them all.

For more detailed information, refer to "Setting the Universal Beat for Drums, Bass, and Loop Phrases" (p. 196).

# Creating bass patterns

When you cannot find a suitable bass pattern for your song among the BR-1200CD's preset bass patterns, you can easily create an original pattern as described below. Either one of the following two methods can be used to do this.

## ● Real-time recording

Real-time recording allows you to tap the track buttons in time with a metronome and to record the performance data produced. The bass pattern will be repeated over and over, with new performance data being constantly mixed into it. Furthermore, a quantize function can be used to fix any slight deviations in the timing of your performance.

## ● Step recording

Use step recording to enter bass notes one by one while the pattern is not being played back. If you find it difficult to create satisfactory patterns using real-time recording, use this function to easily and conveniently produce the desired results.

### NOTE

- “\*TMP” appears for the bass pattern immediately after its data is recorded or edited. If you try to select a different bass pattern with the TIME/VALUE dial while the cursor is positioned above this, the cursor turns white. If you press [ENTER/YES] at this point, the cursor reverts to black, and the bass pattern number is confirmed. If you do not want to confirm it, press [EXIT/NO]; “\*TMP” is indicated again, and the bass pattern reverts to the state it was in immediately after editing. This allows you to avoid inadvertently erasing data you have edited.
- From now on, you cannot use the Undo function (p. 81) for creating or editing bass patterns. Please make sure to create or edit data with a special care.

## Preparing for recording

### MEMO


When a MIDI keyboard is connected to the MIDI IN port, you will be able to use this keyboard to perform real-time recording. Note that there is no need to set a MIDI channel for the MIDI keyboard in such a case (p. 254).

Before you use either real-time recording or step recording, you will need to select the bass pattern to be recorded.

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the PATTERN indicator is lighted. (Pattern mode)

2. Press PROGRAMMABLE RHYTHM [EDIT].


The Pattern Selection screen will appear.

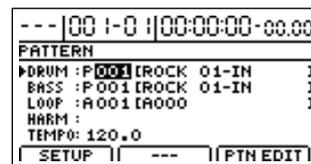

3. Move the cursor to “BASS” and press [F3] (PTN EDIT).

The Bass Pattern Edit screen will appear.

4. Move the cursor to the pattern number and select the number of the bass pattern to be recorded using the TIME/VALUE dial.

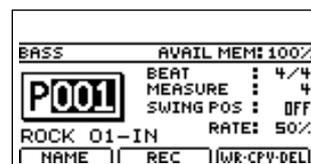

If you press [PLAY] at this time, you will be able to hear the selected bass pattern.

### NOTE

The user bass patterns and song bass patterns contained in the BR-1200CD at the time of purchase are empty; you won't hear anything if you select one of them.

5. Use [CURSOR] and the TIME/VALUE dial to set the number of beats and measures in the bass pattern.

The display for the bass pattern will change to “\*TMP.”

# Creating bass patterns using real-time recording

**MEMO**

When a MIDI keyboard is connected to the MIDI IN port, you will be able to use this keyboard to perform real-time recording. Note that there is no need to set a MIDI channel for the MIDI keyboard in such a case (p. 254).


1. After carrying out the steps described in “Preparing for recording,” press [F2] (REC).

The Pattern Recording Selection screen will appear. The Real-Time Recording standby screen will appear and the metronome will start.




2. Press [F2] (REALTIME).

The Real-Time Recording standby screen will appear and the metronome will start.

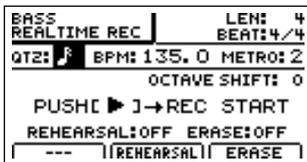

3. Move the cursor to “BPM” and select a suitable tempo for recording using the TIME/VALUE dial.

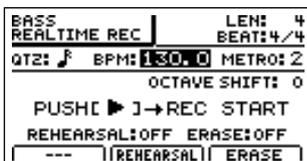

Note that this only sets the tempo for recording—the bass pattern is not recorded at this tempo. (It is not possible to set a specific tempo for a bass pattern.)

If you tap your finger on [TAP] four or more times, the tempo will be set accordingly.

4. Move the cursor to “METRO” and set the metronome level using the TIME/VALUE dial.
5. Press [PLAY].

Real-time recording will start after a one-measure countdown.



6. Use the track buttons to play the desired bass pattern and use the track fader 1 to set the velocity (dynamics) of the sounds.

The relationship between track buttons and bass notes is as follows.

Track button	Note number
[V-TRACK]	C 1 (24)
[1]	C#1 (25)
[2]	D 1 (26)
[3]	D#1 (27)
[4]	E 1 (28)
[5]	F 1 (29)
[6]	F#1 (30)
[7]	G 1 (31)
[8]	G#1 (32)
[9/10]	A 1 (33)
[11/12]	A#1 (34)
[TRACK MUTE]	B 1 (35)

Note also that you can use [ △ ] and [ ▽ ] from CURSOR to shift up or down by one octave accordingly.

**NOTE**

Multiple bass notes cannot be played simultaneously. If a bass note is recorded at the same time position as a previously recorded note, priority will be given to the newer note and only this will be retained (in other words, the previously-recorded note will be deleted). Note that a short delay may occur between deletion of the older note and playback of the following notes. This may make it difficult to record your pattern, and therefore, care should be taken to ensure that you do not duplicate performance data in this way.

7. If you want to erase an error in the recorded pattern, press [F3] (ERASE).

The message “ERASE:ON” will appear and bass erase mode will be activated. In this mode, hold down the track button corresponding to the bass note you want to erase. Any of these bass notes played in the pattern while you are pressing the track button will be erased. When you have finished erasing bass sounds, press [F3] (ERASE) once again.

8. Press [STOP] at the point where you want to stop recording.

The Pattern Recording Selection screen will appear once again.


## Creating bass patterns

### 9. Press [EXIT/NO].

The Bass Pattern Edit screen will appear once again.

### 10. Press [F3] (WR•CPY•DEL).

The Write screen for bass patterns will appear.

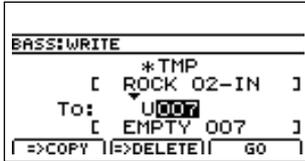

### 11. Use the TIME/VALUE dial to select the bass pattern to which the data is to be saved.

#### NOTE

Only user bass patterns and song bass patterns may be selected for saving bass pattern data. You will not be able to select a preset bass pattern at this time.

### 12. Press [F3] (GO).

The bass pattern will be saved. When the message "Complete!" appears, it indicates that saving has been completed.

#### NOTE

If you select a different bass pattern or load a new song without saving the current pattern, all of the newly recorded data will be lost. This data will also be lost if you turn off the BR-1200CD before saving.

## Practicing before recording (Rehearsal)

Whenever rehearsal is turned on, you will be able to play bass sounds without recording them, even if real-time recording is in progress. This feature comes in very handy when you want to practice playing a bass pattern.

### 1. Press [F2] (REHEARSAL) in real-time recording mode.

The message "REHEARSAL:ON" will appear and rehearsal mode will be activated.



In this mode, you can press a track button to play its bass note without the corresponding data being recorded.

### 2. When you have finished rehearsing, press [F2] (REHEARSAL) once again to return to real-time recording mode.

The message "REHEARSAL:OFF" will appear and real-time mode will be reactivated. When you now press a track button to play a bass note, the corresponding performance data will be recorded.

## Recording in perfect time (Quantize)

With real-time recording, the data generated by pressing a track button is recorded as is, and any imperfections in timing will be reflected in this performance data. If you don't want to hear these imperfections during playback, you can use the BR-1200CD's quantize feature to automatically move performance data to the nearest quarter note, eighth note, sixteenth note, etc., before the data is actually recorded.

### 1. Move the cursor to "QTZ" on the Real-Time Recording standby screen.



### 2. Select a quantization setting using the TIME/VALUE dial.



**QTZ:**

- ( ♩ ) Moves bass notes to the nearest quarter note.
- ( ♩₃ ) Moves bass notes to the nearest quarter-note triplet.
- ( ♪ ) Moves bass notes to the nearest eighth note.
- ( ♪₃ ) Moves bass notes to the nearest eighth-note triplet.
- ( ♫ ) Moves bass notes to the nearest sixteenth note.
- ( ♫₃ ) Moves bass notes to the nearest sixteenth-note triplet.
- ( ♮ ) Moves bass notes to the nearest thirty-second note.
- ( ♮₃ ) Moves bass notes to the nearest thirty-second-note triplet.
- OFF Quantization will not be carried out, and performance data will be recorded as is.

**3. Press [PLAY].**

The BR-1200CD will start recording.

Even during the recording process, you can select a new quantization setting by changing the "QTZ" value using the TIME/VALUE dial.


## Creating bass patterns using step recording

**NOTE**

- A pattern to be used for step recording must be originally empty. If you select a pattern that already contains data, the message "Erase OK?" may be displayed during the procedure described below. In such a case, press [ENTER/YES] to continue step recording. All of the pre-existing data will be erased to allow recording to be carried out in this way. If you do not want to erase the pattern's data, press [EXIT/NO]. Step recording will be canceled and the display will return to the Bass Pattern Edit screen.
- It will not be possible to restore data that has been erased in this way. As a result, care should be taken during step recording to ensure that important performance data is not accidentally erased.

**1. After carrying out the steps described in "Preparing for recording," press [F2] (REC).**

The Pattern Recording Selection screen will appear.

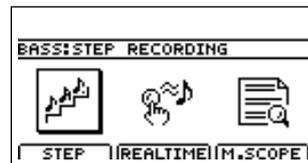

**2. Press [F1] (STEP).**

The Step Recording screen will appear.



**3. Move the cursor to "RES" and change the step recording resolution using the TIME/VALUE dial.**

**RES:**

- ( ♩ ) Allows input in quarter-note units.
- ( ♩₃ ) Allows input in quarter-note triplet units.
- ( ♪ ) Allows input in eighth-note units.
- ( ♪₃ ) Allows input in eighth-note triplet units.
- ( ♫ ) Allows input in sixteenth-note units.
- ( ♫₃ ) Allows input in sixteenth-note triplet units.
- ( ♮ ) Allows input in thirty-second-note units.

## Creating bass patterns

- (  ) Allows input in thirty-second-note triplet units.  
 OFF Allows input at the finest resolution—i.e., 96 clock units per quarter note.
- 4. Move the cursor to “GATE” and select the duration of the note to be input (i.e., the gate time) as a percentage using the TIME/VALUE dial.**
- GATE (gate time): 10% to 95%**
- When the value is lowered, the more staccato the performance will become.
- With certain sounds, this can make the bass seem as if it is being played with the strings muted. When the value is raised, the more legato (i.e., less staccato) the performance will become. Normally, a setting of approximately 80% will be appropriate.
- 5. Move the cursor to “ACC” and set the volume of the note to be input using the TIME/VALUE dial.**
- ACC (accent): 1 to 127**
- The volume is increased as you raise the value, while lower values result in lower volume. Ordinarily, this can be set to 100. When you want to add an accent at certain locations, you can change the value accordingly.
- 6. Press CURSOR [  ] and [  ] to shift the input performance data up or down by one octave.**
- OCTAVE SHIFT: -2 to +2**
- [  ]: The data is moved up by one octave.  
 [  ]: The data is moved down by one octave.
- In total, the data can be raised or lowered by a maximum of two octaves.
- 7. Press the track button for the note to be entered.**
- Performance data will be input each time a track button is pressed. The length of the performance data is determined by the length of the note set using “RES.” The duration of the note played by the performance data is determined by applying the “GATE” setting to this length.
- The volume of the note played by the performance data will correspond to the “ACC” setting.
- 8. Press [F3] (REST) at locations where a rest is to be input.**
- A rest of the length set by “RES” will be input.
- 9. If you want to delete an item of performance data or a rest that has been input incorrectly, press [F2] (BACK).**
- The most recently input item of performance data or rest will be deleted. Each time this button is pressed, the next newest item of data or rest will be deleted.

- 10. Input all of the required performance data and rests by repeating Steps 3 through 9.**

When recording has been completed as far as the end of the set pattern length, “[END]” will be displayed in the area for measures, and no further input will be possible.


- 11. Press [EXIT/NO] to end step recording.**

The Pattern Recording Selection screen will appear once again.




- 12. Press [EXIT/NO] once again.**

The Bass Pattern Edit screen will appear once again.

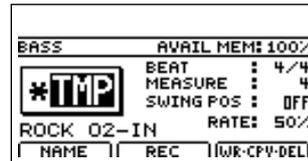

- 13. Press [F3] (WR•CPY•DEL).**

The Write screen for bass patterns will appear.

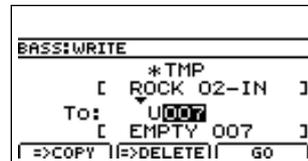

- 14. Use the TIME/VALUE dial to select the drum pattern to which the data is to be saved.**

### NOTE

Only user bass patterns and song bass patterns may be selected for saving bass pattern data. You will not be able to select a preset bass pattern at this time.

- 15. Press [F3] (GO).**

The bass pattern will be saved. When the message “Complete!” appears, it indicates that saving has been completed.

### NOTE


If you select a different drum pattern or load a new song without saving the current pattern, all of the newly recorded data will be lost. This data will also be lost if you turn off the BR-1200CD before saving.

## Correcting bass patterns (Microscope)

Microscope is used to make detailed corrections to bass patterns. In specific terms, this function displays a bass pattern's performance data in list format so that any of the corresponding parameters can be corrected as required.

1. After carrying out the steps described in "Preparing for recording," press [F2] (REC).

The Pattern Recording Selection screen will appear.

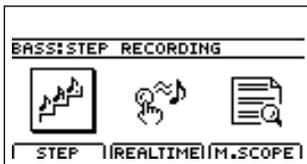

2. Press [F3] (M.SCOPE).

The Microscope screen will appear.

Performance data is displayed on this screen as follows.

Location	Note number	Accent (Velocity)	Gate time (the length of time from when the note begins to the time it stops playing)
BASS: MICROSCOPE	CUR: 001-1-000	LEN: 4	
MEASURE	NOTE	ACC	GATE
001-1-000	C 2	120▶	4000-0-024
001-1-026	C 2	110▶	4000-0-024
001-1-072	C 2	110▶	4000-0-024
001-2-000	C 2	110▶	4000-0-024

3. Move the cursor to the parameter whose setting you want to change and select a new value using the TIME/VALUE dial.

You can confirm the sound where the cursor is positioned by pressing [ENTER].

### To change a bass note:

- 1) Move the cursor to "NOTE" field.

MEASURE	NOTE	ACC
001-1-000	C 2	120▶
001-1-026	C 2	110▶
001-1-072	C 2	110▶
001-2-000	C 2	110▶

- 2) Select a new note number using the TIME/VALUE dial.  
The performance data will be updated with this new note setting.

### To change a bass note's volume:

- 1) Move the cursor to "ACC" field.
- 2) Set a new velocity value using the TIME/VALUE dial.  
Larger velocity values produce higher volumes and vice versa.

### To change a bass note's gate time:

- 1) Move the cursor to "GATE" field.

MEASURE	NOTE	GATE
001-1-000	C 2	4000-0-024
001-1-026	C 2	4000-0-024
001-1-072	C 2	4000-0-024
001-2-000	C 2	4000-0-024

- 2) Set a new value using the TIME/VALUE dial.  
The performance data will be updated with this new gate time setting.

### To move an item of performance data:

- 1) Press [F2] (MOVE).
- 2) Use the TIME/VALUE dial to select the time position to which the performance data is to be moved.
- 3) Press [ENTER/YES].  
The performance data will be moved to this new position.

### To delete an item of performance data:

- 1) Press [F3] (DELETE).  
The selected item of performance data will be deleted.

### To insert a new item of performance data:

- 1) Press [F1] (INSERT).  
An item of performance data will be inserted at the current position.

4. Press [EXIT/NO] to end Microscope editing.

The Pattern Recording Selection screen will appear once again.



5. Press [EXIT/NO] once again.

The Bass Pattern Edit screen will appear once again.

BASS	AVAIL MEM: 100%
*TMP	BEAT : 4/4
	MEASURE : 4
	SWING POS : OFF
ROCK 02-IN	RATE: 50%
NAME	REC
	WR•CPY•DEL

6. Press [F3] (WR•CPY•DEL).

The Write screen for bass patterns will appear.

BASS:WRITE
*TMP
[ ROCK 02-IN ]
To: U007
[ EMPTY 007 ]
[=>COPY] [=>DELETE] GO

## Creating bass patterns

- Use the TIME/VALUE dial to select the bass pattern to which the data is to be saved.

### NOTE

Only user bass patterns and song bass patterns may be selected for saving bass pattern data. You will not be able to select a preset bass pattern at this time.

- Press [F3] (GO).

The bass pattern will be saved. When the message "Complete!" appears, it indicates that saving has been completed.


### NOTE

If you select a different bass pattern or load a new song without saving the current pattern, all of the corrected data will be lost. This data will also be lost if you turn off the BR-1200CD before saving.

## Changing the bass pattern's groove (Swing)

The Swing function allows you to produce a swing-type groove in your bass patterns by delaying the timing at which notes with weaker beats are played.

- Move the cursor to "SWING POS" on the Bass Pattern Edit screen.

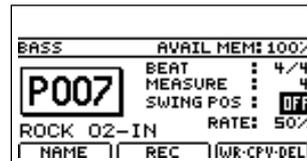

- Select the type of note used to generate swing using the TIME/VALUE dial.

OFF: No swing will be applied.

(♪): Swing will be generated in units of eighth notes.

(♩): Swing will be generated in units of sixteenth notes.


- Move the cursor to "RATE" and set the desired amount of swing.

50%:

No swing will be applied. Weaker beats will be played exactly halfway between the stronger beats.

51%–100%:

Swing will be generated in accord with the specified value. A setting of 100% delays the weak beats by the greatest possible degree, placing them at almost exactly the same time position as the stronger beats that follow them.

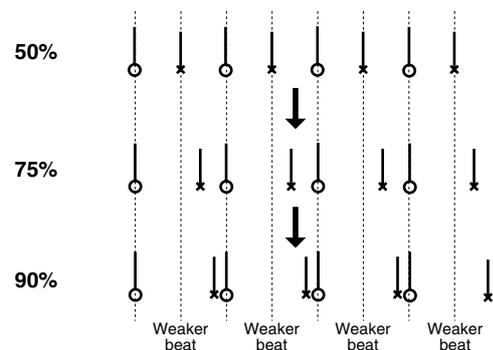


- Press [PLAY] to check whether the degree of swing is correct for your song.

Playback of the drum pattern will start. Press [STOP] to end playback.

- If you want to store the swing setting you have just made, press [F3] (WR•CPY•DEL).

The Write screen for bass patterns will appear.

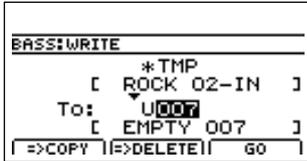

- Use the TIME/VALUE dial to select the bass pattern to which the data is to be saved.

**NOTE**

Only user bass patterns and song bass patterns may be selected for saving bass pattern data. You will not be able to select a preset bass pattern at this time.

- Press [F3] (GO).

The swing pattern will be saved together with the bass pattern. When the message “Complete!” appears, it indicates that saving has been completed.

**NOTE**


If you select a different bass pattern or load a new song without saving the current pattern, your new swing setting will be lost. This setting will also be lost if you turn off the BR-1200CD before saving.

**MEMO**

Applying swing does not change the actual performance data stored in a bass pattern. Regardless of whether or not swing is actually applied, performance data will always be displayed at the same positions when you are using Microscope.

## Changing a bass pattern's name

- Press [F1] (NAME) on the Bass Pattern Edit screen.

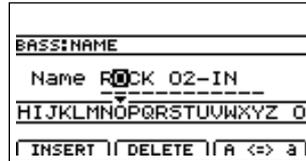

- Use [CURSOR] and the TIME/VALUE dial to change the name character by character.

At this time, the FUNCTION buttons operate as follows.

**[F1] (INSERT):**

An empty space of one character in length will be inserted.

**[F2] (DELETE):**

A single character will be deleted.

**[F3] (A<=>a):**


The character type will toggle between uppercase and lowercase.

- Press [EXIT/NO].

The Bass Pattern Edit screen will appear once again.

- Press [F3] (WR•CPY•DEL).

The Write screen for bass patterns will appear.

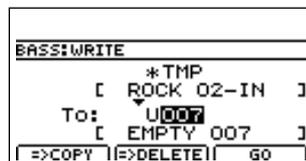

- Use the TIME/VALUE dial to select the bass pattern to which the data is to be saved.

**NOTE**

Only user bass patterns and song bass patterns may be selected for saving bass pattern data. You will not be able to select a preset bass pattern at this time.

- Press [F3] (GO).

The new name will now be stored together with the bass pattern, and when the message “Complete!” appears, it indicates that this operation has been completed.


**NOTE**

If you select a different bass pattern or load a new song without saving the current pattern, the new name setting will be lost. This name will also be lost if you turn off the BR-1200CD before saving.

## Copying bass patterns


1. Press [F3] (WR•CPY•DEL) on the Bass Pattern Edit screen.

The Write bass patterns will appear.

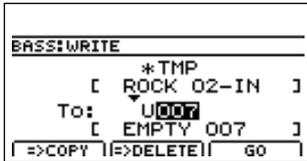

2. Press [F1] (=>COPY).

The Copy screen for bass patterns will appear.

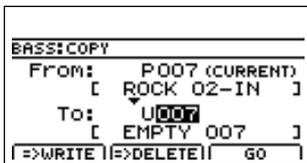

3. Move the cursor to the "From:" field and select the bass pattern to be copied using the TIME/VALUE dial.
4. Move the cursor to "To:" and use the TIME/VALUE dial to select the bass pattern to which the data is to be copied.

### NOTE

Only user bass patterns and song bass patterns may be selected as destinations for copying. In other words, you will not be able to select a preset bass pattern at this time.

5. Press [F3] (GO).

Copying of the bass pattern will begin. When the message "Complete!" appears, it indicates that copying has been completed.


### NOTE

The bass pattern selected as the copy destination will be overwritten in this process. As it will not be possible to restore the corresponding data, care should be taken to ensure that important patterns are not accidentally overwritten in this way.

## Deleting bass patterns


1. Press [F3] (WR•CPY•DEL) on the Bass Pattern Edit screen.

The Write bass patterns will appear.

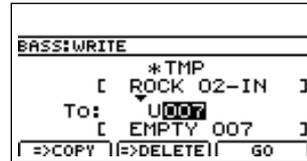

2. Press [F2] (=>DELETE).

The Bass Pattern Delete screen will appear.

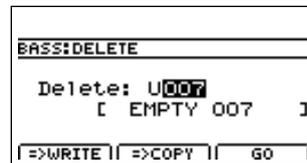

3. Use the TIME/VALUE dial to select the bass pattern to be deleted and press [F3] (GO).

The message "Sure?" will appear.



4. Press [ENTER/YES].

Deletion of the bass pattern will begin. When the message "Complete!" appears, it indicates that deletion has been completed.

### NOTE


- As it will not be possible to restore deleted bass patterns, care should be taken to ensure that important patterns are not accidentally deleted.
- Preset patterns cannot be deleted.

## Loading bass patterns from the CD-R/RW drive (SMF Import)


The BR-1200CD allows you to read Standard MIDI Files (or SMFs) from CD-R/RW discs into user bass patterns and song bass patterns.

### Precautions for SMF import


- CR-R/RW discs of ISO9660 Level 2, Mode 1 format are supported for import. It will not be possible to import data from discs of any other format.
- SMFs of up to 240 KB in size may be imported. It will not be possible to import files that exceed this size limit.

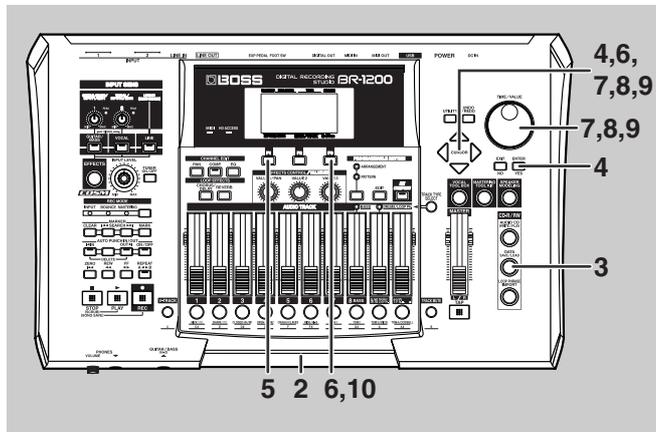

1. Using a PC, burn a CD-R/RW disc containing the SMFs you want to import.
2. Insert this CD-R/RW disc into the BR-1200CD's CD-R/RW drive.  
The drive's access indicator will begin to flash. Wait until this indicator stops flashing and turns off before proceeding.
3. Press CD-R/RW [DATA SAVE/LOAD].  
The Data CD screen will appear.

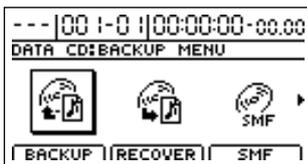

4. Move the cursor to the SMF icon and press [ENTER/YES].  
The SMF Menu screen will appear.

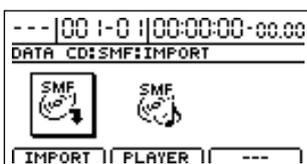

5. Press [F1] (IMPORT).

The SMF Import screen will appear, displaying a list of the SMFs contained on the CD-R/RW.



If files are grouped into different folders on the current CD-R/RW, the folder names will be displayed together with the folder icon (  ). To view the list of files within a folder, move the cursor to the corresponding folder name and press [ENTER/YES].

6. Move the cursor to the SMF to be imported and press [F4] (SELECT).

The import setting screen will appear.



7. Move the cursor to "Type" and use the TIME/VALUE dial to select "BASS."



8. Move the cursor to "MIDI Ch." and select a MIDI channel for the SMF to be imported using the TIME/VALUE dial.



Only the data with the corresponding MIDI channel will be extracted from the selected SMF and imported as a bass pattern.

#### MEMO

In the case of SMFs supporting the GM, GS, or XG standards, bass-type performance data is generally assigned to MIDI channel 2. By setting the MIDI channel to 2 in such a case, you can ensure that only the bass data will be extracted from the SMF. (Note that bass-type data will not necessarily be assigned to channel 2, and it will be important to confirm the actual channel in advance.)

## Creating bass patterns

9. Move the cursor to "Pattern" and use the TIME/VALUE dial to select the bass pattern to which the data is to be imported.



### NOTE

It will not be possible to select preset bass patterns as destinations for SMF import.

10. Press [F3] (GO).

Importing of the selected SMF will begin. When the message "Complete!" appears, it indicates that the import has been completed.


# Using Loop Phrases

One method often used when putting songs together involves the creation first of all of a section of basic audio data of one or two measures in length—i.e., a Loop Phrase—and the basic song structure is then formed by repeating this section the required number of times.

The BR-1200CD supports this type of song creation method and allows you to freely arrange and play Loop Phrases within rhythm arrangements.

## Setting the track type

To use Loop Phrases, you must first of all set up Track 9/10 as a Drum & Loop Phrase track using its track type setting.

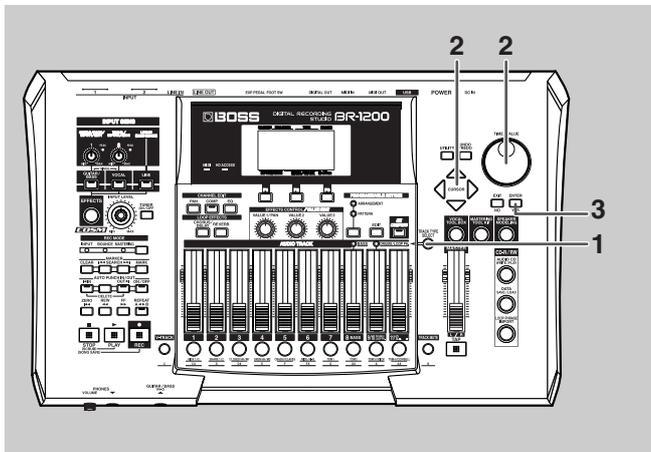

1. Press [TRACK TYPE SELECT].

The Track Type Select screen will appear.



2. Move the cursor to "TRACK 9/10" and select "DRUMS&LP" using the TIME/VALUE dial.



### AUDIO:

The track will be used for recorded audio.

### DRUMS&LP:

The track is used as a drum and Loop Phrase track.

### METRO&LP:

The track is used as a metronome and Loop Phrase track.

3. Press [ENTER/YES].

The Track Type Select screen closes.

The DRUMS/LOOP PH. indicator from TRACK TYPE SELECT will light up to indicate that Track type has been set up for use as a Drum & Loop phrase track.

You will now be able to use drums.

4. If you wish to store the track type setting, save the current song (p. 70).

## Playing Loop Phrases

Simply changing the track type may not be sufficient to allow Loop Phrases to be played. Use the following procedure in such a case.

1. Press the track button for Track 9/10 several times until it is flashing.

Pressing the button repeatedly allows you to cycle through the available choices, which are: Flashing → On → Off.

### Off:

No drum and loop phrase sounds will be played.

### Flashing:

Drum and loop phrase sounds will be played only when the BR-1200CD is recording or performing playback.

### On:

Drum sounds will be played even when the BR-1200CD is stopped.

The sound of the Loop Phrase is played during recording and playback.

2. Raise the fader for Track 9/10 to a suitable level.

You will now be able to hear Loop Phrase playback.


## Selecting a Loop Phrase

A number of different Loop Phrases will have already been stored on the BR-1200CD at the time of purchase. Let's now select one of these phrases to work with.


1. Press **PROGRAMMABLE RHYTHM** [ARRANGEMENT/PATTERN] so the **PATTERN** indicator is lighted. (Pattern mode)

2. Press **PROGRAMMABLE RHYTHM** [EDIT].

The Pattern Selection screen will appear.

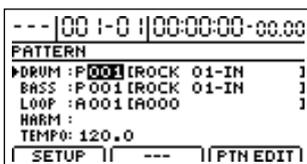

3. Move the cursor to "LOOP" and select a phrase using the TIME/VALUE dial.

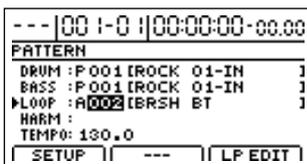

4. Press [PLAY] to start playback.

The BR-1200CD will start playback, allowing you to hear the selected Loop Phrase.

5. When you have selected the Loop Phrase you want to use, press [EXIT/NO] several times to return to the top screen.
6. If you wish to store the Loop Phrase selection, save the current song (p. 70).

### NOTE

- The song Loop Phrases (S001–S050) contained in the BR-1200CD at the time of purchase are empty; you won't hear anything if you select one of them.
- It is important to remember that all user Loop Phrases (A–H) and song Loop Phrases will be deleted whenever you initialize the BR-1200CD's hard disk (p. 285).

### MEMO

- At the time of purchase, the BR-1200CD will contain various user Loop Phrases for immediate use. For more detailed information regarding these user Loop Phrases, refer to "User Loop Phrase List" (p. 334).

## Adjusting the Loop Phrase and Drum Volume Balance

While the balance between the Loop Phrase and drum volume levels is normally adjusted with the Track 9/10 fader, you can use the following procedure to further adjust the loop phrase and drum volume balance.

1. Press [TRACK TYPE SELECT].

The Track Type Select screen will appear.



2. Move the cursor to "LEVEL DR" and "LEVEL LP," then use the TIME/VALUE dial to adjust the volume level of the drums and Loop Phrase, respectively.

### LEVEL DR:

This adjusts the volume of the drums. The volume increases as the value is raised. When set to 0, no sound is output. Set this to 100 when no adjustment is needed.

### LEVEL LP:

This adjusts the volume of the Loop Phrase. The volume increases as the value is raised. When set to 0, no sound is output. Set this to 100 when no adjustment is needed.

## Changing the Loop Phrase tempo

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the PATTERN indicator is lighted. (Pattern mode)
2. Press PROGRAMMABLE RHYTHM [EDIT].  
The Pattern Selection screen will appear.

```

---|00 1-0 |00:00:00-00.00
PATTERN
▶DRUM : P 001 IROCK 01-IN  ]
▶BASS : P 001 IROCK 01-IN  ]
▶LOOP : A 001 IROCK 01-IN  ]
HARM :
TEMPO : 120.0
[ SETUP ] | --- | [ PTH EDIT ]

```

3. Move the cursor to “TEMPO” and select a suitable tempo using the TIME/VALUE dial.

You will be able to hear how your new setting changes the playback tempo.

The tempo can be set anywhere within a range of 25.0 to 250.0 BPM. (Beats Per Minute—A value that indicates the tempo in terms of the number of quarter notes occurring in one minute.)

Loop Phrases can be adjusted to any tempo within a range of 0.75 to 1.5 times its own tempo. Accordingly, if the adjusted playback speed would result in a tempo outside this range, the Loop Phrase will be played back at either the range’s upper or lower limit. In such a case, Loop Phrase playback will not be synchronized with the playback of the drums and bass.

The quality of Loop Phrase playback may be reduced when the adjusted tempo differs considerably from the original tempo.

4. After you have set the tempo, press [EXIT/NO] several times to return to the top screen.
5. If you wish to store the pattern’s tempo, save the current song (p. 70).

### NOTE

The tempo is common to all drum patterns, bass patterns, and Loop Phrases.

## Setting the tempo using [TAP]

In addition to setting the tempo using [CURSOR] and the TIME/VALUE dial, you can also set it by tapping your finger on [TAP] at the desired tempo. (Tap Tempo)

This feature proves extremely useful when you want to match the playback tempo to that of an audio CD but don’t know the actual BPM value.

To set the tempo in this way, tap your finger on [TAP] four times with approximately the same interval between each tap. The tempo will be set based on the average tapping interval.

### NOTE

#### About the Loop Phrase Beat

Although every drum, bass, and Loop Phrase pattern has its own beat setting, there is also a universal beat setting that can be applied to all drum and bass patterns and Loop Phrases as a whole.

When drum, bass, and Loop Phrase patterns are played simultaneously in Pattern mode, they are not played according to any of their individual beat settings, but instead conform to one beat setting that is applied to them all.

For more detailed information, refer to “Setting the Universal Beat for Drums, Bass, and Loop Phrases” (p. 196).

# Creating Loop Phrases

Although the BR-1200CD already contains a number of Loop Phrases at the time of purchase, you can also create your own original Loop Phrases using portions of recorded audio tracks or by importing audio data from commercially available sampling CDs and the like.

## Precautions for Loop Phrase creation

- A single Loop Phrase can be anywhere between 0.5 and 30 minutes in length. Loop Phrase lengths outside this range are not supported.
  - When a Loop Phrase is created, the number of measures and the tempo are set to match the length of the phrase. Specifically, the number of measures is set to one of the following values.  
... 1/32, 1/16, 1/8, 1/7, 1/6, 1/5, 1/4, 1/3, 1/2, 1, 2, 4, 8, 16, 32, 64, 128...
- Note that even when Loop Phrase settings are being modified, it will not be possible to set the length of a Loop Phrase to any other value.

### NOTE

- “\*TMP” appears for the Loop Phrase immediately after its data is recorded or edited. If you try to select a different Loop Phrase with the TIME/VALUE dial while the cursor is positioned above this, the cursor turns white. If you press [ENTER/YES] at this point, the cursor reverts to black, and the Loop Phrase number is confirmed. If you do not want to confirm it, press [EXIT/NO]; “\*TMP” is indicated again, and the Loop Phrase reverts to the state it was in immediately after editing. This allows you to avoid inadvertently erasing data you have edited.
- From now on, you cannot use the Undo function (p. 81) for creating or editing Loop Phrases. Please make sure to create or edit data with a special care.


## Using a portion of an audio track

A portion of any one of the current song's tracks can be used to create a Loop Phrase.

Once the start and end time positions for the desired portion of an audio track have been selected, this portion can then be converted into a Loop Phrase.


### 1. Press CD-R/RW [LOOP PHRASE IMPORT].

The Loop Phrase screen will appear.

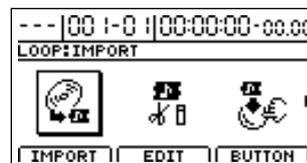


### 2. Move the cursor to “BY TRACK” icon and press [ENTER/YES].


The Loop Phrase Create By Track screen will be displayed.

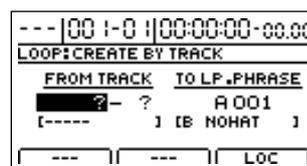

### 3. Use [CURSOR] and the TIME/VALUE dial to specify the track to be copied.

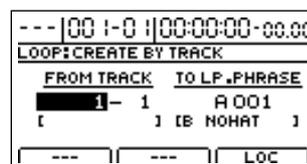

### 4. Use [CURSOR] and the TIME/VALUE dial to specify the copy-destination track.

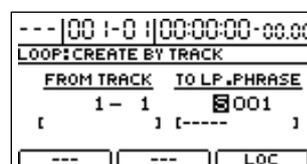

### A through H:


Loop Phrases from user banks A through H. These phrases will be accessible from any song.

### S:


Loop Phrases from the song bank. These phrases are saved with the song in which they are used.

5. Press [F3] (LOC).

The Import Position Setting screen appears.

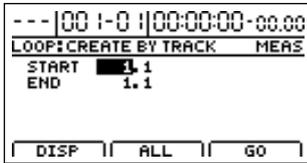

6. Use [CURSOR] and the TIME/VALUE dial to set the start and end time positions of the portion of audio to be used as the Loop Phrase.

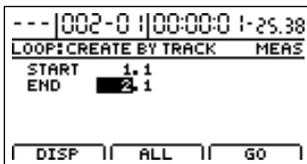

Pressing [F1] (DISP) at this time will allow you select how the positions will be specified (i.e., by measure, time, or marker).

The following parameters should now be set.

**START (Start point):**

Use this parameter to specify the start position within the source track.

**END (End point):**

Use this parameter to specify the end position within the source track.

If time values are used to specify the above points and you then switch the specification method to measures or markers, a plus (+) character may be displayed to warn that indicated positions and actual positions are not the same. If you want to specify points using measures or markers, this discrepancy can be eliminated by using the TIME/VALUE dial to make settings in each of the relevant screens.

If you want to set the Loop Phrase as extending from the start to the end of the song, press [F3] (ALL).

7. Press [F3] (GO).

The BR-1200CD will begin creating the Loop Phrase. When the message "Complete!" appears, it indicates that the phrase has been successfully created.

**NOTE**

- If the Loop Phrase selected for creation already contains data, this will be overwritten by the audio data from the source track. As it will not be possible to restore this data, care should be taken to ensure that important Loop Phrases are not accidentally overwritten in this way.
- If the current song contains newly recorded audio data or newly modified settings, the message "Save Current?" may be displayed during the above procedure. If you want to store your audio data and settings, press [ENTER/YES]. If this will not be necessary, press [EXIT/NO].  
If you press [EXIT/NO], a Loop Phrase is created from the data most recently saved to the imported source track. If there is no data saved, a silent Loop Phrase is created.

## Using wave data on a CD-ROM/R/RW disc (Loop Phrase Import)

If the audio data you want to use for a Loop Phrase is contained as an AIFF or WAV file on a CD-ROM, CD-R, or CD-RW disc, this data can be easily imported into a selected phrase.

Using this function, you will be able to import audio data from commercially available sampling CDs and from CD-R or CD-RW discs that you have created using a PC.


### MEMO

Only data of the following format can be imported.

- WAV or AIFF audio
- Mono or stereo
- 8 or 16 bit
- 44.1 kHz sampling rate
- 0.5 seconds (approx.) to 30minutes (approx.) in length.

### NOTE

- CD-R/RW discs of ISO9660 Level 2, Mode 1 format are supported for import. It will not be possible to import data from discs of any other format.
- The name of the audio data file will be originally assigned to the destination Loop Phrase. For more details regarding the method for changing phrase names, refer to "Specifying and modifying the source loop phrase (Time Modify)" (p. 192).

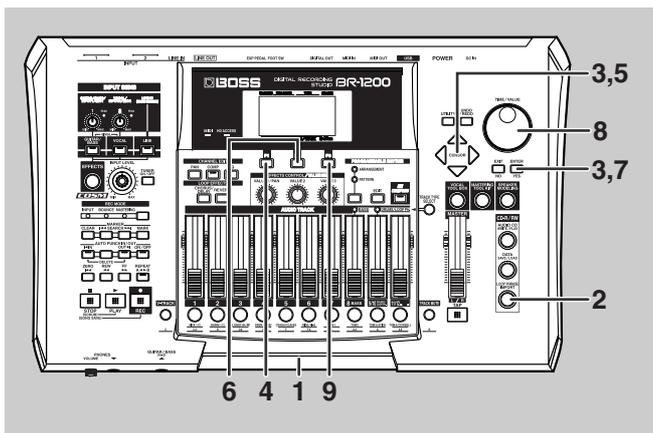


1. Insert a CD-ROM, CD-R, or CD-RW containing audio data in WAV or AIFF format into the BR-1200CD's CD-R/RW drive.

The drive's access indicator will begin to flash. Wait until this indicator stops flashing and turns off before proceeding.

2. Press CD-R/RW [LOOP PHRASE IMPORT].

The Loop Phrase Menu screen will appear.

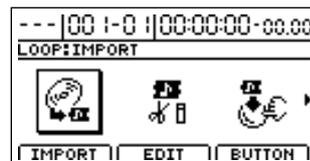

3. Move the cursor to the IMPORT icon and press [ENTER/YES].

Alternatively, you can press [F1] (IMPORT) if the IMPORT icon is currently displayed.

The Loop Phrase Import screen will appear, displaying a list of the WAV and AIFF files contained on the CD.



If files are grouped into different folders on this disc, the folder names are displayed together with the folder icon (■). To view the list of files within a folder, move the cursor to the corresponding folder name and press [ENTER/YES].

4. Press [F1] (TYPE) to change the type of audio file to be imported.


This button toggles between WAV and AIFF formats.

5. Position the cursor on the file you want to import.
6. If you would like to hear the audio contained in the file, press [F2] (PREVIEW).

The BR-1200CD will play the contents of the audio file (Preview). Press [ENTER/YES] once again when you want to stop playback.

7. When you have selected a file, press [ENTER/YES].

The screen for selecting the import-destination Loop Phrase appears.

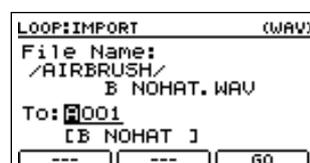

- Use the TIME/VALUE dial to select the Loop Phrase to which the data is to be imported.



- Press [F3] (GO).

The BR-1200CD will begin importing the selected file and creating the Loop Phrase.

To cancel writing while this operation is in process, press [EXIT/NO]. When the message "Cancel?" appears, press [ENTER/YES] to confirm cancellation. (A certain amount of time may pass between pressing of [EXIT/NO] and display of the confirmation message.)

When the message "Complete!" appears, it indicates that the Loop Phrase has been successfully created.

**MEMO**

In this case, the number of measures is set automatically according to the length of the imported Loop Phrase such that the BPM for these measures are as close to 120.0 as possible. For details regarding the modification of these settings, refer to "Modifying Loop Phrase settings" (p. 193).

**NOTE**

If the Loop Phrase selected for creation already contains data, this will be overwritten by the audio data from the source file. As it will not be possible to restore this data, care should be taken to ensure that important Loop Phrases are not accidentally overwritten in this way.

## Reading all files at once

- Carry out Step 1 through Step 4 above.

- Press [F3] (ALL).


All files will be selected.

However, if there is a total of more than fifty files present, only fifty files will be selected.



- Press [ENTER/YES].

The screen in which you select the import-destination Loop Phrase appears.

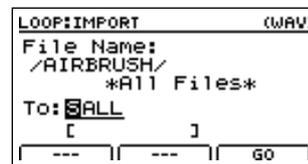

- Use the TIME/VALUE dial to select the Loop Phrase to which the data is to be imported.

**A through H:**

Loop Phrases from user banks A through H.

**S:**

Loop Phrases from the song bank. These phrases are saved with the song in which they are used.

- Press [F3] (GO).

The BR-1200CD will begin importing the selected files and creating the Loop Phrases. When the message "Complete!" appears, it indicates that the Loop Phrases have all been successfully created.

**NOTE**


- If any of the Loop Phrases in the selected bank already contain data, they will be overwritten by the audio data from the source files. As it will not be possible to restore this data, care should be taken to ensure that important Loop Phrases are not accidentally overwritten in this way.
- A maximum of 50 files can be read at any one time. If the number of files exceeds 50, only the first 50 files will be read in the operation described above.

## Specifying and modifying the source loop phrase (Time Modify)

You are able to change the playback tempo of an existing loop phrase and create a new loop phrase from that data.


### 1. Press CD-R/RW [LOOP PHRASE IMPORT].

The Loop Phrase Menu screen will appear.

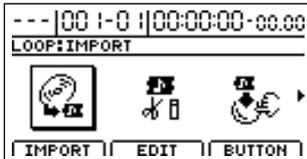

### 2. Move the cursor to TIME MOD icon and press [ENTER/YES].

The Loop Phrase Time Modify screen will be displayed.

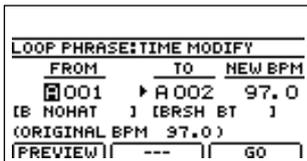

### 3. Move the cursor to the "FROM" and select the original loop phrase with the TIME/VALUE dial.

To modify all of the loop phrases in a bank at once, select the "ALL" indication.

At this point, if you press [F1] (PREVIEW), the loop phrase is played back. Press [ENTER/YES] to stop the playback.

### 4. Move the cursor to "TO," then with the TIME/VALUE dial select the destination for the new loop phrase to be created after the tempo is modified.

### 5. Move the cursor to "NEW BPM" and set the modified tempo you want using the TIME/VALUE dial.

The loop phrase's original BPM are indicated under the cursor position.

#### MEMO

- The modified tempo range is 0.75 to 1.5 times that of the original.
- If you had the "ALL" indicated in Step 3, then the original BPM is not given.

You can set tempos in a range of 0.75 to 1.5 times the tempos of the loop phrase in the selected bank. If different loop phrases in the bank have different tempos, you can make settings ranging from 0.75 times the fastest of the tempos in the bank to 1.5 times the slowest tempo. If the desired tempo cannot be set in the given range, "---" is indicated for the "NEW BPM" setting, meaning you cannot modify the tempo of any of the loop phrases in the bank.

Example 1)

The bank only contains loop phrases with a BPM setting of 100.

$$100 \times 0.75 = 75$$

$$100 \times 1.5 = 150$$

→ The allowed settings fall in the range from 75 and above and 150 and under (i.e., from 75 to 150).

Example 2)

The bank contains loop phrases with varying tempos, with BPM settings of 100, 120, and 140.

The fastest of these tempos is the BPM setting of 140.

$$140 \times 0.75 = 105$$

The slowest of these tempos is the BPM setting of 100.

$$100 \times 1.5 = 150$$

→ The allowed settings fall in the range from 105 and above and 150 and under (i.e., from 105 to 150).

Example 3)

The bank contains loop phrases with varying tempos, with BPM settings of 50, 100, and 200.

The fastest of these tempos is the BPM setting of 200.

$$200 \times 0.75 = 150$$

The slowest of these tempos is the BPM setting of 50.

$$50 \times 1.5 = 75$$

→ The allowed settings fall in ranges of 150 and above, and 75 and under; no tempo settings can be made in these ranges. "---" is indicated for the "NEW BPM" setting, and you cannot go on to make any tempo modifications.

### 6. Press [F3] (GO).

"Now Converting..." appears in the screen, and creation of the new loop phrase with the modified tempo begins.

The process is finished when "Complete!" is displayed.

Just as with other loop phrases, you can arrange and use newly created loop phrases in Rhythm Arrangements.



"Assembling Loop Phrases" (p. 202)

#### NOTE

- If additional recordings or edits have been made with respect to the currently selected song, the message "Save Current?" may appear. If you want to modify the loop phrase's tempo after the results of such recording and/or editing have been saved, press [ENTER/YES]. If you press [EXIT/NO], the recording/editing is lost.


## Modifying Loop Phrase settings

When a loop phrase is created, the number of measures is set automatically according to the length of the Loop Phrase such that the BPM for these measures are as close to 120.0 as possible. In addition, the start and end positions for playback of the Loop Phrase are set to the start and end of the audio data.

The following procedure can be used to modify any of these settings.

**1. Press CD-R/RW [LOOP PHRASE IMPORT].**


The Loop Phrase Menu screen will appear.

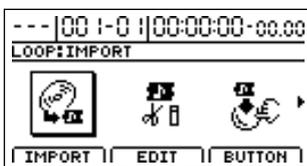


**2. Move the cursor to the EDIT icon and press [ENTER/YES].**

Alternatively, you can press [F2] (EDIT) if the EDIT icon is currently displayed.


The Loop Phrase Edit screen will appear.

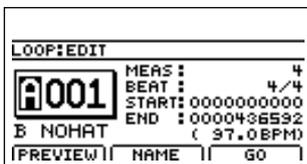

**3. Move the cursor to the Loop Phrase number and select the phrase to be edited using the TIME/VALUE dial.**

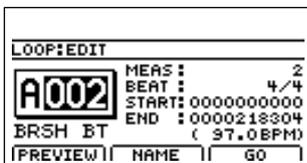

**4. Move the cursor to "MEAS" (length in measures) or "BEAT," and modify the setting using the TIME/VALUE dial.**

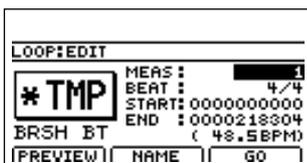

**5. Move the cursor to the start or end position for playback of the Loop Phrase, and modify the setting using the TIME/VALUE dial.**

The displayed values represent the number of samples from the beginning of the Loop Phrase.

On the BR-1200CD, 44100 samples correspond to one second of playback.

**MEMO**

The start and end positions of the Loop Phrase can be modified in units of 16 samples.

**NOTE**

It will not be possible to play back Loop Phrases with less than 0.5 seconds (or 22064 samples) between the start and end positions.

Press [F1] (PREVIEW) to start playback of the Loop Phrase and confirm that settings have been modified as required.

Press [ENTER/YES] once again when you want to stop playback.

**6. If you are going to change the name of the Loop Phrase, press [F2] (NAME).**

The Loop Phrase name screen will appear.



**7. Use [CURSOR] and the TIME/VALUE dial to change the name character by character.**

At this time, the FUNCTION buttons operate as follows.

**[F1] (INSERT):**

An empty space of one character in length will be inserted.

**[F2] (DELETE):**

A single character will be deleted.

**[F3] (A<=>a):**


The character type will toggle between uppercase and lowercase.

**8. Press [EXIT/NO] when you have finished making the change.**

The Loop Phrase Edit screen will appear once again.

**9. If you want to store your modified settings, press [F3] (GO).**

The message "Sure?" will appear.

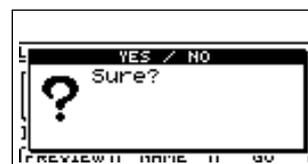

## Creating Loop Phrases

### 10. Press [ENTER/YES].

The modified settings will be saved, and when the message "Complete!" appears, it indicates that this operation has been completed.

#### NOTE


If you load a new song or turn off the BR-1200CD without saving in this way, all modified settings will be lost.

## Assigning Loop Phrases to track buttons

The input of Loop Phrases into rhythm arrangements can be made much simpler by allocating Loop Phrases to the buttons for Tracks 1 through 11/12. Note also that Loop Phrase allocation settings are saved with each specific song.


### 1. Press CD-R/RW [LOOP PHRASE IMPORT].

The Loop Phrase Menu screen will appear.

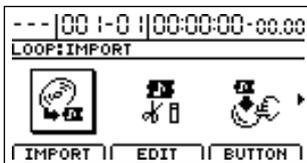


### 2. Move the cursor to the BUTTON icon and press [ENTER/YES].

The screen for allocating Loop Phrases to track buttons will appear.

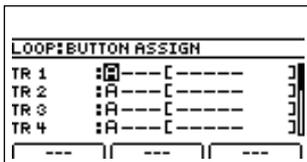

### 3. Move the cursor to the track whose button is to be assigned a Loop Phrase, and select the Loop Phrase's bank and number using the TIME/VALUE dial.

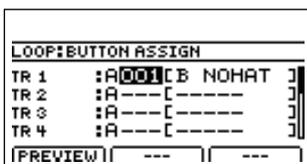

The selected Loop Phrase will now be assigned to the track button for the selected track.

You can now press this button to play the assigned Loop Phrase and confirm that all settings are as required.

To stop playback of the Loop Phrase, press the same track button once again.

#### MEMO


You can also play back the Loop Phrase by pressing [F1] (PREVIEW). Press [ENTER/YES] to stop playback.

### 4. If you wish to store the track button allocation, save the current song (p. 70).

## Copying Loop Phrases


### 1. Press CD-R/RW [LOOP PHRASE IMPORT].

The Loop Phrase Menu screen will appear.

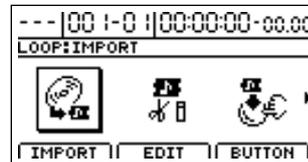

### 2. Move the cursor to the COPY icon and press [ENTER/YES].

The Loop Phrase Copy screen will appear.

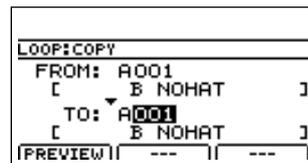

### 3. Use the TIME/VALUE dial to select the numbers of the Loop Phrases to be used as the copy source and destination.

When the cursor is positioned at the copy source or destination, you will be able to play the corresponding Loop Phrase by pressing [F1] (PREVIEW).

This function allows you to confirm that your settings are correct.

Press [ENTER/YES] once again when you want to stop playback.

### 4. Press [F3] (GO).

The Loop Phrase will now be copied, and when the message "Complete!" appears, it indicates that this operation has been completed.

#### NOTE

It is important to remember that the destination Loop Phrase will be completely overwritten by the Loop Phrase specified by "FROM:". As it will not be possible to restore the corresponding data, care should be taken to ensure that important Loop Phrases are not accidentally overwritten in this way.

- If you copied to a Loop Phrase in the song bank, you should now save the current song (p. 70).

### Copying all Loop Phrases in a bank

- When you select the Loop Phrase numbers as the copy source, turn the TIME/VALUE dial clockwise to select "ALL."
- Select the bank to which the Loop Phrases are to be copied.
- Press [F3] (GO).  
All Loop Phrases in the selected bank will now be copied.

**NOTE**


All Loop Phrases in the copy-destination bank will be overwritten in this process. As it will not be possible to restore the corresponding data, care should be taken to ensure that important Loop Phrases are not accidentally overwritten in this way.

- If you copied to the song bank, you should now save the current song (p. 70).

## Erasing Loop Phrases


- Press CD-R/RW [LOOP PHRASE IMPORT].

The Loop Phrase Menu screen will appear.

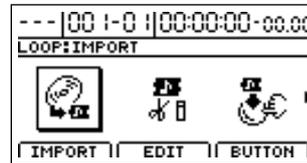

- Move the cursor to the ERASE icon and press [ENTER/YES].

The Loop Phrase Erase screen will appear.

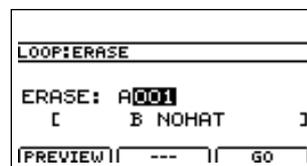

- Select the Loop Phrase to be deleted using the TIME/VALUE dial.

If you press [F1] (PREVIEW) at this time, you will be able to play the selected Loop Phrase. This function allows you to confirm that your loop-phrase selection is correct. Press [ENTER/YES] once again when you want to stop playback.

**MEMO**

If you want to erase all of the Loop Phrases in a specific bank, move the cursor to the Loop Phrase number field, and then turn the TIME/VALUE dial clockwise to display "ALL."

- Press [F3] (GO).

The message "Sure?" will appear.

- Press [ENTER/YES].

The Loop Phrase(s) will now be erased, and when the message "Complete!" appears, it indicates that this operation has been completed.

**NOTE**

It will not be possible to restore data erased in this way; accordingly, care should be taken to ensure that important Loop Phrases are not accidentally erased.

# Setting the Universal Beat for Drums, Bass, and Loop Phrases

Although every drum, bass, and Loop Phrase pattern has its own beat setting, there is also a universal beat setting that can be applied to all drum and bass patterns and Loop Phrases as a whole.

When drum, bass, and loop phrase patterns are played simultaneously in Pattern mode, they are not played according to any of their individual beat settings, but instead conform to one beat setting that is applied to them all.

## Example 1) Universal Beat Set to 4/4

1 2 3 4 → 1 2 3 4 1 2 3 4 1 2 3 4

Drum Pattern 4 / 4

1 2 3 → 1 2 3 1 2 3 1 2 3

Bass Pattern 3 / 4  
The fourth beat is not played, but is filled by a rest.

1 2 3 4 5 → 1 2 3 4 1 2 3 4 1 2 3 4

Loop Phrase 5 / 4  
The Loop Phrase plays only through the fourth beat.

## Example 2) Universal Beat Set to 5/4

1 2 3 4 → 1 2 3 4 1 2 3 4 1 2 3 4

Drum Pattern 4 / 4  
The fifth beat is not played, but is filled by a rest.

1 2 3 → 1 2 3 1 2 3 1 2 3

Bass Pattern 3 / 4  
The fourth and fifth beats are not played, but are filled by rests.

1 2 3 4 5 → 1 2 3 4 5 1 2 3 4 5 1 2 3 4 5


Loop Phrase 5 / 4

The universal pattern beat is set at the factory to 4/4. You can change this setting using the following procedure.

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the PATTERN indicator is lighted. (Pattern mode)

2. Press PROGRAMMABLE RHYTHM [EDIT].

The Pattern Selection screen will appear.

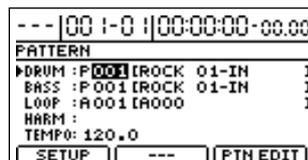

3. Press [F1] (SETUP).

The dialog for pattern setup will appear.



4. Move the cursor to "Beat" and use the TIME/VALUE dial to set a beat.

The beat can be set in a range from 1/1 to 8/8.


5. Press [EXIT/NO] several times to return to the top screen.

6. If you wish to store the beat setting, save the current song (p. 70).

# Using rhythm arrangements

## Selecting a rhythm arrangement

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the ARRANGEMENT indicator is lighted. (Arrangement mode)
2. Press PROGRAMMABLE RHYTHM [EDIT].  
The Rhythm Arrangement Selection screen will appear.

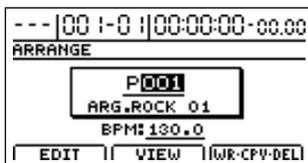

3. Move the cursor to the rhythm arrangement number and use the TIME/VALUE dial to select the number of the desired rhythm arrangement.



### NOTE

The user rhythm arrangements and song rhythm arrangements contained in the BR-1200CD at the time of purchase are empty; you won't hear anything if you select one of them. Be sure to select a preset rhythm arrangement here if you want to hear immediate playback.

4. Press the track buttons for Tracks 8 and 9/10 several times until they are lighted.  
Pressing a button repeatedly allows you to cycle it through the possible statuses, which are: Off → Flashing → Lighted.  
**Off:**  
No rhythm arrangement will be played.  
**Flashing:**  
Rhythm arrangement will be played only when the BR-1200CD is recording or performing.  
**Lighted:**  
Rhythm arrangement will be always played even when the BR-1200CD is not recording or performing.
5. Raise the faders for Tracks 8 and 9/10 to suitable levels.  
These tracks will now be set up for playback of a rhythm arrangement.
6. Press [PLAY] to start playback.  
The drum pattern and bass pattern comprising the rhythm arrangement will now be played.

### NOTE

No Loop Phrases are included in preset rhythm arrangements, and for this reason, there will be no playback from the Loop Phrase track.  
If you would also like to hear a Loop Phrase, select either a user rhythm arrangement or a song rhythm arrangement, and then assign a Loop Phrase to it. ("Assembling Loop Phrases" (p. 202))


## Changing the rhythm arrangement tempo

Two different methods can be used to set the rhythm arrangement's tempo—namely, setting of a fixed tempo for the overall song and setting of tempos for individual measures (Tempo Map (p. 209)).

The following section will describe the method for setting a fixed tempo.

### NOTE

It is important to remember that whenever a fixed tempo is set, all tempos previously set for individual measures will be permanently overwritten with this new tempo.

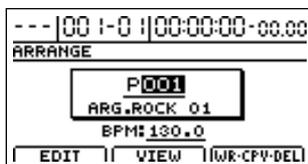1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the ARRANGEMENT indicator is lighted. (Arrangement mode)
  2. Press PROGRAMMABLE RHYTHM [EDIT].  
The Rhythm Arrangement Selection screen will appear.
- 
3. Move the cursor to "BPM" and select a suitable tempo using the TIME/VALUE dial.  
You will be able to hear how your new setting changes the playback tempo.  
The tempo can be set anywhere within a range of 25.0 to 250.0 BPM. (Beats Per Minute—A value that indicates the tempo in terms of the number of quarter notes occurring in one minute.)
  4. After you have set the tempo, press [EXIT/NO] several times to return to the top screen.
  5. If you wish to store the rhythm arrangement's tempo, save the current rhythm arrangement (p. 207).



The tempo set for Pattern mode (p. 159, p. 173, p. 187) and the tempo set for Arrangement mode are handled separately.

### Setting the tempo using [TAP]

In addition to setting the tempo using [CURSOR] and the TIME/VALUE dial, you can also set it by tapping your finger on [TAP] at the desired tempo. (Tap Tempo)

This feature proves extremely useful when you want to match the playback tempo to that of an audio CD but don't know the actual BPM value.

To set the tempo in this way, tap your finger on [TAP] four times with approximately the same interval between each tap. The tempo will be set based on the average tapping interval.

# Creating rhythm arrangements

If you cannot find a rhythm arrangement that suits your song among the BR-1200CD's preset rhythm arrangements, you can easily create an original arrangement as described below.

## NOTE


- “\*TMP” appears for the rhythm arrangement immediately after its data is recorded or edited. If you try to select a different rhythm arrangement with the TIME/VALUE dial while the cursor is positioned above this, the cursor turns white. If you press [ENTER/YES] at this point, the cursor reverts to black, and the rhythm arrangement number is confirmed. If you do not want to confirm it, press [EXIT/NO]; “\*TMP” is indicated again, and the rhythm arrangement reverts to the state it was in immediately after editing. This allows you to avoid inadvertently erasing data you have edited.
- From now on, you cannot use the Undo function (p. 81) for creating or editing rhythm arrangements. Please make sure to create or edit data with a special care.

## Assembling drum and bass patterns

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the ARRANGEMENT indicator is lighted. (Arrangement mode)


2. Press PROGRAMMABLE RHYTHM [EDIT].

The Rhythm Arrangement Selection screen will appear.

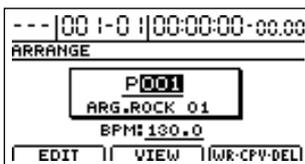


3. Press [F2] (VIEW).

The Rhythm Arrangement View screen will appear.

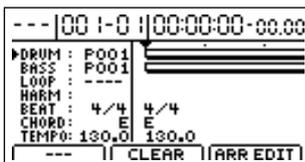


4. The Arrangement View Edit screen appears.

- To arrange drum patterns, move the cursor to “DRUM” and press [F3] (ARR EDIT).
- To arrange bass patterns, move the cursor to “BASS” and press [F3] (ARR EDIT).
- To arrange Loop Phrases, move the cursor to “LOOP” and press [F3] (ARR EDIT).

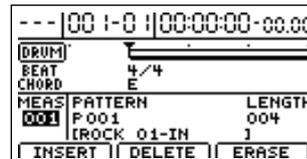

You can arrange patterns a measure at a time in this screen.

5. Move the cursor to “MEAS” and select a measure using the TIME/VALUE dial.
6. Move the cursor to “NO.” and select a pattern number using the TIME/VALUE dial.

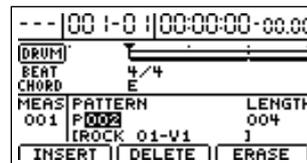

The selected pattern will now be assigned to the selected measure.

7. Move the cursor to “LENGTH” and set the length of the selected pattern as a number of measures.

Note that when the length is changed in this way, the position of all patterns assigned to subsequent measures will also change accordingly.

8. To delete a pattern, move the cursor to the measure to which that pattern is assigned, then press either [F2] (DELETE) or [F3] (ERASE).

### [F2] (DELETE):

The pattern allocation will be canceled and all subsequent pattern allocations will be shifted forward by one measure.

### [F3] (ERASE):

The pattern allocation will be canceled, leaving an empty measure where the pattern had been.

9. When you have assembled patterns as required, press [EXIT/NO] to return to the Rhythm Arrangement View screen.

10. To save the pattern assignments, continue with the procedure described in “Naming and saving rhythm arrangements” (p. 207).

## Erasing All Pattern Assignments at One Time

To erase all pattern assignments at one time, carry out the following procedure in the Rhythm Arrangement View screen.

1. Move the cursor to the type of pattern you want to erase ("DRUM," "BASS," or "LOOP"), then press [F2] (CLEAR).

The message "Sure?" will appear.

2. Press [ENTER/YES].

All patterns of the type indicated by the cursor position are erased.

## Inserting patterns

Use the following procedure in the screen for assembling drum patterns, bass patterns, or loop phrases into rhythm arrangements to insert a new pattern between two that have already been positioned.

1. Move the cursor to "MEASURE" and select the measure for insertion using the TIME/VALUE dial.

2. Press [F1] (INSERT).

A one-measure length pattern (P001) or Loop Phrase (A001) is inserted.

3. Move the cursor to "PATTERN" (for drums or bass) or "NO." (for Loop Phrases), then use the TIME/VALUE dial to select the desired pattern.


## Inputting chords

Simply assembling bass patterns into rhythm arrangements will result in the same bass line being repeated over and over. By also inputting chords at the correct positions, you can have your BR-1200CD automatically adjust the bass performance to notes that match the chord progression.

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the ARRANGEMENT indicator is lighted. (Arrangement mode)


2. Press PROGRAMMABLE RHYTHM [EDIT].

The Rhythm Arrangement Selection screen will appear.

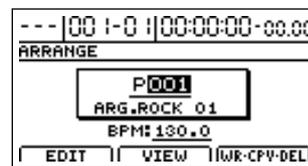


3. Press [F2] (VIEW).

The Rhythm Arrangement View screen will appear.

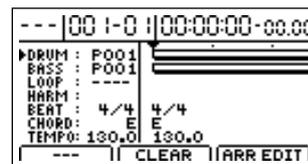

4. Move the cursor to "CHORD" and press [F3] (MAP EDIT).

The Chord Map screen will appear.

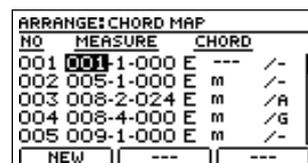

5. Use track buttons 1 through 11/12 to input the note names for chords.

In addition, you can also turn the TIME/VALUE dial while a track button is being held to select different types of chords.

### Selectable chord types

--- (N.C)	Maj	m	7	sus4
dim	aug	M7	M9	add9
6	6(9)	7sus4	7b5	7(13)
9	7b9	7#9	m7	m7b5
m6	m6(9)	madd9	m9	mM7
mM9	aug7			

**MEMO**

• ---- (N.C., non-chord)

Select this type of chord if you want the original Bass Pattern to be played without a chord setting. Normally, when a chord type of root "C" is set to "----," the original performance data is played as is. However, when the root is any note other than "C" and non-chord is selected, the original performance data will be adjusted according. For example, if the root is "D," the Bass Pattern will be adjusted up one tone for playback.

- If you release a track button without making a chord type selection, "---- (N.C.)" will be selected automatically.

Each time you release a track button, the chord input position will be automatically moved forward by a single measure.

This function allows you to conveniently enter chord progressions.

6. When you have input all of the desired chords, press [EXIT/NO] to return to the Rhythm Arrangement Edit screen.

7. Start playback on the BR-1200CD.

If the current rhythm arrangement contains a bass pattern, the bass part will be automatically adjusted to follow the chord progression.

8. To save the input chord progression, continue with the procedure described in "Naming and saving rhythm arrangements" (p. 207).

**MEMO**

- Only one chord progression can be saved per rhythm arrangement.
- Chord sequences input as described above will also be used for the Vocal Tool Box's harmony sequence (p. 136).

## Changing and moving chords

1. On the Chord map screen, move the cursor to the measure/beat/tick field and change the position using the TIME/VALUE dial.

NO	MEASURE	CHORD	
001	001-1-000	E ---	/-
002	005-1-024	E m	/-
003	008-2-024	E m	/A
004	008-4-000	E m	/G
005	009-1-000	E m	/-

2. Move the cursor to the chord field and change the chord type using the TIME/VALUE dial.

NO	MEASURE	CHORD	
001	001-1-000	E ---	/-
002	005-1-024	<b>E m</b>	/-
003	008-2-024	E m	/A
004	008-4-000	E m	/G
005	009-1-000	E m	/-

On bass chord

To input chords with On Bass Chord, move the cursor to the right and select the chord name with the TIME/VALUE dial.

**NOTE**

- The location of the first chord is always fixed at 001-1-00; this position cannot be changed.
- You cannot bypass a chord and move to a different position when there are chords programmed in the positions before and after it. In addition, you cannot move a chord to the same position already occupied by another chord.

## Deleting chords

Use the following procedure to delete any chords that have been input incorrectly.

1. On the Chord Input screen, move the cursor to the chord you want to delete.

NO	MEASURE	CHORD	
001	001-1-000	E ---	/-
002	005-1-000	E m	/-
003	008-2-024	E m	/A
004	008-4-000	E m	/G
005	009-1-000	E m	/-

2. Press [F3] (DELETE).

The selected chord will be deleted.

The positions of chords after the deleted chord will not change as a result of this action.

**NOTE**

You cannot delete the first chord.

## Inserting chords

Use the following procedure to insert a new chord between two existing chords.

1. On the Chord Input screen, move the cursor to the chord immediately in front of the insertion position.

```

ARRANGE: CHORD MAP
NO  MEASURE  CHORD
001 001-1-000 E --- /-
002 005-1-000 E m  /-
003 008-2-024 E m  /A
004 008-4-000 E m  /G
005 009-1-000 E m  /-
NEW  ---  DELETE
    
```

2. Press [F1] (NEW).

A chord will be inserted and the cursor will be moved to this chord.

```

ARRANGE: CHORD MAP
NO  MEASURE  CHORD
001 001-1-000 E --- /-
002 005-1-000 E m  /-
003 005-1-000 E m  /-
004 008-2-024 E m  /A
005 008-4-000 E m  /G
NEW  ---  DELETE
    
```

3. You can now use [CURSOR], the TIME/VALUE dial, and the track buttons to set the chord's position, type, and note names.

## Assembling Loop Phrases

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the ARRANGEMENT indicator is lighted. (Arrangement mode)
2. Press PROGRAMMABLE RHYTHM [EDIT].  
The Rhythm Arrangement Selection screen will appear.

```

---|00 1-0 |00:00:00-00.00
ARRANGE
P001
ARG. ROCK 01
BPM: 130.0
EDIT  VIEW  IWR-CPV-DEL
    
```

3. Press [F2] (VIEW).

The Rhythm Arrangement View screen will appear.

```

---|00 1-0 |00:00:00-00.00
DRUM: P001
BASS: P001
LOOP: ----
ARRM:
BEAT: 4/4 4/4
CHORD: E
TEMPO: 130.0 130.0
---  CLEAR  IARR EDIT
    
```

4. Move the cursor to "LOOP" and press [F3] (ARR EDIT).

The screen for allocating Loop Phrases to rhythm arrangements will appear.

```

00 |002-0 |00:00:02-00.00
[LOOP]
BEAT 4/4
CHORD E
MEAS NO. LEN VOL POS TEMPO
002  -----
|-----|
INSERT  DELETE  ERASE
    
```

This screen allows you to assemble Loop Phrases in units of one measure.

5. Move the cursor to "MEASURE" and select a measure using the TIME/VALUE dial.

```

00 |002-0 |00:00:02-00.00
[LOOP]
BEAT 4/4
CHORD E
MEAS NO. LEN VOL POS TEMPO
002  -----
|-----|
INSERT  DELETE  ERASE
    
```

6. Move the cursor to "NO." and select a Loop Phrase using the TIME/VALUE dial.

```

---|002-0 |00:00:0 1-29.38
[LOOP]
BEAT 4/4
CHORD E
MEAS NO. LEN VOL POS TEMPO
002  A001 001 100 TOP  OM
    |B NOHAT  |
INSERT  DELETE  ERASE
    
```

The selected Loop Phrase will now be assigned to the selected measure.

**MEMO**

**Simplifying Loop Phrase input**

When Loop Phrases are assigned to the track buttons, you will be able to use the track buttons to conveniently input Loop Phrases. In such a case, the length of the Loop Phrase will be set as the number of measures that it contains. For instructions for assigning Loop Phrases to the track buttons, refer to "Assigning Loop Phrases to track buttons" (p. 194).

**7. Move the cursor to "LEN" and set the length of the selected Loop Phrase as a number of measures.**

Note that when the length is changed in this way, the position of all Loop Phrases assigned to subsequent measures will also change accordingly.

**8. Move the cursor to "VOL" and select a suitable volume for the Loop Phrase using the TIME/VALUE dial.**

Although it is quite acceptable to leave the volume at 100, adjustment may need to be carried out when the volume of the Loop Phrase is much louder or quieter than that of the other tracks being played.

**9. Move the cursor to "POS" and select "TOP" or "BOTTOM" using the TIME/VALUE dial.**

**POS (POSITION)**

In cases where the Loop Phrase that has been input is less than one measure in length, this parameter determines whether it will be aligned with the beginning or end of the measure.

**TOP:**

The Loop Phrase is aligned with the beginning of the measure.

**BOTTOM:**

The Loop Phrase is aligned with the end of the measure.

**10. Move the cursor to "TEMPO" and select "ON" or "OFF" using the TIME/VALUE dial.**

**TEMPO**

**ON:**

The speed of Loop Phrase playback will be automatically adjusted to synchronize the Loop Phrase with the rhythm arrangement's tempo. This is the standard setting.

**OFF:**

The Loop Phrase will be played back at its own speed setting regardless of the rhythm arrangement's tempo.

**NOTE**

- When "ON" has been selected, the speed of Loop Phrase playback will be automatically adjusted to match the rhythm arrangement tempo. Loop Phrases can be adjusted to any tempo within a range of 0.75 to 1.5 times its own tempo. Accordingly, if the adjusted playback speed would result in a tempo outside this range, the Loop Phrase will be played back at either the range's upper or lower limit. In such a case, Loop Phrase playback will not be synchronized with the playback of the other rhythm arrangement components (i.e., drums and bass).
- The quality of Loop Phrase playback may be reduced when the adjusted tempo differs considerably from the original tempo.
- When the rhythm arrangement is set to a faster tempo than that of the Loop Phrase, it will become necessary to read hard-disk data for Loop Phrase playback at a faster rate than normal, and this will increase the probability of a "Drive Busy!" (p. 340) message being displayed. In such a case, the Loop Phrase can be copied to an audio track to reduce the load on the BR-1200CD's hard disk. For more details regarding this operation, refer to "Copying a Loop Phrase from a rhythm arrangement to an audio track" (p. 204).

**11. Repeat Steps 5 through 10 to arrange Loop Phrases as required.**

**12. Play the song from the beginning.**

As the BR-1200CD performs playback, you will be able to hear Loop Phrases playing along with your song; however, Loop Phrases will not be played back when the BR-1200CD is stopped.

**13. To save your Loop Phrase allocations, carry out the procedure described below in "Naming and saving rhythm arrangements" (p. 207).**

### Canceling Loop Phrase allocations

If you want to cancel the Loop Phrase allocations that you have made, return to the screen for assembling Loop Phrases into rhythm arrangements, and then carry out the following procedure.

1. Move to the measure contain the Loop Phrase to be removed, and then press either [F2] (DELETE) or [F3] (ERASE).

#### [F2] (DELETE):

The Loop Phrase allocation will be canceled and all subsequent Loop Phrase allocations will be shifted forward by one measure.

#### [F3] (ERASE):

The Loop Phrase allocation will be canceled, leaving an empty measure where the Loop Phrase had been.

### Inserting Loop Phrases

Use the following procedure in the screen for assembling Loop Phrases into rhythm arrangements to insert a new Loop Phrase between two that have already been positioned.

1. Move the cursor to "MEASURE" and select the measure for insertion using the TIME/VALUE dial.
2. Press [F1] (INSERT).  
An empty space of one measure in length will be inserted.
3. Move the cursor to "NO." and select the desired Loop Phrase using the TIME/VALUE dial.

### Copying a Loop Phrase from a rhythm arrangement to an audio track


When one or more Loop Phrases have been assembled into the currently selected rhythm arrangement, you can copy the complete loop-phrase assembly as audio data to one of the BR-1200CD's audio tracks.

#### NOTE

- The speed of Loop Phrase playback will be automatically adjusted to the tempo of the rhythm arrangement. Since this process increases the rate at which data must be read from the hard disk, the probability of a "Drive Busy!" message being displayed also increases. This will be particularly noticeable in cases where the rhythm arrangement's tempo is considerably faster than the Loop Phrase's original tempo and cases where short Loop Phrases are played back repeatedly. If, however, you copy the Loop Phrase arrangement to an audio track, the load placed on the hard disk during playback can be reduced, and the "Drive Busy!" message will be displayed much less frequently.
- Only Loop Phrases can be copied in this way—in other words, you will not be able to copy drum or bass patterns to an audio track.
- Even if the tempo is subsequently changed, the playback speed of audio data created in this way will not be affected. For this reason, before copying Loop Phrase arrangements to an audio track, it is important that you set the tempo carefully and make sure that it will not need to be adjusted again.

1. Press CD-R/RW [LOOP PHRASE IMPORT].

[LOOP PHRASE IMPORT] will light up and the Loop Phrase screen will appear.

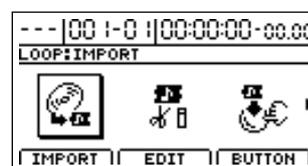


2. Move the cursor to the TO TRACK icon and press [ENTER/YES].


Alternatively, you can press [F1] (TO TRACK).

A screen for selecting the destination track will appear.


3. Use [CURSOR] and the TIME/VALUE dial to specify the copy-destination track.

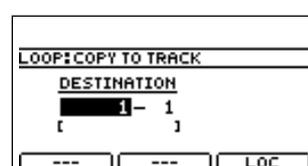

4. Press [F3] (LOC).

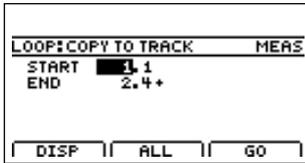

5. Use [CURSOR] and the TIME/VALUE dial to specify the copy range.

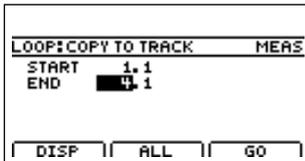

Pressing [F1] (DISP) at this time will allow you select how the positions will be specified (i.e., by measure, time, or marker).

The following parameters should now be set.

**START (Start point):**

This parameter is used to specify the start point of the audio data to be copied.

**END (End point):**

This parameter is used to specify the end point of the audio data to be copied.

If time values are used to specify the above points and you then switch the specification method to measures or markers, a plus (+) character may be displayed to warn that indicated positions and actual positions are not the same. If you want to specify points using measures or markers, this discrepancy can be eliminated by using the TIME/VALUE dial to make settings in each of the relevant screens.

If you want to set the range as extending from the start of the song to the end of the Loop Phrase(s), press [F2] (ALL).

6. Once you've made all the necessary settings, press [F3] (GO).

The message "Now Copying..." will appear on the display and copying to the audio track will begin.

To cancel writing while this operation is in process, press [EXIT/NO]. When the message "Cancel?" appears, press [ENTER/YES] to confirm cancellation. (A certain amount of time may pass between pressing of [EXIT/NO] and display of the confirmation message.)

When the message "Complete!" appears, it indicates that copying has been completed.

**NOTE**

Once audio data has been copied to an audio track in this way, it will not be possible to change its tempo at a later time.

**MEMO**

If you are not happy with the results of a copy operation, you can use Undo to cancel it. ("Undo" (p. 81))

7. Press the track button for Track 9/10 several times until it turns off.

The Loop Phrase will now be turned off.

8. Raise the fader for the copy-destination track to a suitable level.

9. Press [PLAY] to start playback.

The copied Loop Phrase will be played back from the copy-destination track.

10. If you wish to store the results of the copy operation, save the current song (p. 70).

**NOTE**


Unless the song is saved, the copied audio will be lost when the BR-1200CD is turned off or a new song is loaded.

## Modifying all of the loop phrases in the current rhythm arrangement (Arrangement Modify)

If you have already set up a rhythm arrangement using loop phrases, you can modify all of the loop phrases used in that rhythm arrangement at one time.


### 1. Press CD-R/RW [LOOP PHRASE IMPORT].

The Loop Phrase screen will appear.

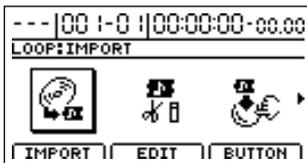

### 2. Move the cursor to ARR.MOD icon and press [ENTER/YES].

The Loop Phrase Arrangement Modify screen will be displayed.

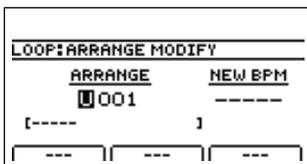

### 3. Move the cursor to "ARRANGE" and select the rhythm arrangement whose tempo you want to modify using the TIME/VALUE dial.

U001–U010: User Rhythm Arrangement  
S001–S010: Song Rhythm Arrangement

#### NOTE

You cannot select a preset rhythm arrangement.

### 4. Move the cursor to "NEW BPM" and set the modified tempo you want using the TIME/VALUE dial.

The modified tempo range is 0.75 to 1.5 times that of the loop phrases contained in the rhythm arrangement. If different loop phrases have different tempos, you can make settings ranging from 0.75 times the fastest of the tempos to 1.5 times the slowest tempo. If the desired tempo cannot be set in the given range, "---" is indicated for the "BPM" setting, meaning you cannot modify the tempo of any of the loop phrases.

Example 1)

The rhythm arrangement only contains loop phrases with a BPM setting of 100.

$$100 \times 0.75 = 75$$

$$100 \times 1.5 = 150$$

→ The allowed settings fall in the range from 75 and above and 150 and under (i.e., from 75 to 150).

Example 2)

The rhythm arrangement contains loop phrases with varying tempos, with BPM settings of 100, 120, and 140.

The fastest of these tempos is the BPM setting of 140.

$$140 \times 0.75 = 105$$

The slowest of these tempos is the BPM setting of 100.

$$100 \times 1.5 = 150$$

→ The allowed settings fall in the range from 105 and above and 150 and under (i.e., from 105 to 150).

Example 3)

The rhythm arrangement contains loop phrases with varying tempos, with BPM settings of 50, 100, and 200.

The fastest of these tempos is the BPM setting of 200.

$$200 \times 0.75 = 150$$

The slowest of these tempos is the BPM setting of 50.

$$50 \times 1.5 = 75$$

→ The allowed settings fall in ranges of 150 and above, and 75 and under; no tempo settings can be made in these ranges. "---" is indicated for the "BPM" setting, and you cannot go on to make any tempo modifications.

### 5. Press [F3] (GO).

"Now Converting..." appears in the screen, and creation of the new loop phrase with the modified tempo begins.

The process is finished when "Complete!" is displayed.

#### NOTE

- In this case, the original loop phrases are overwritten by the modified loop phrases. For example, if the loop phrases A001, B003, and S005 are used in a rhythm arrangement, the newly created loop phrases become A001, B003, and S005, and the original A001, B003, and S005 are deleted. Take care to note that once loop phrases are overwritten, the procedure cannot be undone, and there is no way to recover the previous loop phrases.
- If additional recordings or edits have been made with respect to the currently selected song, the message "Save Current?" may appear. If you want to modify the loop phrase's tempo after the results of such recording and/or editing have been saved, press [ENTER/YES]. If you press [EXIT/NO], the recording/editing is lost.


## Naming and saving rhythm arrangements

The following section describes how to name and save the rhythm arrangements that you create.


### NOTE

Unless the song is saved, all rhythm arrangement data will be lost when a different rhythm arrangement is selected or a new song is loaded. In addition, this data will also be lost if you turn off the BR-1200CD before saving your data. It is a good idea, therefore, to regularly save rhythm arrangements that you intend to use again.

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the ARRANGEMENT indicator is lighted. (Arrangement mode)
2. Press PROGRAMMABLE RHYTHM [EDIT].  
The Rhythm Arrangement Selection screen will appear.

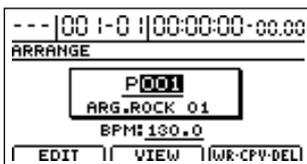

3. Press [F1] (EDIT).  
The Rhythm Arrangement Edit screen will appear.

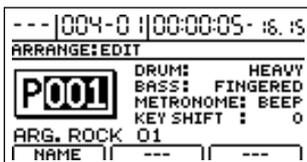

4. Press [F1] (NAME).  
The Rhythm Arrangement Name screen will appear.



5. Use [CURSOR] and the TIME/VALUE dial to change the name character by character.  
At this time, the FUNCTION buttons operate as follows.

### [F1] (INSERT):

An empty space of one character in length will be inserted.


### [F2] (DELETE):

A single character will be deleted.

### [F3] (A<=>a):

The character type will toggle between uppercase and lowercase.

6. Once you've made all the desired modifications, press [EXIT/NO] twice.  
The Rhythm Arrangement Selection screen will appear once again.
7. Press [F3] (WR•CPY•DEL).  
The Write screen for rhythm arrangements will appear.

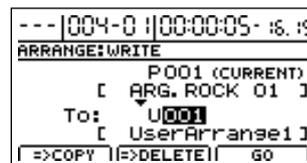

8. Use the TIME/VALUE dial to select the rhythm arrangement to which the data is to be saved.

### NOTE

Only user rhythm arrangements and song rhythm arrangements may be selected for saving rhythm arrangement data. You will not be able to select a preset rhythm arrangement at this time.

9. Press [F3] (GO).

The rhythm arrangement will be saved. When the message "Complete!" appears, it indicates that saving has been completed.

## Copying a rhythm arrangement

1. Press [F3] (WR•CPY•DEL) on the Rhythm Arrangement Edit screen.

2. Press [F1] (=>COPY).

The Copy screen for rhythm arrangements will appear.

```
---|004-0|00:00:05- 16.15
ARRANGE: COPY
From: P001 (CURRENT)
     [ ARG. ROCK 01 ]
To:   U001
     [ UserArrang#1 ]
[=>WRITE] [=>DELETE] [ GO ]
```

3. Move the cursor to the “From:” field and select the rhythm arrangement to be copied using the TIME/VALUE dial.

4. Move the cursor to “To:” and use the TIME/VALUE dial to select the rhythm arrangement to which the data is to be copied.

### NOTE

Only user rhythm arrangements and song rhythm arrangements may be selected as copy destinations. In other words, you will not be able to select a preset rhythm arrangement at this time.

5. Press [F3] (GO).

Copying of the rhythm arrangement will begin. When the message “Complete!” appears, it indicates that copying has been completed.

### NOTE

The rhythm arrangement selected as the copy destination will be overwritten in this process. As it will not be possible to restore the corresponding data, care should be taken to ensure that important rhythm arrangements are not accidentally overwritten in this way.

## Deleting a rhythm arrangement

1. Press [F3] (WR•CPY•DEL) on the Rhythm Arrangement Edit screen.

2. Press [F2] (=>DELETE).

The Delete screen for rhythm arrangements will appear.

```
---|004-0|00:00:05- 16.15
ARRANGE: DELETE
Delete: U001
      [ UserArrang#1 ]
[=>WRITE] [=>COPY] [ GO ]
```

3. Select the rhythm arrangement to be deleted using the TIME/VALUE dial.

```
---|004-0|00:00:05- 16.15
ARRANGE: DELETE
Delete: U002
      [ UserArrang#2 ]
[=>WRITE] [=>COPY] [ GO ]
```

4. Press [F3] (GO).

The message “Sure?” will appear.

```
---|004-0|00:00:05- 16.15
MESSAGE
Sure?
[ENTER]
```

5. If you are sure you want to delete the rhythm arrangement, press [ENTER/YES].

Press [EXIT/NO] to cancel deletion.

The rhythm arrangement will be deleted. When the message “Complete!” appears, it indicates that the deletion has been completed.

### NOTE

- Preset rhythm arrangements cannot be deleted.
- As it will not be possible to restore deleted rhythm arrangements, care should be taken to ensure that important arrangements are not accidentally deleted.

# Setting tempos and beats for individual measures (Tempo Map/Beat Map)

In addition to setting of a single tempo and beat for an entire rhythm arrangement, the BR-1200CD can also set these playback parameters more precisely on a measure-by-measure basis.

## MEMO

If a single tempo and beat can be used from the beginning to the end of your rhythm arrangement, there is no particular need to set up a Tempo Map or a Beat Map.


## Setting tempos for individual measures (Tempo Map)

The Tempo Map function is used to set tempos for individual measures. This type of map arranges tempos on a measure-by-measure basis, and it can be saved together with the rhythm arrangement.

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the ARRANGEMENT indicator is lighted. (Arrangement mode)


2. Press PROGRAMMABLE RHYTHM [EDIT].

The Rhythm Arrangement Selection screen will appear.

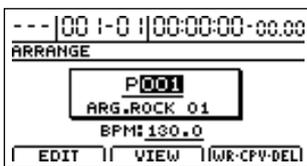


3. Press [F2] (VIEW).

The Rhythm Arrangement View screen will appear.

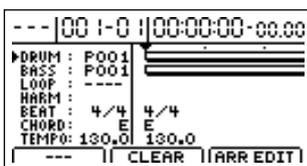

4. Move the cursor to "TEMPO" and press [F3] (MAP EDIT).

The Tempo Map screen will appear.

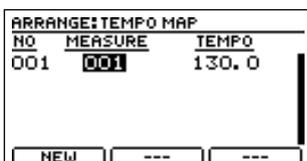

If no tempo map has been set for this song, a single tempo will be created at the start of the map.

5. Move the cursor to the tempo map entry to be edited.

6. Move the cursor to the parameter whose setting you want to change and select a new value using the TIME/VALUE dial.

## MEASURE:

This parameter sets the measure position for the change in tempo, and it can be set within a range of 1 to 999. The position of the first tempo map entry is fixed at "1" and cannot, therefore, be changed.

## NOTE

You can create up to 50 tempo maps.

If the same tempo is used for multiple consecutive measures, do not set a separate tempo map for each measure, but make a single setting for the entire group of measures.

## TEMPO:

This parameter sets the tempo as a BPM (beats per minute) value with a range of 25.0 to 250.0.

### ● Adding new tempo map entries

Press [F1] (NEW). A new entry will be added to the tempo map immediately after the cursor's current position.

### ● Deleting tempo map entries

Press [F3] (DELETE). The tempo map entry at the current cursor position will be deleted. Note that it will not be possible to delete the first entry in a tempo map.

7. Once you've made all the desired tempo map settings, press [EXIT/NO] to return to the Rhythm Arrangement Edit screen.

8. If you wish to store the edited tempo map, save the current rhythm arrangement (p. 207).

## NOTE


- Unless the song is saved, all of your edited tempo map data will be lost when a different rhythm arrangement is selected or a new song is loaded. In addition, this data will also be lost if you turn off the BR-1200CD before saving.
- Whenever a fixed tempo is set for an entire rhythm arrangement, all tempos previously set in the tempo map will be permanently overwritten with this new tempo.
- Tempo map settings will be ignored whenever SYNC TRACK is being used. To ensure that the tempo map is used, set "SYNC SOURCE" to "TEMPO MAP." ("Synchronizing a MIDI device by recording its tempo changes on the BR-1200CD (Sync Track)" (p. 248))

## Setting beats for individual measures (Beat Map)


The Beat Map function is used to set beats for individual measures. This type of map arranges beats on a measure-by-measure basis, and it can be saved together with the rhythm arrangement.

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the ARRANGEMENT indicator is lighted. (Arrangement mode)


2. Press PROGRAMMABLE RHYTHM [EDIT].  
The Rhythm Arrangement Selection screen will appear.

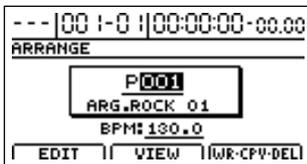

3. Press [F2] (VIEW).  
The Rhythm Arrangement View screen will appear.

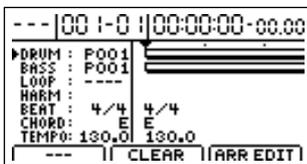

4. Move the cursor to "BEAT" and press [F3] (MAP EDIT).  
The Beat Map screen will appear.

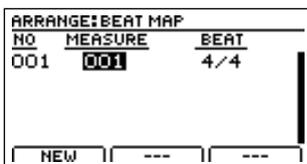

If no beat map has been set for this song, a single beat will be created at the start of the map.

5. Move the cursor to the beat map entry to be edited.
6. Move the cursor to the parameter whose setting you want to change and select a new value using the TIME/VALUE dial.

### MEAS:

This parameter sets the measure position for the change in beat, and it can be set within a range of 1 to 999. The position of the first time-signature map entry is fixed at "1" and cannot, therefore, be changed.

### NOTE

You can create up to 50 beat maps.

If the same beat is used for multiple consecutive measures, do not set a separate beat map for each measure, but make a single setting for the entire group of measures.

### BEAT:

This parameter sets the beat within a range of 1/1 to 8/8.

#### ● Adding new time-signature map entries

Press [F1] (NEW). A new entry will be added to the beat map immediately after the cursor's current position.

#### ● Deleting time-signature map entries

Press [F3] (DELETE). The time-signature map entry at the current cursor position will be deleted. Note that it will not be possible to delete the first entry in a beat map.

7. Once you've made all the desired beat map settings, press [EXIT/NO] to return to the Rhythm Arrangement Edit screen.

8. If you wish to store the edited beat map, save the current rhythm arrangement (p. 207).

### NOTE


Unless the song is saved, all of your edited time-signature map data will be lost when a different rhythm arrangement is selected or a new song is loaded. In addition, this data will also be lost if you turn off the BR-1200CD before saving.

# Using a metronome

The BR-1200CD can be used to play a metronome in place of a drum performance when recording or practicing.

## Setting the track type

To use a metronome, you must first of all set up Track 9/10 as a Metronome track using its track type setting.

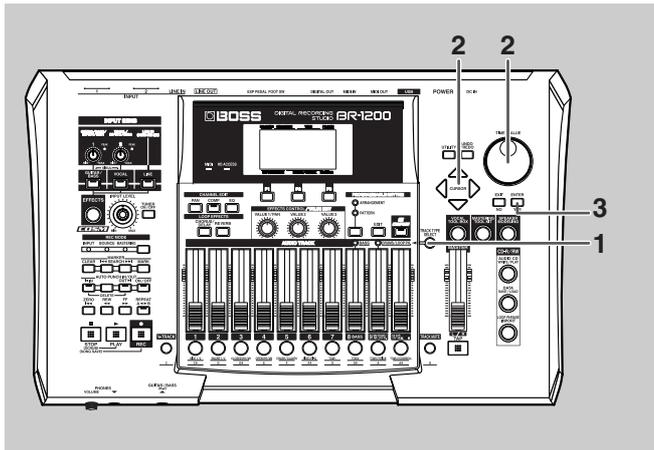

1. Press [TRACK TYPE SELECT].

The Track Type Select screen will appear.



2. Move the cursor to "TRACK 9/10" and select "METRO&LP" using the TIME/VALUE dial.



The DRUMS&LOOP PH. indicator from TRACK TYPE SELECT will light up to indicate that Track type has been set up for use as a metronome track.

3. Press [EXIT/NO] to return to the top screen.  
You will now be able to use the metronome.
4. If you wish to store the track type setting, save the current song (p. 70).

## Playing a metronome

Simply changing the track type may not be sufficient to allow a metronome to be played. Use the following procedure in such a case.

1. Press the track button [9/10] several times until it lights up.

Pressing the button repeatedly allows you to cycle through the available choices, which are: Flashing → On → Off.

### Off:

The metronome will not be played.

### Flashing in red:

The metronome will be played only when the BR-1200CD is recording.

### Flashing in green:

The metronome will be played when the BR-1200CD is recording or performing playback.

### On:

The metronome will be played even when the BR-1200CD is stopped.

2. Raise the fader for Track 9/10 to a suitable level.  
You will now be able to hear the metronome.

### Selecting metronome sounds

Now that we can hear the metronome, let's select sounds to be used.

1. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the PATTERN indicator is lighted. (Pattern mode)
2. Press PROGRAMMABLE RHYTHM [EDIT].  
The Pattern Selection screen will appear.



3. Move the cursor to "METRO" and select a sound type using the TIME/VALUE dial.

#### Available sound types

##### BEEP:

This sets up a beep-type metronome, with a higher-pitched beep being used for the first beat of each measure.

##### CLICK:

This sets up a click-type metronome, with a louder click being used for the first beat of each measure.

4. When you have selected the type of sound you want to use, press [EXIT/NO] several times to return to the top screen.
5. If you wish to store the sound-type selection, save the current song (p. 70).



The sound-type selection will be used both in Arrangement mode and in Pattern mode.

### Adjusting the Metronome and Loop Phrase Volume Balance

While the balance between the metronome and loop phrase volume levels is normally adjusted with the Track 9/10 fader, you can use the following procedure to further adjust the metronome and loop phrase volume balance.

1. Press [TRACK TYPE SELECT].  
The Track Type Select screen will appear.



2. Move the cursor to "LEVEL DR" and "LEVEL LP," then use the TIME/VALUE dial to adjust the volume level of the metronome and Loop Phrase, respectively.

##### LEVEL DR:

In this case, adjusts the volume of the metronome. The volume increases as the value is raised. When set to 0, no sound is output. Set this to 100 when no adjustment is needed.

##### LEVEL LP:

This adjusts the volume of the Loop Phrase. The volume increases as the value is raised. When set to 0, no sound is output. Set this to 100 when no adjustment is needed.

# Creating Drum and Bass Patterns Simply and Easily (EZ Compose)

## What is EZ Compose?

“EZ Compose” is a group of functions that lets you create a pattern simply by making a few settings in the screen—you don’t have to input each individual note of the rhythm. You can also add a chord progression and fill-ins.



## Using EZ Compose

### Creating a pattern

EZ Compose lets you select a favorite pattern for each group of sounds, and combine them to create your new pattern.

#### NOTE

EZ Compose creates patterns with a time signature of 4/4 or 3/4.

If the time signature of the currently selected pattern is not one of these, it will be converted to 4/4 or 3/4.

#### 1. Press [EZ COMPOSE].

The EZ Compose Pattern screen will appear.



#### 2. Move the cursor to the relevant item, then use the VALUE dial to set the value.

**BEAT** **4/4, 3/4**

This sets the beat.

**MEAS** **1-32**

This sets the number of measures in the pattern.

**TEMPO** **25.0-250.0**

This sets the tempo.

**TYPE / No.: HH CYM**

This selects the “Hi-Hat/Cymbal” preset pattern and number.

Type:

8BEAT, 16BEAT, SHUFFLE, 1/2SHUFFLE

**TYPE / No.: KICK SNR**

This selects the “Kick/Snare” preset pattern and number.

Type:

8BEAT, 16BEAT, SHUFFLE, 1/2SHUFFLE

**TYPE / No.: BASS**

This selects the “Bass” preset pattern and number.

Type:

STEADY&SIMPL, ROCK BLUES, BALLAD, FUNK SOUL

\* Choose “-----” as the TYPE for patterns that you don’t want to use (i.e., that you want to remain silent).


Press [PLAY] to play the pattern with the current settings.

## Adding a chord progression

By selecting the desired chord progression from those made available on the unit, and adding it to the currently selected pattern, you can have bass parts be played according to the selected chord progression.

### 1. Press [F2] (=>CHORD).

The EZ Compose Chord Progression screen will appear.

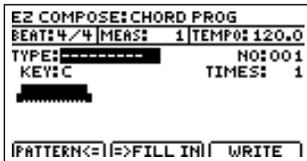

### 2. Move the cursor to the relevant item, then use the VALUE dial to set the value.

#### **TEMPO** **25.0-250.0**

This sets the tempo.

#### **TYPE / NO**

This selects the preset chord progression type and number.

Type:

2MEAS Maj, 2MEAS Min, 4MEAS Maj, 4MEAS Min, 8MEAS Maj, 8MEAS Min, BLUES Maj, BLUES Min

- \* If you choose "-----", the chord progression setting will not be used.

#### **KEY** **C-B**

This sets the key for the performance. The key of the chord progression is shifted to match the KEY setting.

#### **TIMES** **1-32**

This sets the number of times the chord progression is to be repeated.

- \* MEAS (number of measures) is determined automatically by the TYPE/No. and TIMES settings. You cannot directly change the number of measures.

The screen shows the chord progression you specified.


Press [PLAY] to play the pattern with the current settings.

## Adding a fill-in

You can choose from a variety of fill-ins and add them to the currently selected pattern.

### 1. Press [F2] (=>FILL IN).

The EZ Compose Fill-in screen will appear.

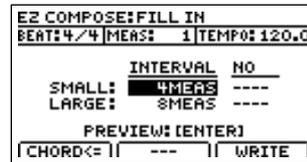

### 2. Move the cursor to the relevant item, then use the VALUE dial to set the value.

#### **TEMPO** **25.0-250.0**

This sets the tempo.

#### **INTERVA: SMALL** **1-32MEAS**

Specify the number of measures after which a Small (short) fill-in will be added

(Example)

If you set this to 4MEAS, a small fill-in will be added at measure 4, measure 8, measure 12, ... etc.

- \* If the number of measures specified by INTERVAL is greater than the number of measures in the pattern, the fill-in will not be played.

#### **No.: SMALL - - -, S001-S050, L001-L050**

Number of preset (Small fill-in) to use

- \* If you choose " - - - " the Small fill-in will not be added.

#### **INTERVAL: LARGE** **1-32MEAS**

Specify the number of measures after which a Large (long) fill-in will be added

(Example)

If you set this to 16MEAS, a Large fill-in will be added at measure 16, 32, 48, ... etc.

- \* If the number of measures specified by INTERVAL is greater than the number of measures in the pattern, the fill-in will not be played.

#### **No.: LARGE - - -, S001-S050, L001-L050**

Number of preset (Large fill-in) to use

- \* If you choose " - - - " the Large fill-in will not be added.
- \* If the Small fill-in and Large fill-in occur at the same measure, the Large fill-in will take priority.

Press [PLAY] to play the pattern with the current settings.


Press [ENTER], you can play only the measures within which a fill-in occurs.

If the number of measures specified by INTERVAL is greater than the number of measures in the pattern, the measure at which the fill-in occurs will not be played.

## Pasting In Rhythm Arrangements

### 1. Press [F3] (WRITE).


The screen for pasting the composed pattern to the rhythm arrangement appears.

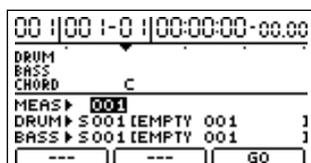


#### NOTE

The pattern is pasted to the currently selected rhythm arrangement.


### 2. Move the cursor to "MEAS" and specify the pattern's starting point with the TIME/VALUE dial.

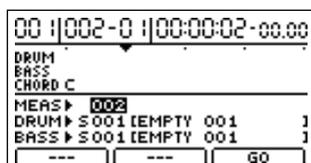

### 3. Move the cursor to "DRUM," then specify the write destination for the drum pattern you've created.

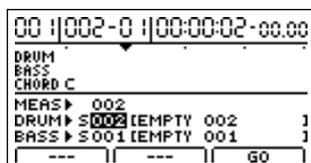

### 4. Move the cursor to "BASS," then specify the write destination for the bass pattern you've created.

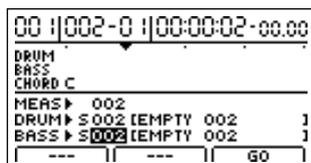

### 5. Press [F3] (GO).

The pattern is pasted in the arrangement.



6. Repeat Steps 2–5 for any further patterns you wish to paste in.
7. Press [EXIT/NO] to return to the top screen.
8. To save the rhythm arrangements with the patterns pasted in, save the rhythm arrangement (p. 207).

#### NOTE

A rhythm arrangement with patterns pasted in is only temporary.

If you want to keep it stored in memory, be sure to save the rhythm arrangement.

# MEMO

# **Section 5**

## **Using the CD-R/RW Drive**

# Creating Audio CD

## Precautions

In addition to CD-R discs, you can also use CD-RW discs when making audio CDs. However, it may not be possible for audio CDs created using CD-RW discs to be played on standard CD players.

Furthermore, even when CD-R discs are used for this purpose, playback will not be possible on CD players that do not support this type of media. You should, therefore, confirm that the CD player to be used is compatible with CD-R discs.


Note that the BR-1200CD's CD-R/RW drive can play commercially produced audio CDs, CD-R discs, and CD-RW discs.

## Setting the time between songs (Pre-Gap)

Often when you are playing audio CDs on standard CD players, you will see a countdown in the form of "-3, -2, -1" on the player's display before songs start. This duration is referred to as a Pre-Gap, and it can be freely set during the CD creation process to allow song lengths to be adjusted without having to record silence at the end of each.


### 1. Press [AUDIO CD WRITE/PLAY].

The Audio CD screen will appear.

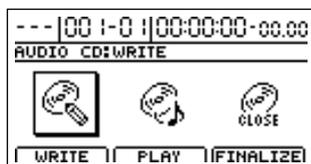


### 2. Press [F1] (WRITE).

The Audio CD Write screen will appear.

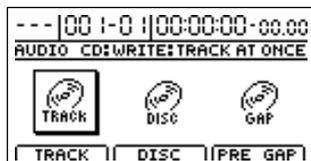

### 3. Press [F3] (PRE GAP).

The pre-gap setting screen will appear.

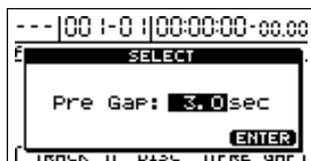

### 4. Use the TIME/VALUE dial to specify a pre-gap time in seconds.

### 5. Press [ENTER/YES].

#### NOTE

Whenever a CD is created using the Disc At Once By Marker function (p. 222), the pre-gap specified here will be ignored and all gaps will be set to 0 seconds.

#### MEMO

If silence is included at the end of your finished song, the pre-gap time will be added to the length of this section, and as a result, the gap between songs will be longer than expected when the CD is played back on a CD player. For details regarding the deletion of silence from the end of songs, refer to "Erasing audio data (Track Erase)" (p. 108).

## Writing Songs to Discs

In order to do this, you'll need an unrecorded CD-R or CD-RW disc.

**MEMO**

### Methods for creating audio CDs

The BR-1200CD allows you to create audio CDs in three different ways.

#### Track At Once:

With Track At Once, only the currently loaded song is written to the audio CD. If you want to include other songs on your CD, they will each have to be loaded and written in sequence. When you use this method, individual songs can be added to a disc one at a time until it is full. However, the repetitive writing of individual tracks in this way can be considerably time consuming, especially when you are compiling an album or any other type of audio CD with more than two or three songs.

#### Disc At Once By Song

The Disc At Once By Song method allows you to write a number of different songs selected from the BR-1200CD's hard disk to an audio CD in a single process. In this way, album creation and other similar operations can be carried out much more conveniently. However, it will not be possible to subsequently add other songs to a disc that has been created using this method. As a result, a considerable amount of disc memory could be wasted if only a few songs are written.

#### Disc At Once By Marker


With this method, you can place markers at the desired positions in a long audio track to divide the track into different sections and can write each of these sections to an audio CD as a different song. A typical example of this type of long track would be a continuous live performance recorded over an hour or more. Say this performance included five songs, you could place markers at the beginning of each song to ensure that, once created, the audio CD would appear on a CD player as containing five different songs.

## Writing songs individually (Track At Once)


1. Load the song that you want to write.
2. Insert an unrecorded CD-R or CD-RW disc into the CD-R/RW drive.
3. Press [AUDIO CD WRITE/PLAY].  
The Audio CD screen will appear.



4. Press [F1] (WRITE).  
The Audio CD Write screen will appear.

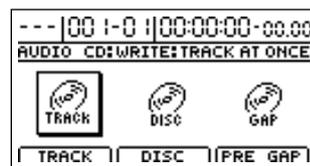

5. Press [F1] (TRACK).  
The Track At Once screen will appear.

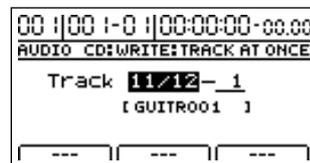

6. Use [CURSOR] and the TIME/VALUE dial to choose the track and V-Track that you want to write.
7. Press [F3] (GO).  
The Write Speed screen will appear.



8. Use the TIME/VALUE dial to set the write speed.  
Alternatively, if you want to use the write speed that is currently displayed, proceed to Step 9.
9. Press [ENTER/YES].  
The message "Write Sure?" will appear.

## 10. Press [ENTER/YES].

The message "Now Writing..." will appear and writing to the audio CD will begin. When writing has been completed, the message "Finalize OK?" will be displayed.

## 11. If you intend to write additional songs to the same CD-R disc, press [EXIT/NO].

Alternatively, press [ENTER/YES] if no more songs will be added to this disc.

If you press [ENTER/YES], the message "Finalizing..." will appear and the finalization process will begin. When the message "Complete!" appears, it indicates that the finalization has been completed. For more detailed information regarding finalization, refer to "What is finalization?" (p. 222).

## 12. Press [EXIT/NO] several times to return to the top screen.

## 13. Press the CD-R/RW drive's EJECT button to eject the disc.

This completes the writing process.

It may take a period of several seconds before the disc is actually ejected.

### NOTE

- The range of available write speeds can sometimes be limited by the type of media being used. In such a case, the BR-1200CD will allow you to select only the supported speeds.
- If an error occurs, try changing the write speed and then carry out the writing process over again.
- The actual time required to complete writing to a disc will be longer than the time calculated from the write speed. The data is converted into CD format during the writing process, and this accounts for the extra time requirement.

## Writing several songs at once (Disc At Once By Song)

### 1. Insert an unrecorded CD-R or CD-RW disc into the CD-R/RW drive.


### 2. Press [AUDIO CD WRITE/PLAY].

The Audio CD screen will appear.



### 3. Press [F1] (WRITE).

The Audio CD Write screen will appear.

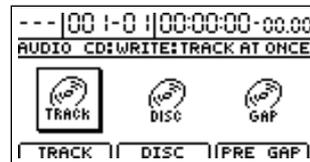


### 4. Press [F2] (DISC).

The Disc At Once Menu screen will appear.



### 5. Press [F1] (BY SONG).

The Disc At Once By Song screen will appear.

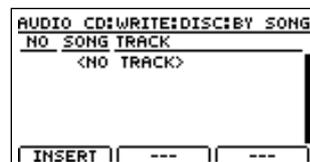

### NOTE

- If the message "Not Blank Disc!" appears, it means that the CD-R disc already contains data. In such a case, replace the disc with an unrecorded one.
- If the message "Erase Disc?" appears, it means that the CD-RW disc already contains data. If you then press [ENTER/YES], the BR-1200CD will begin erasing data from the CD-RW disc. Once this process has been completed, you can proceed to the following steps using the empty CD-RW disc.

**6. Press [F1] (INSERT).**

A new song will be inserted.

**7. Use the TIME/VALUE dial to choose the song that you want to write.**



**8. Move the cursor to the right to display the screen, and then use the TIME/VALUE dial to set the V-Track that you want to write.**



At this time, "MASTER V-TRK" will be indicated for the V-Track that was most recently used for mastering (i.e., the final mastering track). This can be used as a guide for setting the correct V-Track.

**NOTE**

Only stereo tracks can be selected for writing, and you will not be able to select mono tracks at this time.

**9. To cancel selection of a song, press [F2] (DELETE).**

The selection will be canceled.

**10. To insert a song just before a song that has already been selected, move the cursor to the position you want to insert, and then press [F1] (INSERT).**

A new song will be inserted.

**11. Repeat Steps 6 through 10 to select all of the songs you want to write, and then press [F3] (GO).**

The Write Speed screen will appear.

**12. Use the TIME/VALUE dial to set the write speed.**

Alternatively, if you want to use the write speed that is currently displayed, proceed to Step 13.

**13. Press [ENTER/YES].**

The message "Write Sure?" will appear.

**14. Press [ENTER/YES].**

The message "Now Writing..." will appear and writing to the audio CD will begin. When this process has been completed, the finalization will start automatically. When the message "Complete!" appears, it indicates that writing has been fully completed.

**15. Press [EXIT/NO] several times to return to the top screen.**

**16. Press the CD-R/RW drive's EJECT button to eject the disc.**

This completes the writing process.

For details regarding listening to the audio CD that you have just created, refer to "Playing Back Audio CDs" (p. 224).

It may take a period of several seconds before the disc is actually ejected.

**NOTE**

- The range of available write speeds can sometimes be limited by the type of media being used. In such a case, the BR-1200CD will allow you to select only the supported speeds.
- If an error occurs, try changing the write speed and then carry out the writing process over again.
- The actual time required to complete writing to a disc will be longer than the time calculated from the write speed. The data is converted into CD format during the writing process, and this accounts for the extra time requirement.

### Creating Audio CDs with Audio Tracks Separated by Markers (Disc At Once by Marker)

When audio CDs are created from live performances, non-stop DJ mixes, and other tracks recorded continuously over long periods of time, these long tracks can end up being written to the CD as a single song.

With the BR-1200CD, however, you can use the marker function to set divisions at the desired points within such an audio track so that it can be written as separate songs.



For more detailed information regarding markers, refer to “Placing markers in your song (Marker)” (p. 90).

Using this function, you can create audio CDs containing live performances and non-stop DJ mixes with song divisions at the appropriate points.

### Applying markers at song divisions (CD Track Marker)

The first step in this process is to position markers at the desired song divisions using the following procedure. A marker applied in this way is referred to as a “CD Track Marker.”

1. Record the performance that you want to write to the audio CD as a stereo track (on any of the tracks from 1/2 through 11/12).
2. Move the current position to a point at which the song is to be divided.
3. Hold down [TAP] and press [MARK].

A CD track marker is created at that point, and a “T” will appear in the top screen’s Marker box. At the same time, the CD track number is automatically set as that marker’s name (i.e. CD01).

00:100:1-0:100:00:00-00:00		
MARK T	SONG 001	
CD01		0
TEMPO		4
120.0		12
REMAIN		24
62h57m	111123456789101112LR	48

4. Repeat Step 2 and Step 3 for each of the points at which you want the track to be divided.

Any CD track markers accidentally created at the wrong position can be easily removed. (“Clearing markers” (p. 90))

5. If you wish to create an audio CD using these settings, save the current song (p. 70).

This completes the division of the song and the preparation for writing it to a CD-R/RW disc. Let’s now write the tracks and make an audio CD.

#### NOTE

- Data cannot be written to an audio CD between the beginning of an audio track (i.e., time zero) and the first CD track marker. If you want to write to an audio CD from the very start of an audio track, press [ZERO] to return to the start of that track and then carry out Step 3.
- CD track markers cannot be created within 100 ms of one another. If this prevents a marker from being positioned, clear the pre-existing marker and then carry out Step 3. (“Clearing markers” (p. 90))
- Be sure to save your song before creating an audio CD. Settings will not be stored until your song is saved, and this can result in song divisions not being recognized correctly during the writing process.
- A maximum of 99 songs can be written to a single audio CD. If you try to set a CD track marker that will result in this number being exceeded, the message “Marker Memory Full!” will be displayed and you won’t be able to set it.
- Audio CD standards require that a CD track be at least four seconds long. CD track markers that define a CD track lasting less than four seconds are disregarded when the CD is being created.

#### MEMO

### What is finalization?

In addition to audio data, information such as the position and time of this data is also written to audio CDs, and this process is known as “Finalizing.” If you intend to play your audio CD on a standard CD player, it is important that finalization be carried out. Once this has been done, however, you will not be able to add any more songs to the CD. For this reason, you should aim to carry out the finalization of a CD-R/RW disc only when it is nearly full of songs.

### If you don’t finalize:

It will not be possible to play your audio CD on a standard CD player until it has been finalized; however, you can keep adding songs to the disc until this process is carried out. The CD-R disc that is not finalized during the writing process can be finalized later on. For more details regarding methods for finalization after the writing of audio data, refer to “Enabling playback on CD players (Finalize)” (p. 225).


## Writing to an CD-R/RW

We will now write the songs set up using the CD track markers to a new CD-R or CD-RW.

1. Insert an unrecorded CD-R or CD-RW disc into the CD-R/RW drive.


2. Press [AUDIO CD WRITE/PLAY].

The Audio CD screen will appear.

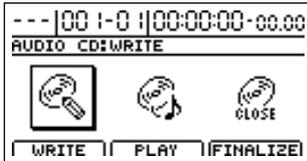

3. Press [F1] (WRITE).

The Audio CD Write screen will appear.

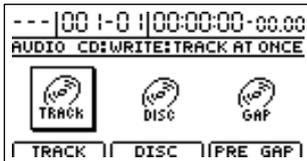

4. Press [F2] (DISC).

The Disc At Once Menu screen will appear.



5. Press [F2] (BY MARK).

The Disc At Once By Mark screen will appear.



6. Use the TIME/VALUE dial to select the audio tracks that you want to write to the CD.

7. Confirm that the list of CD track markers is correct.  
Move the cursor up and down to check the whole list.

8. Press [F3] (GO).

The message "Write Speed" will appear.

9. Use the TIME/VALUE dial to set the write speed.

10. Press [ENTER/YES].

The message "Write Sure?" will appear.

11. Press [ENTER/YES] once again.

The message "Now Writing..." will appear and writing of the audio CD will begin. When the message "Complete!" appears, it indicates that writing has been completed.

### NOTE

- If the CD-R disc already contains data, the message "Not Blank Disc!" will appear and writing will not be possible. Always use an empty disc.
- If the CD-RW disc already contains data, the message "Erase Disc?" will be displayed. If you then press [ENTER/YES], the BR-1200CD will begin erasing data from the CD-RW disc.
- The audio track chosen as a source must be stereo.
- If the audio track contains no recorded audio data or if no CD track markers have been set up in the recorded performance, "NO TRACK" will be displayed in the list and writing will not be possible.
- Audio CD specifications require that songs be at least four seconds in length. CD track markers that set up any song of less than four seconds in length will be ignored when the CD is being created.
- If the total length of the songs to be written exceeds the CD-R/RW disc's maximum recording time, the message "CD Full!" will appear and writing will not be possible. In such a case, change the positioning of the CD track markers (p. 222), use track cut (p. 107), or use track erase (p. 108) to reduce the total time to less than the disc's maximum recording time.
- The range of available write speeds can sometimes be limited by the type of media being used. In such a case, the BR-1200CD will allow you to select only the supported speeds.
- To cancel writing while this operation is in process, press [EXIT/NO]. When the message "Cancel?" appears, press [ENTER/YES] to confirm cancellation. (A certain amount of time may pass between pressing of [EXIT/NO] and display of the confirmation message.) Please note, however, that no guarantee can be made regarding the state of the data written before cancellation. Care must also be taken with CD-R discs in particular as this media cannot be written to a second time.
- You will not be able to eject a disc during the writing process, even if you press EJECT button.

## Playing Back Audio CDs

Let's now listen to the audio CD we have just created using the BR-1200CD's CD-R/RW drive. In addition to CD-R discs, this drive can be used to play back CD-RW discs that cannot be played on standard CD players. Naturally, you will also be able to listen to commercially produced audio CDs on this drive, and it can even play back audio CDs created using the BR-1200CD that have not yet been finalized.

### MEMO

Songs recorded on an audio CD are often referred to as "tracks." Be careful to avoid confusing these tracks with the BR-1200CD's audio tracks.

1. Insert the audio CD into the CD-R/RW drive.
2. Press [AUDIO CD WRITE/PLAY].


The Audio CD screen will appear.




3. Press [F2] (PLAY).

The message "Now Checking..." will appear initially, and the menu screen for the audio CD player will then be displayed.

Here, the songs included in the audio CD will be listed from TR01 up as far as TR 99.

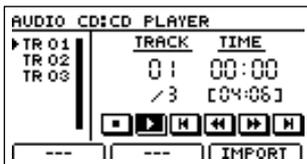


4. Use the TIME/VALUE dial to select the song that you want to listen to.

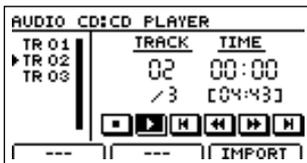

5. Move the cursor to the [ ] icon and press [ENTER/YES].

Playback of the audio CD will begin.

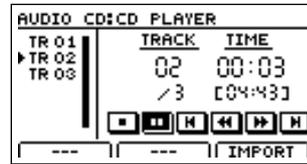

You can move the cursor to the following icons and press [ENTER/YES] to control playback in various ways.

- [ ] : Play
- [ ] : Pause
- [ ] : Stop
- [ ] : Fast forward
- [ ] : Rewind
- [ ] : Skip forward to the next song
- [ ] : Skip back to the beginning of the song or to the previous song

6. If you want to stop playback of the audio CD, press [EXIT/NO] several times to return to the top screen.

7. Press the CD-R/RW drive's EJECT button to eject the disc.

It may take a period of several seconds before the disc is actually ejected.

### NOTE

When an audio disc is inserted into the CD-R/RW drive, the message "Now Checking..." may remain on the screen for a relatively long time. This period of time is required for reading of the data stored on the audio CD and it is not the result of a malfunction.

## Enabling playback on CD players (Finalize)

If you intend to play a audio CD that was written using the BR-1200CD's CD-R/RW drive on a standard CD player, the audio CD must be finalized. Audio CD-R/RW discs can be finalized at any time to enable playback on this type of player.

**MEMO**

**What is finalizing?**

In addition to the audio data itself, other information describing the position and time of this data is also written to audio CDs. This process is known as "Finalizing."

**If you finalize:**

When finalization has been carried out, you will be able to play your audio CD on a standard CD player. Note, however, that you will no longer be able to add songs to a finalized CD.

Furthermore, the finalization of audio CDs containing only one short song is wasteful, since the remaining empty space on such discs can no longer be used.

For this reason, you should aim to carry out finalizing of a CD-R disc only when it is nearly full of songs.

**If you don't finalize:**


It will not be possible to play your audio CD on a standard CD player until it has been finalized; however, you can keep adding songs to the disc until this process is carried out. Whenever you want to play your audio CD on a standard CD player, you should perform finalization.

1. Insert the CD-R/RW disc to be finalized into the BR-1200CD's CD-R/RW drive.

The drive's access indicator will begin to flash. Wait until this indicator stops flashing and turns off before proceeding.

2. Press [AUDIO CD WRITE/PLAY].

The Audio CD screen will appear.

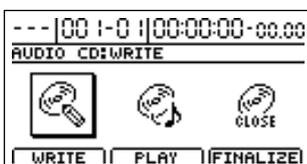

3. Press [F3] (FINALIZE).

The message "Finalize OK?" will appear.



4. Press [ENTER/YES]. (If you want to cancel finalization, press [EXIT/NO].)

Finalization will begin and the state of progress will be displayed. When the message "Complete" appears and the track buttons begin to flash, the finalization is complete.

5. Press [EXIT/NO] several times to return to the top screen.

6. Press the CD-R/RW drive's EJECT button to eject the disc.

**NOTE**

- Once finalization has been started, it will not be possible to cancel this process.
- In certain cases, a period of several seconds will pass before the disc is actually ejected.

# Using the CD-R/RW drive to exchange data

The BR-1200CD's built-in CD-R/RW drive can be used to exchange data in the following ways:

- Storing of songs and other hard-disk data to CD-R/RW discs (Backup)
- Reading songs and other backup data back into the hard disk (Recover)
- Swapping of audio data with a PC

## Saving Recorded Songs to CD-R/RW Discs

Although the songs you've recorded and created are stored on the BR-1200CD's internal hard disk, all of this data would be lost in the unlikely event that the hard disk was damaged. For this reason, we recommend that you also save your songs on CD-R/RW discs (Backup).

Once songs have been backed up in this way, it will also be possible to read them from the CD-R/RW discs into another BR-1200CD.

### NOTE

#### Precautions for backup

- If a CD-R disc selected for backup already contains data, the message "Not Blank Disc!" will appear and backup will not be possible. Always use an empty disc for this operation. If, on the other hand, you are using a CD-RW disc that already contains data, the message "Erase Disc?" will be displayed. If you then press [ENTER/YES], the BR-1200CD will begin erasing data from this disc.
- If the current song contains newly recorded audio data or newly modified settings, the message "Save Current?" may be displayed during the backup procedure. If you want to save your song before starting the backup, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO]. Remember that if you do not save a modified song at this time, all newly recorded audio data, edited data, modified mixer settings, etc. will be lost.
- If the total size of the songs and other data you intend to back up exceeds the capacity of a single CD-R/RW disc, you will be able to perform a backup using as many discs as necessary. In this case, you will need to have a number of blank CD-R/RW discs on hand, and during the backup process, you should insert and remove them as requested on-screen.
- To cancel writing to a CD-R/RW disc, press [EXIT/NO]. When the message "Cancel?" appears, press [ENTER/YES] to confirm cancellation. (A certain amount of time may pass between pressing of [EXIT/NO] and display of the confirmation message.) Please note, however, that no guarantee can be made regarding the state of the data written before cancellation.

## Backing up a song (Song Backup)

1. Insert an empty CD-R/RW disc into the BR-1200CD's CD-R/RW drive.

The drive's access indicator will begin to flash. Wait until this indicator stops flashing and turns off before proceeding.

2. Press CD-R/RW [DATA SAVE/LOAD].


The Data CD screen will appear.



3. Move the cursor to BACKUP icon, and press [ENTER/YES].

Alternatively, you can press [F1] (BACKUP) if the BACKUP icon is currently displayed.

The Backup Menu screen will appear.

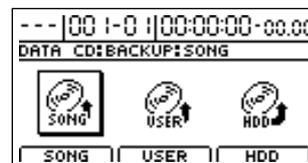

4. Press [F1] (SONG) or move the cursor to SONG icon, and then press [ENTER/YES].

The Song Backup screen will appear.



5. Move the cursor to the song you want to back up and press [F1] (SELECT).

The song will be selected for backup.



A number of songs can be selected in this way for backup, and an asterisk (\*) will be displayed for each selected song. To cancel this selection, press [F1] once again.

If you would like to back up all songs on the hard disk in a single operation, press [F2] (ALL). All songs will be selected for backup.

To cancel this selection, press [F2] once again. This deselects all songs.

- When you have selected all of the songs you want to back up, press [F3] (GO).

The message "Write Speed?" will appear.




- Use the TIME/VALUE dial to set the write speed.

- Press [ENTER/YES].

If you want to cancel the backup, press [EXIT/NO].

The message "Write Sure?" will appear.

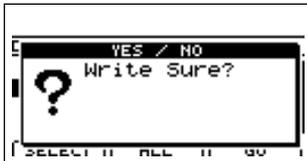

- Press [ENTER/YES] once again.

The BR-1200CD will begin writing data to the CD-R/RW disc.

When the message "Complete!" appears, it indicates that the backup has been successfully completed.

## NOTE

- The range of available write speeds can sometimes be limited by the type of media being used. In such a case, the BR-1200CD will allow you to select only the supported speeds.
- If an error occurs, try changing the write speed and then carry out the writing process over again.
- The actual time required to complete writing to a disc will be longer than the time calculated from the write speed. The data is converted into CD format during the writing process, and this accounts for the extra time requirement.

## Reading backup songs back into the hard disk (Song Recover)

- Insert a CD-R/RW disc containing backup songs into the BR-1200CD's CD-R/RW drive.

The drive's access indicator will begin to flash. Wait until this indicator stops flashing and turns off before proceeding.

- Press CD-R/RW [DATA SAVE/LOAD].


The Data CD Menu screen will appear.



- Move the cursor to RECOVER icon, and press [ENTER/YES].


Alternatively, you can press [F2] (RECOVER) if the RECOVER icon is currently displayed.

The Recover screen will appear.

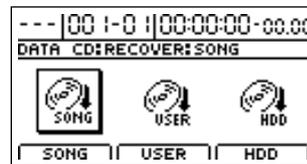

- Press [F1] (SONG).

A list of the CD-R/RW disc's backup songs will be displayed.

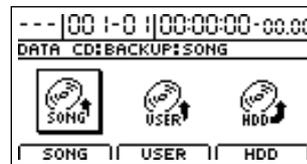

- Move the cursor to the song you want to recover and press [F1] (SELECT).

The song will selected for recovery.

A number of songs can be selected in this way for recovery, and an asterisk (\*) will be displayed for each selected song. To cancel this selection, press [F1] once again.

If you would like to recover all of the songs on the CD-R/RW disc in a single operation, press [F2] (ALL). All songs will be selected for recovery.

To cancel this selection, press [F2] once again. This deselects all songs.

- When you have selected all of the songs you want to recover, press [F3] (GO).

The BR-1200CD will start the recovery process. When the message "Complete!" appears, it indicates that the recovery has been completed successfully.

## MEMO

The recovered songs will be saved in sequence on the hard disk using the available song numbers.

## Saving Data on the Hard Disk to CD-R/RW Discs

### Saving Data to CD-R/RW Discs (User Backup)

The BR-1200CD allows you to back up the following types of user data to CD-R/RW discs.

- Insert effect patches
- Mastering Tool Kit patches
- Speaker Modeling patches
- Vocal Tool Box patches
- Rhythm arrangements, drum patterns, bass patterns
- Loop Phrases

#### 1. Insert an empty CD-R/RW disc into the BR-1200CD's CD-R/RW drive.

The drive's access indicator will begin to flash. Wait until this indicator stops flashing and turns off before proceeding.

#### 2. Press CD-R/RW [DATA SAVE/LOAD].


The Data CD screen will appear.



#### 3. Move the cursor to BACKUP icon, and press [ENTER/YES].


Alternatively, you can press [F1] (BACKUP) if the BACKUP icon is currently displayed.

The Backup Menu screen will appear.

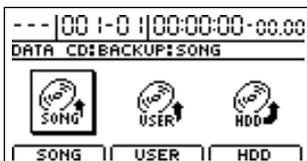


#### 4. Press [F2] (USER) or move the cursor to USER icon, and then press [ENTER/YES].

The User Backup screen will appear.

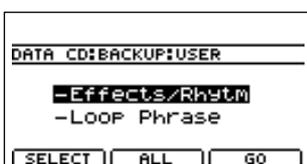

#### 5. Move the cursor to the type of data you want to back up and press [F1] (SELECT).

The data will be selected for backup.

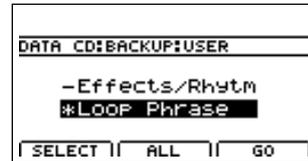

A number of types of data can be selected in this way for backup, and an asterisk (\*) will be displayed for each selected type. To cancel a selection, simply press [F1] once again.

#### Data that can be backed up:

##### Effects/Rhythm:

- Insert Effects User Patches
- Vocal Tool Box User Patches
- Mastering User Kit User Patches
- Speaker Modeling User Patches
- User Rhythm Arrangement
- User drum pattern
- User bass pattern

The data described above will all be saved.

##### Loop Phrase:

User loop phrases will all be saved.

If you would like to back up all such data on the hard disk in a single operation, press [F2] (ALL). All data types will be selected for backup.

To cancel this selection, press [F2] once again. This deselects all data types.

#### 6. When you have selected all of the data you want to back up, press [F3] (GO).

The message "Write Speed?" will appear.




#### 7. Use the TIME/VALUE dial to set the write speed.

#### 8. Press [ENTER/YES].

If you want to cancel the backup, press [EXIT/NO].

The message "Write Sure?" will appear.

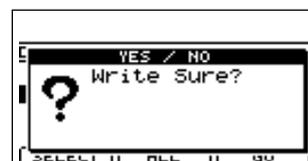

**9. Press [ENTER/YES] once again.**

The BR-1200CD will begin writing data to the CD-R/RW disc. When the message "Complete!" appears, it indicates that the backup has been successfully completed.

**NOTE**

- The range of available write speeds can sometimes be limited by the type of media being used. In such a case, the BR-1200CD will allow you to select only the supported speeds.
- If an error occurs, try changing the write speed and then carry out the writing process over again.
- The actual time required to complete writing to a disc will be longer than the time calculated from the write speed. The data is converted into CD format during the writing process, and this accounts for the extra time requirement.

## Reading backup user data back into the hard disk (User Recover)

**1. Insert a CD-R/RW disc containing backup user data into the BR-1200CD's CD-R/RW drive.**

The drive's access indicator will begin to flash. Wait until this indicator stops flashing and turns off before proceeding.

**2. Press CD-R/RW [DATA SAVE/LOAD].**

The Data CD Menu screen will appear.




**3. Move the cursor to RECOVER icon, and press [ENTER/YES].**

Alternatively, you can press [F2] (RECOVER) if the RECOVER icon is currently displayed.

The Recover screen will appear.



**4. Press [F2] (USER).**

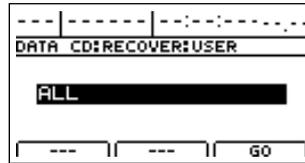

**5. Use the TIME/VALUE dial to select the data you want to recover.**

If you select the data that has no backup data, "\*EMPTY" will be displayed.

**Data that can be recovered:**

**ALL**

All of the user data on the CD-R/RW disc

**EFFECTS**

All insert effects patches from the user bank will be recovered.

**MASTERING TOOL KIT**

The Mastering Tool Kit's user bank will be recovered.

**SPEAKER MODELING**

The Speaker Modeling user bank will be recovered.

**VOCAL TOOL BOX**

The Vocal Tool Box's user bank will be recovered.

**RHYTHM**

User rhythm arrangements, user drum patterns, user bass patterns, and user loop phrases will all be recovered.

**ARRANGEMENT**

Only user rhythm arrangements will be recovered.

**DRUM&BASS PATTERN**

Only user drum patterns and user bass patterns will be recovered.

**LOOP PHRASE ALL**

User loop phrases from banks A through H will be recovered.

**LOOP PHRASE A-H**

Only user loop phrases from the selected bank will be recovered.

If you select "LOOP PHRASE A-H," a recovery destination will appear at the bottom of the display. If you want to change this setting, move the cursor to "Destination" and then select a new recovery destination using the TIME/VALUE dial.

**6. When you have selected all of the data you want to recover, press [F3] (GO).**

The BR-1200CD will start the recovery process. When the message "Complete!" appears, it indicates that the recovery has been completed successfully.

### NOTE

If the hard disk contains any data of the same type as that being recovered, it will be completely overwritten in the recovery process. As it will not be possible to restore this data, care should be taken to ensure that important data is not accidentally overwritten in this way.

## Saving the Entire Contents of the Hard Disk to a CD-R/RW Disc

The BR-1200CD allows you to back up all of the data on the internal hard disk onto CD-R/RW discs, regardless of the type of data or the song in which it is used. Data that's been backed up this way can later be recovered whenever needed.

Note, however, that this type of backup is limited to the data contained in the currently selected drive or partition. If you would also like to back up data from another drive or partition, you will need to change the current drive first. Note also that recovered data will be stored on the currently selected drive.

## Saving the Hard Disk Contents to a CD-R/RW Disc (HDD Backup)

1. Insert an empty CD-R/RW disc into the BR-1200CD's CD-R/RW drive.

The drive's access indicator will begin to flash. Wait until this indicator stops flashing and turns off before proceeding.

2. Press CD-R/RW [DATA SAVE/LOAD].


The Data CD Menu screen will appear.



3. Move the cursor to BACKUP icon, and press [ENTER/YES].

Alternatively, you can press [F1] (BACKUP) if the BACKUP icon is currently displayed.

The Backup Menu screen will appear.

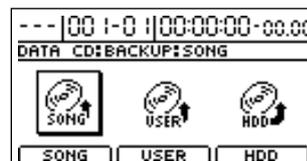

4. Press [F3] (HDD).

The message "HDD Backup OK?" will appear.



5. Press [ENTER/YES].

The message "Write Speed?" will appear.




6. Use the TIME/VALUE dial to set the write speed.

7. Press [ENTER/YES].

If you want to cancel the backup, press [EXIT/NO].

The message "Write Sure?" will appear.

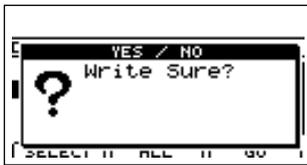

8. Press [ENTER/YES] once again.

The BR-1200CD will begin writing data to the CD-R/RW disc. When the message "Complete!" appears, it indicates that the backup has been successfully completed.

### NOTE

- The range of available write speeds can sometimes be limited by the type of media being used. In such a case, the BR-1200CD will allow you to select only the supported speeds.
- If an error occurs, try changing the write speed and then carry out the writing process over again.
- The actual time required to complete writing to a disc will be longer than the time calculated from the write speed. The data is converted into CD format during the writing process, and this accounts for the extra time requirement.


## Reading backed-up hard disk contents back into the hard disk (HDD Recover)

1. Insert a CD-R/RW disc containing an HDD backup into the BR-1200CD's CD-R/RW drive.

The drive's access indicator will begin to flash. Wait until this indicator stops flashing and turns off before proceeding.

2. Press CD-R/RW [DATA SAVE/LOAD].


The Data CD Menu screen will appear.

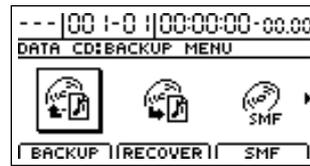

3. Move the cursor to RECOVER icon, and press [ENTER/YES].

Alternatively, you can press [F2] (RECOVER) if the RECOVER icon is currently displayed.

The Recover screen will appear.

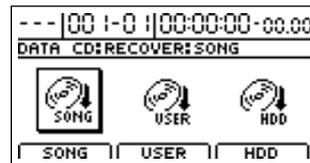

4. Press [F3] (HDD).

The message "HDD Recover OK?" will appear.



5. Press [ENTER/YES].

The hard disk will be initialized and then the recovery process will begin. When the message "Complete!" appears, it indicates that the recovery has been completed successfully.

### NOTE

When HDD Recover is carried out, all data and songs that you have stored on the hard disk will be overwritten with the contents of the CD-R/RW and erased. As it will not be possible to restore data or songs erased in this way, extra care should be taken.

## Copying and writing waveform data

### NOTE

This procedure requires a computer equipped with a drive capable of writing to CD-R/RW discs.

If you have a computer equipped with a CD-R/RW drive, you can use CD-R/RW discs to transfer waveform data between multiple BR-1200CDs.

You can, for example, use these discs to copy waveform data created with the audio software on your computer and then paste the data to audio tracks. You can also take audio track data recorded with the BR-1200CD and copy it to your computer for editing.

## Copying waveform data from a computer to the audio tracks (WAV/AIFF Import)

### NOTE

If the current song contains newly recorded audio data or newly modified settings, or if an import has been carried out, the message "Save Current?" may be displayed during this procedure.

If you want to save your song before starting the import process, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO].

Remember that if you do not save a modified song at this time, all newly recorded audio data, edited settings, imported data, etc. will be lost.

### NOTE

To be eligible for import, waveform data must meet the following criteria. In most cases, you will not be able to import other kinds of data.

- Use "ISO 9660 Level 2, Mode 1" to write the data to the CD-R/RW disc.
- Audio data must be of WAV or AIFF format, in stereo or mono, and with an uncompressed bit depth of 8 or 16 bits. Furthermore, the sampling rate must be 44.1 kHz.
- Audio data must be at least 500 ms in length.
- Name waveform data using eight letters followed by a less than three-character extension.
- The loop point settings within an AIFF file will be ignored.

1. Using a PC, burn and finalize a CD-R/RW disc containing the audio data that you want to import.  
For instructions on how to write waveform data to CD-R/RW discs, refer to your computer and CD-R/RW drive owner's manuals.

2. Place the CD-R/RW disc containing the copied hard disk data in the BR-1200CD's CD-R/RW drive.

The drive's access indicator will begin to flash. Wait until this indicator stops flashing and turns off before proceeding.

3. Press CD-R/RW [DATA SAVE/LOAD].


The Data CD Menu screen will appear.



4. Move the cursor to WAVE icon, and press [ENTER/YES].

Alternatively, you can press [F1] (WAVE) if the WAVE icon is currently displayed.

The WAV/AIFF screen will appear.

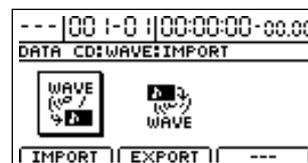

5. Press [F1] (IMPORT).

A list of the audio data files contained on the current CD-R/RW disc will appear.



If the WAV files are collected in a folder, then the folder name and icon (  ) is displayed. To show the WAV files within the folder, move the cursor to the folder name and press [ENTER/YES].



- 6.** To switch the format of the wave file you want to import, press [F1] (TYPE).

[F1] acts as a toggle, switching the file format between WAV and AIFF each time it's pressed.


- 7.** Move the cursor to the waveform data files you want to import.




At this point, you can hear what the waveform data sounds like by pressing [F2] (PREVIEW) (WAVE Preview). Press [ENTER/YES] again to cancel the preview.

- 8.** Press [F3] (SELECT).

The screen for specifying the import destination appears.

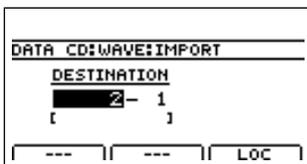


- 9.** Use [CURSOR] and the TIME/VALUE dial to specify the import-destination track.

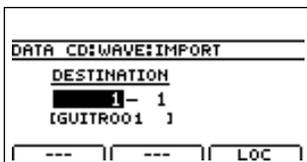

- 10.** Press [F3] (LOC).

The Import Destination Location Settings screen appears.

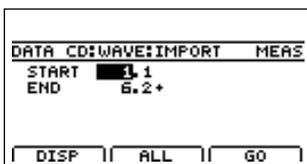

Set the following items.

**START (Start point):**

Specify the starting location of the import-destination track.

**END (End point):**

Specify the ending location of the import-destination track.

**MEMO**

- At this time, press [F1] (DISP) to switch between ways to specify the location (measures, time, markers).
- If, after specifying the above parameters in terms of location you switch to the measure or marker indication, a "+" may appear if a discrepancy between the indicated position and the actual position arises. When using measures or markers to make the specification, you can use the TIME/VALUE dial in the respective screen to eliminate the discrepancy.
- If you want the import range to be from the beginning of the waveform data to the end, press [F3] (ALL).

- 11.** When you have finished making the settings, press [F3] (GO).

Copying of the waveform data begins.

When "Complete!" appears, the import is finished.

To quit copying while the import is still in progress, press [EXIT/NO]. When the message "Cancel?" appears, press [ENTER/YES]; the import is cancelled (it may take some time after you press [EXIT/NO] for the message to appear). Files imported up to the time the process is cancelled are usable.

## Copying audio track waveform data to computers (WAV/AIFF Export)

You can write data for specified tracks to a CD-R/RW disc as waveform data, then import the waveform data to the computer, using your computer to read the CD-R/RW disc.

**NOTE**

You will be unable to use CD-R/RW discs if your computer is only equipped with a CD-ROM or CD-R drive. In this case, used CD-R discs.

- 1.** Place a writable CD-R/RW disc (a blank disc) in the BR-1200CD's CD-R/RW drive.

The drive's access indicator will begin to flash. Wait until this indicator stops flashing and turns off before proceeding.

- 2.** Press CD-R/RW [DATA SAVE/LOAD].

The Data CD Menu screen will appear.




## Using the CD-R/RW drive to exchange data

3. Move the cursor to WAVE icon, and press [ENTER/YES].


Alternatively, you can press [F1] (WAVE) if the WAVE icon is currently displayed.

The WAV/AIFF screen will appear.

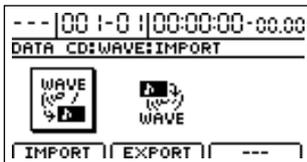


4. Press [F2] (EXPORT).


The Waveform Data Export screen appears.

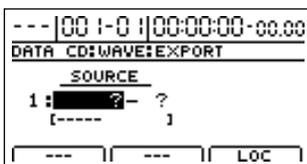

5. Use [CURSOR] and the TIME/VALUE dial to specify the tracks you want to export.

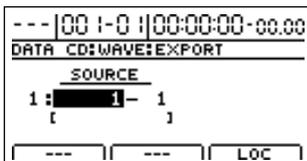

If there are other tracks with the same settings (range, location) that you want to export, move the cursor to the following position, then make the settings with the TIME/VALUE dial.

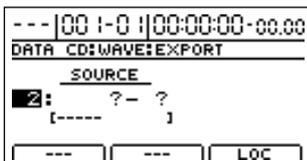

The BR-1200CD is ready for selection of a new track.

Here, you cannot specify a track on top of another track that has already been specified.

If you want to undo the specification of a track, rotate the TIME/VALUE dial to the left and "?" appears.


Entries showing "?" are not exported.

By using the TIME/VALUE dial to select "\*", you can specify that the operation apply to all tracks or all V-tracks.


If you want the operation to apply to all V-tracks of all tracks, select "\*-\*."

6. Press [F3] (LOC).

The Import Destination Location Settings screen appears.

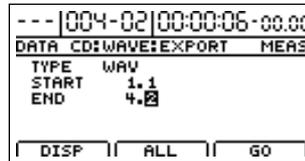

7. Move the cursor to "TYPE," then rotate the TIME/VALUE dial to select the file format you want to export.

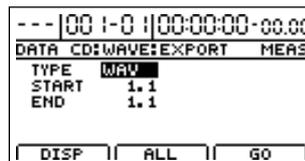

### TYPE:

WAV Exports data in WAV format (the format mainly used with Windows).

AIFF Exports data in WAV format (the format mainly used with Macintosh).

8. Use [CURSOR] and the TIME/VALUE dial to set the time range to be exported.

### START (Start Point):

Specifies the export-source track's start point.

### END (End Point):

Specifies the export-source track's end point.

### MEMO

- At this time, press [F1] (DISP) to switch between ways to specify the location (measures, time, markers).
- If, after specifying the above parameters in terms of location you switch to the measure or marker indication, a "+" may appear if a discrepancy between the indicated position and the actual position arises. When using measures or markers to make the specification, you can use the TIME/VALUE dial in the respective screen to eliminate the discrepancy.
- If you want the export range to be from the beginning of the waveform data to the end, press [F3] (ALL).

9. When you have finished making the settings, press [F3] (GO).

The message "Write Speed?" appears.



**10.** Rotate the TIME/VALUE dial to set the write speed.

**11.** Press [ENTER/YES].

The message "Write Sure?" appears.

To cancel, press [EXIT/NO].

**12.** Press [ENTER/YES] again.

Writing to the CD-R/RW disc begins.

When "Complete!" appears, the writing is finished.

The following files will have been written to the CD-R/RW disc in ISO9660 Level 2, Mode 1 format.

Track 1, V-Track 1	T01__01.WAV or T01__01.AIF
Track 1, V-Track 2	T01__02.WAV or T01__02.AIF
Track 1, V-Track 3	T01__03.WAV or T01__03.AIF
:	
Track 2, V-Track 15	T02__15.WAV or T02__15.AIF
Track 2, V-Track 16	T02__16.WAV or T02__16.AIF
:	
Track 3/4, V-Track 1	T0304_01.WAV or T0304_01.AIF
Track 3/4, V-Track 2	T0304_02.WAV or T0304_02.AIF
:	
Track 11/12, V-Track 15	T1112_15.WAV or T1112_15.AIF
Track 11/12, V-Track 16	T1112_16.WAV or T1112_16.AIF

**13.** Press [EXIT/NO] several times to return to the Top screen.

**14.** Press the CD-R/RW drive's EJECT button to eject the disc.

**15.** Use the application on your computer to copy the data from the CD-R/RW disc.

#### NOTE

- If a CD-R disc that already has data written to it is loaded, the message "Not Blank Disc" appears, and you cannot proceed with the export. Be sure to use only blank discs.
- If a CD-RW disc that already has data written to it is loaded, the message "Erase Disc?" appears. Pressing [ENTER/YES] here begins erasure of the disc. After the disc has been erased, the export process will continue.
- When a mono track is specified as the source for exporting, the data is written as a mono waveform file. When a stereo track is specified, the data is written as a stereo waveform file.
- Tracks 9/10 and 11/12 are fixed as a permanent stereo pair, and so cannot be specified as mono tracks.
- The range of available write speeds can sometimes be limited by the type of media being used. In such a case, the BR-1200CD will allow you to select only the supported speeds.
- If an error occurs, try changing the write speed and then carry out the writing process over again.
- The actual time required to complete writing to a disc will be longer than the time calculated from the write speed. The data is converted into CD format during the writing process, and this accounts for the extra time requirement.
- To quit writing to the disc while writing is still in progress, press [EXIT/NO]. When the message "Cancel?" appears, press [ENTER/YES]; writing is cancelled (it may take some time after you press [EXIT/NO] for the message to appear). However, no guarantee can be made for the utility of the content up to the time writing is cancelled.
- It will not be possible to reuse a CD-R disc for which writing was canceled before completion.

## Playing SMFs using external MIDI instruments (SMF Player)

You can use the BR-1200CD to read SMFs from CD-R/RW discs and play these files using MIDI instruments connected to the MIDI OUT port.

Any SMFs that satisfy the following conditions can be played in this way.

### Format:

0 or 1


### File size:

250 KB maximum (Note that this will vary slightly based on the SMF content.)

### System Exclusive:

Packet sizes of 512 bytes or less

1. Connect a MIDI cable between the MIDI OUT port on the BR-1200CD and the MIDI IN port on your external MIDI sound module.

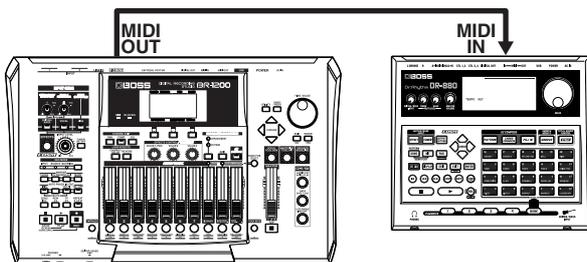

2. Insert a CD-R/RW disc containing SMFs into the CD-R/RW drive.

The drive's access indicator will begin to flash. Wait until this indicator stops flashing and turns off before proceeding.


3. Press CD-R/RW [DATA SAVE/LOAD].

The Data CD Menu screen will appear.



4. Move the cursor to SMF icon, and press [ENTER/YES].  
Alternatively, you can press [F3] (SMF) if the SMF icon is currently displayed.

The function selection screen for SMFs will appear.

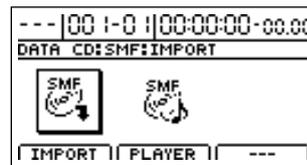

5. Press [F2] (PLAYER).

A list of the SMFs contained on the current CD-R/RW disc will appear.



6. Move the cursor to the SMF to be played and press [F3] (PLAY).



The message "Now Loading..." will appear and the SMF will be loaded from the CD-R/RW disc.

When the reading process has been completed, the BR-1200CD will start playback.

7. Press [ENTER/YES] at the point where you want to stop playback.

### NOTE

In cases where the SMF contains a large amount of MIDI data, playback of the file may be sluggish.

## Erasing data from a CD-RW disc (CD-RW Erase)

If you are using CD-RW discs, you will be able to erase unneeded data from the discs and reuse them for data storage.

### NOTE


- This process results in all data being erased from a disc.
- Data erasure is possible only with CD-RW discs. Data cannot be erased from CD-R discs.

1. Insert the CD-RW disc to be erased into the BR-1200CD's CD-R/RW drive.

The drive's access indicator will begin to flash. Wait until this indicator stops flashing and turns off before proceeding.

2. Press CD-R/RW [DATA SAVE/LOAD].

The Data CD Menu screen will appear.

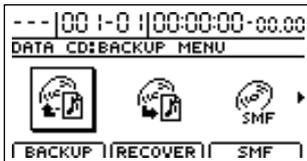

3. Move the cursor to the ERASE icon and press [ENTER/YES].

Alternatively, you can press [F2] (ERASE) if the ERASE icon is currently displayed.

The message "Erase Disc?" will appear.



4. Press [ENTER/YES].

Press [EXIT/NO] to cancel deletion.

The data erasure will begin and the state of progress will be displayed. When the message "Complete!" appears, it indicates that erasing has been completed.

5. Press [EXIT/NO] several times to return to the Top screen.

6. Press the CD-R/RW drive's EJECT button to eject the disc.

### NOTE

- Once erasing has been started, it will not be possible to cancel this process.
- In certain cases, a period of several seconds will pass before the disc is actually ejected.

### Setting the time until the CD-R/RW drive stops (CD Hold Time)

Whenever the BR-1200CD's CD-R/RW drive is used to read or write data, the drive's internal motor will continue to spin for a specific period of time after this process has been completed. In situations where this becomes a hindrance to the music making process, you can set a new duration for the spinning down of the motor.

**1. Press [UTILITY].**

The Utility Menu screen will appear.



**2. Move the cursor to the SYSTEM icon and press [ENTER/YES].**

Alternatively, you can press [F2] (SYSTEM) if the SYSTEM icon is currently displayed.

The System Parameter screen will appear.



**3. Move the cursor to "CD HoldTime" and set a suitable time using the TIME/VALUE dial.**



The CD hold time can be set within a range of 1 SEC to 32 MIN. At the time of purchase, the hold time will be set to 32 SEC.

#### MEMO

Once the CD-R/RW drive's motor has stopped, a certain amount of time will be required for it to reach a stable operating speed the next time data needs to be read or written. If the reading and writing of data will be carried out frequently, you should set a longer hold time to ensure that the drive's motor does not stop between each operation.

# Importing songs from CDs to audio tracks

The BR-1200CD allows you to import selected songs from a audio CD to audio tracks.

## NOTE

### Important Notice


- The BR-1200CD and its CD-R/RW drive are designed to allow you to reproduce material for which you own the copyright, or material for which you have been granted permission to copy by the copyright owner. Accordingly, the reproduction of audio CDs or other copyrighted material without the permission of the copyright owner and the circumvention of technologies such as SCMS, which prohibit second-generation and later copies, constitutes copyright infringement and may incur penalties, even in cases where such reproduction is for your own personal use and enjoyment (private use). Consult a copyright specialist or special publications for more information regarding the acquisition of copyright permission from copyright holders.
- The BR-1200CD does not allow you to import all songs from a audio CD at once. Songs must be imported one at a time.

1. Insert a audio CD into the BR-1200CD's CD-R/RW drive.

The drive's access indicator will begin to flash. Wait until this indicator stops flashing and turns off before proceeding.


2. Press [AUDIO CD WRITE/PLAY].

The Audio CD Menu screen will appear.

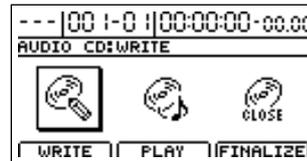

3. Press [F2] (PLAY).

The Audio CD Player screen will appear.

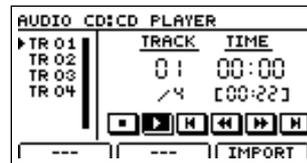

4. Use the TIME/VALUE dial to select the number of the song to be imported.



You can use the normal procedure for audio CD playback (p. 224) at this time to hear the selected song.

5. Press [F3] (IMPORT).

The Audio CD import screen will appear.



6. Use the TIME/VALUE dial to select the destination for import and press [ENTER/YES].

The message "Now Importing..." will appear and import to the audio track will begin. When the message "Complete!" appears, it indicates that the import procedure has been successfully completed.

# MEMO

# **Section 6**

## **Using MIDI**

# MIDI fundamentals

By using MIDI to connect the BR-1200CD to other MIDI-capable devices, you can perform the following:

- Play rhythm performances on external MIDI sound module
- Synchronize with external MIDI sequencers and rhythm machines
- Control MMC-compatible devices from the BR-1200CD
- Control track volumes automatically via MIDI (MIDI Fader)
- Input drum and bass patterns using an external keyboard (MIDI Recording)

This section provides a basic description of MIDI and explains the various ways it can be used.

## What is MIDI?

MIDI stands for “Musical Instrument Digital Interface.” MIDI is a global standard devised so that performance data, program change data, and other similar information could be exchanged among electronic musical instruments and computers. If a device is MIDI compatible, it will be able to exchange performance data with other MIDI compatible devices, even if they are of a different type or brand.

## MIDI connectors

MIDI messages (i.e., the data handled by MIDI) are exchanged using the following three types of MIDI port.

### **MIDI IN:**

This connector accepts the MIDI messages arriving from other MIDI devices.

### **MIDI OUT:**

All the MIDI messages from the BR-1200CD are sent out from this connector.

### **MIDI THRU:**

This connector re-transmits all the MIDI messages that arrive at the MIDI IN connector.

#### **NOTE**

The BR-1200CD is equipped with a MIDI IN and MIDI OUT port, but not with a MIDI THRU port.

## MIDI channels

The MIDI standard allows data to be exchanged among multiple MIDI-compatible devices using a single MIDI cable, and this is made possible by what are known as MIDI channels.

In simple terms, a MIDI channel is quite similar to a TV channel. For example, you can change TV channels to watch programs from a variety of broadcasters. In this type of situation, information is communicated only when the channel on the transmitting end matches the channel on the receiving end.

Likewise, with MIDI as well, if the transmitting device is (for example) set to MIDI channel 1, MIDI messages will be received only if the MIDI channel on the receiving end is also set to 1.

## MIDI Implementation Charts

MIDI makes it possible for a vast range of electronic musical devices to communicate with each other. However, this does not mean that every MIDI device can handle every single type of MIDI message. In reality, two MIDI-compatible devices can only exchange the MIDI messages that are supported by both.

The user’s manual for any MIDI-compatible device will contain a MIDI Implementation Chart, and this chart allows you to quickly find out which MIDI messages the device in question can transmit and receive.


When two MIDI devices are to be used together, you should compare their MIDI implementation charts to make sure that exchange of the required MIDI messages will be possible.

For more detailed information regarding the BR-1200CD’s MIDI characteristics, refer to “MIDI Implementation” (p. 343).

# Playing drum and bass patterns on external MIDI sound module

When you play back drum and bass patterns, rhythm arrangements, and the like, the BR-1200CD will use its internal drum and bass sounds to reproduce the programmed performance. However, if you want to use drum and bass sounds other than those stored internally, you can transmit performance data via the MIDI OUT port to have the performance played on a different MIDI sound module. In this way, you can play back drum and bass patterns using your favorite sounds.

- Using a MIDI cable, connect the BR-1200CD to the MIDI sound module as shown in the following diagram.

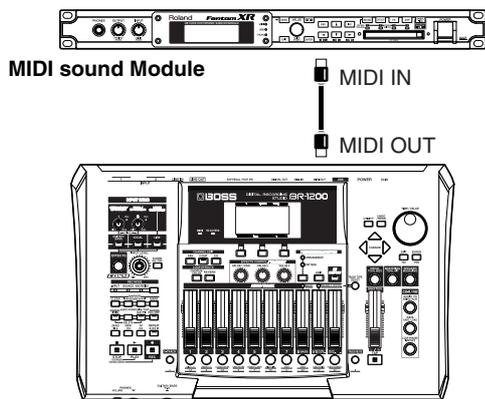


- Press [UTILITY].

The Utility Menu screen will appear.



- Move the cursor to the MIDI icon and press [ENTER/YES]. Alternatively, you can press [F2] (MIDI) if the MIDI icon is currently displayed.

The MIDI screen will appear.

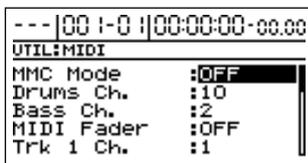

- Move the cursor to "Drums Ch." and set a suitable MIDI channel using the TIME/VALUE dial.

OFF: Note messages will not be transmitted for drums.

1 through 16: Note messages for drums will be transmitted on the selected MIDI channel.

## MEMO

The MIDI channel selected here must be the same as that selected on the MIDI sound module. In the case of GS sound module, GM sound module, and BOSS rhythm machines, it is common for channel 10 to be selected for drum data; accordingly, MIDI channel 10 should probably be selected at this time. For details regarding the selection of MIDI channels on the MIDI sound module, refer to the corresponding user's manual.

- Move the cursor to "Bass Ch." and set a suitable MIDI channel using the TIME/VALUE dial.

OFF: Note messages will not be transmitted for bass.

1 through 16: Note messages for bass will be transmitted on the selected MIDI channel.

## MEMO

The MIDI channel selected here must be the same as that selected on the MIDI sound module. In the case of GS and GM sound module, it is common for channel 2 to be selected for bass data; accordingly, MIDI channel 2 should probably be selected at this time. For details regarding the selection of MIDI channels on the MIDI sound module, refer to the corresponding user's manual.

- When the required settings have been made, press [EXIT/NO] several times to return to the top screen.

- Play the rhythm performance.

The rhythm and bass patterns will now both be played by the MIDI sound module.

If necessary, adjust the volume of the performances on the MIDI sound module.

- If you wish to store the settings, save the current song (p. 70).

### Drum sounds and note numbers

The correspondence between drum sounds and note numbers is as shown below.

Drum name	Note number
Kick 1	C 2 (36)
Snare 1	D 2 (38)
Closed hi-hat	F#2 (42)
Open hi-hat	A#2 (46)
Crash cymbal	C#3 (49)
Ride cymbal	D#3 (51)
Tom 1	F 2 (41)
Tom 2	A 2 (45)
Tom 3	C3 (48)
Tom 4	D 3 (50)
Stick	G 1 (31)
Cow bell	G#3 (56)
Kick 2	B 1 (35)
Snare 2	E 2 (40)
Metronome (click)	A 1 (33)
Metronome (bell)	A#1 (34)
Claves	D#5 (75)
Hi-Q	D#1 (27)

If the drum sounds of your MIDI sound generating device are not mapped as shown above, you should change the sounds assigned to the various note numbers.

Refer to the user's manual for the MIDI sound module for details on how this is done.

# Synchronizing external MIDI sequencers and rhythm machines

You can use the BR-1200CD's tempo and time position as the master tempo and master time position so that external MIDI sequencers and rhythm machines can be synchronized with its playback (Master Sync). The following three synchronization methods are available.

- A MIDI sequencer or rhythm machine can be synchronized to the rhythm's tempo using the BR-1200CD's MIDI timing clock.
- A MIDI sequencer can be synchronized to the playback time using MTC.
- The tempo variations programmed into a MIDI sequencer or rhythm machine can be recorded as a sync track on the BR-1200CD, and the sequencer or rhythm machine can then be played back using the recorded tempos.

Even in the case of MIDI sequencers that are compatible with neither MTC nor MMC, synchronization to the rhythm will be possible using the MIDI timing clock if Song Position Pointers are supported. Note, however, that a tempo map must be created for the rhythm in advance. For more detailed information, refer to "Setting tempos for individual measures (Tempo Map)" (p. 209).

## MEMO

For more information regarding MIDI sequencer usage methods, refer to the corresponding user's manual. Refer to p. 251 for details regarding MMC.


## NOTE

The BR-1200CD does not support operation in slave mode. In other words, it will not be possible to synchronize the BR-1200CD to the tempo and time position of an external MIDI sequencer or rhythm machine.

Synchronization will be possible



Synchronization will not be possible

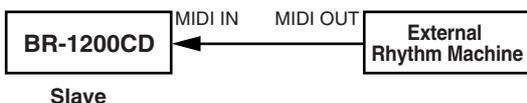


## Synchronizing a MIDI device to the rhythm's tempo using the MIDI timing clock

This is the simplest of the three synchronization methods, and it can be used to synchronize the majority of MIDI sequencers and rhythm machines.

In this case, the MIDI timing clock is used as the synchronization master. Specifically, the MIDI timing clock is a signal that is transmitted six times per sixteenth note in accordance with the current tempo. It can be used to notify MIDI sequencers and rhythm machines of the time elapsed since the start of the song so that these external devices can be synchronized.


As the majority of MIDI sequencers and rhythm machines sold today support MIDI timing clock signals, this method will probably provide the simplest means of achieving synchronization.

1. Using a MIDI cable, connect the BR-1200CD to the MIDI sound module as shown in the following diagram.

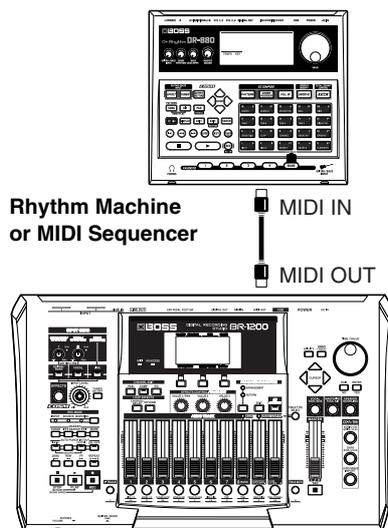

2. Press [UTILITY].


The Utility Menu screen will appear.

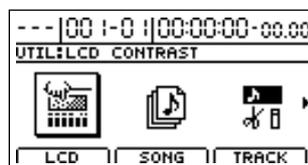

3. Move the cursor to the SYNC icon and press [ENTER/YES].

Alternatively, you can press [F3] (SYNC) if the SYNC icon is currently displayed.

The synchronization setting screen will appear.

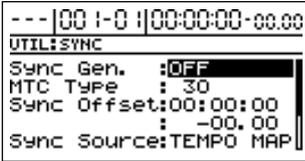

4. Move the cursor to "Sync Gen." and select "MIDI CLK" using the TIME/VALUE dial.

### Sync Gen. (Sync Generator):

This parameter sets the type of synchronization signal that will be output via the MIDI OUT port. When you intend to perform synchronized operation of an external MIDI device using a synchronization signal, ensure that one of the following types of signal is selected for transmission.

#### OFF:

No synchronization signal will be transmitted.

#### MTC:

MTC (MIDI Time Code) will be transmitted.

#### MIDI CLK:

MIDI timing clock signals will be transmitted based on the rhythm tempo.

5. Press [EXIT/NO] several times to return to the top screen.
6. Start playback on the BR-1200CD.
 

As playback starts, the MIDI sequencer will also start to play in sync.
7. If you wish to store the settings, save the current song (p. 70).


## Synchronizing a MIDI sequencer to the playback time using MTC

The term MIDI Time Code (MTC) refers to a type of time-synchronization message that is output every frame in order to allow MIDI sequencers to be synchronized. Since MTC is based on time and not tempo, it allows extremely precise synchronization to be achieved. Although this technique is most often used with video equipment and the like, a large number of MIDI sequencers are also MTC compatible.

1. First of all, set up the external MIDI sequencer to operate based on received MTC signals.


For more information regarding setting methods for the MIDI sequencer, refer to its user's manual.

2. Using a MIDI cable, connect the BR-1200CD to the MIDI sequencer as shown in the following diagram.

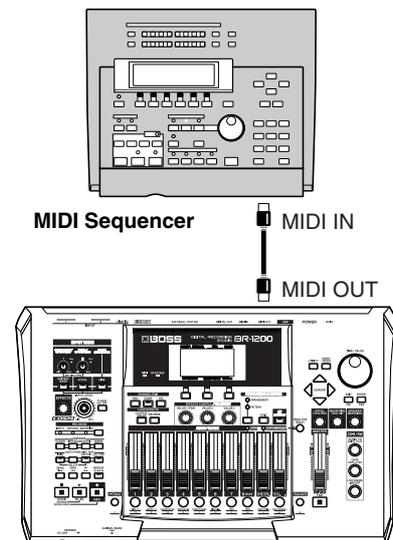

3. Press [UTILITY].


The Utility Menu screen will appear.

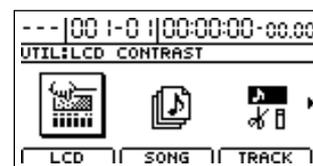

4. Move the cursor to the SYNC icon and press [ENTER/YES].

Alternatively, you can press [F3] (SYNC) if the SYNC icon is currently displayed.

The Sync Parameter screen will appear.

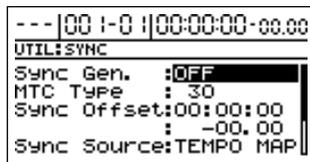

5. Move the cursor to “Sync Gen.” and select “MTC” using the TIME/VALUE dial.

The BR-1200CD will now be set up to transmit MTC signals.

6. Move the cursor to “MTC Type” and select a suitable MTC type using the TIME/VALUE dial.

You will need to match the BR-1200CD’s MTC type to that used on the external MIDI sequencer. For more information regarding setting methods for the MIDI sequencer, refer to its user’s manual. For more details regarding MTC types, refer to “About MTC types” below.

7. Start playback on the BR-1200CD.

As playback starts, the MIDI sequencer will also start to play in sync.

8. If you wish to store the settings, save the current song (p. 70).

9. When the required settings have been made, press [EXIT/NO] several times to return to the top screen.

When using MTC, settings must be made in order to synchronize the MIDI sequencer to an external MTC source; when using the MIDI timing clock, settings must be made in order to synchronize the MIDI sequencer to an external MIDI timing clock source.

### MEMO

#### Drop and non-drop MTC formats

NTSC-type video recorders use two different types of MTC format - namely, drop and non-drop. Whereas frames are continuous with the non-drop format, in order to provide support for NTSC-type color video, drop format MTC skips two frames every minute other than the 10th, 20th, 30th, 40th, and 50th minutes.

Generally speaking, it is easier to work with continuous frames when creating music or video, and as a result, non-drop formats are more commonly used. However, drop-format MTC is often used in broadcasting facilities where the time code must be matched to the actual clock time.

### MEMO

#### About MTC types

The following types of MTC can be selected on the BR-1200CD. After checking your MIDI sequencer’s specifications, set the BR-1200CD’s MTC type accordingly.

30	30 frames per second non-drop format. This format is generally used with audio devices such as analog tape recorders and with NTSC black-and-white video devices (as used in Japan and the US).
29N	29.97 frames per second non-drop format. This format is generally used with NTSC color video devices (as used in Japan and the US).
29D	29.97 frames per second drop format. This format is generally used with NTSC-broadcast color video (as used in Japan and the US).
25	25 frames per second frame-rate format. This format is generally used with SECAM and PAL type video (as used in Europe and elsewhere), with audio devices, and with movies.
24	24 frames per second frame-rate format. This format is generally used with movies in the US.

## Changing the TIME field display

Whenever you are transmitting MTC signals from the BR-1200CD in order to synchronize an external MIDI device, you will be able to change the way in which time is displayed in the TIME field.

1. On the Sync Parameter screen, move the cursor to the "Time Disp." field and select a time display format using the TIME/VALUE dial.

### Time Disp. (Time Display Format)

This parameter is used to make settings for the standard time indicated in the display's TIME field. Although the display format is normally set to "ABSOLUTE," if necessary, you can set it to "RELATIVE" when you are transmitting MTC signals from the BR-1200CD in order to synchronize an external MIDI device.

#### ABSOLUTE TIME

A specified offset time will be added to the display time.

#### RELATIVE TIME

The song's start time is displayed as "00:00:00-00.00."

2. Move the cursor to "Time Offset" and select a suitable offset time using the TIME/VALUE dial.

An offset time is used whenever synchronizing external MIDI devices to the BR-1200CD using MTC in order to align the MTC time with respect to the song time.

In specific terms, the offset is determined by subtracting the desired playback time on the BR-1200CD from the desired playback time on the MTC-synchronized external MIDI devices.

For example, the following offset times can be set in order to have external MIDI devices play back at the MTC times shown below when the BR-1200CD's song time is "01h00m00s00."

BR-1200CD song time	MTC on MIDI devices	Offset time
01h00m00s00	01h30m00s00	00h30m00s00
01h00m00s00	00h30m00s00	23h30m00s00

3. Press [EXIT/NO] several times to return to the top screen.
4. If you wish to store the settings, save the current song (p. 70).

## Synchronizing a MIDI device by recording its tempo changes on the BR-1200CD (Sync Track)

You can use the procedure described below to receive MIDI timing clock signals from an external MIDI sequencer or rhythm machine on the BR-1200CD, to detect the tempos of the MIDI device's playback, and to automatically create rhythm tempos based on these.


A tempo recording created in this way is known as a Sync Track, and when used together with MIDI timing clock signals, you will be able to synchronize the external MIDI device to the BR-1200CD while maintaining all of the originally programmed tempo changes.

### ● A sync track must be created before synchronization is possible.

1. Set up the MIDI sequencer or rhythm machine as the synchronization master and enable the transmission of MIDI timing clock signals.

For more information regarding setting methods for the MIDI sequencer or rhythm machine, refer to its user's manual.

2. Using a MIDI cable, connect the BR-1200CD to the MIDI sequencer as shown in the following diagram.

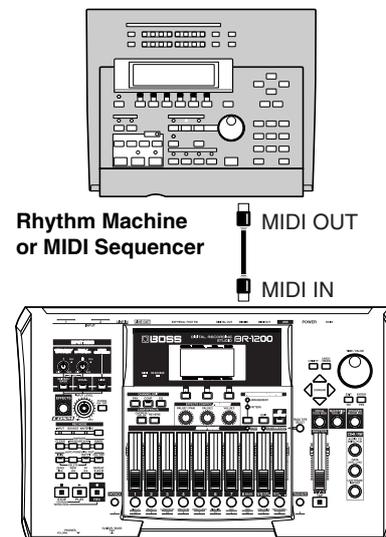

3. Press [UTILITY].

The Utility Menu screen will appear.



## Synchronizing external MIDI sequencers and rhythm machines

4. Move the cursor to the SYNC TRK icon and press [ENTER/YES].

Alternatively, you can press [F1] (SYNC TRK) if the SYNC TRK icon is currently displayed.

The message “Waiting for Clock...” will appear and the BR-1200CD will enter MIDI Timing Clock Standby mode.



5. Start playback on the MIDI sequencer or rhythm machine.

The BR-1200CD will start to record MIDI timing clock signals.

Note that it will not be possible to perform playback or recording while these signals are being recorded. In addition, it will also not be possible to play back rhythm performances.

Tempos in a range of 25 to 250 BPM can be recorded. All tempos higher than 250 BPM will be recorded as being 250 BPM; similarly, any tempo lower than 25 BPM will be recorded as 25 BPM.

Approximately 4,000 eighth notes (i.e., approximately 500 measures in 4/4-time) can be recorded in a sync track. If this limit is reached, the BR-1200CD will automatically stop recording.

6. When playback has reached the point at which you would like to stop recording, stop playback on the external MIDI sequencer or rhythm machine.

The recording of MIDI timing clock signals will stop automatically, and the display will return to the top screen.

This completes the process for creating a sync track.


7. If you wish to store the sync track that has been created, save the current song (p. 70).

Note that only one sync track can be recorded per song.

- **Let's now try to synchronize playback of the MIDI sequencer or rhythm machine to the BR-1200CD based on the sync track that was created.**

1. Referring to the user's manual for the MIDI sequencer or rhythm machine, set up this device as a synchronization slave and enable the reception of MIDI timing clock signals.

2. Reconnect the MIDI cable as shown below.

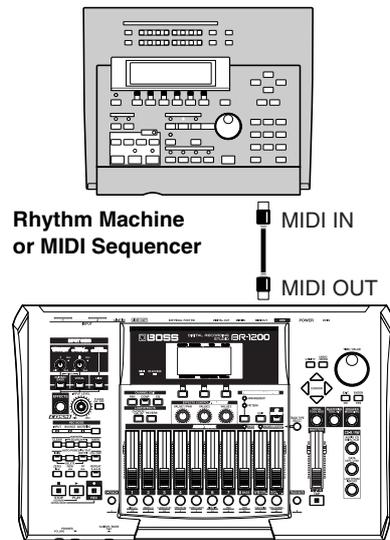

3. Press [UTILITY].


The Utility Menu screen will appear.




4. Move the cursor to the SYNC icon and press [ENTER/YES].

Alternatively, you can press [F3] (SYNC) if the SYNC icon is currently displayed.

The synchronization setting screen will appear.

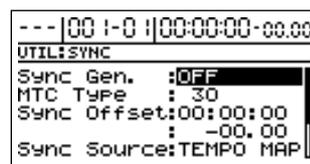

5. Move the cursor to “Sync Source” and select “SYNC TRK” using the TIME/VALUE dial.

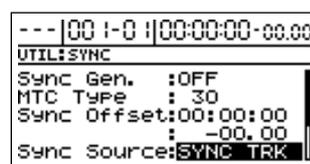

### TEMPO MAP:

The original tempo map for the rhythm arrangement will be used.

### SYNC TRK:

The sync track will be used.

**NOTE**

“SYNC TRK” will only be available for selection when a sync track has been recorded.

6. Move the cursor to “Sync Gen.” and select “MIDI CLK” using the TIME/VALUE dial.

The BR-1200CD will now be set up to transmit MIDI timing clock signals.

7. Press [EXIT/NO] several times to return to the top screen.

8. Press PROGRAMMABLE RHYTHM [ARRANGEMENT/PATTERN] so the ARRANGEMENT indicator is lighted. (Arrangement mode)

**NOTE**

You can use sync tracks only in Arrangement mode. Note that the sync tracks are not functional in Pattern mode.

9. Start playback on the BR-1200CD.

As playback starts, the MIDI sequencer or rhythm machine will also start to play in sync.

10. If you wish to store the sync track that has been created, save the current song (p. 70).

**NOTE**

- When “SYNC TRK” has been selected, any editing of the tempo map (p. 209) on the rhythm arrangement screen will have no effect.
- Sync track settings are common to all rhythm arrangements.

## Setting the starting time of synchronization (Sync Offset)

If you wish to synchronize the external MIDI sequencer or rhythm machine from the middle of the song, do as follows:

1. Press [UTILITY].


The Utility Menu screen will appear.




2. Move the cursor to the SYNC icon and press [ENTER/YES].

Alternatively, you can press [F3] (SYNC) if the SYNC icon is currently displayed.

The synchronization setting screen will appear.

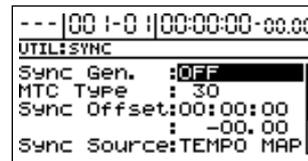

3. Move the cursor to “Sync Offset” and set the time at which you wish to start synchronization, using the TIME/VALUE dial.

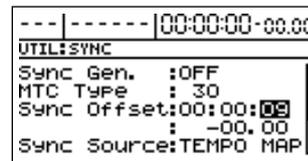

4. Press [EXIT/NO] several times to return to the top screen.

Play the BR-1200CD after completing the above settings, and the external MIDI sequencer or rhythm machine will start playing from the time you set with the Sync Offset.

**NOTE**

The internal drum/bass/loop phrase in the BR-1200CD will not be played at the earlier time set with the Sync Offset.

5. If you wish to store the sync track that has been created, save the current song (p. 70).

# Controlling MMC-compatible devices from the BR-1200CD

## MEMO

### What is MMC?


An abbreviation of MIDI Machine Control, MMC is a protocol for the remote control of multiple recording devices from a single device using MIDI system exclusive messages. Since the BR-1200CD supports this protocol, it can be used to start, stop, rewind, or control connected MIDI devices in a range of other similar ways.

Note, however, that not all MIDI devices will be compatible with the BR-1200CD's MMC configuration. In such a case, it will not be possible to carry out remote control as described below. For more details regarding the MMC functions supported by the BR-1200CD, refer to "MIDI Implementation" (p. 343).

The following section will describe the settings necessary for synchronizing a PC-based sequencer application compatible with MMC and MTC.


In this type of setup, the BR-1200CD will act as master for both MMC and MTC, and therefore, you will be able to perform start, stop, rewind, and other similar sequencer operations remotely from the BR-1200CD.

1. Using a MIDI cable, connect the BR-1200CD to the PC as shown in the following diagram.

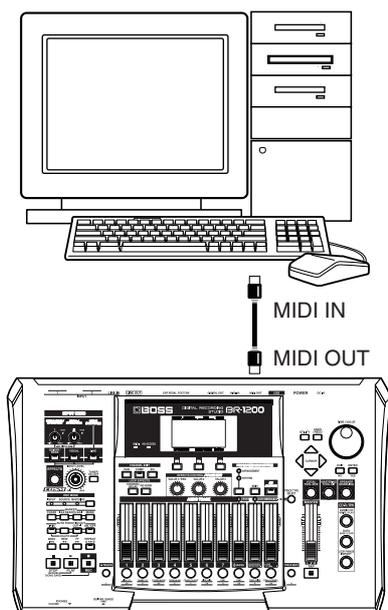

2. Press [UTILITY].


The Utility Menu screen will appear.

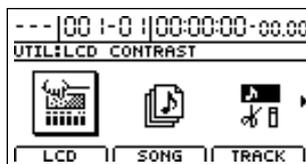

3. Move the cursor to the MIDI icon and press [ENTER/YES].

Alternatively, you can press [F2] (MIDI) if the MIDI icon is currently displayed.

The MIDI screen will appear.

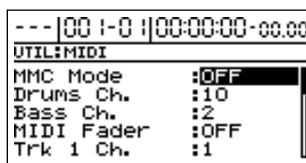

4. Move the cursor to "MMC Mode" and select "MASTER" using the TIME/VALUE dial.

### MMC Mode

This parameter is used to set the BR-1200CD's MMC operation mode.

- OFF: No MMC signals will be transmitted.
- MASTER: MMC signals will be transmitted and the BR-1200CD will operate as master in the MIDI environment.

For more details regarding the MMC functions supported by the BR-1200CD, refer to "MIDI Implementation" (p. 288).

5. Press [EXIT/NO], move the cursor to the SYNC icon, and then press [ENTER/YES].

Synchronization using MTC will now be possible.

For more details, see Step 4 and subsequent steps from "Synchronizing a MIDI device to the rhythm's tempo using the MIDI timing clock" (p. 245).

6. Set up the sequencer application for MMC.

The following setting must be made on the sequencer application to be used. Refer to the user's manual for the application in question for details on how this is done.

- MTC: Received
- MTC type: Match this with the MTC type set for the BR-1200CD.
- MMC: Received

7. Press [EXIT/NO] several times to return to the top screen.

8. If you wish to store the sync track that has been created, save the current song (p. 70).

# Controlling track volumes via MIDI (MIDI Fader)

The BR-1200CD can both transmit and receive fader operations in the form of MIDI signals (MIDI Fader). And in addition to fader signals, expression pedal signals can also be transmitted and received in the same way. By using this function to record and playback fader and expression pedal operations on an external device such as a MIDI sequencer, you will be able to carry out remote control of BR-1200CD mix-downs and other procedures.

Signals can be transmitted and received for the following types of faders.

- Faders for Tracks 1 through 8 and 9/10 through 11/12
- The MASTER fader
- An expression pedal

## NOTE

Operation signals for the INPUT SENS and INPUT LEVEL knobs cannot be communicated via MIDI.

## Turning MIDI Fader on and off

Use the following procedure to turn the transmission and reception of fader operations via MIDI on and off. At the time of purchase, MIDI Fader will be turned off, so you will need to turn this function on if you intend to use it.

1. Press [UTILITY].


The Utility Menu screen will appear.



2. Move the cursor to the MIDI icon and press [ENTER/YES].

Alternatively, you can press [F2] (MIDI) if the MIDI icon is currently displayed.

The MIDI screen will appear.

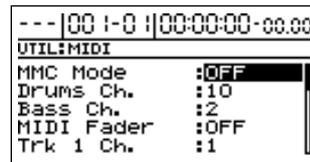

3. Move the cursor to "MIDI Fader" and select "ON" using the TIME/VALUE dial.

Fader operation data will now be transmitted and received using controller number 7 (i.e., channel volume).

4. If you wish to store the sync track that has been created, save the current song (p. 70).

## Setting the MIDI channel for MIDI Fader

At the time of purchase, the following MIDI channels will be initially assigned to the BR-1200CD's faders and expression pedal.

Tracks 1 through 8:	Channels 1 through 8
Track 9/10:	Channel 9
Track 11/12:	Channel 11
MASTER fader	Channel 16
Expression pedal	OFF

Use the following procedure to change any of these MIDI channel settings.

**1. Press [UTILITY].**


The Utility Menu screen will appear.



**2. Move the cursor to the MIDI icon and press [ENTER/YES].**

Alternatively, you can press [F2] (MIDI) if the MIDI icon is currently displayed.

The MIDI screen will appear.

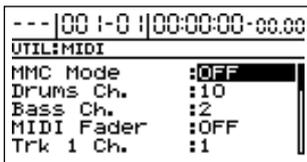

**3. Move the cursor to one of the channel settings (i.e., "Trk 1 Ch." through "Trk 11&12 Ch.," "Mas.Fader Ch." and "EXP Pedal Ch."), and change the channel assignment using the TIME/VALUE dial.**

**OFF:**

Fader operation data will not be communicated via MIDI.

**1 through 16:**

This channel will be used to transmit and receive fader operation data. If the same MIDI channel is set for a number of different faders, any fader operation data received on that channel will be used to operate all of the corresponding faders simultaneously.

**4. If you wish to store the sync track that has been created, save the current song (p. 70).**

## Confirming the current fader positions

When fader operation data is received via MIDI, the setting for the corresponding fader will change while the actual fader remains in the same position, and as a result, the volume level indicated by the fader and the actual volume level will no longer match.

In such a case, you can use the following procedure to confirm the fader position and the actual volume level.

**1. Press [UTILITY].**


The Utility Menu screen will appear.



**2. Move the cursor to the FADER icon and press [ENTER/YES].**

Alternatively, you can press [F3] (FADER) if the FADER icon is currently displayed.

A screen showing the various fader positions will appear.

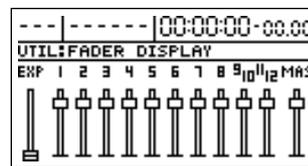


- : Position of the fader (i.e., the indicated volume)
- : Actual fader setting (i.e., the actual volume level)

Whenever you physically move a fader, the actual fader setting will be aligned with the fader position, and this condition is indicated by "▢" in the fader display.

# Inputting drum and bass patterns from a MIDI keyboard (MIDI Recording)

Although the BR-1200CD's track buttons and faders can be used to input drum and bass patterns, the input procedure can be simplified and note volumes can be controlled much more precisely if you use an external MIDI keyboard for this purpose.

1. Connect an external MIDI keyboard as shown below.

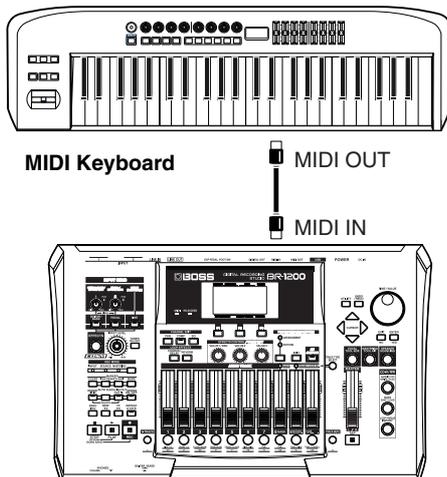

2. Start real-time drum or bass recording (p. 161, p. 175).

You will now be able to use the MIDI keyboard to input drum and bass performance data.

## NOTE

- In some cases, depending on the range, the BR-1200CD won't produce any sound when you press a key on a MIDI keyboard. This is due to the fact that only a predetermined range of note numbers have been assigned sounds, whether it be with drums or with bass.

For more detailed information, refer to "Drum sounds and note numbers" (p. 244).

Regardless of the selected sound, furthermore, the lowest note for bass is C-1 (0), and the highest note is C5 (72). Note, however, that poor sound quality or considerable noise may occur with notes below C1 and above C4.

- If the drum and bass sounds are not being played during Realtime Recording, it may be that Note messages are not being transmitted from the external MIDI keyboard. After referring to the MIDI keyboard owner's manual, make the settings so that the Note messages are properly transmitted from the external MIDI keyboard.

# Using MIDI to Control the Switching of the Insert Effects (Effects Program Change)

You can use Program Changes received at MIDI IN to switch insert effects patches. Similarly, you can also have insert effects patch selections made on the BR-1200CD transmitted as Program Changes from MIDI OUT.

## 1. Press [UTILITY].


The Utility Menu screen will appear.




## 2. Move the cursor to the MIDI icon and press [ENTER/YES].

Alternatively, you can press [F2] (MIDI) if the MIDI icon is currently displayed.

The MIDI screen will appear.

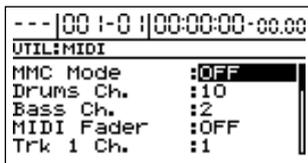

## 3. Move the cursor to "Effects P.C." and use the TIME/VALUE dial to select whether or not Program Changes are to be transmitted and received.

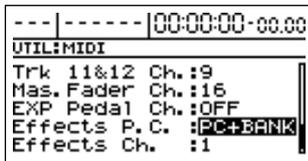

### OFF:

Program Changes are not transmitted or received.

### PC ONLY:


Insert Effects patches are switched when a Program Change is received at MIDI IN. In addition, when an insert effects patch is selected with the BR-1200CD, that patch number is transmitted from MIDI OUT as a Program Change.

### PC+BANK:

Bank Select and Program Change messages are received at MIDI IN. Insert effects patches are switched when Program Changes are received. Simultaneously, the insert effects patch bank is switched according to the Bank Select message received immediately before this.

In addition, when an insert effects patch is selected on the BR-1200CD, the bank and number for that patch are transmitted from MIDI OUT as Bank Select and Program Change messages.

## 4. Move the cursor to "Effects Ch." and turn the TIME/VALUE dial to select the MIDI channel over which the Program Change messages are to be transmitted and received.

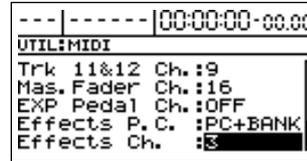

### OFF:

Bank Select and Program Change messages are not transmitted or received.

### 1-16

Bank Select and Program Change messages are transmitted and received on the selected channel.

## 5. If you wish to store the effects program change setting, save the current song (p. 70).

Bank Select and Program numbers correspond to the insert effect patch banks and numbers as shown below.

Bank Select		Program Number	Patch	
MSB	LSB		Bank	Number
0	0	1-120	GUITAR	P001-P120
	1	1-50	MIC	P001-P050
	3	1-50	STEREO	P001-P050
	4	1-50	SIMUL	P001-P050
1	0	1-120	GUITAR	U001-U120
	1	1-50	MIC	U001-U050
	3	1-50	STEREO	U001-U050
	4	1-50	SIMUL	U001-U050
2	0	1-120	GUITAR	S001-S120
	1	1-50	MIC	S001-S050
	3	1-50	STEREO	S001-S050
	4	1-50	SIMUL	S001-S050

# MEMO

# **Section 7**

## **Using USB**

# Before Using USB (Overview)

The BR-1200CD is equipped with a USB connector, which allows you to connect the BR-1200CD directly to a computer, making it easy to back up your important song data and exchange files between the BR-1200CD and the computer. USB, short for “Universal Serial Bus,” is a type of interface for connecting computers with a variety of peripheral devices.

Using USB allows you to connect different peripherals using a single USB cable, and also provides rapid data transmission.

What’s more, you can connect and disconnect peripherals with the power on, and the computer can automatically recognize when devices are connected (you may need to make settings when connecting certain devices).

## NOTE

### Important

- When you connect the BR-1200CD to your PC using a USB cable, all folders and files on the BR-1200CD’s hard disk will be displayed on the PC monitor, and you will be able to freely modify, delete, or add to these files via USB. In addition, you will be able to initialize the BR-1200CD’s hard disk remotely using the PC. Note, however, that if files and folders are modified, deleted, or added using the PC, or if the hard disk is initialized, the BR-1200CD may no longer be able to function properly, and important data could be lost. It is crucial, therefore, that no operations other than those described below be carried out using USB. Furthermore, BOSS/Roland will accept no responsibility for the incorrect operation of the BR-1200CD or for the loss of data resulting from the failure to observe this precaution.
- Do not perform the following actions when switching to USB mode or transmitting data. These operations may result in your computer not responding to the data. Data on memory cards may also be corrupted. Do not:
  - Disconnect the USB cable
  - Put the computer in suspended (standby) mode or hibernation, restart, or quit
  - Turn off the BR-1200CD’s power

## Operations that can be performed via USB

On the BR-1200CD, USB is used for the following tasks:

- Backing up the BR-1200CD’s data
- Reading backup data back into the BR-1200CD from the PC (Recover)
- Saving BR-1200CD track data in WAV/AIFF format (WAV/AIFF Export)
- Loading WAV/AIFF files in BR-1200CD tracks (WAV/AIFF Import)

## NOTE

Realtime audio signals and MIDI messages cannot be handled via the BR-1200CD’s USB connector.

## Compatible OS

### Windows:

Windows Me/2000/XP

### Macintosh:

Mac OS 9.1.x/9.2.x

Mac OS X

### Driver:

The BR-1200CD uses a standard DRIVER that is found on OS. The DRIVER will be installed automatically once connected with Computer via USB.

## MEMO

### Precautions when using Windows XP or Windows 2000


If using Windows XP/2000, log on to Windows as one of the following users:

- Administrator or other user with the privileges of the Administrators group
  - A user whose account type is Computer Administrator
- Note that you will not be able to properly quit the USB connection if the user name is not one of those described above.

For more details, consult the system administrator for the computer you are using.

# Connecting a computer

Use the USB cable to connect the BR-1200CD to your computer.  
Purchase USB cables at computer stores or other retailers.

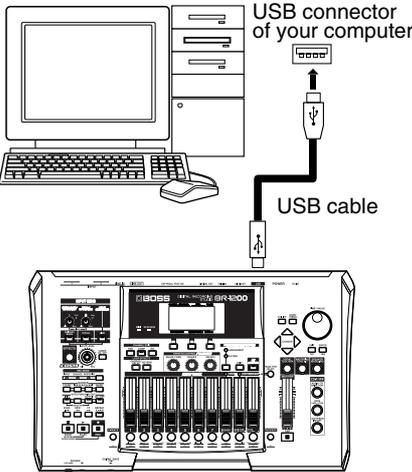

**MEMO**

If the BR-1200CD's hard disk has been initialized with a number of different partitions, only the current partition will be connected to the PC.


# Structure of data on the BR-1200CD's hard disk

When you connect the BR-1200CD to a PC via USB and perform USB menu operations, all of the folders and files on the hard disk will be displayed on the PC monitor.

**NOTE**

With certain versions of Windows OS, the "Removable Disk (\*:)" icon may be displayed.

**(Ex.) Windows XP**

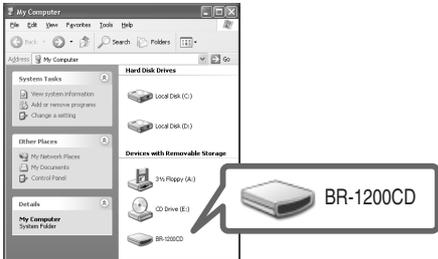

**(Ex.) Windows 2000**




**(Ex.) Macintosh**



When you double-click the BR-1200CD icon or the "Removable Disk (\*:)" icon in Windows, or double-click the BR-1200CD icon in Mac OS, all of the files and folders contained in the BR-1200CD's hard disk will be displayed on-screen.

The structure of the files and folders on the hard disk is as follows.

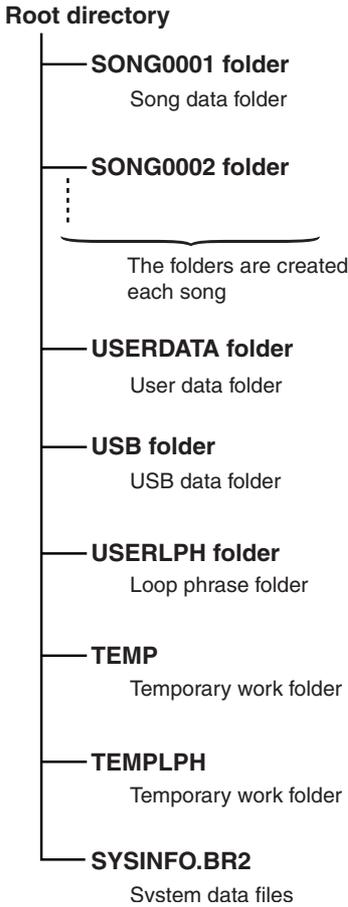


# With Windows

## Backing up the BR-1200CD's data

1. Connect your computer and the BR-1200CD with a USB cable.
2. Confirm that the recorder is stopped, then press [UTILITY].  
The Utility Menu screen will appear.



3. Move the cursor to the USB icon and press [ENTER/YES].  
Alternatively, you can press [F1] (USB) if the USB icon is currently displayed.  
The USB screen will appear.

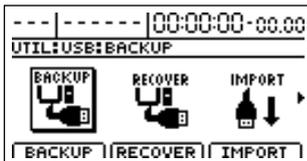

4. Move the cursor to "BACKUP" and press [ENTER/YES].  
Alternatively, you can press [F1] (BACKUP).  
"Waiting..." appears in the display, and then "Connecting..." is displayed.  
When connection with the PC has been established, the message will change to "Copy Files From BR-1200CD."



The computer soon recognizes the BR-1200CD, and "My Computer" opens on the computer.  
The "BR-1200CD" icon (or "Removable Disk (\*)" icon) appears in "My Computer."

(Ex.)




BR-1200CD



Removable Disk (\*)

5. When the "BR-1200CD" icon (or "Removable Disk (\*)" icon) is displayed, double-click this icon.

The files and folders from the BR-1200CD's hard disk will be displayed on the PC monitor.

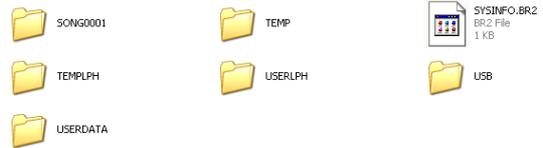

6. Select all of the files and folders and copy them to the backup folder on the PC.

It is good practice to create a new folder for the storage of backup data.

### NOTE

Extra care should be taken to ensure that each and every file and folder is selected and copied. If files or folders are missed, the backup will be incomplete and subsequent recovery operations may not be possible.

7. Quit the connection to the computer.


### With Windows XP

In My Computer, right-click on the "BR-1200CD" icon (or "Removable Disk (\*)" icon) to "Eject" the disk.

### MEMO

If this procedure fails to eject the disk, use the procedure below


- 1) Click the  icon in the task tray, then click the "Stop USB Disk-drive (\*)" message displayed there.

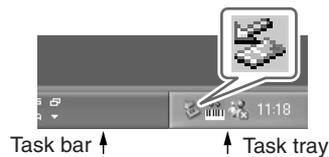

- 2) Click [OK] in the "Safe To Remove Hardware" dialog box that appears.

**With Windows 2000/Me**

- 1) In My Computer, right-click on the "BR-1200CD" icon (or "Removable Disk (\*:)" icon) to "Eject" the disk.
- 2) Click the  icon in the task tray, then click the "Stop USB Disk-drive (\*:)" message displayed there.

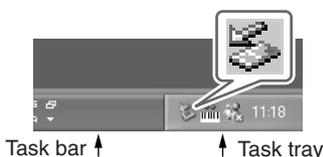

- 3) Click [OK] in the "Safe To Remove Hardware" dialog box that appears.

**8. Press BR-1200CD's [EXIT/NO].**

The USB screen will be displayed once again.

**MEMO**

- If you press [EXIT/NO] without quitting the connection to the computer, "Disconnect USB, OK?" appear. In this case, pressing [ENTER/YES] returns the USB menu screen to the display.
- If you are using an OS other than Windows Me, the BR-1200CD will automatically return to the USB screen when "Remove Hardware" is carried out.

**9. Press [EXIT/NO] to return to the Top screen.**

At this point, you can safely disconnect the USB cable from the BR-1200CD and the computer.

**NOTE**

If the current song contains newly recorded audio data or newly modified settings, the message "Save Current?" may be displayed during the backup procedure. If you want to save your song before starting the backup, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO]. Remember that if you do not save a modified song at this time, all newly recorded audio data, edited data, modified mixer settings, etc. will be lost.

## Reading backup data back into the BR-1200CD from the PC (Recover)

**1. Initialize the BR-1200CD's hard disk. (p. 285)**


**NOTE**

Note that all of the data on the BR-1200CD's hard disk will be deleted as a result of this operation, and if necessary, you should make a separate backup.

**2. Connect your computer and the BR-1200CD with a USB cable.**

**3. Confirm that the recorder is stopped, then press [UTILITY].**


The Utility Menu screen will appear.

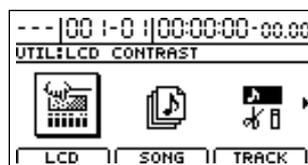

**4. Move the cursor to the USB icon and press [ENTER/YES].**

Alternatively, you can press [F1] (USB) if the USB icon is currently displayed.

The USB screen will appear.

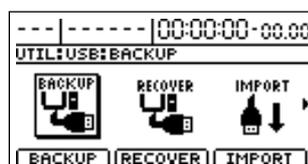

**5. Move the cursor to "RECOVER" and press [ENTER/YES].**

Alternatively, you can press [F2] (RECOVER).

"Waiting..." appears in the display, and then

"Connecting..." is displayed.

When connection with the PC has been established, the message will change to "Copy Files To BR-1200CD."



The computer soon recognizes the BR-1200CD, and "My Computer" opens on the computer.

The "BR-1200CD" icon (or "Removable Disk (\*:)" icon) appears in "My Computer."

(Ex.)



- 6. When the “BR-1200CD” icon (or “Removable Disk (\*:)” icon) is displayed, double-click this icon.**

All of the backup files and folders will appear on-screen.

- 7. Select all of the backup files and folders.**

### NOTE

Extra care should be taken to ensure that each and every file and folder is selected and copied. If files or folders are missed, the recovery will be incomplete and subsequent recovery operations may not be possible.

- 8. Copy them to the “BR-1200CD” (or “Removable Disk (\*:)” icon on the computer.**

All of the files and folders copied in Step 7 will be returned to the BR-1200CD’s internal hard disk.

### NOTE

During the recovery operation you may encounter messages asking whether it is all right to overwrite certain files—you should select “YES” in every instance. If “NO” is selected even once, the recovery operation will be incomplete, and this may prevent the BR-1200CD from operating correctly.

- 9. Quit the connection to the computer.**


#### With Windows XP

In My Computer, right-click on the “BR-1200CD” icon (or “Removable Disk (\*:)” icon) to “Eject” the disk.

### MEMO

If this procedure fails to eject the disk, use the procedure below

- 1) Click the  icon in the task tray, then click the “Stop USB Disk-drive (\*:)” message displayed there.

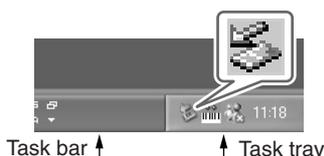

- 2) Click [OK] in the “Safe To Remove Hardware” dialog box that appears.

#### With Windows 2000/Me

- 1) In My Computer, right-click on the “BR-1200CD” icon (or “Removable Disk (\*:)” icon) to “Eject” the disk.
- 2) Click the  icon in the task tray, then click the “Stop USB Disk-drive (\*:)” message displayed there.



Task bar ↑                      ↑ Task tray

- 3) Click [OK] in the “Safe To Remove Hardware” dialog box that appears.

- 10. Press BR-1200CD’s [EXIT/NO].**

The message “Now Re-Loading...” will appear on the BR-1200CD’s display, and the most recently selected song will be reloaded.

When reloading has been completed, the display will return to the USB screen.

### MEMO

- If you are using an OS other than Windows Me, the message “Now Re-Loading...” will appear on the BR-1200CD’s display immediately after “Remove Hardware” is carried out, and the most recently selected song will be reloaded. When reloading has been completed, the display will return to the USB screen.
- If you press [EXIT/NO] without quitting the connection to the computer, “Disconnect USB, OK?” appear. In this case, pressing [ENTER/YES] returns the USB menu screen to the display.

- 11. Press [EXIT/NO] to return to the Top screen.**

At this point, you can safely disconnect the USB cable from the BR-1200CD and the computer.

### NOTE

If the current song contains newly recorded audio data or newly modified settings, the message “Save Current?” may be displayed during the recovery procedure. If you want to save your song before starting the recover process, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO]. Remember that if you do not save a modified song at this time, all newly recorded audio data, edited data, modified mixer settings, etc. will be lost.

## Saving BR-1200CD track data in WAV/AIFF format (WAV/AIFF Export)

You can convert the BR-1200CD's track data into WAV or AIFF files and save these on your computer. After converting your mastered tracks to WAV or AIFF files, you can easily use your computer to create audio CDs with the data, as well as load the data into audio applications.

1. Connect your computer and the BR-1200CD with a USB cable.
2. Confirm that the recorder is stopped, then press [UTILITY].


The Utility Menu screen will appear.



3. Move the cursor to the USB icon and press [ENTER/YES].

Alternatively, you can press [F1] (USB) if the USB icon is currently displayed.

The USB screen will appear.

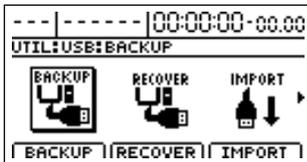

4. Move the cursor to "EXPORT" and press [ENTER/YES].

Alternatively, you can press [F1] (EXPORT).

The USB Export screen will appear.



5. Use [CURSOR] and the TIME/VALUE dial to select the track/V-track to be saved.


### When saving in mono

Select the track 1-8.



### When saving in stereo

Select the track combination 1/2 -11/12.

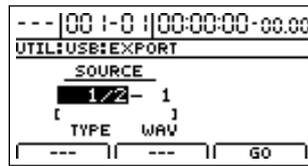

6. Move the cursor to "TYPE" and use the TIME/VALUE dial to select the file format.

WAV: This is an audio format used primarily with Windows.

AIFF: This audio format is used primarily with Macintosh.

7. Press [F3] (GO).

Conversion of the WAV or AIFF file begins.

The correspondence between tracks and converted file names is as follows.

(Mono)	(Stereo)
Track 1, V-Track 1	Track 1/2, V-Track 1
T01__01.WAV or T01__01.AIF	T0102_01.WAV or T0102_01.AIF
Track 1, V-Track 2	Track 1/2, V-Track 2
T01__02.WAV or T01__02.AIF	T0102_02.WAV or T0102_02.AIF
:	:
Track 8, V-Track 15	Track 11/12, V-Track 15
T08__15.WAV or T08__15.AIF	T1112_15.WAV or T1112_15.AIF
Track 8, V-Track 16	Track 11/12, V-Track 16
T08__16.WAV or T08__16.AIF	T1112_16.WAV or T1112_16.AIF

When the conversion is complete, the message "Copy 1 Wave File From BR-1200CD's USB Folder." will appear.

The computer soon recognizes the BR-1200CD, and "My Computer" opens on the computer.

The "BR-1200CD" icon (or "Removable Disk (\*)" icon) appears in "My Computer."

(Ex.)




BR-1200CD



Removable Disk (\*)

8. When the "BR-1200CD" icon (or "Removable Disk (\*)" icon) is displayed, double-click this icon.

All of the files and folders from the BR-1200CD's hard disk will be displayed on the PC monitor.

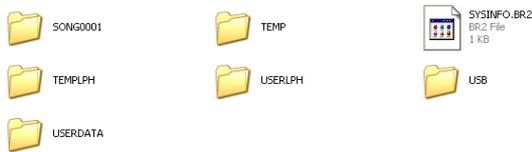

9. Click the USB folder.



10. Drag the WAV or AIFF file to the computer's folder and drop it in the folder.

11. Quit the connection to the computer.


### With Windows XP

In My Computer, right-click on the "BR-1200CD" icon (or "Removable Disk (\*)" icon) to "Eject" the disk.

#### MEMO

If this procedure fails to eject the disk, use the procedure below


- 1) Click the  icon in the task tray, then click the "Stop USB Disk-drive (\*)" message displayed there.

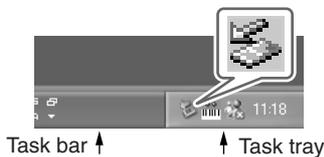

- 2) Click [OK] in the "Safe To Remove Hardware" dialog box that appears.

### With Windows 2000/Me

- 1) In My Computer, right-click on the "BR-1200CD" icon (or "Removable Disk (\*)" icon) to "Eject" the disk.
- 2) Click the  icon in the task tray, then click the "Stop USB Disk-drive (\*)" message displayed there.

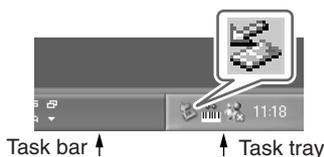

- 3) Click [OK] in the "Safe To Remove Hardware" dialog box that appears.

12. Press the BR-1200CD's [EXIT/NO].

The file type selection screen will be displayed once again.

WAV or AIFF files will be automatically deleted from the BR-1200CD's internal hard disk.

#### MEMO

- If you are using an OS other than Windows Me, the BR-1200CD will automatically return to the USB screen when "Remove Hardware" is carried out.
- If you press [EXIT/NO] without quitting the connection to the computer, "Disconnect USB, OK?" appear. In this case, pressing [ENTER/YES] returns the file format selection screen to the display.

13. When you have finished exporting the WAV or AIFF file(s), press [EXIT/NO] several times to return to the Top screen.

At this point, you can safely disconnect the USB cable from the BR-1200CD and the computer.

#### NOTE

If the current song contains newly recorded audio data or newly modified settings, the message "Save Current?" may be displayed during the export procedure. If you want to save your song before starting the export, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO]. Remember that if you do not save a modified song at this time, all newly recorded audio data, edited data, modified mixer settings, etc. will be lost.

## Loading WAV/AIFF files in BR-1200CD tracks (WAV/AIFF Import)

You can take WAV or AIFF files on your computer, such as files created with audio software applications, and load them to the BR-1200CD's tracks.


- Wave data in the following formats can be imported. You cannot import wave data in other formats.

- WAV or AIFF format
- Mono or Stereo
- 8-bit or 16-bit
- Sampling Rate: 44.1 kHz
- Add the extension "WAV" to imported WAV files and the extension "AIF" to imported AIFF files.
- Compressed WAV files or AIFF files cannot be loaded.
- Extremely short waveform data (less than approximately 1 sec) cannot be loaded.
- The loop point settings within an AIFF file will be ignored.

1. Connect your computer and the BR-1200CD with a USB cable.

2. Confirm that the recorder is stopped, then press [UTILITY].


The Utility Menu screen will appear.

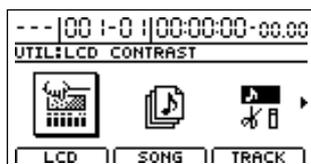

3. Move the cursor to the USB icon and press [ENTER/YES].

Alternatively, you can press [F1] (USB) if the USB icon is currently displayed.


The USB screen will appear.

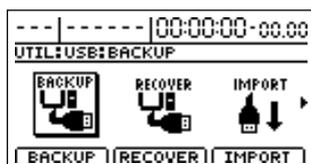

4. Move the cursor to the IMPORT icon and press [ENTER/YES].

Alternatively, you can press [F3] (IMPORT).


The USB Import screen will appear.

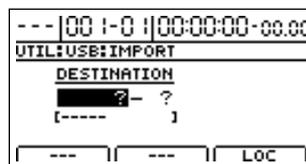

5. Use [CURSOR] and the TIME/VALUE dial to select the track and the V-Track to be loaded.


### When loading to the tracks in mono

Select the track 1-8.

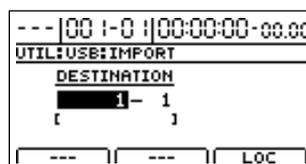


### When loading to the tracks in stereo

Select the track combination 1/2-11/12.

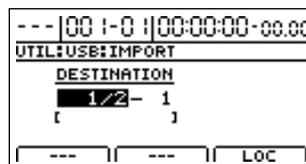

6. Use [CURSOR] and the TIME/VALUE dial to specify the measure or position in the track from which loading is to start.

Pressing [F1] (DISP) at this time will allow you switch among the specification methods for positions (i.e., by bar, time, or marker).

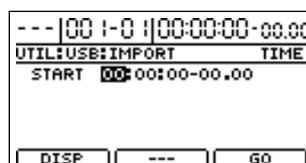

7. Press [F3] (GO).

When the connection is complete, the message "Copy 1 Wave File To BR-1200CD's USB Folder." will appear.

The computer soon recognizes the BR-1200CD, and "My Computer" opens on the computer.

The "BR-1200CD" icon (or "Removable Disk (\*)" icon) appears in "My Computer."

(Ex.)



**8. When the “BR-1200CD” icon (or “Removable Disk (\*):” icon) is displayed, double-click this icon.**

The files and folders from the BR-1200CD’s hard disk will be displayed on the PC monitor.

**NOTE**

In some cases, a certain amount of time will pass before the hard disk is displayed.

**9. Double-click the USB folder.**

The USB folder opens. Confirm that the USB folder is empty. The presence of any files in the USB folder will prevent proper importation of WAV and AIFF files, so be sure to delete any such files.

**10. Drag and drop the WAV or AIFF file to be imported on the computer to the USB folder.**

**NOTE**

Only one file can be imported at a time in each import operation. Do not drag and drop more than one file at a time. The import procedure cannot be carried out correctly when two or more files are present in the USB folder.

**11. Quit the connection to the computer.**


**With Windows XP**

In My Computer, right-click on the “BR-1200CD” icon (or “Removable Disk (\*):” icon) to “Eject” the disk.

**MEMO**

If this procedure fails to eject the disk, use the procedure below


- 1) Click the  icon in the task tray, then click the “Stop USB Disk-drive (\*):” message displayed there.

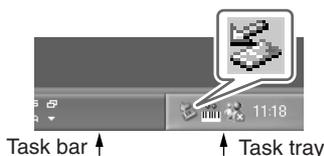

- 2) Click [OK] in the “Safe To Remove Hardware” dialog box that appears.

**With Windows 2000/Me**

- 1) In My Computer, right-click on the “BR-1200CD” icon (or “Removable Disk (\*):” icon) to “Eject” the disk.
- 2) Click the  icon in the task tray, then click the “Stop USB Disk-drive (\*):” message displayed there.

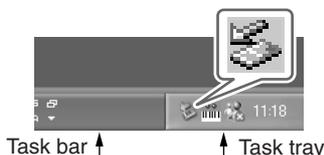

- 3) Click [OK] in the “Safe To Remove Hardware” dialog box that appears.

**12. Press BR-1200CD’s [EXIT/NO].**

The WAV and/or AIFF files will be converted into audio track data.

When this process has been completed, the USB Import screen will be displayed once again. The WAV and/or AIFF files will then be automatically deleted.

**MEMO**

With certain OS, conversion will start automatically without [EXIT/NO] having to be pressed.

**13. Press BR-1200CD’S [EXIT/NO] several times to return to the Top screen.**

At this point, you can safely disconnect the USB cable from the BR-1200CD and the computer.

**MEMO**

If you press [EXIT/NO] without quitting the connection to the computer, “Disconnect USB, OK?” appear. In this case, press [ENTER/YES].

**NOTE**

If the current song contains newly recorded audio data or newly modified settings, the message “Save Current?” may be displayed during the import procedure. If you want to save your song before starting the import, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO]. Remember that if you do not save a modified song at this time, all newly recorded audio data, edited data, modified mixer settings, etc. will be lost.

# With Macintosh

## Backing up the BR-1200CD's data

1. Connect your computer and the BR-1200CD with a USB cable.
2. Confirm that the recorder is stopped, then press [UTILITY].


The Utility Menu screen will appear.



3. Move the cursor to the USB icon and press [ENTER/YES].

Alternatively, you can press [F1] (USB) if the USB icon is currently displayed.

The USB screen will appear.

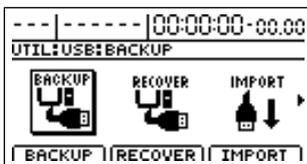

4. Move the cursor to "BACKUP" and press [ENTER/YES].

Alternatively, you can press [F1] (BACKUP).

"Waiting..." appears in the display, and then "Connecting..." is displayed.

When connection with the PC has been established, the message will change to "Copy Files From BR-1200CD."



Shortly after the connection has been established, the BR-1200CD icon will appear on-screen.

(Ex.)



5. Double-click the "BR-1200CD."

The files and folders from the BR-1200CD's hard disk will be displayed on the PC monitor.



6. Select all of the files and folders and copy them to the backup folder on the computer.

It is good practice to create a new folder for the storage of backup data.

### NOTE

Extra care should be taken to ensure that each and every file and folder is selected and copied. If files or folders are missed, the backup will be incomplete and subsequent recovery operations may not be possible.

7. Quit the connection to the computer.

Drag the "BR-1200CD" icon to the Trash.

8. Press BR-1200CD's [EXIT/NO].

The USB screen will be displayed once again.

### MEMO

If you press [EXIT/NO] without quitting the connection to the computer, "Disconnect USB, OK?" appear. In this case, pressing [ENTER/YES] returns the USB menu screen to the display.

9. Press [EXIT/NO] to return to the Top screen.

At this point, you can safely disconnect the USB cable from the BR-1200CD and the computer.

### NOTE

If the current song contains newly recorded audio data or newly modified settings, the message "Save Current?" may be displayed during the backup procedure. If you want to save your song before starting the backup, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO]. Remember that if you do not save a modified song at this time, all newly recorded audio data, edited data, modified mixer settings, etc. will be lost.

## Reading backup data back into the BR-1200CD from the PC (Recover)

1. Initialize the BR-1200CD's hard disk. (p. 285)


**NOTE**

Note that all of the data on the BR-1200CD's hard disk will be deleted as a result of this operation, and if necessary, you should make a separate backup.

2. Connect your computer and the BR-1200CD with a USB cable.
3. Confirm that the recorder is stopped, then press [UTILITY]. The Utility Menu screen will appear.



4. Move the cursor to the USB icon and press [ENTER/YES].  
Alternatively, you can press [F1] (USB) if the USB icon is currently displayed.  
The USB screen will appear.

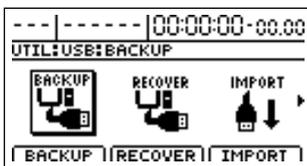

5. Move the cursor to "RECOVER" and press [ENTER/YES].  
Alternatively, you can press [F2] (RECOVER).  
"Waiting..." appears in the display, and then "Connecting..." is displayed.  
When connection with the PC has been established, the message will change to "Copy Files To BR-1200CD."



Shortly after the connection has been established, the BR-1200CD icon will appear on-screen.

(Ex.)



### With Mac OS 9.1.x / 9.2.x

6. Open the folder on the PC where you have stored the backup data.  
All of the backup files and folders will appear on-screen.

7. Select all of the backup files and folders.

**NOTE**

Extra care should be taken to ensure that each and every file and folder is selected and copied. If files or folders are missed, the recovery will be incomplete and subsequent recovery operations may not be possible.

8. Copy them to the "BR-1200CD" icon on the computer.  
All of the files and folders copied in Step 7 will be returned to the BR-1200CD's internal hard disk.

**NOTE**

During the recovery operation you may encounter messages asking whether it is all right to overwrite certain files—you should select "YES" in every instance. If "NO" is selected even once, the recovery operation will be incomplete, and this may prevent the BR-1200CD from operating correctly.

9. Quit the connection to the computer.  
Drag the BR-1200CD icon to the Trash.

10. Press BR-1200CD's [EXIT/NO].

The message "Now Re-Loading..." will appear on the BR-1200CD's display, and the most recently selected song will be reloaded.

When reloading has been completed, the display will return to the USB screen.

**MEMO**

If you press [EXIT/NO] without quitting the connection to the computer, "Disconnect USB, OK?" appear. In this case, pressing [ENTER/YES] returns the USB menu screen to the display.

11. Press [EXIT/NO] to return to the Top screen.


At this point, you can safely disconnect the USB cable from the BR-1200CD and the computer.

**NOTE**

If the current song contains newly recorded audio data or newly modified settings, the message "Save Current?" may be displayed during the recovery procedure. If you want to save your song before starting the recover process, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO]. Remember that if you do not save a modified song at this time, all newly recorded audio data, edited data, modified mixer settings, etc. will be lost.

**With Mac OS X****6. Double-click the BR-1200CD icon.**

The files and folders from the BR-1200CD's hard disk will be displayed on the PC monitor.

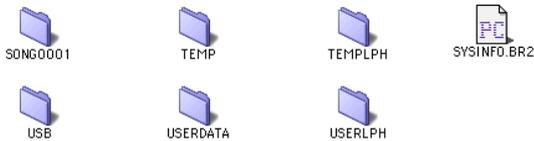**7. Open the folder on the PC where you have stored the backup data.**

All of the backup files and folders will appear on-screen.

**8. Select all of the backup files and folders.****NOTE**

Extra care should be taken to ensure that each and every file and folder is selected and copied. If files or folders are missed, the recovery will be incomplete and subsequent recovery operations may not be possible.

**9. Copy them to the USB folder on the computer.**

All of the files and folders copied in Step 8 will be returned to the BR-1200CD's internal hard disk.

**NOTE**

During the recovery operation you may encounter messages asking whether it is all right to overwrite certain files—you should select "YES" in every instance. If "NO" is selected even once, the recovery operation will be incomplete, and this may prevent the BR-1200CD from operating correctly.

**10. Quit the connection to the computer.**

Drag the BR-1200CD icon to the Trash.

**11. Press BR-1200CD's [EXIT/NO].**

"Now Checking..." appears in the BR-1200CD's display, then "Now Copying..." is displayed, and the recovery begins.

When the recovery is finished, the message "Now Re-Loading..." will appear in the display, and the most recently selected song will be reloaded.

When reloading has been completed, the display will return to the USB screen.

**MEMO**

If you press [EXIT/NO] without quitting the connection to the computer, "Disconnect USB, OK?" appear. In this case, pressing [ENTER/YES] returns the USB menu screen to the display.

**12. Press [EXIT/NO] to return to the Top screen.**

At this point, you can safely disconnect the USB cable from the BR-1200CD and the computer.

**NOTE**

If the current song contains newly recorded audio data or newly modified settings, the message "Save Current?" may be displayed during the recovery procedure. If you want to save your song before starting the recover process, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO]. Remember that if you do not save a modified song at this time, all newly recorded audio data, edited data, modified mixer settings, etc. will be lost.

## Saving BR-1200CD track data in WAV/AIFF format (WAV/AIFF Export)

You can convert the BR-1200CD's track data into WAV or AIFF files and save these on your computer. After converting your mastered tracks to WAV or AIFF files, you can easily use your computer to create audio CDs with the data, as well as load the data into audio applications.

1. Connect your computer and the BR-1200CD with a USB cable.
2. Confirm that the recorder is stopped, then press [UTILITY].


The Utility Menu screen will appear.



3. Move the cursor to the USB icon and press [ENTER/YES].

Alternatively, you can press [F1] (USB) if the USB icon is currently displayed.

The USB screen will appear.

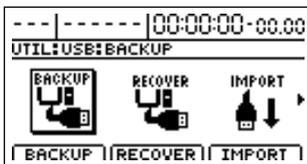

4. Move the cursor to "EXPORT" and press [ENTER/YES].

Alternatively, you can press [F1] (EXPORT).


The USB Export screen will appear.



5. Use [CURSOR] and the TIME/VALUE dial to select the track/V-track to be saved.


### When saving in mono

Select the track 1-8.

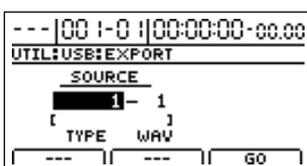

### When saving in stereo

Select the track combination 1/2-11/12.

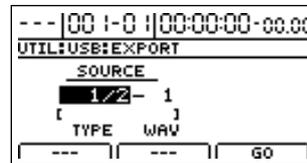

6. Move the cursor to "TYPE" and use the TIME/VALUE dial to select the file format.

WAV: This is an audio format used primarily with Windows.

AIFF: This audio format is used primarily with Macintosh.

7. Press [F3] (GO).

Conversion of the WAV or AIFF file begins.

The correspondence between tracks and converted file names is as follows.

(Mono)	(Stereo)
Track 1, V-Track 1	Track 1/2, V-Track 1
T01__01.WAV or T01__01.AIF	T0102_01.WAV or T0102_01.AIF
Track 1, V-Track 2	Track 1/2, V-Track 2
T01__02.WAV or T01__02.AIF	T0102_02.WAV or T0102_02.AIF
:	:
Track 8, V-Track 15	Track 11/12, V-Track 15
T08__15.WAV or T08__15.AIF	T1112_15.WAV or T1112_15.AIF
Track 8, V-Track 16	Track 11/12, V-Track 16
T08__16.WAV or T08__16.AIF	T1112_16.WAV or T1112_16.AIF


When the conversion is complete, the message "Copy 1 Wave File From BR-1200CD's USB Folder." will appear. Shortly after the "BR-1200CD" icon is added to the computer.

(Ex.)



**8. Double-click the “BR-1200CD” icon.**

All of the files and folders from the BR-1200CD’s hard disk will be displayed on the PC monitor.

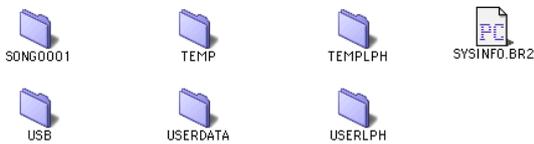

**9. Double-click the USB folder.**



**10. Drag the WAV or AIFF file to the computer’s folder and drop it in the folder.**

**11. Quit the connection to the computer.**

Drag the “BR-1200CD” icon to the Trash.

**12. Press the BR-1200CD’s [EXIT/NO].**

The file type selection screen will be displayed once again.

WAV or AIFF files will be automatically deleted from the BR-1200CD’s internal hard disk.

**MEMO**

If you press [EXIT/NO] without quitting the connection to the computer, “Disconnect USB, OK?” appear. In this case, pressing [ENTER/YES] returns the file format selection screen to the display.

**13. When you have finished exporting the WAV or AIFF file(s), press [EXIT/NO] several times to return to the Top screen.**

At this point, you can safely disconnect the USB cable from the BR-1200CD and the computer.

**NOTE**

If the current song contains newly recorded audio data or newly modified settings, the message “Save Current?” may be displayed during the export procedure. If you want to save your song before starting the export, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO]. Remember that if you do not save a modified song at this time, all newly recorded audio data, edited data, modified mixer settings, etc. will be lost.

## Loading WAV/AIFF files in BR-1200CD tracks (WAV/AIFF Import)

You can take WAV or AIFF files on your computer, such as files created with audio software applications, and load them to the BR-1200CD’s tracks.

**● Wave data in the following formats can be imported. You cannot import wave data in other formats.**

- WAV or AIFF format
- Mono or Stereo
- 8-bit or 16-bit
- Sampling Rate: 44.1 kHz
- Add the extension “WAV” to imported WAV files and the extension “AIF” to imported AIFF files.
- Compressed WAV files or AIFF files cannot be loaded.
- Extremely short waveform data (less than approximately 1 sec) cannot be loaded.
- The loop point settings within an AIFF file will be ignored.

**1. Connect your computer and the BR-1200CD with a USB cable.**

**2. Confirm that the recorder is stopped, then press [UTILITY].**


The Utility Menu screen will appear.



**3. Move the cursor to the USB icon and press [ENTER/YES].**

Alternatively, you can press [F1] (USB) if the USB icon is currently displayed.

The USB screen will appear.

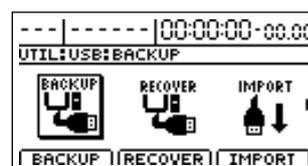

4. Move the cursor to the IMPORT icon and press [ENTER/YES].

Alternatively, you can press [F3] (IMPORT).


The USB Import screen will appear.



5. Use [CURSOR] and the TIME/VALUE dial to select the track to be loaded.

### When loading to the tracks in mono

Select the track 1-8.

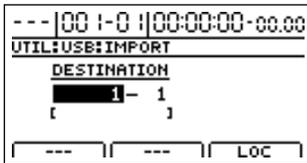


### When loading to the tracks in stereo

Select the track combination 1/2-11/12.



6. Use [CURSOR] and the TIME/VALUE dial to specify the measure or position in the track from which loading is to start.

Pressing [F1] (DISP) at this time will allow you switch among the specification methods for positions (i.e., by bar, time, or marker).

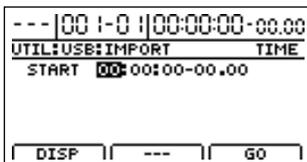

7. Press [F3] (GO).

When the connection is complete, the message "Copy 1 Wave File To BR-1200CD's USB Folder." will appear. After several moments, the BR-1200CD icon will appear on the PC monitor.

(Ex.)



8. Double-click the BR-1200CD icon.

The files and folders from the BR-1200CD's hard disk will be displayed on the PC monitor.

#### NOTE

In some cases, a certain amount of time will pass before the hard disk is displayed.

9. Double-click the USB folder.

The USB folder opens.

Confirm that the USB folder is empty. The presence of any files in the USB folder will prevent proper importation of WAV and AIFF files, so be sure to delete any such files.

10. Drag and drop the WAV or AIFF file to be imported on the computer to the USB folder.

#### NOTE

Only one file can be imported at a time in each import operation. Do not drag and drop more than one file at a time. The import procedure cannot be carried out correctly when two or more files are present in the USB folder.

11. Quit the connection to the computer.

Drag the BR-1200CD icon to the Trash.

12. Press BR-1200CD's [EXIT/NO].

The WAV and/or AIFF files will be converted into audio track data.

When this process has been completed, the USB Import screen will be displayed once again. The WAV and/or AIFF files will then be automatically deleted.

13. Press BR-1200CD'S [EXIT/NO] several times to return to the Top screen.

At this point, you can safely disconnect the USB cable from the BR-1200CD and the computer.

#### MEMO

If you press [EXIT/NO] without quitting the connection to the computer, "Disconnect USB, OK?" appear. In this case, press [ENTER/YES].

#### NOTE


If the current song contains newly recorded audio data or newly modified settings, the message "Save Current?" may be displayed during the import procedure. If you want to save your song before starting the import, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO]. Remember that if you do not save a modified song at this time, all newly recorded audio data, edited data, modified mixer settings, etc. will be lost.

# **Section 8**

## **Other Convenient Functions**


# Adjusting the display's contrast

In certain locations, the BR-1200CD's display may be difficult to read. In such cases, use the following procedure to adjust the display's contrast.

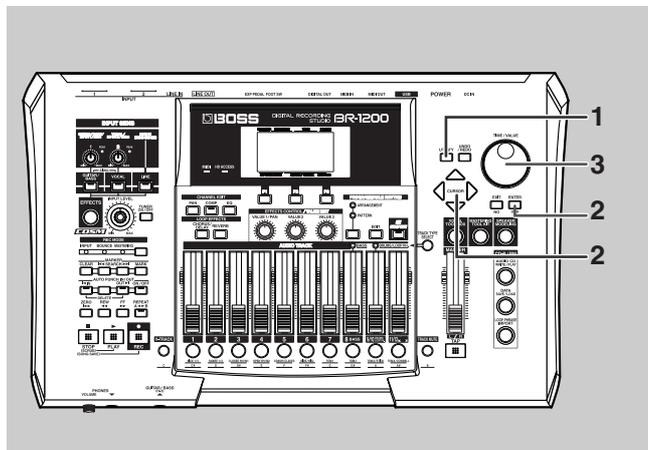

**1. Press [UTILITY].**


The Utility screen will appear.

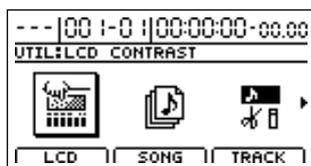

**2. Move the cursor to the LCD icon and press [ENTER/YES].**

Alternatively, press [F1] (LCD) if the LCD icon is currently displayed.

The LCD Contrast screen will appear.

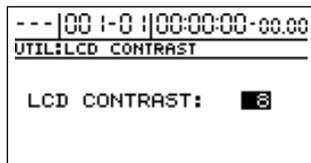

**3. Turn the TIME/VALUE dial to adjust the contrast.**

Setting range: 1 through 16

Higher values produce a darker display and vice-versa.

**4. When you have finished adjusting the contrast, press [EXIT/NO] several times to return to the top screen.**

**MEMO**

If you press and hold [UTILITY] while turning the TIME/VALUE dial, you will be able to change the contrast in real time. Choose the method that best suits the BR-1200CD's setup.

# Tuning instruments (Tuner)

The BR-1200CD features an integrated chromatic tuner and this allows you to conveniently tune instruments.


## Setting the reference pitch

Before you can use the tuner, you will first of all have to set its reference pitch (or frequency).

This pitch is used to define the frequency for A4 (i.e., A above middle C on a piano keyboard). At the time of purchase, a frequency of 440 Hz is set for A4 in the BR-1200CD, and if this is suitable, there will be no need to change the setting.


However, in situations where an ensemble is to be recorded, it is often necessary to tune all instruments in the ensemble to the instrument that is most difficult to tune (for example, the piano), and the reference pitch of this instrument will not necessarily be 440 Hz.

In order to accommodate this type of situation, the BR-1200CD allows you to change the tuner's reference pitch as described below.

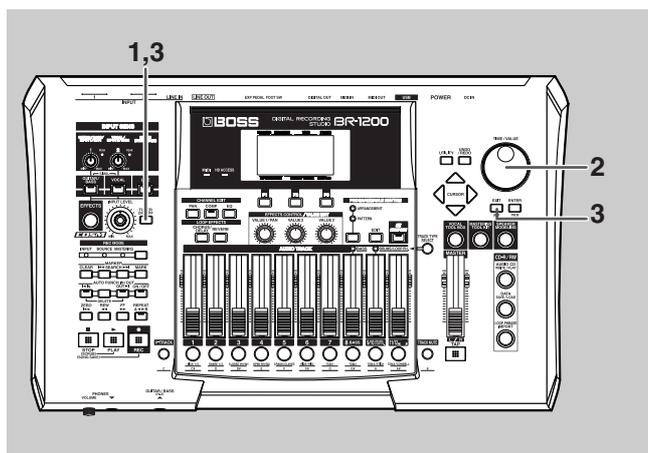

1. Press [TUNER ON/OFF]

The Tuner screen will appear.

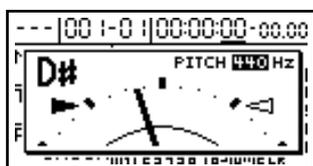

2. Turn the TIME/VALUE dial to modify the reference pitch.

Setting range: 435 to 445 Hz

At the time of purchase, the reference pitch will be set to 440 Hz.

3. When you have made the required setting, press [TUNER ON/OFF] once again or press [EXIT/NO].

The tuner will be turned off.

4. If you wish to store the modified settings, save the current song (p. 70).

### MEMO

- The reference pitch setting will be saved to each song.
- The reference pitch set for the tuner will also be used as the reference pitch for rhythm arrangement bass patterns (p. 171).

## Tuning


The following describes the tuning procedure using the example of a guitar or bass guitar.

1. Connect the guitar or bass to a BR-1200CD input source and confirm that audio is being received.

See "Connecting other devices" (p. 34).

2. Press [TUNER ON/OFF]

The Tuner screen will appear.

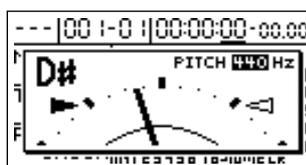

The name of the note is displayed on the left of the screen, and the reference pitch is displayed on right of the screen. Tuning guides are displayed on the left and right of the meter showing the difference between the correct note and the note being played.

3. Play the string that you want to tune.  
The closest note to that string's pitch will be displayed.
4. If the displayed note is not correct for the string being played, you will first of all have to carry out rough tuning to have the correct note displayed.

Correct notes for standard tuning are as follows.


	7th string	6th string	5th string	4th string	3rd string	2nd string	1st string
Guitar	B	E	A	D	G	B	E
Bass			B	E	A	D	G

5. While monitoring the tuning guides, fine-tune each string in such a way that both of these guides turn on when the string is played.


When the difference between the played note and the correct note is within  $\pm 50$  cents, the tuning guides indicate the magnitude of this difference.

## Tuning instruments (Tuner)


For example, when the right tuning guide is lit, it indicates that the string's pitch is higher (or sharper) than the correct pitch, and you should loosen the corresponding peg. On the other hand, when the left tuning guide is lit, it indicates that the string's pitch is lower (or flatter) than the correct pitch, and you should tighten the corresponding peg.

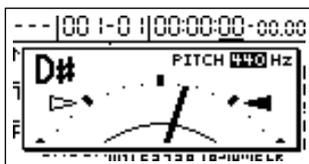

**When the pitch is higher than the displayed note**

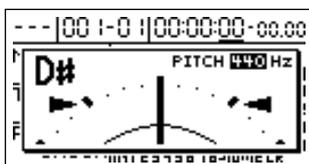

**When the pitch matches the displayed note**

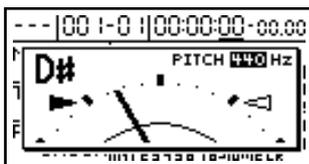

**When the pitch is lower than the displayed note**

- Repeat Steps 4 through 5 to tune all of the instrument's strings.
- When you have tuned all of the strings, press [TUNER ON/OFF] or press [EXIT/NO].  
The tuner will be turned off.

### NOTE

#### Precautions for tuner usage

- Neither playback nor recording is possible while the tuner is being used. Effects will also be inactive at this time.
- Ensure that only the sound to be tuned is played. If any other sounds are included in the audio input, it will not be possible to use the tuner correctly.
- The tuner will not be able to correctly determine pitches when the level of the input source is too high or too low. If you are having trouble tuning an instrument, try adjusting its input volume using the corresponding INPUT SENS knob.

### MEMO

If you do not want the sound being tuned to be routed to the LINE OUT or headphone jacks, either turn down the INPUT LEVEL knob or lower the MASTER fader. Note that it may not be possible to perform tuning if the INPUT SENS knob is turned down.


### MEMO

If you are tuning a guitar with a vibrato arm, tuning of one string may cause the tuning of the other strings to drift. In such a case, you should carry out rough tuning in such a way that the correct note is displayed for each string, and you should then repeatedly fine-tune each string until all have been tuned.

# Mixing audio-device output with the BR-1200CD's output (Audio Sub Mix)

The Audio Sub Mix function allows LINE IN to be directly mixed with the audio being output via the LINE OUT jacks. Accordingly, you can use this function to mix the BR-1200CD's audio output with audio from an external audio device without having to prepare a separate mixer.

Audio Sub Mix is set up as described below.

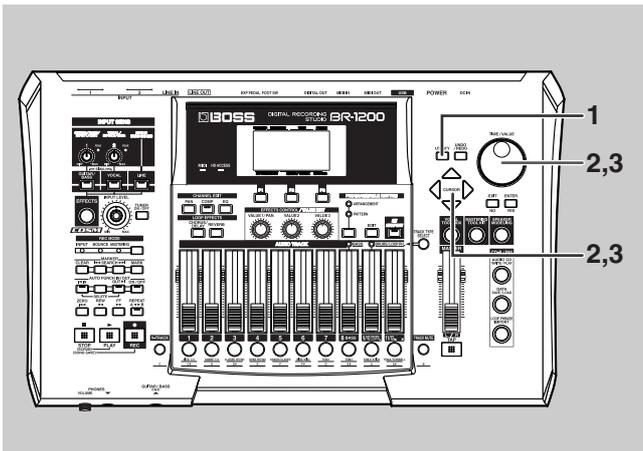

1. Press [UTILITY].


The Utility screen will appear.



2. Move the cursor to the SYSTEM icon and press [ENTER/YES].

Alternatively, you can press [F2] (SYSTEM) if the SYSTEM icon is currently displayed.

The System Parameter screen will appear.

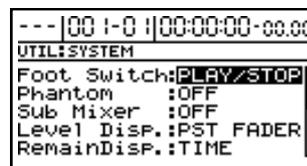

3. Move the cursor to "Sub Mixer" and select "ON" using the TIME/VALUE dial.



## NOTE

### Precautions for Audio Sub Mix usage

- The Audio Sub Mix setting is returned to "OFF" whenever the BR-1200CD is turned on.
- When either LINE has been selected from INPUT SELECT, LINE IN will give priority to track recording; therefore, the Audio Sub Mix function will remain inactive even if it is turned on.

# Using condenser microphones (Phantom Power)

Most condenser microphones need a supply of power known as phantom power in order to operate.

Accordingly, the BR-1200CD can supply phantom power at +48 V to condenser microphones connected to any of the XLR-type connectors for MIC 1 and MIC 2.

## MEMO


### Phantom power

Condenser microphones generally contain a pair of thin opposing electrodes. When a voltage is applied across these electrodes, any vibration resulting from incoming audio will be output as electrical waves. However, since these waves are very weak, they must be boosted using amplification circuitry within the microphone itself. Phantom power is used to drive this amplification circuitry.

Certain types of condenser microphone use internal batteries as a source of power; accordingly, there will be no need to supply phantom power in such a case.

## NOTE

- Phantom power should always be turned off when audio sources other than condenser microphones are being connected to the BR-1200CD's. In fact, dynamic microphones, audio players, and the like can be damaged by this power supply. Always refer to the user's manual for the microphone to be used in order to confirm its phantom-power specifications.
- The BR-1200CD's MASTER fader, INPUT SENS 1/2 knobs, and INPUT LEVEL knobs must be moved all the way down when phantom power is being turned on or off. If this precaution is not observed, there is a possibility that amplifiers, speakers, and the like may be damaged by loud noises generated upon switching.

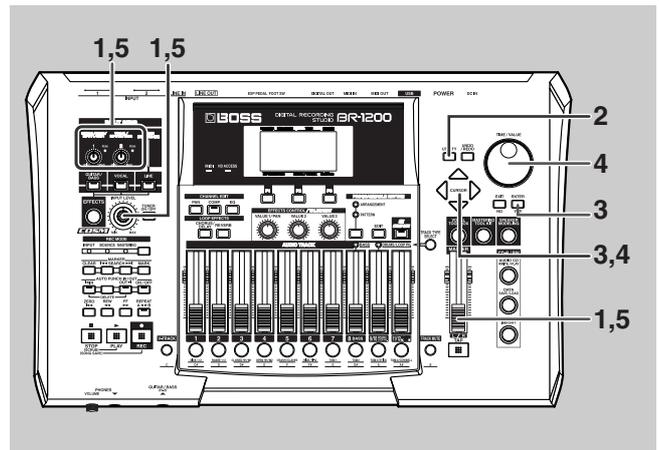

- Before proceeding, turn INPUT SENS knobs 1 and 2 fully counter-clockwise in order to reduce the input volumes, and then move the MASTER fader and INPUT LEVEL knobs all the way down.

If any of these volumes is not reduced, a loud click may be output when the phantom power is turned on or off.

- Press [UTILITY].


The Utility screen will appear.



- Move the cursor to the SYSTEM icon and press [ENTER/YES].

Alternatively, you can press [F2] (SYSTEM) if the SYSTEM icon is currently displayed.

The System Parameter screen will appear.

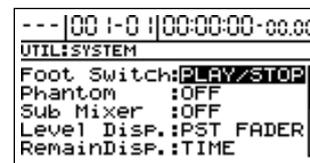

- Move the cursor to "Phantom" and select "ON" using the TIME/VALUE dial.



ON: Phantom power will be supplied.

Note that when turned on, phantom power will be supplied to all XLR connectors for MIC 1 and 2.

OFF: Phantom power will not be supplied.

5. Slowly raise the INPUT SENS knobs, the MASTER fader and INPUT LEVEL knobs, and confirm that an audio signal is being received from the condenser microphone(s).
6. To turn off the phantom power, repeat Steps 1 through 3, and then set "Phantom" to "OFF" in Step 4.


### NOTE

#### Precautions for phantom power usage

- Phantom power cannot be turned on or off individually for MIC 1 and 2.
- Phantom power is not supplied to the 1/4" phone jacks for IMIC 1 and 2 or to the GUITAR/BASS jack.
- The phantom power setting reverts to "OFF" whenever the BR-1200CD is turned on. Remember, therefore, to turn on this power supply whenever it is needed.
- A supply of phantom power is not needed for certain types of condenser microphone (i.e., microphones featuring internal batteries, electric condenser microphones, etc.). Ensure that phantom power is set to "OFF" whenever one of these microphones is connected.
- No supply of phantom power will be needed from the BR-1200CD when using an external microphone pre-amp or a dedicated, external phantom power supply. Ensure that phantom power is set to "OFF" in all such cases.


# Creating a MD protected from digital copying

When you are digitally mixing-down audio from the BR-1200CD to a MD recorder or another similar digital device, you can use the following procedure to prohibit the creation of digital copies from the mix-down tape.

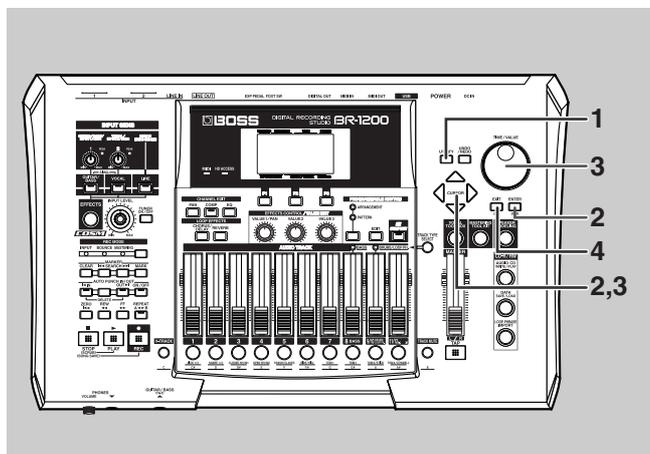

**1. Press [UTILITY].**

The Utility screen will appear.

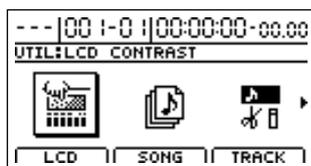

**2. Move the cursor to the SYSTEM icon and press [ENTER/YES].**

Alternatively, you can press [F2] (SYSTEM) if the SYSTEM icon is currently displayed.

The System Parameter screen will appear.



**3. Move the cursor to "D.CpProtect" and select "ON" using the TIME/VALUE dial.**



**D.CpProtect (Digital Copy Protect)**

This parameter specifies whether or not it will be possible to create digital copies.

OFF: Digital copies may be made.

ON: Digital copies may not be made.

- 4. Press [EXIT/NO] several times to return to the top screen.**
- 5. Mix down your song(s) from the BR-1200CD to a MD recorder or another similar digital device.**

It will not be possible to use this master MD to create digital copies on another similar digital recording device.

**NOTE**

Certain DAT recorders do not support SCMS or digital connection with CD players. If you set "D.CpProtect" to "ON," you will not be able to record your songs to this type of recorder via the BR-1200CD's digital output. Be sure to set "D.CpProtect" to "OFF" in such a case.

**MEMO**


**What is SCMS?**

An abbreviation of Serial Copy Management System, SCMS is a function implemented on consumer digital-audio devices such as DAT recorders and MD recorders to prevent second- and subsequent-generation copies being made by repeated digital recording, thus protecting the creator's copyright. When a digital recording is made on a recording device that features SCMS functionality, SCMS flags will be recorded together with the digital audio signals. It will then not be possible to record digital audio signals containing this type of flag using a digital connection.

# Changing the content of the level meter display (Pre/Post Fader)

Normally, the level meters for the tracks, which are displayed on the top screen, will indicate the levels that the various signals have after they have passed through the corresponding faders (i.e., the post-fader volumes).

You can, however, use the following procedure to have the levels that the signals are at before they pass through the faders (i.e., pre-fader volumes) be displayed.

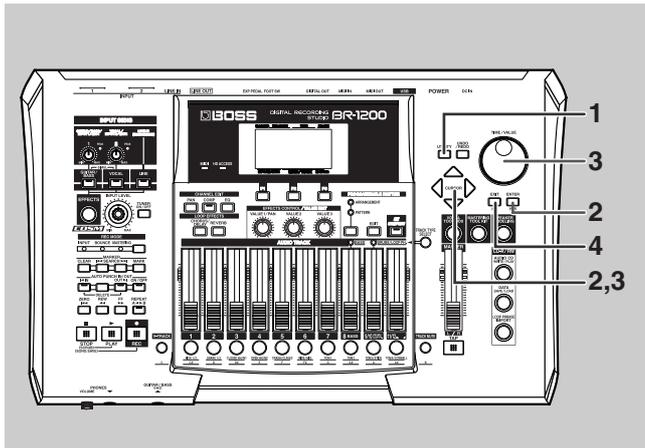

1. Press [UTILITY].


The Utility screen will appear.



2. Move the cursor to the SYSTEM icon and press [ENTER/YES].

Alternatively, you can press [F2] (SYSTEM) if the SYSTEM icon is currently displayed.

The System Parameter screen will appear.

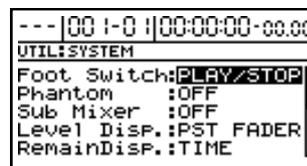

3. Move the cursor to "Level Disp." and select "PRE FADER" using the TIME/VALUE dial.



## PRE FADER:

The levels that signals have prior to reaching the faders are displayed.

## PST FADER:

The levels that signals have after passing through the faders are displayed. This is the setting on the BR-1200CD at the time of purchase.

4. Press [EXIT/NO] several times to return to the top screen.

# Initializing all BR-1200CD settings (Initialize)

The Initialize function allows you to return all of the following BR-1200CD parameters to their original settings.

## ● Global Parameters


- Reference Pitch in Tuner parameters
- System parameters
- Sync parameters
- MIDI parameters
- Marker parameters
- Scene parameters
- Scrub and Preview parameters

## ● Mixer Parameters

- Track Compressor, EQ, Pan
- Loop Effects
- Input Select
- Recording Mode


## ● Effect Patch Data

- User patches from all insert effect banks
- Vocal Tool Box user patches
- Mastering Tool Kit user patches
- Speaker Modeling user patches

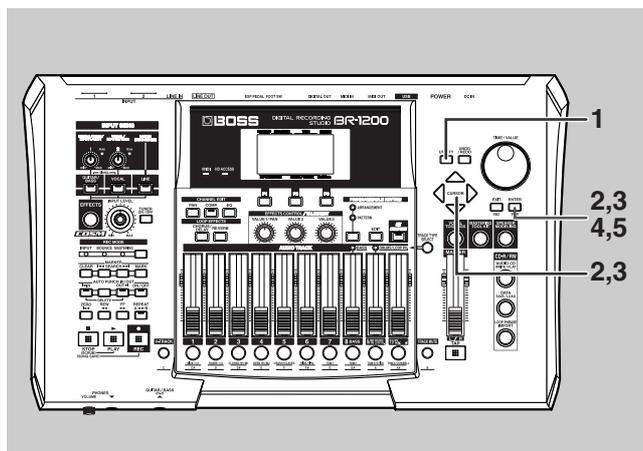

### 1. Press [UTILITY].

The Utility screen will appear.

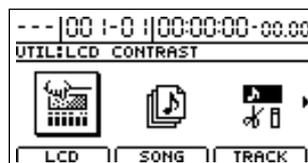

### 2. Move the cursor to the INITIALIZE icon and press [ENTER/YES].

Icons representing the various things that can be initialized will appear.



### GLOBAL icon



When this icon is selected

- Reference Pitch in Tuner parameters
- System parameters
- Sync parameters
- MIDI parameters
- Marker parameters
- Scene parameters
- Scrub and Preview parameters

will be initialized and returned to the values they had at the time of purchase.

## MIXER icon



When this icon is selected,

- Track Compressor, EQ, Pan
- Loop Effects
- Input Select
- Recording Mode

will be returned to the values they normally have immediately after Song New (p. 48) is performed.

## EFFECTS icon



When this icon is selected,

- User patches from all insert effect banks
- Vocal Tool Box user patches
- Mastering Tool Kit user patches
- Speaker Modeling user patches

will be initialized and returned to their values at the time of purchase (i.e., the values for preset patches).

## ALL icon



When this icon is selected, all global parameters, effect patches, and mixer parameters will be initialized.

In addition, all data for song markers, Tempo Maps, Sync Tracks, scenes, and the like will be cleared. The display contrast will also be returned to the factory default contrast setting.

3. Move the cursor to the icon for the parameters to be initialized and press [ENTER/YES].

Alternatively, you can push the FUNCTION button below the relevant icon.


The message "Initialize \*\*\* OK?" will appear.

Example:) When GLOBAL icon is selected



4. Press [ENTER/YES].

The message "Sure?" will appear.

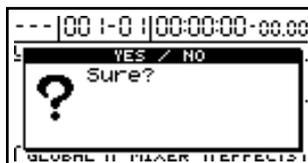

5. Press [ENTER/YES] once again.

The BR-1200CD will start the initialization process.

When this process has finished, the message "Complete!" will appear and you'll automatically be returned to the top screen.

### NOTE


#### Precautions for initialization

- Press [EXIT/NO] if you want to cancel an initialization process.
- In certain cases, the message "Save Current?" will appear during the initialization procedure, and this indicates that the current song contains audio that has been newly recorded or edited, or modified parameters that have not yet been saved. If you want to save your song before starting the initialization process, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO]. If you proceed without saving your song, all of the new recordings, audio edits, and new parameter settings will be permanently lost.

# Performing hard disk operations

## Viewing information about the hard disk (Hard Disk Information)

To display the hard disk data use the following procedure.

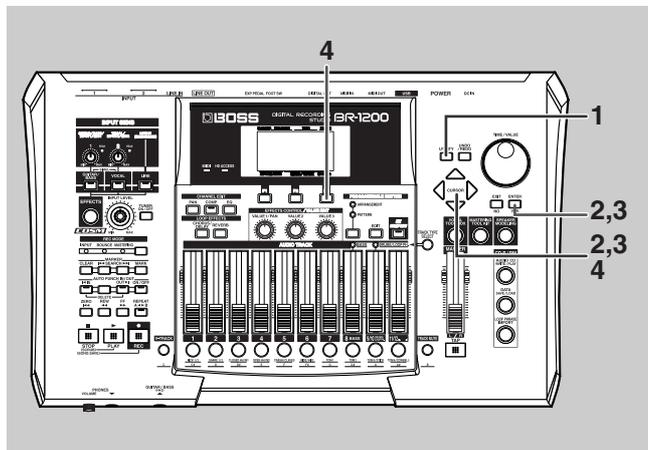


1. Press [UTILITY].

The Utility screen will appear.




2. Move the cursor to the HDD icon and press [ENTER/YES].

The Hard Disk screen will appear.

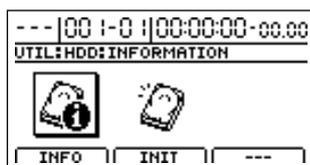

3. Move the cursor to the INFO icon and press [ENTER/YES].

The size of each partition appears.

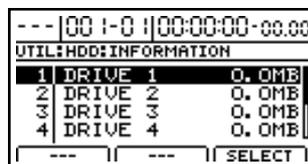

The capacity of the hard disk is displayed in units of 1 MB (i.e., 1,04,576 bytes).

The currently selected partition is indicated by an asterisk ("\*").

The BR-1200CD is set with one partition at the factory, so only one partition will appear in the display.

4. If you want to switch the partition being used, move the cursor to the partition you want to use, then press [F3] (SELECT).

The message "Now Loading..." appears.

When "Complete!" appears, the switch is completed.

### NOTE

- In certain cases, the message "Save Current?" will appear during the initialization procedure, and this indicates that the current song contains audio that has been newly recorded or edited, or modified parameters that have not yet been saved. If you want to save your song before switching the partition, press [ENTER/YES]; if this will not be necessary, press [EXIT/NO]. If you proceed without saving your song, all of the new recordings, audio edits, and new parameter settings will be permanently lost.
- Drives can be switched only when multiple drives have been created.


## Initializing the hard disk (Disk Initialize)

The appropriate settings for the internal hard disk were made before the BR-1200CD left the factory, so it is ready for immediate use.

If for any reason the hard disk can no longer be written to or read from, or if you immediately want to delete all data from the disk, you can carry out Disk Initialize.

### NOTE

- Take care to note that all data on the hard disk is lost when you execute Disk Initialize. The demo songs programmed at the factory are also deleted.
- We recommend creating a backup of your data on a CD-R/RW disc or other media as your situation requires.

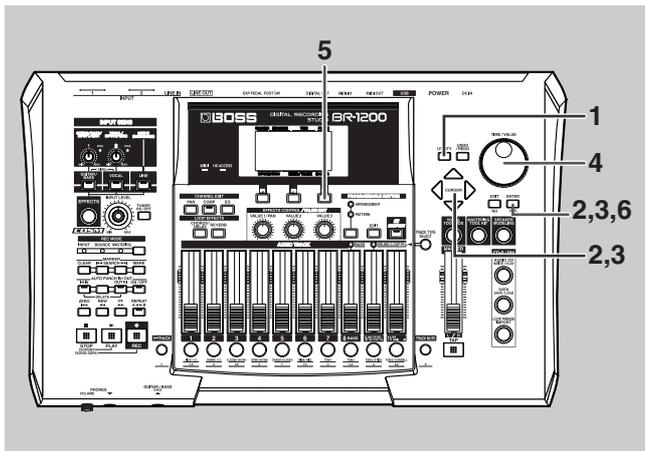


1. Press [UTILITY].

The Utility screen will appear.




2. Move the cursor to the HDD icon and press [ENTER/YES].

The Hard Disk screen will appear.

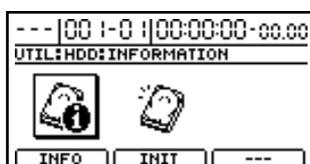

3. Move the cursor to the INITIALIZE icon and press [ENTER/YES].

The message "FORMAT MODE: NORMAL" appears.

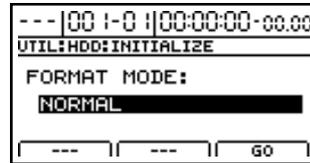

4. Use the TIME/VALUE dial to select the initialization mode.

### NORMAL

This is the usual format. The hard disk is formatted as a single partition. The maximum partition size is 40 GB.

### SURFACE SCAN

The entire hard disk is formatted as "NORMAL" after all of the storage sectors of the hard disk are checked.

With a 40 GB hard disk, such checking takes roughly 2–3 hours to complete.

If you press [EXIT/NO] while the check is still in progress, the check is stopped at that point, and formatting continues in "NORMAL" mode.

### DIV 2 through 8

This separates the hard disk into drives (partitions) of equal size. You cannot set the drives so that they are of different sizes.

Example) When using "DIV 5" in formatting the partitions on a 40 GB hard disk.

$$40\text{GB} / 5 = 8\text{GB}$$

This creates five partitions, each containing 8 GB.

The maximum size for a single partition is 40 GB.


Initialization is set to "NORMAL" at the factory.

### ONLY CUR. PARTITION (Only Current Partition)

This initializes only the currently selected partition when the hard disk is divided into multiple partitions. If the hard disk has not been divided into separate partitions, the NORMAL setting is used to initialize the entire hard disk.

5. Press [F3] (GO).

The message "Sure?" appears.

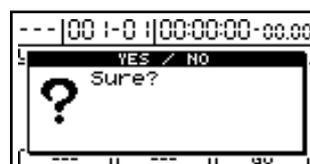

## Performing hard disk operations

- Press [ENTER/YES]. (If you wish to cancel the initialization, press [EXIT/NO]).

"Now Initializing..." appears in the display, and initialization begins.

After the initialization is completed properly, the message "Complete!" will appear and the top screen returns to the display.


A new song "SONG 001" will be created on the hard disk.

### NOTE

The state of progress of the initialization will be shown on the display, and you should not turn off the BR-1200CD until this procedure has been completed. Failure to observe this precaution could considerably reduce the life span of the hard disk or could result in it being permanently damaged.

## Initializing only one of multiple partitions

Now you can specify a single partition for initialization when using multiple partitions.

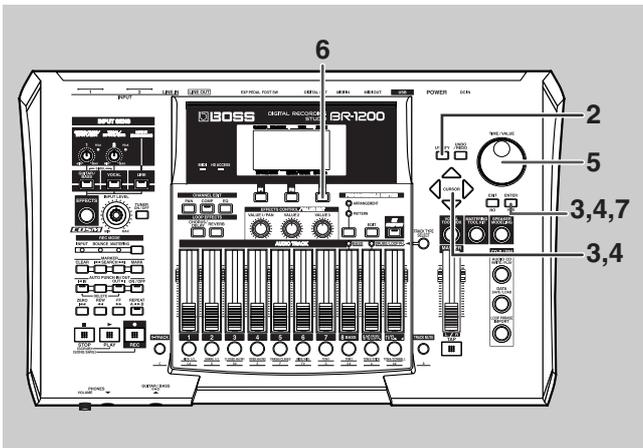


- First, select the drive you want to initialize.  
See the step 4 in the "Viewing information about the hard disk (Hard Disk Information)" (p. 284).
- Press [UTILITY].  
The Utility screen will appear.




- Move the cursor to the HDD icon and press [ENTER/YES].

The Hard Disk screen will appear.

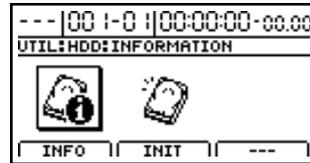

- Move the cursor to the INITIALIZE icon and press [ENTER/YES].

The Hard disk Initialize screen will appear.

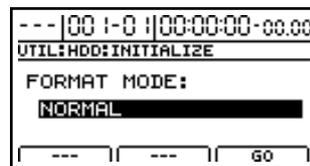

- Rotate the TIME/VALUE dial to set "Format Mode" to "ONLY CUR. PARTITION."

### NOTE

Take care to note that selecting anything other than "ONLY CUR.PARTITION" will result in the entire hard disk being initialized.

- Press [F3] (GO).  
The message "Sure?" appears.
- Press [ENTER/YES].  
"Now Initializing..." appears, and initialization of the drive begins. The process is finished when "Complete!" appears.

### NOTE

Use of this feature is not required if you are using the default factory settings without any changes.

# **Section 9**

# **Appendices**

# Insert effect algorithm list

The algorithms (the available effects and their connection order) that can be used as an insert effect are shown below. The algorithms that can be selected will differ for each bank. To select the algorithm that you wish to use, first select the effect bank that includes that algorithm, and then refer to "Insert Effect Patch List" (p. 327) and select a patch that uses the desired algorithm.

For details on selecting banks and patches, refer to "Modifying insert effect settings" (p. 119).

If you would like to know more about each effect, refer to "Insert effect parameter functions" (p. 293).

## BANK: GUITAR

### 1. COSM OD GUITAR AMP

This multi-effect is used with electric guitars. Utilizing COSM Amplifier Modeling and COSM Overdrive/Distortion as featured on the BOSS GT-6, this effect allows you to recreate a host of distortion and guitar amplifier sounds. In addition, the BR-1200CD also allows you to freely change the way in which this algorithm's internal effect blocks are connected.



COSM Overdrive/Distortion

COSM PreAmp&Speaker

Equalizer/Wah

- 4Band Equalizer
- Wah

Noise Suppressor

Foot Volume

FX

- Compressor
- Limiter
- Acoustic Guitar Simulator
- Pickup Simulator
- Tremolo
- Slow Gear
- Defretter
- Phaser
- Flanger
- Pitch Shifter
- 2x2 Chorus
- Pan
- Vibrato
- Uni-V
- Short Delay
- Humanizer
- Ring Modulator
- Sub Equalizer

Delay

Chorus

### 2. ACOUSTIC SIM

This is a multi-effect designed for electric guitars. It allows you to use an electric guitar to produce sounds similar to those of an acoustic guitar.



Acoustic Guitar Simulator

Compressor

4Band Equalizer

Noise Suppressor

Foot Volume

Modulation

- Flanger
- Chorus
- Phaser
- Pitch Shifter
- Doubling
- Tremolo/Pan

Delay

### 3. BASS SIM

This simulates the sound of a bass, and you can use it to obtain the sound of a bass while playing an electric guitar.

\* You should avoid playing chords when using the Bass Simulator.



Bass Simulator

Compressor/Defretter

- Compressor
- Defretter

Noise Suppressor

Foot Volume

Modulation

- Flanger
- Chorus
- Phaser
- Pitch Shifter
- Doubling
- Tremolo/Pan

## 4. COSM COMP GUITAR AMP

This is a multi-effect designed for electric guitars. In addition to a COSM compressor/limiter, it uses a preamp and speaker simulator to produce characteristic amp sounds.



- COSM Comp/Limiter
- PreAmp
- Speaker Simulator
- 4Band Equalizer/Wah
  - 4Band Equalizer
  - Wah
- Noise Suppressor
- Foot Volume
- Delay

## 5. ACOUSTIC GUITAR


This is a multi-effect designed for acoustic guitars. Even when an electric-acoustic is connected at line level, this provides a warm sound similar to that obtained through a microphone.



- Acoustic Processor
- Compressor
- 4Band Equalizer
- Noise Suppressor
- Delay

## 6. BASS MULTI

This is a multi-effect designed for bass, and it is suitable for creating standard bass sounds.

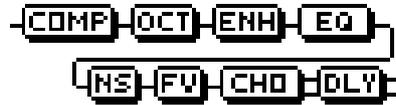

- Compressor/Defretter
  - Compressor
  - Defretter
- Octave
- Enhancer
- 4Band Equalizer/Wah
  - 4Band Equalizer
  - Wah
- Noise Suppressor
- Foot Volume
- Modulation
  - Flanger
  - Chorus
  - Phaser
  - Pitch Shifter
  - Doubling
  - Tremolo/Pan
- Delay

## 7. COSM BASS AMP

This is a multi-effect designed for bass. It features an amp sound created using a preamp and speaker simulator.



- Compressor
- PreAmp
- Speaker Simulator
- 4Band Equalizer/Wah
  - 4Band Equalizer
  - Wah
- Noise Suppressor
- Foot Volume
- Modulation
  - Flanger
  - Chorus
  - Phaser
  - Pitch Shifter
  - Doubling
  - Tremolo/Pan
- Delay

### 8. COSM OD BASS AMP

This multi-effect is used with electric bass guitars. Utilizing COSM Amplifier Modeling and COSM Overdrive/Distortion as featured on the BOSS GT-6B, this effect allows you to recreate a host of distortion and bass amplifier sounds. In addition, the BR-1200CD also allows you to freely change the way in which this algorithm's internal effect blocks are connected.



- COSM Comp/Limiter
- COSM Overdrive/Distortion
- COSM PreAmp&Speaker
- Equalizer/Wah
  - 3Band Equalizer
  - Wah
- Noise Suppressor
- Foot Volume
- FX
  - Octave
  - Enhancer
  - Slow Gear
  - Defretter
  - Ring Modulator
  - Phaser
  - Flanger
  - Pitch Shifter
  - 2x2 Chorus
  - Short Delay
  - Vibrato
  - Humanizer
  - Tremolo
  - Pan
- Chorus
- Delay

### 9. COSM COMP BASS AMP

This is a multi-effect designed for bass.

In addition to a COSM compressor/limiter, it uses a preamp and speaker simulator to produce characteristic amp sounds.



- COSM Comp/Limiter
- PreAmp
- Speaker Simulator
- 4Band Equalizer/Wah
  - 4Band Equalizer
  - Wah
- Noise Suppressor
- Foot Volume
- Delay

## BANK: MIC

### 10. VOCAL MULTI

This is a multi-effect designed for vocals. It provides the basic effects needed for vocal parts.



- Compressor
- De-esser
- Enhancer
- 4Band Equalizer
- Noise Suppressor
- Foot Volume
- Modulation
  - Flanger
  - Chorus
  - Phaser
  - Pitch Shifter
  - Doubling
  - Tremolo/Pan
- Delay

## 11. VOICE TRANSFORMER

This is a multi-effect designed for vocals. It allows you to produce unique effects using a voice transformer.



- Voice Transformer
- Noise Suppressor
- Foot Volume
- Modulation
  - Flanger
  - Chorus
  - Phaser
  - Pitch Shifter
  - Doubling
  - Tremolo/Pan
- Delay

## 12. COSM VOCAL COMP

This is a multi-effect designed for vocals. The COSM compressor/limiter is perfect for creating basic sounds.



- COSM Comp/Limiter
- De-esser
- Enhancer
- 4Band Equalizer
- Noise Suppressor
- Foot Volume
- Delay

## 13. MIC MODELING

This modifies the sound recorded using a conventional dynamic mic, lapel mic, or direct line, making it sound as though it had been recorded using an expensive condenser mic or a special studio mic.

The mic simulator can also simulate proximity effects.



- Mic Converter
- Bass Cut Filter
- Distance
- Limiter

## BANK: STEREO

### 14. STEREO MULTI

This algorithm connects seven types of effects, all in full stereo.



- Compressor
- Ring Modulator
- 4Band Equalizer/Wah
  - 4Band Equalizer
  - Wah
- Noise Suppressor
- Foot Volume
- Modulation
  - Flanger
  - Chorus
  - Phaser
  - Pitch Shifter
  - Doubling
  - Tremolo/Pan
- Delay

### 15. LO-FI BOX

This allows you to simulate the sound of audio being played on an AM radio, the sound of old records played on an old-fashioned gramophone, and even extreme sound degradation produced by Lo-Fi digital.




- Lo-Fi Box
- Noise Suppressor

## BANK: SIMUL

### 16. VO+GT.AMP

This algorithm is for use when simultaneously recording a vocal part and electric guitar.

You can create an amp sound for the guitar using a preamp and speaker simulator.

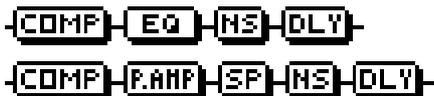

- (MIC)
- Compressor
- 4Band Equalizer
- Noise Suppressor
- Delay
- (GUITAR)
- Compressor
- PreAmp
- Speaker Simulator
- Noise Suppressor
- Delay

### 17. VO+AC.SIM

This algorithm is for use when simultaneously recording a vocal part and electric guitar.

It allows you to make the electric guitar sound like an acoustic guitar.



- (MIC)
- Compressor
- 4Band Equalizer
- Noise Suppressor
- Delay
- (GUITAR)
- Acoustic Guitar Simulator
- Compressor
- Noise Suppressor
- Delay

### 18. VO+ACOUSTIC

This algorithm is for use when simultaneously recording a vocal part and acoustic guitar.

You can create a warm sound for the guitar and make it sound as if a mic were being used, even when an electric-acoustic is connected using a direct line.



- (MIC)
- Compressor
- Noise Suppressor
- (GUITAR)
- Acoustic Processor
- Compressor
- Noise Suppressor

# Insert effect parameter functions

The trademarks listed in this document are the property of their respective companies. Said companies are not affiliated with BOSS and have neither licensed nor authorized the BOSS BR-1200CD. Their trademarks are used solely to identify equipment whose sound is simulated by the BR-1200CD.

## Acoustic Guitar Simulator

This simulates the sound of an acoustic guitar. It allows you to use an electric guitar to produce sounds similar to those of an acoustic guitar.

It will be easier to achieve the desired effect if you set the pickup selector of your guitar to the front position.

**Effect On/Off** **OFF, ON**

This parameter turns the acoustic guitar simulator effect on and off.

**Level** **0-100**

This adjusts the volume of the acoustic guitar simulator.

### ■ When "COSM OD GUITAR AMP" algorithm is selected

**Top** **0-100**

This adjusts the interference to the strings made by the top plate. That is, it adjusts the attack sense or harmonic contents.

**Body** **0-100**

This adjusts the resonance of the sound caused by the body. That is, it adjusts the softness and fatness of the sound which is the typical characteristics of acoustic guitars.

### ■ When "ACOUSTIC SIM" or "VO+AC.SIM" algorithm is selected

**Pickup Type** **SINGLE, HUMBUCK**

Set this to the type of pickup on the guitar being played.

**Character**

This selects one of four sound types.

**STD (STANDARD):**

A normal acoustic guitar.

**JUMBO:**

An acoustic guitar with a body that is bigger than that of the STANDARD guitar. This guitar has a more powerful bass sound.

**ENHANCE:**

An acoustic guitar with a more responsive attack. With this setting, the guitar will retain a higher degree of presence in almost any situation.

**PIEZO:**

Simulates the sound you would get from a pickup installed on an electric-acoustic guitar. With this setting, a certain amount of compression will be applied during the attack.

**Top-Hi** **-100-+100**

This adjusts the level of the direct sound from the strings—in other words, it adjusts the harmonic content.

**Top-Mid** **-100-+100**

This adjusts the way in which the top plate affects the strings—in other words, it adjusts the sense of attack.

**Body** **-100-+100**

This adjusts the resonance generated by the body—in other words, it adjusts the softness and fatness of the sound to simulate the typical characteristics of acoustic guitars.

\* If *Top-Hi*, *Top-Mid*, and *Body* are all set to "-100," there will be no sound.

## Acoustic Processor

This processor allows you to change the sound produced by the pickup on an electric-acoustic guitar, creating a richer sound similar to that obtained with a microphone placed close to the guitar. Best results will be achieved when stereo output is used.

**Effect On/Off** **OFF, ON**

This parameter turns the acoustic processor effect on or off.

**Body** **0-100**

This adjusts the resonance generated by the body—in other words, it adjusts the softness and fatness of the sound to simulate the typical characteristics of acoustic guitars.

**Mic Distance** **0-100**

This adjusts the simulated distance between the acoustic guitar and the microphone used to capture its sound.

**Level** **0-100**

This adjusts the overall volume of the acoustic processor.

### 3 Band Equalizer

---

This is the 3-band equalizer.

**High Gain** **-20+20 dB**

This parameter sets the gain (amount of boost or cut) for the high-range equalizer.

**High Freq** **1.0 -16 kHz**

This parameter sets the frequency for the high range equalizer.

**High Q** **0.5-16**

This parameter sets the range of change in gain for the frequency set by "High Freq." A larger value results in a narrower range of change.

**Mid Gain** **-20+20 dB**

This parameter sets the gain (amount of boost or cut) for the midrange equalizer.

**Mid Freq** **164 Hz-2.6 kHz**

This parameter sets the central frequency for the midrange equalizer.

**Mid Q** **0.5-16**

This parameter sets the range of change in gain for the frequency set by "Mid Freq." A larger value results in a narrower range of change.

**Low Gain** **-20+20 dB**

This parameter sets the gain (amount of boost or cut) for the low range equalizer.

**Low Freq** **31-500 Hz**

This parameter sets the frequency for the low range equalizer.

**Low Q** **0.5-16**

This parameter sets the range of change in gain for the frequency set by "Low Freq." A larger value results in a narrower range of change.

**Level** **-20+20 dB**

This sets the overall volume level after equalization.

### 4 Band Equalizer

---

This is the 4-band equalizer.

**Effect On/Off** **OFF, ON**

This parameter turns the equalizer on or off.

**Low Gain** **-20+20 dB**

This parameter sets the gain (amount of boost or cut) for the low range equalizer.

**Low-Mid Freq** **100 Hz-10.0 kHz**

This parameter sets the central frequency for the low-midrange equalizer.

**Low-Mid Q** **0.5-16**

This parameter sets the range of change in gain for the frequency set by "Low-Mid Freq" A larger value results in a narrower range of change.

**Low-Mid Gain** **-20+20 dB**

This parameter sets the gain (amount of boost or cut) for the low-midrange equalizer.

**Hi-Mid Freq** **100 Hz-10.0 kHz**

This parameter sets the frequency for the high-midrange equalizer.

**Hi-Mid Q** **0.5-16**

This parameter sets the range of change in gain for the frequency set by "Hi-Mid Freq" A larger value results in a narrower range of change.

**Hi-Mid Gain** **-20+20 dB**

This parameter sets the gain (amount of boost or cut) for the high-midrange equalizer.

**High Gain** **-20+20 dB**

This parameter sets the gain (amount of boost or cut) for the high-range equalizer.

**Level** **-20+20 dB**

This sets the overall volume level after equalization.

### Bass Simulator

---

This simulates the sound of a bass guitar. You can use it to recreate the sound of a bass guitar while playing an electric guitar. Note that you should avoid playing chords when using the Bass Simulator.

**Effect On/Off** **OFF, ON**

This parameter turns the bass simulator effect on or off.

**Character** **LOOSE, TIGHT**

This sets the bass tone characteristic. LOOSE produces the sound of a thicker string gauge.

**Level** **0-100**

This adjusts the overall volume of the bass simulator.

### Bass Cut Filter

---

This filter cuts out vocal pop and other unwanted lower range noise. In this, it simulates the bass cut switch found on certain microphones.

**Effect On/Off** **OFF, ON**

This setting turns the Bass Cut Filter on or off.

**Cut Off Freq** **THRU, 20-2000 Hz**

Thru will generally be used; however, you can use this parameter to adjust the frequency if the attack contains an unwanted low-band component.

## Chorus

This effect adds a sound with a subtly shifted pitch to the direct sound, which gives the final output sound greater breadth and depth. Best results will be achieved when stereo output is used.

**Effect On/Off** **OFF, ON**

This parameter turns the chorus effect on or off.

**Rate** **0–100**

This adjusts the rate of the chorus.

**Depth** **0–100**

This adjusts the depth of the chorus.

**Effect Level** **0–100**

This parameter adjusts the overall volume of the effect sound.

■ **When “COSM OD GUITAR AMP” algorithm is selected**

**Mode** **MONO, STEREO**

Selection for the chorus mode.

**MONO:**

This chorus effect outputs the same sound from both L and R.

**STEREO:**

This is a stereo chorus effect that adds different chorus sounds to L and R.

**Pre Delay** **0.0–40.0 ms**

Adjusts the time needed for the effect sound to be output after the direct sound has been output. By setting a longer pre delay time, you can obtain an effect that sounds like more than one sound is being played at the same time (doubling effect).

**Hi Cut Freq** **700 Hz–11.0 kHz, Flat**

This allows you to get a mild effect sound by cutting the high-end component above the set frequency.

When “Flat” is selected, the high cut frequency will have no effect.

■ **When “COSM OD BASS AMP” algorithm is selected**

**Mode** **MONO, STEREO**

Selection for the chorus mode.

**MONO:**

This chorus effect outputs the same sound from both L and R.

**STEREO:**

This is a stereo chorus effect that adds different chorus sounds to L and R.

**Pre Delay** **0.0–40.0 ms**

Adjusts the time needed for the effect sound to be output after the direct sound has been output. By setting a longer pre delay time, you can obtain an effect that sounds like more than one sound is being played at the same time (doubling effect).

**LowCutFilter** **FLAT, 55.0–800 Hz**

This allows you to get a mild effect sound by cutting the high-end component above the set frequency.

When “FLAT” is selected, the high cut frequency will have no effect.

■ **When algorithm other than “COSM OD GUITAR AMP” and “COSM OD BASS AMP” is selected**

**Pre Delay** **0.5–50.0 ms**

Adjusts the time needed for the effect sound to be output after the direct sound has been output.

## 2x2 Chorus

Two separate stereo chorus units are used for the low-frequency and high-frequency ranges in order to create a more natural chorus sound.

**Xover Freq** **100 Hz–4.00 kHz**

This parameter sets the frequency at which the frequency components of the direct sound are divided into bass and treble bands.

**Low Rate** **0–100**

This adjusts the speed of the chorus effect for the low frequency range.

**Low Depth** **0–100**

This adjusts the depth of the chorus effect for the low frequency range. If you wish to use this as a doubling effect, use a setting of “0.”

**Low Pre-Dly** **0.0–40.0 ms**

This adjusts the time from when the low frequency range direct sound is output until the effect sound is output. Extending the pre-delay will produce the sensation of multiple sounds (doubling effect).

**Low Level** **0–100**

This adjusts the volume of the low frequency range.

**High Rate** **0–100**

This adjusts the speed of the chorus effect for the high frequency range.

**High Depth** **0–100**

This adjusts the depth of the chorus effect for the high frequency range. If you wish to use this as a doubling effect, use a setting of “0.”

**High Pre-Dly** **0.0–40.0 ms**

This adjusts the time from when the high frequency range direct sound is output until the effect sound is output. Extending the pre-delay will produce the sensation of multiple sounds (doubling effect).

**High Level** **0–100**

This adjusts the volume of the high frequency range.

## Compressor

This effect can be used to produce a long sustain sound by evening out volume levels in the input signal.

### ■ When "COSM OD GUITAR AMP" algorithm is selected

**On/Off** **OFF, ON**

This parameter turns the compressor effect on or off.

**Sustain** **0-100**

This adjusts the range (or time) over which the low-level signals are boosted. Larger values will produce a longer sustain.

**Attack** **0-100**

This adjusts the strength of the attack. Larger values will result in a sharper attack, creating a more clearly defined sound.

**Tone** **-50 +50**

Adjusts the tone.

**Level** **0-100**

Adjusts the overall volume of the effect.

### ■ When algorithm other than "COSM OD GUITAR AMP" is selected

**On/Off** **OFF, ON**

This parameter turns the compressor effect on or off.

**Sustain** **0-100**

This adjusts the range (or time) over which the low-level signals are boosted. Larger values will produce a longer sustain.

**Attack** **0-100**

This adjusts the strength of the attack. Larger values will result in a sharper attack, creating a more clearly defined sound.

**Level** **0-100**

This adjust the volume of the effect sound.

## COSM Comp/Limiter (COSM Compressor/Limiter)

This effect can be used to produce a long sustain sound by evening out volume levels in the input signal. In addition, you can also use it as a limiter to suppress only peaks in the volume and prevent distortion.

A limiter is an effect that prevents distortion by suppressing input signals in excess of a specific value (i.e., the threshold). You can also get the same effect achieved with a compressor by setting the threshold to a low value.

The BR-1200CD uses COSM technology to model four types of compressor/limiter effects, which combine the functions of a compressor and a limiter.

**Effect On/Off** **OFF, ON**

Sets the compressor/limiter to ON or OFF.

## Type

Selects the compressor/limiter type.

<b>BOSSComp</b>	Models the BOSS CS-3 compact effects processor.
<b>D-Comp</b>	Models the MXR dyna comp.
<b>Rack160</b>	Models the dbx 160x.
<b>VtgRack</b>	Models the UREI 1178.

**Attack** **0-100**

(When set to BOSSComp or D-Comp)

This parameter adjusts the strength of the picking attack produced when the strings are played. Larger values will result in a sharper attack, creating a more clearly defined sound.

**Sustain** **0-100**

(When set to BOSSComp or D-Comp)

Boosts low-level signals, adjusting the time over which sounds are sustained. Higher values deepen the effect, resulting in a longer sustain.

**Threshold** **0-100**

(When set to Rack160)

Adjust this parameter to match the input signal from your bass. Compression will be applied to input levels in excess of this level. The smaller the value set here, the lower the level at which the limiter kicks in.

**Input** **0-100**

(When set to VtgRack)

This parameter controls the input level. Increasing the value will produce a deeper effect.

**Ratio** **(Rack160) 1:1-20:1, inf:1 (VtgRack) 4:1-20:1**

(When set to Rack160 or VtgRack)

This adjusts the limiter compression ratio. Higher ratios produce a stronger compression effect.

**Attack Time** **0-100**

(When set to VtgRack)

This parameter adjusts the amount of time it takes for the compression ratio set by "Ratio" to be reached once the input level exceeds the set threshold level and compression begins. The larger the value set here, the more rapidly compression will be applied.

**Release Time** **0-100**

(When set to VtgRack)

This adjusts the time it takes for compression to be removed once the signal level drops below the threshold. Higher values cause the compression to be released more rapidly, making it easier to distinguish the sound from successively played strings.

**Tone** **-50+50**

(When set to BOSSComp)

This parameter adjusts the tone. Higher values cause the high frequencies to be boosted more, and this results in a harder sound.

**Level** **0-100**

Adjusts the overall volume of the effect.

## COSM Overdrive/Distortion

This effect distorts the sound to create long sustain

**Effect On/Off** **OFF, ON**

Turns the Overdrive/Distortion effect on or off.

### Type

Selects the type of distortion.

<b>BLUESOD</b>	This is a crunch sound of the BOSS BD-2.
<b>TURBOOD</b>	This is the high-gain overdrive sound of the BOSS OD-2.
<b>BASS OD</b>	This is a wide-range overdrive much like the BOSS ODB-3 which extends into the low end. (COSM OD BASS AMP only)
<b>BOOSTER</b>	This is a booster that works very well with COSM amps. (COSM OD GUITAR AMP only)
<b>DISTORT</b>	This gives a basic, traditional distortion sound.
<b>AMERICAN</b>	This models a Proco RAT. (COSM OD GUITAR AMP only)
<b>GUV DS</b>	This models an Marshall GUV' NOR.
<b>OD-1</b>	This is the sound of the BOSS OD-1. (COSM OD GUITAR AMP only)
<b>TSCREAM</b>	This models an Ibanez TS-808. (COSM OD GUITAR AMP only)
<b>DST+</b>	This models an MXR DISTORTION+. (COSM OD GUITAR AMP only)
<b>60S FUZ</b>	This models a FUZZFACE.
<b>OCT FUZ</b>	This models an ACETONE FUZZ.
<b>MUF FUZ</b>	This models an Electro-Harmonix Big Muff $\pi$ .
<b>MT-2</b>	This is the sound of the BOSS MT-2.
<b>R-MAN</b>	This models a ROCKMAN. (COSM OD GUITAR AMP only)
<b>HVY MTL</b>	This creates a heavier distortion sound. (COSM OD GUITAR AMP only)

**Drive** **0-100**

Adjusts the depth of distortion.

**Bass** **-50+50**

Adjusts the tone for the low frequency range.

**Treble** **-50+50**

Adjusts the tone for the high frequency range.

**Level** **0-100**

Adjusts the overall volume of the overdrive/distortion sound.

**Effect Level** **0-100 (COSM OD BASS AMP only)**

**Direct Level** **0-100 (COSM OD BASS AMP only)**

This adjusts the volume level for the effect sound and for the direct sound.

## COSM PreAmp&Speaker

COSM technology plays an indispensable role in simulating the distinguishing characteristics of various guitar amps in the "Preamp" section, and is also used to simulate various speaker sizes and cabinet constructions in the "Speaker Simulator."

**Effect On/Off** **OFF, ON**

Turns the Preamp/Speaker Simulator effect on or off.

### ■ When "COSM OD GUITAR AMP" algorithm is selected

#### Type

This sets the type of the guitar preamp. The distortion and tone characteristics of each amp are as shown below:

<b>JC-120</b>	The sound of the Roland JC-120.
<b>JAZZCMB</b>	The sound suited to jazz.
<b>FULLRNG</b>	This is a sound with flat response.
<b>CLEANTW</b>	This models a Fender Twin Reverb.
<b>PROCRNC</b>	This models a Fender Pro Reverb.
<b>TWEED</b>	This models a Fender Bassman 4 x 10" Combo.
<b>CRUNCH</b>	This is a crunch sound that can produce natural distortion.
<b>BLUES</b>	This is a sound suited to blues.
<b>STKCRNC</b>	This is a crunch sound with high gain.
<b>VO DRV</b>	This models the drive sound of a VOX AC-30TB.
<b>VO LEAD</b>	This models the lead sound of the VOX AC-30TB.
<b>VOCLEAN</b>	This models the clean sound of the VOX AC-30TB.
<b>MCH DRV</b>	This models the sound input to left input on a Matchless D/C-30.
<b>MCHLEAD</b>	This models the sound input to right input on a Matchless D/C-30.
<b>FAT MCH</b>	This models the sound of a MATCHLESS with a modified high gain.
<b>BG LEAD</b>	This models the lead sound of the MESA/Boogie combo amp.
<b>BG DRV</b>	This models a MESA/Boogie with TREBLE SHIFT SW on.
<b>BG RHY</b>	This models the rhythm channel of a MESA/Boogie.
<b>MS(1)</b>	This models the sound input to Input I on a Marshall 1959.
<b>MS(1+2)</b>	This models the sound of a Marshall 1959 with Inputs I and II connected in parallel.
<b>MS HI-G</b>	This models the sound of a Marshall with a modified midrange boost.
<b>RF RED</b>	This models the lead channel of a MESA/Boogie Dual Rectifier.
<b>RF ORNG</b>	This models the rhythm channel of a MESA/Boogie Dual Rectifier.
<b>RF VNTG</b>	This models a MESA/Boogie Rectifier with VINTAGE SW on.
<b>SLDN</b>	This models a Soldano SLO-100.
<b>DRV STK</b>	This is a drive sound with high gain.
<b>LEADSTK</b>	This is a lead sound with high gain.

# Insert effect parameter functions

<b>5150DRV</b>	This models the lead channel of a Peavey EVH 5150.
<b>MTL STK</b>	This is a drive sound suited to metal.
<b>MTLLEAD</b>	This is a lead sound suited to metal.

**Gain** **0 – 100**

Adjusts the distortion of the amp.

**Bass** **0 – 100**

Adjusts the tone for the low frequency range.

**Middle** **0–100**

Adjusts the tone for the middle frequency range.

**Treble** **0–100**

Adjusts the tone for the high frequency range.

**Presence** **0–100**

Adjusts the tone for the ultra high frequency range.

\* *If you have selected "VO DRV," "VO LEAD," "VOCLEAN," "MCH DRV," "MCHLEAD," or "FAT MCH" as the type, raising the presence will cut the high range (the value will change from 0 to -100).*

**Level** **0 – 100**

Adjusts the overall volume of the entire preamp.

\* *Be careful not to raise the Level setting too high.*

**Bright** **OFF, ON**

Turns the bright setting on or off.

**OFF:**

No brightness is added.

**ON:**

Brightness is added to create a lighter, crisper tone.

\* *This will not be displayed for certain Type settings.*

**Gain SW** **LOW, MIDDLE, HIGH**

Adjusts the distortion generated by the amp, with the level increasing in sequence for LOW, MIDDLE, and HIGH.

\* *The sound of each type is created with the assumption that gain is set to MIDDLE. It is normal, therefore, to use this setting.*

**Speaker SW** **OFF, ON**

Turns the speaker simulator on or off.

## Speaker Type

<b>1x10"</b>	This is a compact open-back speaker cabinet with one 10-inch speaker.
<b>1x12"</b>	This is a compact open-back speaker cabinet with one 12-inch speaker.
<b>2x12"</b>	This is a general open-back speaker cabinet with two 12-inch speakers.
<b>4x12"</b>	This is an optimal speaker cabinet for a large enclosed amp with four 12-inch speakers.
<b>8x12"</b>	This is a double stack of two cabinets, each with four 12-inch speakers.
<b>ORG</b>	This is the built-in speaker of the amp you selected with "Type."

**Mic Setting** **CENTER, 1–10 cm**

This simulates the microphone position. "CENTER" simulates the condition that the microphone is set in the middle of the speaker cone. "1-10 cm" means that the microphone is moved away from the center of the speaker cone.

**Mic Level** **0–100**

Adjusts the volume of the microphone.

**Direct Level** **0–100**

Adjusts the volume of the direct sound.

\* *When the FULLRNG type of preamp has been selected, "Mic Level" should be set to 100, and "Direct Level" should be set to 0.*

**Amb Pre-Dly** **0.5–50.0 ms**

This parameter adjusts the delay between the original sound and the output of ambience (i.e., room reflections).

**Amb Size** **5.0–15.0 m**

This parameter adjusts the sound of the ambience by varying the room size. Larger values produce longer ambience and increase the sense of spaciousness.

**Amb Density** **0–10**

This parameter adjusts the density of the ambience. Larger values produce a denser sound.

**Amb HF Damp** **DARK, NORMAL, BRIGHT**

This parameter adjusts the tone of the ambience.

**DARK:**

High frequencies decay relatively quickly, producing a darker sounding ambience.

**NORMAL:**

This setting produces ambience with a standard sound.

**BRIGHT:**

High frequencies decay relatively slowly, producing a brighter sounding ambience.

**Amb Level** **0–100**

Adjusts the volume of ambience.

■ When “COSM OD BASS AMP” algorithm is selected

**Type**

This sets the type of the bass guitar preamp. The distortion and tone characteristics of each amp are as shown below:

<b>FLIPTOP</b>	Models the Ampeg B-15.
<b>B MAN</b>	Models the Fender Bassman 100.
<b>BASS360</b>	Models the acoustic 360.
<b>T.E.</b>	Models the Trace Elliot AH600SMX.
<b>SESSION</b>	Models the SWR SM-400.
<b>CONCERT</b>	Models the Ampeg SVT.

**Gain** **0 -100**

Adjusts the distortion of the amp.

**Bass** **-50 -+50 (or 0-100)**

Adjusts the tone for the low frequency range.

**Middle** **-50-+50 (or 0-100)**

Adjusts the tone for the middle frequency range.

\* While some amps do not feature a middle control, this control still functions even when simulating such amps. If you want to recreate the sound as output by the original amp, set Middle to “0.”

**Middle Freq** **220 Hz-3.0 kHz**

Adjusts the frequency for the middle frequency range.

\* You cannot set this parameter when TYPE is set to “BASS360” (it is not displayed).

**Treble** **-50-+50**

Adjusts the tone for the high frequency range.

**Bright** **OFF, ON**

(When set to FLIPTOP, BASS360, or CONCERT)

Turns the bright setting on or off.

**OFF:**

No brightness is added.

**ON:**

Brightness is added to create a lighter, crisper tone.

**Response** **BASS, FLAT**

(When set to FLIPTOP)

This controls the overall amp characteristics. Select the position corresponding to the characteristics for one of the two types of sound.

**Deep** **OFF, ON**

(When set to B MAN)

This switch changes the character of the lower range.

**Pre Shape** **OFF, 1, 2**

(When set to T.E.)

This is a shape switch that adds a particular nuance to the midrange.

**Enhancer** **0-100**

(When set to SESSION)

This controls the clarity and presence of the sound.

**Ultra Hi** **OFF, ON**

(when set to CONCERT)

This controls the ultra high-frequency range lying beyond treble.

**Ultra Lo** **-, 0, +**

(When set to CONCERT)

This controls the character of the lower range.

**Speaker SW** **OFF, ON**

Turns the speaker simulator on or off.

**Speaker Type**

<b>1x15”</b>	This is a compact open-back speaker cabinet with one 15-inch speaker.
<b>1x18”</b>	This is a compact open-back speaker cabinet with one 18-inch speaker.
<b>2x15”</b>	This is a general open-back speaker cabinet with two 15-inch speakers.
<b>4x10”</b>	This is an optimal speaker cabinet for a large enclosed amp with four 10-inch speakers.
<b>8x10”</b>	This is a double stack of two cabinets, each with four 10-inch speakers.
<b>ORG</b>	This is the built-in speaker of the amp you selected with “Type.”

**Mic Setting** **CENTER, 1-10 cm**

This simulates the microphone position. “CENTER” simulates the condition that the microphone is set in the middle of the speaker cone. “1-10 cm” means that the microphone is moved away from the center of the speaker cone.

**Mic Level** **0-100**

Adjusts the volume of the microphone.

**Direct Level** **0-100**

Adjusts the volume of the direct sound.

**De-esser**

This effect is useful for reducing sibilance (or harsh ‘S’ sounds) produced by vocalists.

**Effect On/Off** **OFF, ON**

This parameter turns the de-esser effect on or off.

**Sibilant Lvl** **0-100**

This adjusts the sensitivity with respect to the input volume, and it controls the way in which the effect is applied.

**Level** **0-100**

Adjusts the overall volume of the effect.

## Defretter

This effect simulates the sound of a fretless bass.

**Effect On/Off** OFF, ON

This parameter turns the defretter effect on or off.

**Sensitivity** 0–100

This controls the input sensitivity of the defretter. Adjust this parameter until your guitar's harmonic changes sound natural.

**Attack** 0–100

This parameter controls the attack of the defretter. Increasing the value will cause the harmonics to change more slowly, thus producing a relatively attack-less sound, similar to that of a fretless bass.

**Depth** 0–100

This controls the ratio of harmonics. Increasing the value will increase the harmonic content and therefore will create a more unusual sound.

■ **When "COSM OD GUITAR AMP" algorithm is selected**

**Tone** -50–+50

Adjusts the amount of blurring between the notes.

**Resonance** 0–100

Adds a characteristically resonant quality to the sound.

**Effect Level** 0–100

Adjusts the volume of the defretter sound.

**Direct Level** 0–100

Adjusts the volume of the direct sound.

■ **When algorithm other than "COSM OD GUITAR AMP" is selected**

**Level** 0–100

Adjusts the volume of the defretter sound.

## Delay

This effect creates a thicker sound by applying a delayed sound to the direct sound.

**Effect On/Off** OFF, ON

This parameter turns the delay effect on or off.

**Type** SINGLE, PAN

This parameter selects the type of delay to be used.

\* *This is not displayed when the algorithm is "VO+GT.AMP" or "VO+AC.SIM."*

**SINGLE:**

A simple delay.

**Pan:**

The delayed sound is panned across the left and right channels. This type of delay will be effective when stereo output is used.

**Feedback** 0–100

This parameter adjusts the amount of feedback. Changing the amount of feedback also causes the number of individual repetitions of the delayed sound to change.

**Effect Level** 0–120

Adjusts the overall volume of the delay sound.

■ **When "COSM OD GUITAR AMP" or "COSM OD BASS AMP" algorithm is selected**

**Delay Time** 0–1800 ms

This parameter adjusts the delay time (i.e., the interval for which sound is delayed).

**Tap Time** 0–100% (Type = Pan)

Adjusts the delay time of the right channel delay. This setting adjusts the R channel delay time relative to the L channel delay time (considered as 100%).

**Hi Cut Freq** 700 Hz–11.0 kHz, Flat

This sets the frequency at which the high cut filter begins to take effect. This allows you to get a mild effect sound by cutting the high-end component above the set frequency.

When it is set to "Flat," the high cut frequency is off or has no effect.

■ **When algorithm other than "COSM OD GUITAR AMP" and "COSM OD BASS AMP" is selected**

**Delay Time** SINGLE: 1–1400 ms, PAN: 1–700 ms

This parameter adjusts the delay time (i.e., the interval over which sound is delayed).

## Distance

Microphones often exhibit a boost in the volume of the lower frequencies when they are positioned close to the sound source, and this is referred to as proximity effect.

The Distance effect is used to simulate this phenomenon.

**Effect On/Off** **OFF, ON**

This setting turns Distance on or off.

**Prox.Fx** **-12 dB+12 dB**

This parameter is used to adjust the proximity effect, as described above.

Adjustment in the [+] direction will move the microphone closer to the sound source; adjustment in the [-] direction, away from the sound source.

**Time** **0-3000 cm**

This simulates the time difference occurring as a result of distance from the sound source.

## Doubling

By adding a slightly time-delayed sound to the direct sound, a doubling effect gives the impression that multiple sources are being played together. Best results will be achieved when stereo output is used.

**Effect On/Off** **OFF, ON**

This parameter turns the doubling effect on or off.

**Delay Time** **0.5-50.0 ms**

This parameter adjusts the delay time (i.e., the interval for which sound is delayed).

**Separation** **-100+100**

This parameter adjusts the diffusion—in other words, the panning of the direct sound and the effect sound to left and right. This will be effective when stereo output is used.

**Effect Level** **0-120**

This adjusts the overall volume of the delay sound.

## Enhancer

By adding sounds that are out-of-phase with the direct sound, this effect enhances the definition of the sound and makes it more present in the mix.

**Effect On/Off** **OFF, ON**

This parameter turns the enhancer effect on or off.

**Sensitivity** **0-100**

Adjusts the manner in which the enhancer will be applied with respect to input signals.

**Frequency** **1.0-10.0 kHz**

Adjusts the frequency at which the enhancer will begin to be applied.

The effect will be noticeable in frequencies above the frequency set here.

**Mix Level** **0-100**

Adjusts the amount of phase-shifted sound of the range set by “Frequency” that is to be mixed with the input.

■ **When “COSM OD BASS AMP” algorithm is selected**

**Frequency** **800 Hz-4.00 kHz**

Adjusts the frequency at which the enhancer will begin to be applied.

The effect will be noticeable in frequencies above the frequency set here.

■ **When algorithm other than “COSM OD BASS AMP” is selected**

**Frequency** **1.0-10.0 kHz**

Adjusts the frequency at which the enhancer will begin to be applied.

The effect will be noticeable in frequencies above the frequency set here.

**Low Mix Level** **0-100**

Adjusts the amount of phase-shifted sound in the low-frequency range that is to be mixed with the input. The extent of this low-frequency range is fixed.

**Level** **0-100**

Adjusts the overall volume of the enhanced sound.

## Flanger

This algorithm produces a flanging effect, which makes a sound seem as if it is twisting.

**Effect On/Off** **OFF, ON**

This parameter turns the flanger effect on or off.

**Rate** **0-100**

Determines the rate of the flanging effect.

**Depth** **0-100**

Determines the depth of the flanging effect.

**Manual** **0-100**

This parameter adjusts the center frequency at which the effect will be applied.

**Resonance** **0-100**

Determines the amount of resonance (or feedback). Increasing this value will emphasize the flanging effect, producing a more unusual sound.

**Separation** **0-100**

This parameter adjusts the diffusion. Large values produce greater diffusion, and this will be effective when stereo output is used.

### ■ When "COSM OD GUITAR AMP" algorithm is selected

**Effect Level** **0-100**

This adjusts the volume of the flanger sound.

**Direct Level** **0-100**

This adjusts the volume of the direct sound.

### ■ When "COSM OD BASS AMP" algorithm is selected

**Level** **0-100**

This adjusts the volume of the flanger sound.

**LowCutFilter** **FLAT, 55.0-800 Hz**

This allows you to get a mild effect sound by cutting the high-end component above the set frequency.

When "Flat" is selected, the high cut frequency will have no effect.

## Foot Volume

Specify the volume between effects. By using an expression pedal to control the foot volume, you can smoothly change the volume of the output sound. For a detailed explanation, see "Using an expression pedal" (p. 124).

**Foot Volume On/Off** **OFF, ON**

Switches the foot volume on or off.

## Humanizer

This can create human vowel-like sounds.

**Vowel1** **A, E, I, O, U**

This selects the first vowel.

**Vowel2** **A, E, I, O, U**

This selects the second vowel.

**Rate** **0-100**

This adjusts the cycle for changing the two vowels.

**Depth** **0-100**

This adjusts the depth of the effect.

**Manual** **0-100**

This determines the point where the two vowels are switched. When it is set to "50," vowel 1 and vowel 2 are switched in the same length of time. When it is set to lower than "50," the time for vowel 1 is shorter. When it is set to higher than "50," the time for vowel 1 is longer.

**Level** **0-100**

This adjusts the volume of the humanizer sound.

## Limiter

A limiter is an effect that prevents distortion by suppressing input signals in excess of a specific value (i.e., the threshold).

**Effect On/Off** **OFF, ON**

This parameter turns the limiter effect on or off.

### ■ When "COSM OD GUITAR AMP" algorithm is selected

**Threshold** **0-100**

Adjust this parameter to match the input signal. Limiting will be applied to input levels in excess of this level.

**Release** **0-100**

This adjusts the time it takes for limiting to be removed once the signal level drops below the threshold.

**Tone** **-50+50**

Adjusts the tone.

**Level** **0-100**

Adjusts the overall volume of the effect.

### ■ When algorithm other than "COSM OD GUITAR AMP" is selected

**Threshold** **-60-0 dB**

Adjust this parameter to match the input signal. Limiting will be applied to input levels in excess of this level.

**Attack** **0-100**

Adjusts the time it takes for the effect to become active once the input level exceeds the threshold level.

**Release 0-100**

This adjusts the time it takes for limiting to be removed once the signal level drops below the threshold.

**Detect HPF THRU, 20-2000 Hz**

Adjusts the cutoff frequency for level detection. When "Thru" is selected, this will operate as a conventional limiter.

**Level -60-+24 dB**

Adjusts the overall volume of the effect.

**Low Cut Filter**

This filter is used to eliminate unwanted low-band sounds such as microphone pop noises.

**Effect On/Off OFF, ON**

Turns the low cut filter on and off.

**Invert OFF, ON**

This parameter switches the microphone phase between OFF (phase same as input) and ON (phase is opposite of input).

**Freq 40-800 Hz**

This parameter adjusts the cutoff frequency of the low-cut filter.

**Lo-Fi Box**

This effect is used to produce a lo-fi sound.

**Effect On/Off OFF, ON**

This parameter turns the lo-fi box effect on or off.

**Effect Type**

Select the operating mode for the lo-fi box.

**RADIO:**

The audio will sound as if it is being played on an AM radio.

By adjusting "Tuning," you can simulate the transient sounds that would occur as you adjust the radio's tuning frequency.

**PLAYER:**

The audio will sound as if it is being played on a gramophone. Needle noise caused by scratches and dust on the record is also simulated.

**DIGITAL:**

This setting allows you to create a lo-fi sound by lowering the sample rate and/or decreasing the number of bits. A bank of series-connected real-time modify filters allow the sound to be freely reshaped.

**■ When "RADIO" or "PLAYER" is selected**

**Tuning 0-100**

This parameter is used with the RADIO setting. It simulates the transient sounds that would occur as you adjust the AM radio's tuning frequency

**Wow Flutter 0-100**

This parameter is used with the PLAYER setting. It simulates the wow and flutter that occur when the speed of the turntable is not constant.

**Noise 0-100**

This parameter is used to simulate noise.

**Filter 0-100**

This parameter adjusts the filter.

**D:E Balance 100:0-0:100**

This adjusts the balance of the direct and effect volumes.

**■ When "DIGITAL" is selected**

**Pre Filter OFF, ON**

This filter reduces the amount of digital distortion. When turned off, it allows you to create an intense lo-fi sound that includes digital distortion.

**Sample Rate OFF, 1/2-1/32**

This parameter allows you to modify the sampling rate.

**Bit OFF, 15-1**

Modifies the number of data bits. When turned off, the number of data bits will remain unchanged.

If an extremely low number of bits is selected, certain input sources may result in loud noises being input, even when there is no input sound. In such a case, raise the noise suppressor's threshold.

**Post Filter OFF, ON**

This filter reduces the amount of digital distortion produced by the lo-fi. By turning this off, you can create an extremely lo-fi sound.

**Effect Level 0-100**

Adjusts the overall volume of the lo-fi sound.

**Direct Level 0-100**

Adjusts the volume of the direct sound.

**Modify Filter**

This parameter selects the filter type.

OFF	No modify filter will be used.
LPF	A low-pass filter will be used.
BPF	A band-pass filter will be used.
HPF	A high-pass filter will be used.

**Cutoff Freq 0-100**

This parameter adjusts the cutoff frequency.

**Resonance 0-100**

This parameter adjusts the resonance.

**Gain 0- +24 dB**

Adjusts the volume level of the sound that has passed through the modify filter.

## Mic Converter

This effect can convert the characteristics of an inexpensive general-purpose microphone into those of an expensive studio microphone (i.e., Microphone Conversion). Furthermore, when used with a part that has already been recorded, it can reproduce the same tonal changes as would occur if the microphone type or distance had been changed. In doing so, it adds the sense of an acoustic space to an instrumental that was recorded by direct line input, making it seem as if it had been recorded with a microphone (i.e., Line → Microphone Conversion).

**Effect On/Off** **OFF, ON**

This setting turns the Mic converter on or off.

### Input

Selects the type of microphone that was actually used to record the part.

<b>DR-20</b>	Roland DR-20
<b>Sml.Dy</b>	Small dynamic microphone
<b>Hed.Dy</b>	Head-worn dynamic microphone
<b>Min.Cn</b>	Miniature condenser microphone
<b>Flat</b>	Line input
<b>AKGC3K</b>	AKG C3000B

### Output

Specifies the microphone to be simulated.

<b>Sml.Dy</b>	A general-purpose dynamic microphone for use with instruments or vocals. This is ideal for guitar amps or snare drums.
<b>Voc.Dy</b>	A popular dynamic microphone used for vocals and featuring an extended midrange.
<b>Lrg.Dy</b>	A dynamic microphone with an extended low end. This is effective when used with bass drums, toms, and other similar sounds.
<b>Sml.Cn</b>	A small condenser microphone used with various instruments and featuring a sparkling high end. This is particularly effective when used with metal percussion instruments and acoustic guitars.
<b>Lrg.Cn</b>	A flat-response condenser microphone that is effective when used with vocals, narrated parts, acoustic instruments, and the like.
<b>Vnt.Cn</b>	VA vintage condenser microphone that is effective when used with vocals, acoustic instruments, and the like.
<b>Flat</b>	A microphone with a flat frequency response. This can be selected to eliminate the characteristics of the microphone used for recording.

\* The low-range response will be extended when a condenser-type microphone model is selected for "Output", and this may boost any low-range noise that is transmitted through the microphone stand. In such a case, either use a bass cut filter to remove the unwanted low-range noise or use an isolation mount\* with your microphone stand while recording. (\*: A microphone holder that uses a material such as rubber to absorb vibrations.)

### Phase

Specifies the phase of the mic.

**NORMAL** Output has the same phase as the input  
**INVERSE** Output has the opposite phase to the input

## Noise Suppressor

This effect is used to reduce noise and hum. Since it does this in accordance with the sound's envelope (i.e., the way in which the volume rises and falls over time), it has very little effect on the sound itself and does not affect its natural character.

**Effect On/Off** **OFF, ON**

This parameter turns the noise suppressor effect on or off.

**Threshold** **0-100**

Adjust this parameter to match the volume of the noise. If the noise is relatively loud, a higher setting will be appropriate. If the level of the noise is low, select a lower setting. Adjust this value until the way in which the sound decays is as natural as possible.

\* High settings for "Threshold" may result in no sound being output when the instrument is played with the volume turned down.

**Release** **0-100**

Adjusts the time from activation of the noise suppressor until the volume is reduced to zero.

## Octave

This effect duplicates parts at one octave lower down to create a richer sound.

**Effect On/Off** **OFF, ON**

This parameter turns the octave effect on or off.

**Octave Level** **0-100**

This adjusts the volume of the sound one octave below.

**Direct Level** **0-100**

Adjusts the volume of the direct sound.

## Pan

With the volume level of the left and right sides alternately changing, when playing sound in stereo, you can get an effect that makes the guitar sound appear to fly back and forth between the speakers.

**Wave Shape** **0-100**

This adjusts changes in volume level.

**Rate** **0-100**

Adjusts the frequency (speed) of the change.

**Depth** **0-100**

Adjusts the depth of the effect.

## Phaser

By adding varied-phase portions to the direct sound, the phaser effect gives a whooshing, swirling character to the sound.

**Effect On/Off** **OFF, ON**

This parameter turns the phaser effect on or off.

■ **When "COSM OD GUITAR AMP" or "COSM OD BASS AMP" algorithm is selected**

### Type

Selects the number of stages that the phaser effect will use.

<b>4 STAGE</b>	This is a four-phase effect. A light phaser effect is obtained.
<b>8 STAGE</b>	This is an eight-phase effect. It is a popular phaser effect.
<b>12STAGE</b>	This is a twelve-phase effect. A deep phase effect is obtained.
<b>BIPHASE</b>	This is the phaser with two phase shift circuits connected in series.

**Rate** **0-100**

Sets the rate of the phaser.

**Depth** **0-100**

Sets the depth of the phaser.

**Manual** **0-100**

Adjusts the center frequency of the phaser.

**Resonance** **0-100**

This parameter sets the amount of resonance (or feedback). Increasing the value will emphasize the effect, producing a more unusual sound.

**Step** **OFF, ON**

This sets on or off of the step function. When the step function is turned on, the change of a sound will be in steps.

**Step Rate** **0-100**

This sets the cycle of the step function that changes the rate and depth. When it is set to a higher value, the change will be finer.

**Effect Level** **0-100 (COSM OD GUITAR AMP only)**

This adjusts the volume of the phaser.

**Direct Level** **0-100 (COSM OD GUITAR AMP only)**

This adjusts the volume of the direct sound.

**Level** **0-100 (COSM OD BASS AMP only)**

Adjusts the volume.

■ **When algorithm other than "COSM OD GUITAR AMP" and "COSM OD BASS AMP" is selected**

**Rate** **0-100**

This sets the rate of the Phaser effect.

**Depth** **0-100**

Determines the depth of the Phaser effect.

**Manual** **0-100**

Adjusts the center frequency of the phaser effect.

**Resonance** **0-100**

Determines the amount of resonance (feedback). Increasing the value will emphasize the effect, creating a more unusual sound.

## Pickup Simulator

This produces the sound of different types of pickup. You can produce thick humbucking-style sounds even with a single-coil guitar.

### Type

Select the pickup type.

<b>S TO H (Single to Hum)</b>	This converts the sound of a single coil pickup to the sound of a humbucking pickup.
<b>H TO S (Hum to Single)</b>	This converts the sound of a humbucking pickup to the sound of a single coil pickup.
<b>H TO HF (Hum to Half-tone)</b>	This converts the sound of a humbucking pickup to the half-tone sound of a single-coil pickup.

**Tone** **-50+50**

Adjusts the tone.

**Level** **0-100**

Adjusts the volume.

### Pitch Shifter

This effect moves the pitch of the original sound up or down within a range of two octaves.

**Effect On/Off** **OFF, ON**

This parameter turns the pitch shifter effect on or off.

■ **When “COSM OD GUITAR AMP” or “COSM OD BASS AMP” algorithm is selected**

**Voice** **1-VOICE, 2-MONO, 2-ST, 1-PEDAL**

This selects the number of voices for the pitch shift sound.

**1-VOICE:**

One-voice pitch-shifted sound output in mono.

**2-MONO:**

Two-voice pitch-shifted sound (PS1, PS2) output in mono.

**2-ST (2-stereo):**

Two-voice pitch-shifted sound (PS1, PS2) output through left and right channels.

**1-PEDAL:**

The pitch-shifted sound for a single source is output in mono. When the expression pedal is depressed, the pitch can be varied by the amount of pitch shift set using “Pitch.” For more detailed information, refer to “Using an expression pedal” (p. 124).

**Mode** **FAST, MEDIUM, SLOW**

Selection for the pitch shifter mode.

**FAST, MEDIUM, SLOW:**

The response is slower in the order of FAST, MEDIUM and SLOW, but the modulation is lessened in the same order.

**Pitch 1/2** **-24+24**

Adjusts the amount of pitch shift (the amount of pitch change) in semitone steps. If the “1-PEDAL” is selected for the “Voice”, the pitch can be varied by the amount of pitch shift set using this parameter when the expression pedal is depressed.

**Fine 1/2** **-50+50**

Make fine adjustments to the pitch shift.

\* *The amount of the change in the Fine “100” is equivalent to that of the Pitch “1.”*

**Pre Delay 1/2** **0 ms–300 ms**

Adjusts the time from when the direct sound is heard until the pitch shifted sounds are heard. Normally you can leave this set at “0 ms.”

**Feedback 1** **0–100**

This adjusts the feedback amount of the pitch shift sound.

**Level 1/2** **0–100**

Adjusts the volume of the pitch shift sound.

**Direct Level** **0–100**

This adjusts the volume of the direct sound.

■ **When algorithm other than “COSM OD GUITAR AMP” and “COSM OD BASS AMP” is selected**

**P.Shift Type**

Selects either a manual or pedal-type pitch shifter.

**MANUAL:**

A simple pitch shifter.

**PEDAL:**

The effect of the pedal-type pitch shifter can be replicated by operating an expression pedal. When the expression pedal is depressed, the pitch can be varied by the amount of pitch shift set using “Pitch.” For more detailed information, refer to “Using an expression pedal” (p. 124).

**Pitch** **-24-DETUNE-24**

Adjusts the amount of pitch shift (i.e., the degree of change in pitch) in units of one semitone. By selecting DETUNE, you can add a slightly pitch-shifted sound to the input sound to produce a detune effect. If the “PEDAL” is selected for the “P.Shift Type”, the pitch can be varied by the amount of pitch shift set using this parameter when the expression pedal is depressed.

**D:E Balance** **100:0–0:100**

This adjusts the balance of the direct and effect volumes.

**Separation** **-100+100**

This parameter adjusts the diffusion—in other words, the panning of the direct sound and the effect sound to left and right. This will be effective when stereo output is used.

## Preamp

This effect is used to adjust the distortion and tone of guitar sounds.

\* When Bass, Middle, and Treble are all set to 0, certain Amp Type settings may result in no sound being output.

**Effect On/Off** **OFF, ON**

Turns the preamp effect on or off.

### Amp Type

This sets the type of preamp to be used. The distortion and tone characteristics of each amp are as shown below:

#### ■ With "COSM COMP GUITAR AMP," or "VO+GT.AMP" algorithms

<b>JC-120</b>	The sound of the Roland "JC-120," a favorite of pro musicians around the world.	
<b>CLEAN</b>	The sound of a conventional built-in tube amp.	
<b>CRUNCH</b>	Allows you to reproduce a crunch effect and recreate natural distortion.	
<b>MATCH</b>	The latest tube-amp sound widely used in all styles from blues and rock.	
<b>VO DRV</b>	The Liverpool sound of the 60's.	
<b>BLUES</b>	A lead sound with a rich middle ideal for blues.	
<b>BG LEAD</b>	The sound of a tube amp typical of the late '70s to '80s and characterized by a distinctive midrange.	
<b>MS</b>		The sound of a large tube-amp stack that was indispensable to the British hard rock of the 70's and is still used today by many hard rock guitarists.
	<b>1</b>	A trebly sound created by using input I of the guitar amp.
	<b>2</b>	A trebly sound created by using input II of the guitar amp.
	<b>1+2</b>	The sound achieved by connecting Inputs I and II on the guitar amp in parallel, and giving a stronger low end than can be achieved with Input I alone.
<b>SLDN</b>	A tube amp sound with versatile distortion, usable in a wide range of styles.	
<b>METAL</b>	The sound of a large tube amp, suitable for heavy metal.	
<b>METAL D</b>	A powerful, high-gain metal sound.	

#### ■ With "COSM BASS AMP" or "COSM COMP BASS AMP" algorithms

<b>AC</b>	The vintage sound of an early transistor amp.
<b>AMG</b>	The sound of a large double-stack, vacuum-tube amp with ultra-lows and a crisp edge.

**Volume** **0-100**

Adjusts the volume and distortion of the amp.

**Bass** **GUITAR AMP: 0-100, BASS AMP: -100+100**

Adjusts the tone for the low frequency range.

**Middle** **GUITAR AMP: 0-100, BASS AMP:-100+100**

Adjusts the tone for the middle frequency range.

\* If you have selected "MATCH" or "VO DRV" as the preamp type, the middle control will have no effect.

**Treble** **GUITAR AMP: 0-100, BASS AMP: -100+100**

Adjusts the tone for the high frequency range.

**Presence** **0-100**

Adjusts the tone of the ultra-high frequency range.

\* This is not displayed when the algorithm is "COSM BASS AMP" or "COSM COMP BASS AMP."

\* If you have selected "MATCH" or "VO DRV" as the preamp type, raising the presence will cut the high range (i.e., the value will change from "0" to "-100").

**Master** **0-100**

Adjusts the overall volume of the preamp.

**Bright** **OFF, ON**

Turns the bright setting on or off.

**OFF:**

No brightness is added.

**ON:**

Brightness is added to create a lighter, crisper tone.

\* This will not be displayed for certain Amp Type settings.

**Gain** **LOW, MIDDLE, HIGH**

Adjusts the distortion generated by the amp, with the level increasing in sequence for LOW, MIDDLE, and HIGH.

\* The sound of each type is created with the assumption that gain is set to MIDDLE. It is normal, therefore, to use this setting.

## Ring Modulator

This creates a bell-like sound by ring-modulating the guitar sound with the signal from the internal oscillator. The sound will be unmusical and lack distinctive pitches.

**Effect On/Off** **OFF, ON**

This parameter turns the ring modulator effect on or off.

**Frequency** **0-100**

This adjusts the frequency of the internal oscillator.

**Effect Level** **0-100**

Adjusts the volume of the effect sound.

**Direct Level** **0-100**

Adjust the volume of the direct sound.

## Short Delay

This is a delay with the maximum delay time of 400 ms. This effect is useful for making the sound fatter.

**Effect On/Off** **OFF, ON**

This parameter turns the short delay effect on or off.

**Delay Time** **0-400 ms (COSM OD GUITAR AMP)**  
**0-400 ms (COSM OD BASS AMP)**

Adjusts the delay time.

**Feedback** **0-100**

Feedback refers to returning the delayed signal back into the input of the delay. This parameter adjusts the volume that is returned to the input. Higher settings will result in more delay repeats.

**Effect Level** **0-120**

Adjusts the volume of delay sound.

## Slow Gear

This produces a volume-swell effect ("violin-like" sound).

**Effect On/Off** **OFF, ON**

This parameter turns the slow gear effect on or off.

**Sensitivity** **0-100**

This adjusts the sensitivity of the slow gear. When it is set to a lower value, the effect of the slow gear can be obtained only with a stronger picking, while no effect is obtained with a weaker picking. When the value is set higher, the effect is obtained even with a weak picking.

**Rise Time** **0-100**

This adjusts the time needed for the volume to reach its maximum from the moment you begin picking.

## Speaker Simulator

This effect simulates the characteristics of various types of speakers. When the output from the BR-1200CD is connected directly to a mixer or similar device, this effect can be used to create the sound of your favorite speaker system.

**Effect On/Off** **OFF, ON**

This parameter turns the speaker simulator effect on or off.

### Speaker Type

Selects the type of speaker that will be simulated.

"On Mic" simulates the sound obtained using a dynamic microphone; "Off Mic" simulates the sound obtained using a condenser microphone.

### ■ With "COSM COMP GUITAR AMP," or "VO+GT.AMP" algorithms

SP Simulator Type	Cabinet	Speaker Unit	Microphone Setting	Comments
<b>SMALL</b>	Small open-back enclosure	10 inch	On Mic	
<b>MIDDLE</b>	Open-back enclosure	12 inch	On Mic	
<b>JC-120</b>	Open-back enclosure	12 inch (two units)	On Mic	Roland JC-120 Simulation
<b>TWIN</b>	Open-back enclosure	12 inch (two units)	On Mic	A setting suitable for Clean
<b>twin</b>	Open-back enclosure	12 inch (two units)	Off Mic	A setting suitable for Clean
<b>MATCH</b>	Open-back enclosure	12 inch (two units)	On Mic	A setting suitable for Match
<b>match</b>	Open-back enclosure	12 inch (two units)	Off Mic	A setting suitable for Match
<b>VO DRV</b>	Open-back enclosure	12 inch (two units)	On Mic	A setting suitable for Vo
<b>vo drv</b>	Open-back enclosure	12 inch (two units)	Off Mic	A setting suitable for Vo
<b>BG STK</b>	Large Sealed enclosure	12 inch (two units)	OnMic	A setting suitable for BG Lead
<b>bg stk</b>	Large sealed enclosure	12 inch (two units)	Off Mic	A setting suitable for BG Lead
<b>MS STK</b>	Large sealed enclosure	12 inch (four units)	On Mic	A setting suitable for MS
<b>ms stk</b>	Large sealed enclosure	12 inch (four units)	Off Mic	A setting suitable for MS
<b>METAL</b>	Large dual stack	12 inch (four units)	Off Mic	

### ■ With "COSM BASS AMP" or "COSM COMP BASS AMP" algorithms

SP Simulator Type	Cabinet	Speaker Unit	Microphone Setting	Comments
<b>AC</b>	Large sealed enclosure	15 inch (two units)	On Mic	A setting suitable for AC
<b>ac</b>	Large sealed enclosure	15 inch (two units)	Off Mic	A setting suitable for AC
<b>AMG</b>	Large sealed enclosure	10 inch (eight units)	On Mic	A setting suitable for AMG
<b>amg</b>	Large sealed enclosure	10 inch (eight units)	Off Mic	A setting suitable for AMG

**Mic Setting** **CENTER, 1-10 cm**

This adjusts the simulated microphone position. CENTER reproduces the sound obtained by setting the microphone in the middle of the speaker cone. 1 to 10 cm represents the distance of the microphone from the center of the speaker cone.

**Mic Level** **0-100**

Adjusts the volume of the microphone.

**Direct Level** **0-100**

Adjust the volume of the direct sound.

## Sub Equalizer

This adjusts the tone as a sub equalizer. A parametric type is adopted for the high-middle and low-middle range.

**Effect On/Off** **OFF, ON**

This parameter turns the sub equalizer effect on or off.

**Low Gain** **-20+20 dB**

This parameter sets the gain (amount of boost or cut) for the bass equalizer.

**Low-Mid Gain** **-20+20 dB**

This parameter sets the gain (amount of boost or cut) for the low-midrange equalizer.

**Low-Mid Freq** **100 Hz-10.0 kHz**

This parameter sets the central frequency for the low-midrange equalizer.

**Low-Mid Q** **0.5-16**

This parameter sets the range of change in gain for the frequency set by "Low-Mid Freq." A larger value results in a narrower range of change.

**Hi-Mid Gain** **-20+20 dB**

This parameter sets the gain (amount of boost or cut) for the high-midrange equalizer.

**Hi-Mid Freq** **100 Hz-10.0 kHz**

This parameter sets the central frequency for the high-midrange equalizer.

**Hi-Mid Q** **0.5-16**

This parameter sets the range of change in gain for the frequency set by "Hi-Mid Freq." A larger value results in a narrower range of change.

**High Gain** **-20+20 dB**

This parameter sets the gain (amount of boost or cut) for the treble equalizer.

**Level** **-20+20 dB**

This parameter adjusts the volume after the equalizer stage.

## Tremolo

Tremolo is an effect that creates a cyclic change in volume.

**Wave Shape** **0-100**

This adjusts changes in volume level.

**Rate** **0-100**

Adjusts the frequency (speed) of the change.

**Depth** **0-100**

Adjusts the depth of the effect.

## Tremolo/Pan

Tremolo is an effect that creates a cyclic change in volume, and pan moves the stereo position in a cyclic manner between left and right (when stereo output is used).

**Effect On/Off** **OFF, ON**

This parameter turns the tremolo/pan effect on or off.

### Mode

This parameter selects tremolo or pan, and it also selects how the effect will be applied.

### TRM-TRI:

The volume will change cyclically and smooth changes will be produced.

### TRM-SQR:

The volume will change cyclically and abrupt changes will be produced.

### PAN-TRI:

The sound will be moved cyclically between the left and right. Smooth changes will be produced.

### PAN-SQR:

The sound will be moved cyclically between the left and right. Abrupt changes will be produced.

**Rate** **0-100**

Adjust the rate at which the effect will operate.

**Depth** **0-100**

Adjusts the depth of the effect.

## Uni-V

Although this resembles a phaser effect, it also provides a unique undulation that you can't get with a regular phaser.

**Rate** **0-100**

Adjusts the rate of the Uni-V effect.

**Depth** **0-100**

Adjusts the depth of the Uni-V effect.

**Level** **0-100**

Adjusts the volume.

## Vibrato

This effect creates vibrato by slightly modulating the pitch.

**Type** **MANUAL, PEDAL**

This parameter sets whether or not vibrato is to be controlled using the pedal.

**MANUAL:**

Vibrato is applied normally.

**PEDAL:**

The depth of vibrato can be controlled by the degree to which the expression pedal is applied.

**Rate** **0–100**

This adjusts the rate of the vibrato.

**Depth** **0–100**

When "PEDAL" has been selected for "Type," full application of the expression pedal will produce vibrato at this depth.

## Voice Transformer

This effect controls the formants in a vocal part, allowing a variety of different voice characters to be created.

Specifically, it adds two voice characters with differing formants to the direct sound.

**Effect On/Off** **OFF, ON**

This parameter turns the voice transformer effect on or off.

**Formant 1** **-100+100**

Adjust the formant of the voice character 1.

**Formant 2** **-100+100**

Adjust the formant of the voice character 2.

**Effect Level 1** **0–100**

Adjust the volume of the voice character 1.

**Effect Level 2** **0–100**

Adjust the volume of the voice character 2.

**Direct Level** **0–100**

Adjust the volume of the direct sound.

## Wah

The wah effect creates a unique tone by changing the frequency response characteristics of a filter.

Auto wah modifies the filter in a cyclic fashion or in response to the volume of the input source in order to create automatic wah effects.

Touch wah creates an automatic wah by changing the filter in response to the volume of the input. Pedal wah lets you use an Expression pedal or the like to obtain real-time control of the wah effect.

**Effect On/Off** **OFF, ON**

Turns the touch wah effect on or off.

■ **When "COSM OD GUITAR AMP" or "COSM OD BASS AMP" algorithm is selected**

**Effect Type** **WAH, TW (COSM OD BASS AMP only), AW**

Selects either pedal wah "WAH" or auto wah "AW."

**WAH:**

The effect will function as a pedal wah.

**AW:**

The effect will function as an auto wah.

**TW (COSM OD BASS AMP only):**

The effect will function as a touch wah.

● **When "WAH" is selected**

The expression pedal can be used to operate the wah effect.

**Type**

This selects the wah type.

<b>CRY WAH</b>	This models the sound of the CRY BABY wah pedal popular in the '70s.
<b>VO WAH</b>	This models the sound of the VOX V846.
<b>FAT</b>	This a wah sound featuring a bold tone. (COSM OD GUITAR AMP only)
<b>LIGHT</b>	This wah has a refined sound with no unusual characteristics. (COSM OD GUITAR AMP only)
<b>7STRING</b>	Wah featuring a broader range of variations for the seven-string guitar. (COSM OD GUITAR AMP only)
<b>BASSWAH</b>	This is a wah used for bass guitar. (COSM OD BASS AMP only)

**Pedal Pos.** **0–100**

This adjusts the position of the wah pedal.

**Level** **0–100**

Adjusts the volume.

● **When "TW" is selected (COSM ODBASS AMP only)**

The effect will be applied automatically based on the volume of the performance.

**Mode** **LPF, BPF, HPF**

Selection for the wah mode.

**LPF:**

This creates a wah effect over a wide frequency range.

**BPF:**

This creates a wah effect in a narrow frequency range.

**HPF:**

This provides a distinctive wah effect when applied to the bass guitar sound.

**Polarity** **UP, DOWN**

Selection for the direction in which the filter will change in response to the input.

**UP:**

The frequency of the filter will rise.

**DOWN:**

The frequency of the filter will fall.

**Sensitivity** **0-100**

Adjusts the sensitivity of the filter in the direction specified by the polarity setting. Higher values will result in a stronger response. When the setting is 0, the strength of the picking will have no effect.

**Frequency** **0-100**

Adjusts the center frequency of the wah effect.

**Peak** **0-100**

Adjusts the way in which the wah effect is applied to the area around the center frequency. Lower values will produce a wah effect over a wider area; higher values, a wah effect over a narrower area. When the setting is 50, a standard wah sound will be produced.

\* With a value of "50" a standard wah sound will be produced.

**Depth** **0-100**

Adjusts the depth of the auto wah effect.

**Level** **0-100**

This parameter adjusts the volume.

● **When "AW" is selected**

The effect will be applied automatically based on the volume of the performance. Alternatively, it is also possible to apply wah in a cyclic fashion.

**Mode** **LPF, BPF, HPF (COSM OD BASS AMP only)**

Selection for the wah mode.

**LPF:**

This creates a wah effect over a wide frequency range.

**BPF:**

This creates a wah effect in a narrow frequency range.

**HPF:**

This provides a distinctive wah effect when applied to the bass guitar sound (COSM OD BASS AMP only).

**Polarity** **DOWN, UP**

Selection for the direction in which the filter will change in response to the input.

**UP:**

The frequency of the filter will rise.

**DOWN:**

The frequency of the filter will fall.

**Sensitivity** **0-100**

Adjusts the sensitivity of the filter in the direction specified by the polarity setting. Higher values will result in a stronger response. When the setting is 0, the strength of the picking will have no effect.

**Frequency** **0-100**

Adjusts the center frequency of the wah effect.

**Peak** **0-100**

Adjusts the way in which the wah effect is applied to the area around the center frequency. Lower values will produce a wah effect over a wider area; higher values, a wah effect over a narrower area. When the setting is 50, a standard wah sound will be produced.

\* With a value of "50" a standard wah sound will be produced.

**Rate** **0-100**

Adjusts the frequency of the auto wah.

**Depth** **0-100**

Adjusts the depth of the auto wah effect.

**Level** **0-100**

This parameter adjusts the volume.

■ **When algorithm other than "COSM OD GUITAR AMP" and "COSM OD BASS AMP" is selected**

**Wah Type**

Selects either touch wah "TOUCH" or pedal wah "PEDAL."

**TOUCH:**

The effect will function as a touch wah.

**PEDAL:**

The effect will function as a pedal wah.

**Polarity** **UP, DOWN**

Selection for the direction in which the filter will change in response to the input.

**UP:**

The frequency of the filter will rise.

**DOWN:**

The frequency of the filter will fall.

**Sensitivity** **0-100**

Adjusts the sensitivity of the filter in the direction specified by the polarity setting. Higher values will result in a stronger response. When the setting is 0, the strength of the picking will have no effect.

## Insert effect parameter functions

### **Frequency** **0-100**

Adjusts the center frequency of the wah effect.

### **Peak** **0-100**

Adjusts the way in which the wah effect is applied to the area around the center frequency. Lower values will produce a wah effect over a wider area; higher values, a wah effect over a narrower area.

When the setting is 50, a standard wah sound will be produced.

\* *With a value of "50" a standard wah sound will be produced.*

### **Level** **0-100**

This parameter adjusts the volume.

### ● **When "PEDAL" is selected**

The effect of the wah pedal can be reproduced by operating an expression pedal.

For a more detailed explanation, see "Using an expression pedal" (p. 124).

### **Peak** **0-100**

Adjusts the way in which the wah effect is applied to the area around the center frequency. Lower values will produce a wah effect over a wider area; higher values, a wah effect over a narrower area.

When the setting is 50, a standard wah sound will be produced.

### **Level** **0-100**

This parameter adjusts the volume.

# Speaker Modeling parameter functions

This effect simulates the response of a wide variety of speakers, ranging from high-quality professional monitor speakers used in studios around the world to speakers from compact televisions or portable radios.



SP Modeling  
Bass Cut Filter  
Low Freq Trimmer  
High Freq Trimmer  
Limiter

## SP Modeling (speaker modeling)

**On/Off** **OFF, ON**

Turns speaker modeling on or off.

### Model

Selects the speaker whose characteristics you wish to simulate.

<b>Thru</b>	No modeling will be performed.
<b>Spr Flat</b>	Modeling will be used to compensate for the DS-90A, DS-90A, DS-50A, or CM-30 monitors, giving the sound an even wider range and flatter response.
<b>Pwd. BLK</b>	A standard-model powered monitor (two-way type, woofer diameter = 170 mm (or 6 1/2 inches)).
<b>Pwd. E-B</b>	Powered monitors characterized by a bright tone.
<b>Pwd. MAC</b>	Powered monitors characterized by an extended low range.
<b>SmlCUBE</b>	Small full-range speakers widely used in recording studios.
<b>Wh.CONE</b>	A sealed two-way speaker widely used in recording studios and characterized by its white woofer.
<b>WhTISUE</b>	A milder tone achieved by covering the tweeters of Wh.CONE speakers with tissue paper.
<b>Radio</b>	A small pocket-type radio.
<b>SmallTV</b>	The speakers of a 14-inch television.
<b>BoomBox</b>	A radio-cassette recorder.
<b>BoomLoB</b>	A radio-cassette recorder with its Low Boost function turned on.

### Output Sp.

This parameter is used to specify the actual type of speaker connected to the BR-1200CD.

**DS-90A:** DS-90A speakers are connected.  
**DS-50A:** DS-50A speakers are connected.  
**DS-30A:** DS-30A speakers are connected.  
**CM-30:** CM-30 speakers are connected.

### Phase

Specifies the phase of the speakers.

**NORMAL:** The output phase will be the same as that of the input.  
**INVERSE:** The output phase will be the opposite to that of the input.

### Bass Cut Filter

---

This filter cuts out vocal pop and other unwanted low-band noise.

**On/Off** **OFF, ON**

This setting turns the Bass Cut Filter on or off.

**Cut Off Freq** **THRU, 20 -2000 Hz**

This parameter sets the frequency below which vocal pop and other undesirable lower-range noises will be filtered out.

### Low Freq Trimmer

---

This trimmer is used to process low frequencies.

**On/Off** **OFF, ON**

Switches the low frequency trimmer on or off.

**Gain** **-12-+12 dB**

Adjusts the gain (i.e., the amount of boost or cut) for the low frequency trimmer.

**Frequency** **20-2000 Hz**

Specifies the center frequency for the low frequency trimmer.

### High Freq Trimmer

---

This trimmer is used to process high frequencies.

**On/Off** **OFF, ON**

Switches the high frequency trimmer on or off.

**Gain** **-12-+12 dB**

Adjusts the gain (i.e., the amount of boost or cut) for the high frequency trimmer.

**Frequency** **1.0-20.0 kHz**

Specifies the center frequency for the high frequency trimmer.

### Limiter

---

A limiter reduces loud input levels to prevent distortion.

**On/Off** **OFF, ON**

Switches the limiter on or off.

**Threshold** **-60-0 dB**

Adjust this parameter to match the input signal. Limiting will be applied to input levels in excess of this level.

**Release** **0-100**

This adjusts the time it takes for limiting to be removed once the signal level drops below the threshold.

**Level** **-60-+24 dB**

This parameter adjusts the overall volume.

# Mastering Tool Kit parameter functions

This is a compressor effect that controls the volume level for each frequency range (lower range, midrange, and upper range) separately in order to even out the differences between them.

This allows you to achieve the optimal level when mixing down to MD or DAT, and when using CD-R disks to create your own original audio CDs.

## MEMO

### Effect of the input “delay time”

With regular compressors, once excessive levels are detected, there is a momentary delay before the signal is suppressed. This algorithm circumvents this problem by using the input sound only for detection of the level, while a predetermined amount of delay is applied to the sound that is actually processed and output. The input delay time is the delay time setting used for this purpose.

## MEMO

### Dividing the signal into separate frequency ranges

To divide the sound into separate frequency ranges, set the Low-Split Point (Split Freq L) and High-Split Point (Split Freq H).

## Equalizer

### Effect On/Off

OFF, ON

This parameter turns the equalizer effect on or off.

### Input Gain

-24+12 dB

Sets the overall volume before passing through the equalizer.

### LowType

SHLV, PEAK

Sets the lower-band equalizer type to shelving or peak.

### Low Gain

-12 +12 dB

Sets the amount of boost or cut in the lower band.

### Low Freq

20 Hz-2.0 kHz

Sets the center frequency for the lower band.

### Low Q

0.3-16.0

Sets the steepness of the frequency response curve at the lower band's center frequency.

\* The Low Q setting is disabled when “SHLV” is selected for the Low Type.

### Low-Mid Gain

-12+12 dB

Sets the amount of boost or cut in the lower-middle band.

### Low-Mid Freq

20 Hz-8.0 kHz

Sets the center frequency for the lower-middle band.

### Low-Mid Q

0.3-16.0

Sets the steepness of the frequency response curve at the lower-middle band's center frequency.

### Hi-Mid Gain

-12+12 dB

Sets the amount of boost or cut in the upper-middle band.

### Hi-Mid Freq

20 Hz-8.0 kHz

Sets the center frequency for the upper-middle band.

### Hi-Mid Q

0.3-16.0

Sets the steepness of the frequency response curve at the upper-middle band's center frequency.

### High Type

SHLV, PEAK

Sets the upper-band equalizer type to shelving or peak.

### High Gain

-12+12 dB

Sets the amount of boost or cut in the upper band.

### High Freq

1.4-20.0 kHz

Sets the center frequency for the upper band.

### High Q

0.3-16.0

Sets the frequency response curve steepness at the upper band's center frequency.

\* The High Q setting is disabled when “SHLV” is selected for the High Type.

### Output Level

-24+12 dB

Sets the overall volume level after equalization.

## Bass Cut Filter

This filter cuts out vocal pop and other unwanted low-band noise.

**Effect On/Off** OFF, ON

This setting turns the Bass Cut Filter on or off.

**Cut Off Freq** 20 Hz–2.0 kHz

This parameter sets the frequency below which vocal pop and other undesirable lower-range noises will be filtered out.

## Enhancer

This effect makes a sound livelier, and thus, more present in the mix.

**Effect On/Off** OFF, ON

This parameter turns the enhancer on or off.

**Sensitivity** 0–100

Sets the degree to which the enhancer is to be applied.

**Frequency** 1.0–10.0 kHz

Sets the frequency at which the enhancer will begin to affect the sound.

**Mix Level** -24–+12 dB

Sets the volume of the effect sound.

## Input

This effect divides the original sound into three frequency bands—namely, low, middle, and high.

**Input Gain** -24–+12 dB

Sets the overall volume level before the signal passes through the expander/compressor.

**Delay Time** 0–10 ms

This parameter sets the amount of time by which the input sound is delayed.

**Split Freq L** 20–800 Hz

Sets the low-band frequency at which the source sound is split into low and middle bands.

**Split Freq H** 1.6–16.0 kHz

Sets the upper-band frequency at which the source sound is split into middle and high bands.

## Expander

This effect expands the dynamic range at a fixed ratio.

**Effect On/Off** OFF, ON

This setting turns the expander on or off.

**ExpL: Thres** -80–0 dB

This parameter sets the volume level at which the low-band expander begins to affect the sound.

**ExpL: Ratio** 1:1.00–1:16.0, 1:INF

Sets the ratio for output increase in the low band when the input level falls below the Lo threshold.

**ExpL: Attack** 0–100 ms

Sets the time it takes for the low-band expander to start affecting the sound once the input level falls below the Lo threshold.

**ExpL: Release** 50–5000 ms

Sets the time it takes for the low-band expander to stop affecting the sound once the input level rises above the Lo threshold.

**ExpM: Thres** -80–0 dB

This sets the volume level at which the midrange expander goes into effect.

**ExpM: Ratio** 1:1.00–1:16.0, 1:INF

This parameter sets the volume level at which the middle-band expander begins to affect the sound.

**ExpM: Attack** 0–100 ms

Sets the time it takes for the middle-band expander to start affecting the sound once the input level falls below the Middle threshold.

**ExpM: Release** 50–5000 ms

Sets the time it takes for the middle-band expander to stop affecting the sound once the input level rises above the Middle threshold.

**ExpH: Thres** -80–0 dB

This parameter sets the volume level at which the high-band expander begins to affect the sound.

**ExpH: Ratio** 1:1.00–1:16.0, 1:INF

Sets the ratio for output increase in the high band when the input level falls below the Hi threshold.

**ExpH: Attack** 0–100 ms

Sets the time it takes for the high-band expander to start affecting the sound once the input level falls below the Hi threshold.

**ExpH: Release** 50–5000 ms

Sets the time it takes for the high-band expander to stop affecting the sound once the input level rises above the Hi threshold.

## Compressor

This effect is used to compress the overall output signal when the input level exceeds a set value.

**Effect On/Off** OFF, ON

This setting turns the compressor on or off.

**CmpL: Thres** -24-0 dB

This parameter sets the volume level at which the low-band compressor begins to affect the sound.

**CmpL: Ratio** 1:1.00-1:16.0, 1:INF

This parameter sets the ratio for suppression of the low-band output when the input level exceeds the Lo threshold.

**CmpL: Attack** 0-100 ms

Sets the time it takes for the low-band compressor to start affecting the sound once the input level exceeds the Lo threshold.

**CmpL: Release** 50-5000 ms

Sets the time it takes for the low-band compressor to stop affecting the sound once the input level falls below the Lo threshold.

**CmpM: Thres** -24-0 dB

This parameter sets the volume level at which the middle-band compressor begins to affect the sound.

**CmpM: Ratio** 1:1.00-1:16.0, 1:INF

This parameter sets the ratio for suppression of the middle-band output when the input level exceeds the Middle threshold.

**CmpM: Attack** 0-100 ms

Sets the time it takes for the middle-band compressor to start affecting the sound once the input level exceeds the Middle threshold.

**CmpM: Release** 50-5000 ms

Sets the time it takes for the middle-band compressor to stop affecting the sound once the input level falls below the Middle threshold.

**CmpH: Thres** -24-0 dB

This parameter sets the volume level at which the high-band compressor begins to affect the sound.

**CmpH: Ratio** 1:1.00-1:16.0, 1:INF

This parameter sets the ratio for suppression of the high-band output when the input level exceeds the Hi threshold.

**CmpH: Attack** 0-100 ms

Sets the time it takes for the high-band compressor to start affecting the sound once the input level exceeds the Hi threshold.

**CmpH: Release** 50-5000 ms

Sets the time it takes for the high-band compressor to stop affecting the sound once the input level falls below the Hi threshold.

### MEMO

With this compressor, the level is automatically adjusted to the optimum setting in response to the threshold and ratio settings. In addition, since lengthening the attack setting may result in distortion, a buffer (or safety margin) of -6 dB is implemented. Adjust the mixer level if so required to compensate for this.

## Mixer

The mixer is used to adjust the volume of each frequency band.

**Low Level** -80-+6 dB

Sets the volume level for the low band after the signal has passed through the expander and compressor.

**Mid Level** -80-+6 dB

Sets the volume level for the middle band after the signal has passed through the expander and compressor.

**High Level** -80-+6 dB

Sets the volume level for the upper band after the signal has passed through the expander and compressor.

## Limiter

This effect is used to suppress high-level signals so that distortion can be prevented.

**Effect On/Off** OFF, ON

This setting turns the limiter on or off.

**Threshold** -24-0 dB

Adjust this parameter to match the input signal.

**Attack** 0-100 ms

Adjusts the time it takes for the limiter to become active once the input level exceeds the threshold level.

**Release** 50-5000 ms

This adjusts the time it takes for limiting to be removed once the signal level drops below the threshold.

## Output

This component is used to control the overall output.

**Level** -80-+6 dB

Sets the volume level of the overall sound after the signal has passed through the limiter.

**Soft Clip** Off, On

Soft clipping suppresses the noticeable distortion that may occur through heavy use of compression and limiting.

**Dither** OFF, 24-8 BIT

This setting is used to prevent the action of muting sounds from becoming too noticeable.

# Effect parameters assigned to VALUE knobs

When the insert effect patch setting screen is displayed, you can assign parameters you wish to control to value knobs VALUE 1 through VALUE 3.

When the effect patch selection screen is displayed, you can assign parameters you wish to control to value knobs VALUE 1 through VALUE 3.

## Algorithm: COSM OD GUITAR AMP

Effect Block	Parameter	Abbreviation
COSM Overdrive/Distortion	On/Off	OD/DS ON/OFF
	Type	OD/DS TYPE
	Drive	OD/DS DRIVE
	Bass	OD/DS BASS
	Treble	OD/DS TREBLE
	Level	OD/DS LEVEL
COSM Preamp & Speaker Simulator	On/Off	AMP ON/OFF
	Type	AMP TYPE
	Gain	AMP GAIN
	Bass	AMP BASS
	Middle	AMP MIDDLE
	Treble	AMP TREBLE
	Presence	AMP PRESENCE
	Level	AMP LEVEL
	Bright	AMP BRIGHT
	Gain SW	AMP GAIN SW
	Speaker SW	SP.SIM SP SW
	Speaker Type	SP.SIM SP TYPE
	Mic Setting	SP.SIM MIC SET
	Mic Level	SP.SIM MIC LVL
	Direct Level	SP.SIM DIR.LVL
	Amb Pre-Dly	AMB PRE-DLY
	Amb Size	AMB SIZE
	Amb Density	AMB DENSITY
	Amb HF Damp	AMB HF DAMP
	Amb Level	AMB LEVEL
Equalizer/Wah	On/Off	FILTER ON/OFF
	Effect Type	FILTER TYPE
4Band Equalizer	Low Gain	EQ LOW
	Low-Mid Freq	EQ L.MID F
	Low-Mid Q	EQ L.MID Q
	Low-Mid Gain	EQ L.MID G
	Hi-Mid Freq	EQ H.MID F
	Hi-Mid Q	EQ H.MID Q
	Hi-Mid Gain	EQ H.MID G
	High Gain	EQ HIGH
	Level	EQ LEVEL
Wah	Type	WAH TYPE
	Pedal Pos.	WAH PEDAL
	Level	WAH LEVEL
	Mode	A.WAH MODE
	Polarity	A.WAH POLARTY
	Sensitivity	A.WAH SENS
	Frequency	A.WAH FREQ
	Peak	A.WAH PEAK
	Rate	A.WAH RATE
	Depth	A.WAH DEPTH
	Level	A.WAH LEVEL
	Noise Suppressor	On/Off
	Threshold	NS THRESH.
	Release	NS REL.
Foot Volume	On/Off	FOOT ON/OFF
FX	On/Off	MOD ON/OFF
	FX Select	MOD SELECT
Compressor	Sustain	COMP SUST
	Attack	COMP ATTACK
	Tone	COMP TONE
	Level	COMP LEVEL
Limiter	Threshold	LIMITER THRESH.
	Release	LIMITER REL.
	Tone	LIMITER TONE
	Level	LIMITER LEVEL

Effect Block	Parameter	Abbreviation
Acoustic Guitar Simulator	Top	ACOUSTC TOP
	Body	ACOUSTC BODY
	Level	ACOUSTC LEVEL
Pickup Simulator	Type	PICKUP TYPE
	Tone	PICKUP TONE
Tremolo	Level	PICKUP LEVEL
	Wave Shape	TREMOLO WAVE
Slow Gear	Rate	TREMOLO RATE
	Depth	TREMOLO DEPTH
Defretter	Sensitivity	SLOW.G SENS
	Rise Time	SLOW.G TIME
	Tone	DEFRET TONE
	Sensitivity	DEFRET SENS
	Attack	DEFRET ATTACK
	Depth	DEFRET DEPTH
	Resonance	DEFRET RESO
	Effect Level	DEFRET FX.LVL
	Direct Level	DEFRET DIR.LVL
	Phaser	Type
Rate		PHASER RATE
Depth		PHASER DEPTH
Manual		PHASER MANUAL
Resonance		PHASER RESO
Step		PHASER STEP
Step Rate		PHASER S.RATE
Effect Level		PHASER FX.LVL
Direct Level		PHASER DIR.LVL
Flanger		Rate
	Depth	FLANGER DEPTH
	Manual	FLANGER MANUAL
	Resonance	FLANGER RESO
	Separation	FLANGER SEP
	Effect Level	FLANGER FX.LVL
Pitch Shifter	Direct Level	FLANGER DIR.LVL
	Voice	P.SHIFT VOICE
	Mode 1	P.SHIFT MODE1
	Pitch 1	P.SHIFT PITCH1
	Fine 1	P.SHIFT FINE1
	Pre Delay 1	P.SHIFT PREDL1
	Feedback 1	P.SHIFT FBK1
	Level 1	P.SHIFT LEVEL1
	Mode 2	P.SHIFT MODE2
	Pitch 2	P.SHIFT PITCH2
	Fine 2	P.SHIFT FINE2
	Pre Delay 2	P.SHIFT PREDL2
	Level 2	P.SHIFT LEVEL2
	Direct Level	P.SHIFT DIR.LVL
2x2 Chorus	Xover Freq	2CHORUS XOVER
	Low Rate	2CHORUS L.RATE
	Low Depth	2CHORUS L.DEPTH
	Low Pre-Dly	2CHORUS L.PREDLY
	Low Level	2CHORUS L.LEVEL
	High Rate	2CHORUS H.RATE
Pan	High Depth	2CHORUS H.DEPTH
	High Pre-Dly	2CHORUS H.PREDLY
	High Level	2CHORUS H.LEVEL
	Wave Shape	PAN WAVE
Vibrato	Rate	PAN RATE
	Depth	PAN DEPTH
	Type	VIBRATO TYPE
	Rate	VIBRATO RATE
	Depth	VIBRATO DEPTH

## Effect parameters assigned to VALUE knobs

Effect Block	Parameter	Abbreviation
Uni-V	Rate	UNI.V RATE
	Depth	UNI.V DEPTH
	Level	UNI.V LEVEL
Short Delay	Delay Time	SHT.DLY TIME
	Feedback	SHT.DLY FEEDBCK
	Effect Level	SHT.DLY LEVEL
Humanizer	Vowel1	HUMAN VOWEL1
	Vowel2	HUMAN VOWEL2
	Rate	HUMAN RATE
	Depth	HUMAN DEPTH
	Manual	HUMAN MANUAL
Ring Modulator	Frequency	RING.M FREQ
	Effect Level	RING.M FX.LVL
	Direct Level	RING.M DIR.LVL
Sub Equalizer	Low Gain	SUB EQ LOW
	Low-Mid Freq	SUB EQ L.MID F
	Low-Mid Q	SUB EQ L.MID Q
	Low-Mid Gain	SUB EQ L.MID G
	Hi-Mid Freq	SUB EQ H.MID F
	Hi-Mid Q	SUB EQ H.MID Q
	Hi-Mid Gain	SUB EQ H.MID G
	High Gain	SUB EQ HIGH
Delay	Level	SUB EQ LEVEL
	On/Off	DELAY ON/OFF
	Type	DELAY TYPE
	Delay Time	DELAY TIME
	Tap Time	DELAY T.TIME
	Feedback	DELAY FEEDBCK
Chorus	Hi Cut Freq	DELAY HI CUT
	Effect Level	DELAY LEVEL
	On/Off	CHORUS ON/OFF
	Mode	CHORUS MODE
	Rate	CHORUS RATE
	Depth	CHORUS DEPTH
	Pre Delay	CHORUS PREDLY
Hi Cut Freq	CHORUS HI CUT	
Effect Level	CHORUS LEVEL	

### Algorithm: ACOUSTIC SIM

Effect Block	Parameter	Abbreviation
Acoustic Guitar Simulator	On/Off	ASIM ON/OFF
	Pickup Type	ASIM PICKUP
	Character	ASIM CHAR
	Top-Hi	ASIM TOP-HI
	Top-Mid	ASIM TOP-MID
	Body	ASIM BODY
	Level	ASIM LEVEL
Compressor	On/Off	COMP ON/OFF
	Sustain	COMP SUST
	Attack	COMP ATTACK
	Level	COMP LEVEL
4Band Equalizer	On/Off	EQ ON/OFF
	Low Gain	EQ LOW
	Low-Mid Gain	EQ L.MID G
	Low-Mid Freq	EQ L.MID F
	Low-Mid Q	EQ L.MID Q
	Hi-Mid Gain	EQ H.MID G
	Hi-Mid Freq	EQ H.MID F
	Hi-Mid Q	EQ H.MID Q
Noise Suppressor	High Gain	EQ HIGH
	Level	EQ LEVEL
	On/Off	NS ON/OFF
Foot Volume	Threshold	NS THRESH.
	Release	NS REL.
	On/Off	FOOT ON/OFF
Modulation	On/Off	MOD ON/OFF
	Effect Type	MOD TYPE

Effect Block	Parameter	Abbreviation
Flanger	Rate	FLANGER RATE
	Depth	FLANGER DEPTH
	Manual	FLANGER MANUAL
	Resonance	FLANGER RESO
Chorus	Separation	FLANGER SEP
	Rate	CHORUS RATE
	Depth	CHORUS DEPTH
Phaser	Pre Delay	CHORUS PREDLY
	Effect Level	CHORUS LEVEL
	Rate	PHASER RATE
Pitch Shifter	Depth	PHASER DEPTH
	Manual	PHASER MANUAL
	Resonance	PHASER RESO
	P.Shift Type	P.SHIFT TYPE
Doubling	Pitch	P.SHIFT PITCH
	D:E Balance	P.SHIFT D:E
	Separation	P.SHIFT SEP
Tremolo/Pan	Delay Time	DOUBL'N DELAY
	Separation	DOUBL'N SEP
	Effect Level	DOUBL'N LEVEL
Delay	Mode	TRM/PAN MODE
	Rate	TRM/PAN RATE
	Depth	TRM/PAN DEPTH
	On/Off	DELAY ON/OFF
	Type	DELAY TYPE
Chorus	Feedback	DELAY FEEDBCK
	Effect Level	DELAY LEVEL
	Delay Time	DELAY TIME
	On/Off	B.SIM ON/OFF

### Algorithm: BASS SIM

Effect Block	Parameter	Abbreviation
Bass Simulator	Character	B.SIM CHAR
	Level	B.SIM LEVEL
	On/Off	CMP/DEF ON/OFF
Compressor/Defretter	Effect Type	CMP/DEF TYPE
	Sustain	COMP SUST
	Attack	COMP ATTACK
Compressor	Level	COMP LEVEL
	Sensitivity	DEFRET SENS
	Attack	DEFRET ATTACK
Defretter	Depth	DEFRET DEPTH
	Level	DEFRET LEVEL
	On/Off	NS ON/OFF
Noise Suppressor	Threshold	NS THRESH.
	Release	NS REL.
	On/Off	FOOT ON/OFF
Modulation	On/Off	MOD ON/OFF
	Effect Type	MOD TYPE
Flanger	Rate	FLANGER RATE
	Depth	FLANGER DEPTH
	Manual	FLANGER MANUAL
	Resonance	FLANGER RESO
Chorus	Separation	FLANGER SEP
	Rate	CHORUS RATE
	Depth	CHORUS DEPTH
Phaser	Pre Delay	CHORUS PREDLY
	Effect Level	CHORUS LEVEL
	Rate	PHASER RATE
Pitch Shifter	Depth	PHASER DEPTH
	Manual	PHASER MANUAL
	Resonance	PHASER RESO
	P.Shift Type	P.SHIFT TYPE
Doubling	Pitch	P.SHIFT PITCH
	D:E Balance	P.SHIFT D:E
	Separation	P.SHIFT SEP
Chorus	Delay Time	DOUBL'N DELAY
	Separation	DOUBL'N SEP
	Effect Level	DOUBL'N LEVEL

## Effect parameters assigned to VALUE knobs

Effect Block	Parameter	Abbreviation
Tremolo/Pan	Mode	TRM/PAN MODE
	Rate	TRM/PAN RATE
	Depth	TRM/PAN DEPTH

### Algorithm: COSM COMP GUITAR AMP

Effect Block	Parameter	Abbreviation	
COSM Comp/Limiter	On/Off	CMP/LM ON/OFF	
	Type	CMP/LM TYPE	
	Attack	CMP/LM ATTACK	
	Sustain	CMP/LM SUST	
	Threshold	CMP/LM THRESH.	
	Input	CMP/LM INPUT	
	Ratio	CMP/LM RATIO	
	Attack Time	CMP/LM ATTACK	
	Release Time	CMP/LM REL.	
	Tone	CMP/LM TONE	
	Level	CMP/LM LEVEL	
	PreAmp	On/Off	AMP ON/OFF
		Amp Type	AMP TYPE
Volume		AMP VOLUME	
Bass		AMP BASS	
Middle		AMP MIDDLE	
Treble		AMP TREBLE	
Presence		AMP PRESNC	
Master		AMP MASTER	
Bright		AMP BRIGHT	
Gain	AMP GAIN		
Speaker Simulator	On/Off	SP.SIM ON/OFF	
	Speaker Type	SP.SIM TYPE	
	Mic Setting	SP.SIM MIC SET	
	Mic Level	SP.SIM MIC LVL	
Equalizer/Wah	Direct Level	SP.SIM DIR.LVL	
	On/Off	FILTER ON/OFF	
4Band Equalizer	Effect Type	FILTER TYPE	
	Low Gain	EQ LOW	
	Low-Mid Gain	EQ L.MID G	
	Low-Mid Freq	EQ L.MID F	
	Low-Mid Q	EQ L.MID Q	
	Hi-Mid Gain	EQ H.MID G	
	Hi-Mid Freq	EQ H.MID F	
	Hi-Mid Q	EQ H.MID Q	
	High Gain	EQ HIGH	
	Level	EQ LEVEL	
Wah	Wah Type	WAH TYPE	
	Polarity	T.WAH POLARTY	
	Sensitivity	T.WAH SENS	
	Frequency	T.WAH FREQ	
	Peak	WAH PEAK	
Noise Suppressor	Level	WAH LEVEL	
	On/Off	NS ON/OFF	
	Threshold	NS THRESH.	
Foot Volume	Release	NS REL.	
	On/Off	FOOT ON/OFF	
Delay	On/Off	DELAY ON/OFF	
	Type	DELAY TYPE	
	Feedback	DELAY FEEDBCK	
	Effect Level	DELAY LEVEL	
	Delay Time	DELAY TIME	

### Algorithm: ACOUSTIC GUITAR

Effect Block	Parameter	Abbreviation
Acoustic Processor	On/Off	AC ON/OFF
	Body	AC BODY
	Mic Distance	AC MIC DIST
	Level	AC LEVEL
Compressor	On/Off	COMP ON/OFF
	Sustain	COMP SUST
	Attack	COMP ATTACK
	Level	COMP LEVEL

Effect Block	Parameter	Abbreviation
4Band Equalizer	On/Off	EQ ON/OFF
	Low Gain	EQ LOW
	Low-Mid Gain	EQ L.MID G
	Low-Mid Freq	EQ L.MID F
	Low-Mid Q	EQ L.MID Q
	Hi-Mid Gain	EQ H.MID G
	Hi-Mid Freq	EQ H.MID F
	Hi-Mid Q	EQ H.MID Q
	High Gain	EQ HIGH
Noise Suppressor	Level	EQ LEVEL
	On/Off	NS ON/OFF
	Threshold	NS THRESH.
Delay	Release	NS REL.
	On/Off	DELAY ON/OFF
	Type	DELAY TYPE
	Feedback	DELAY FEEDBCK
	Effect Level	DELAY LEVEL
	Delay Time	DELAY TIME

### Algorithm: BASS MULTI

Effect Block	Parameter	Abbreviation
Compressor/Defretter	On/Off	CMP/DEF ON/OFF
	Effect Type	CMP/DEF TYPE
Compressor	Sustain	COMP SUST
	Attack	COMP ATTACK
	Level	COMP LEVEL
Defretter	Sensitivity	DEFRET SENS
	Attack	DEFRET ATTACK
	Depth	DEFRET DEPTH
	Level	DEFRET LEVEL
Octave	On/Off	OCTAVER ON/OFF
	Octave Level	OCTAVER OCT.LVL
	Direct Level	OCTAVER DIR.LVL
Enhancer	On/Off	ENHANCE ON/OFF
	Sensitivity	ENHANCE SENS
	Frequency	ENHANCE FREQ
	Mix Level	ENHANCE MIX
	LowMix Level	ENHANCE LO.MIX
Equalizer/Wah	Level	ENHANCE LEVEL
	On/Off	FILTER ON/OFF
4Band Equalizer	Effect Type	FILTER TYPE
	Low Gain	EQ LOW
	Low-Mid Gain	EQ L.MID G
	Low-Mid Freq	EQ L.MID F
	Low-Mid Q	EQ L.MID Q
	Hi-Mid Gain	EQ H.MID G
	Hi-Mid Freq	EQ H.MID F
	Hi-Mid Q	EQ H.MID Q
	High Gain	EQ HIGH
	Level	EQ LEVEL
Wah	Wah Type	WAH TYPE
	Polarity	T.WAH POLARTY
	Sensitivity	T.WAH SENS
	Frequency	T.WAH FREQ
	Peak	WAH PEAK
Noise Suppressor	Level	WAH LEVEL
	On/Off	NS ON/OFF
	Threshold	NS THRESH.
Foot Volume	Release	NS REL.
	On/Off	FOOT ON/OFF
Modulation	On/Off	MOD ON/OFF
	Effect Type	MOD TYPE
Flanger	Rate	FLANGER RATE
	Depth	FLANGER DEPTH
	Manual	FLANGER MANUAL
	Resonance	FLANGER RESO
	Separation	FLANGER SEP

## Effect parameters assigned to VALUE knobs

Effect Block	Parameter	Abbreviation
Chorus	Rate	CHORUS RATE
	Depth	CHORUS DEPTH
	Pre Delay	CHORUS PREDLY
	Effect Level	CHORUS LEVEL
Phaser	Rate	PHASER RATE
	Depth	PHASER DEPTH
	Manual	PHASER MANUAL
	Resonance	PHASER RESO
Pitch Shifter	P.Shift Type	P.SHIFT TYPE
	Pitch	P.SHIFT PITCH
	D:E Balance	P.SHIFT D:E
	Separation	P.SHIFT SEP
Doubling	Delay Time	DOUBL'N DELAY
	Separation	DOUBL'N SEP
	Effect Level	DOUBL'N LEVEL
Tremolo/Pan	Mode	TRM/PAN MODE
	Rate	TRM/PAN RATE
	Depth	TRM/PAN DEPTH
Delay	On/Off	DELAY ON/OFF
	Type	DELAY TYPE
	Feedback	DELAY FEEDBCK
	Effect Level	DELAY LEVEL
	Delay Time	DELAY TIME

### Algorithm: COSM BASS AMP

Effect Block	Parameter	Abbreviation
Compressor	On/Off	COMP ON/OFF
	Sustain	COMP SUST
	Attack	COMP ATTACK
	Level	COMP LEVEL
PreAmp	On/Off	AMP ON/OFF
	Amp Type	AMP TYPE
	Volume	AMP VOLUME
	Bass	AMP BASS
	Middle	AMP MIDDLE
	Treble	AMP TREBLE
	Master	AMP MASTER
	Bright	AMP BRIGHT
Gain	AMP GAIN	
Speaker Simulator	On/Off	SP.SIM ON/OFF
	Speaker Type	SP.SIM TYPE
	Mic Setting	SP.SIM MIC SET
	Mic Level	SP.SIM MIC LVL
	Direct Level	SP.SIM DIR.LVL
Equalizer/Wah	On/Off	FILTER ON/OFF
	Effect Type	FILTER TYPE
4Band Equalizer	Low Gain	EQ LOW
	Low-Mid Gain	EQ L.MID G
	Low-Mid Freq	EQ L.MID F
	Low-Mid Q	EQ L.MID Q
	Hi-Mid Gain	EQ H.MID G
	Hi-Mid Freq	EQ H.MID F
	Hi-Mid Q	EQ H.MID Q
	High Gain	EQ HIGH
	Level	EQ LEVEL
Wah	Wah Type	WAH TYPE
	Polarity	T.WAH POLARTY
	Sensitivity	T.WAH SENS
	Frequency	T.WAH FREQ
	Peak	WAH PEAK
	Level	WAH LEVEL
Noise Suppressor	On/Off	NS ON/OFF
	Threshold	NS THRESH.
	Release	NS REL.
Foot Volume	On/Off	FOOT ON/OFF
Modulation	On/Off	MOD ON/OFF
	Effect Type	MOD TYPE

Effect Block	Parameter	Abbreviation
Flanger	Rate	FLANGER RATE
	Depth	FLANGER DEPTH
	Manual	FLANGER MANUAL
	Resonance	FLANGER RESO
	Separation	FLANGER SEP
Chorus	Rate	CHORUS RATE
	Depth	CHORUS DEPTH
	Pre Delay	CHORUS PREDLY
	Effect Level	CHORUS LEVEL
Phaser	Rate	PHASER RATE
	Depth	PHASER DEPTH
	Manual	PHASER MANUAL
	Resonance	PHASER RESO
Pitch Shifter	P.Shift Type	P.SHIFT TYPE
	Pitch	P.SHIFT PITCH
	D:E Balance	P.SHIFT D:E
	Separation	P.SHIFT SEP
Doubling	Delay Time	DOUBL'N DELAY
	Separation	DOUBL'N SEP
	Effect Level	DOUBL'N LEVEL
Tremolo/Pan	Mode	TRM/PAN MODE
	Rate	TRM/PAN RATE
	Depth	TRM/PAN DEPTH
Delay	On/Off	DELAY ON/OFF
	Type	DELAY TYPE
	Feedback	DELAY FEEDBCK
	Effect Level	DELAY LEVEL
	Delay Time	DELAY TIME

### Algorithm: COSM OD BASS AMP

Effect Block	Parameter	Abbreviation	
COSM Comp/Limiter	On/Off	CMP/LM ON/OFF	
	Type	CMP/LM TYPE	
	Attack	CMP/LM ATTACK	
	Sustain	CMP/LM SUST	
	Threshold	CMP/LM THRESH.	
	Input	CMP/LM INPUT	
	Ratio	CMP/LM RATIO	
	Ratio	CMP/LM RATIO	
	Attack Time	CMP/LM ATTACK	
	Release Time	CMP/LM REL.	
	Tone	CMP/LM TONE	
	Level	CMP/LM LEVEL	
	COSM Overdrive/Distortion	On/Off	OD/DS ON/OFF
		Type	OD/DS TYPE
Drive		OD/DS DRIVE	
Bass		OD/DS BASS	
Treble		OD/DS TREBLE	
Level		OD/DS FX.LVL	
Level		OD/DS DIR.LVL	
COSM Preamp & Speaker Simulator	On/Off	AMP ON/OFF	
	Type	AMP TYPE	
	Bright	AMP BRIGHT	
	Response	AMP RESPONDS	
	Deep	AMP DEEP	
	Pre Shape	AMP P.SHAPE	
	Enhancer	AMP ENHANCE	
	Gain	AMP GAIN	
	Treble	AMP TREBLE	
	Ultra Hi	AMP ULTRA HI	
	Middle	AMP MIDDLE	
	Middle freq	AMP M.FREQ	
	Bass	AMP BASS	
	Ultra Lo	AMP ULTRA LO	
	Level	AMP LEVEL	
	Speaker SW	SP.SIM SP SW	
	Speaker Type	SP.SIM SP TYPE	
Mic Setting	SP.SIM MIC SET		
Mic Level	SP.SIM MIC LVL		
Direct Level	SP.SIM DIR.LVL		

## Effect parameters assigned to VALUE knobs

Effect Block	Parameter	Abbreviation
Equalizer/Wah	On/Off	FILTER ON/OFF
	Effect Type	FILTER TYPE
3Band Equalizer	Low Gain	EQ L.GAIN
	Low Freq	EQ L.FREQ
	Low Q	EQ L.Q
	Mid Gain	EQ M.GAIN
	Mid Freq	EQ M.FREQ
	Mid Q	EQ M.Q
	High Gain	EQ H.GAIN
	High Freq	EQ H.FREQ
	High Q	EQ H.Q
	Level	EQ LEVEL
	Wah	Type
Pedal Pos.		WAH PEDAL
Level		WAH LEVEL
TW Mode		T.WAH MODE
TW Polarity		T.WAH POLARTY
TW Sensitivity		T.WAH SENS
TW Frequency		T.WAH FREQ
TW Peak		T.WAH PEAK
TW Depth		T.WAH DEPTH
TW Level		T.WAH LEVEL
AW Mode		A.WAH MODE
AW Rate		A.WAH RATE
AW Depth		A.WAH DEPTH
AW Frequency		A.WAH FREQ
AW Peak		A.WAH PEAK
AW Polarity		A.WAH POLARTY
AW Sensitivity		A.WAH SENS
AW Level	A.WAH LEVEL	
Noise Suppressor	On/Off	NS ON/OFF
	Threshold	NS THRESH.
	Release	NS REL.
Foot Volume	On/Off	FOOT ON/OFF
FX	On/Off	MOD ON/OFF
	FX Select	MOD SELECT
Octave	Effect Level	OCT FX.LVL
	Direct Level	OCT DIR.LVL
Enhancer	Sensitivity	ENH SENS
	Frequency	ENH FREQ
	Mix Level	ENH MIX.LVL
Slow Gear	Sensitivity	SLOW.G SENS
	Rise Time	SLOW.G TIME
Defretter	Sensitivity	DEFRET SENS
	Attack	DEFRET ATTACK
	Depth	DEFRET DEPTH
	Level	DEFRET LEVEL
Ring Modulator	Frequency	RING.M FREQ
	Effect Level	RING.M FX.LVL
	Direct Level	RING.M DIR.LVL
Phaser	Type	PHASER TYPE
	Rate	PHASER RATE
	Depth	PHASER DEPTH
	Manual	PHASER MANUAL
	Resonance	PHASER RESO
	Step	PHASER STEP
	Step Rate	PHASER S.RATE
	Level	PHASER LEVEL
Flanger	Rate	FLANGER RATE
	Depth	FLANGER DEPTH
	Manual	FLANGER MANUAL
	Resonance	FLANGER RESO
	Separation	FLANGER SEP
	Low Cut	FLANGER LO CUT
	Level	FLANGER LEVEL

Effect Block	Parameter	Abbreviation
Pitch Shifter	Voice	P.SHIFT VOICE
	Mode 1	P.SHIFT MODE1
	Pitch 1	P.SHIFT PITCH1
	Fine 1	P.SHIFT FINE1
	Pre Delay 1	P.SHIFT PREDL1
	Feedback 1	P.SHIFT FBK1
	Level 1	P.SHIFT LEVEL1
	Mode 2	P.SHIFT MODE2
	Pitch 2	P.SHIFT PITCH2
	Fine 2	P.SHIFT FINE2
	Pre Delay 2	P.SHIFT PREDL2
	Level 2	P.SHIFT LEVEL2
	Direct Level	P.SHIFT DIR.LVL
	2x2 Chorus	Xover Freq
Low Rate		2CHORUS L.RATE
Low Depth		2CHORUS L.DEPTH
Low Pre-Dly		2CHORUS L.PREDLY
Low Level		2CHORUS L.LEVEL
High Rate		2CHORUS H.RATE
High Depth		2CHORUS H.DEPTH
High Pre-Dly		2CHORUS H.PREDLY
High Level		2CHORUS H.LEVEL
Short Delay		Delay Time
	Feedback	SHT.DLY FEEDBCK
	Effect Level	SHT.DLY LEVEL
Vibrato	Type	VIBRATO TYPE
	Rate	VIBRATO RATE
	Depth	VIBRATO DEPTH
Humanizer	Vowel1	HUMAN VOWEL1
	Vowel2	HUMAN VOWEL2
	Rate	HUMAN RATE
	Depth	HUMAN DEPTH
	Manual	HUMAN MANUAL
	Level	HUMAN LEVEL
Tremolo	Wave Shape	TREMOLO WAVE
	Rate	TREMOLO RATE
	Depth	TREMOLO DEPTH
Pan	Wave Shape	PAN WAVE
	Rate	PAN RATE
	Depth	PAN DEPTH
Chorus	On/Off	CHORUS ON/OFF
	Mode	CHORUS MODE
	Rate	CHORUS RATE
	Depth	CHORUS DEPTH
	Pre Delay	CHORUS PREDLY
	Low Cut Freq	CHORUS LO CUT
Effect Level	CHORUS LEVEL	
Delay	On/Off	DELAY ON/OFF
	Type	DELAY TYPE
	Delay Time	DELAY TIME
	Tap Time	DELAY T.TIME
	Feedback	DELAY FEEDBCK
	Hi Cut Freq	DELAY HI CUT
	Effect Level	DELAY LEVEL

## Effect parameters assigned to VALUE knobs

### Algorithm: COSM COMP BASS AMP

Effect Block	Parameter	Abbreviation
COSM Compressor/Limiter	On/Off	CMP/LM ON/OFF
	Type	CMP/LM TYPE
	Attack	CMP/LM ATTACK
	Sustain	CMP/LM SUST
	Threshold	CMP/LM THRESH.
	Input	CMP/LM INPUT
	Ratio	CMP/LM RATIO
	Ratio	CMP/LM RATIO
	Attack Time	CMP/LM ATTACK
	Release Time	CMP/LM REL.
	Tone	CMP/LM TONE
	Level	CMP/LM LEVEL
	PreAmp	On/Off
Amp Type		AMP TYPE
Volume		AMP VOLUME
Bass		AMP BASS
Middle		AMP MIDDLE
Treble		AMP TREBLE
Master		AMP MASTER
Bright		AMP BRIGHT
Gain		AMP GAIN
Speaker Simulator	On/Off	SP.SIM ON/OFF
	Speaker Type	SP.SIM TYPE
	Mic Setting	SP.SIM MIC SET
	Mic Level	SP.SIM MIC LVL
Equalizer/Wah	Direct Level	SP.SIM DIR.LVL
	On/Off	FILTER ON/OFF
4Band Equalizer	Effect Type	FILTER TYPE
	Low Gain	EQ LOW
	Low-Mid Gain	EQ L.MID G
	Low-Mid Freq	EQ L.MID F
	Low-Mid Q	EQ L.MID Q
	Hi-Mid Gain	EQ H.MID G
	Hi-Mid Freq	EQ H.MID F
	Hi-Mid Q	EQ H.MID Q
	High Gain	EQ HIGH
	Level	EQ LEVEL
Wah	Wah Type	WAH TYPE
	Polarity	T.WAH POLARTY
	Sensitivity	T.WAH SENS
	Frequency	T.WAH FREQ
	Peak	WAH PEAK
Noise Suppressor	Level	WAH LEVEL
	On/Off	NS ON/OFF
	Threshold	NS THRESH.
Foot Volume	Release	NS REL.
	On/Off	FOOT ON/OFF
Delay	On/Off	DELAY ON/OFF
	Type	DELAY TYPE
	Feedback	DELAY FEEDBCK
	Effect Level	DELAY LEVEL
	Delay Time	DELAY TIME

### Algorithm: VOCAL MULTI

Effect Block	Parameter	Abbreviation
Compressor	On/Off	COMP ON/OFF
	Sustain	COMP SUST
	Attack	COMP ATTACK
	Level	COMP LEVEL
De-esser	On/Off	DESSER ON/OFF
	Sibilant Lvl	DESSER S.LVL
	Level	DESSER LEVEL
Enhancer	On/Off	ENHANCE ON/OFF
	Sensitivity	ENHANCE SENS
	Frequency	ENHANCE FREQ
	Mix Level	ENHANCE MIX
	LowMix Level	ENHANCE LO.MIX
Level	ENHANCE LEVEL	

Effect Block	Parameter	Abbreviation
4Band Equalizer	On/Off	EQ ON/OFF
	Low Gain	EQ LOW
	Low-Mid Gain	EQ L.MID G
	Low-Mid Freq	EQ L.MID F
	Low-Mid Q	EQ L.MID Q
	Hi-Mid Gain	EQ H.MID G
	Hi-Mid Freq	EQ H.MID F
	Hi-Mid Q	EQ H.MID Q
	High Gain	EQ HIGH
	Level	EQ LEVEL
Noise Suppressor	On/Off	NS ON/OFF
	Threshold	NS THRESH.
	Release	NS REL.
Foot Volume	On/Off	FOOT ON/OFF
Modulation	On/Off	MOD ON/OFF
	Effect Type	MOD TYPE
Flanger	Rate	FLANGER RATE
	Depth	FLANGER DEPTH
	Manual	FLANGER MANUAL
	Resonance	FLANGER RESO
	Separation	FLANGER SEP
Chorus	Rate	CHORUS RATE
	Depth	CHORUS DEPTH
	Pre Delay	CHORUS PREDLY
	Effect Level	CHORUS LEVEL
Phaser	Rate	PHASER RATE
	Depth	PHASER DEPTH
	Manual	PHASER MANUAL
	Resonance	PHASER RESO
Pitch Shifter	P.Shift Type	P.SHIFT TYPE
	Pitch	P.SHIFT PITCH
	D:E Balance	P.SHIFT D:E
	Separation	P.SHIFT SEP
Doubling	Delay Time	DOUBL'N DELAY
	Separation	DOUBL'N SEP
	Effect Level	DOUBL'N LEVEL
Tremolo/Pan	Mode	TRM/PAN MODE
	Rate	TRM/PAN RATE
	Depth	TRM/PAN DEPTH
Delay	On/Off	DELAY ON/OFF
	Type	DELAY TYPE
	Feedback	DELAY FEEDBCK
	Effect Level	DELAY LEVEL
	Delay Time	DELAY TIME

### Algorithm: VOICE TRANSFORMER

Effect Block	Parameter	Abbreviation
Voice Transformer	On/Off	VOICE ON/OFF
	Formant1	VOICE FORM1
	Formant2	VOICE FORM2
	EffectLevel1	VOICE FX1.LVL
	EffectLevel2	VOICE FX2.LVL
	Direct Level	VOICE DIR.LVL
Noise Suppressor	On/Off	NS ON/OFF
	Threshold	NS THRESH.
	Release	NS REL.
Foot Volume	On/Off	FOOT ON/OFF
Modulation	On/Off	MOD ON/OFF
	Effect Type	MOD TYPE
Flanger	Rate	FLANGER RATE
	Depth	FLANGER DEPTH
	Manual	FLANGER MANUAL
	Resonance	FLANGER RESO
Chorus	Separation	FLANGER SEP
	Rate	CHORUS RATE
	Depth	CHORUS DEPTH
	Pre Delay	CHORUS PREDLY
	Effect Level	CHORUS LEVEL

## Effect parameters assigned to VALUE knobs

Effect Block	Parameter	Abbreviation
Phaser	Rate	PHASER RATE
	Depth	PHASER DEPTH
	Manual	PHASER MANUAL
	Resonance	PHASER RESO
Pitch Shifter	P.Shift Type	P.SHIFT TYPE
	Pitch	P.SHIFT PITCH
	D:E Balance	P.SHIFT D:E
	Separation	P.SHIFT SEP
Doubling	Delay Time	DOUBL'N DELAY
	Separation	DOUBL'N SEP
	Effect Level	DOUBL'N LEVEL
Tremolo/Pan	Mode	TRM/PAN MODE
	Rate	TRM/PAN RATE
	Depth	TRM/PAN DEPTH
Delay	On/Off	DELAY ON/OFF
	Type	DELAY TYPE
	Feedback	DELAY FEEDBCK
	Effect Level	DELAY LEVEL
	Delay Time	DELAY TIME

### Algorithm: COSM VOCAL COMP

Effect Block	Parameter	Abbreviation	
COSM Compressor/Limiter	On/Off	CMP/LM ON/OFF	
	Type	CMP/LM TYPE	
	Attack	CMP/LM ATTACK	
	Sustain	CMP/LM SUST	
	Threshold	CMP/LM THRESH.	
	Input	CMP/LM INPUT	
	Ratio	CMP/LM RATIO	
	Ratio	CMP/LM RATIO	
	Attack Time	CMP/LM ATTACK	
	Release Time	CMP/LM REL.	
	Tone	CMP/LM TONE	
	Level	CMP/LM LEVEL	
	De-esser	On/Off	DESSER ON/OFF
		Sibilant Lvl	DESSER S.LVL
Level		DESSER LEVEL	
Enhancer	On/Off	ENHANCE ON/OFF	
	Sensitivity	ENHANCE SENS	
	Frequency	ENHANCE FREQ	
	Mix Level	ENHANCE MIX	
	Low Mix Level	ENHANCE LOW MIX	
4Band Equalizer	Level	ENHANCE LEVEL	
	On/Off	EQ ON/OFF	
	Low Gain	EQ LOW	
	Low-Mid Gain	EQ L.MID G	
	Low-Mid Freq	EQ L.MID F	
	Low-Mid Q	EQ L.MID Q	
	Hi-Mid Gain	EQ H.MID G	
	Hi-Mid Freq	EQ H.MID F	
	Hi-Mid Q	EQ H.MID Q	
	High Gain	EQ HIGH	
Level	EQ LEVEL		
Noise Suppressor	On/Off	NS ON/OFF	
	Threshold	NS THRESH.	
	Release	NS REL.	
Foot Volume	On/Off	FOOT ON/OFF	
Delay	On/Off	DELAY ON/OFF	
	Type	DELAY TYPE	
	Feedback	DELAY FEEDBCK	
	Effect Level	DELAY LEVEL	
	Delay Time	DELAY TIME	

### Algorithm: MIC MODELING

Effect Block	Parameter	Abbreviation
Mic Converter	On/Off	MIC ON/OFF
	Input	MIC INPUT
	Output	MIC OUTPUT
	Phase	MIC PHASE
Bass Cut Filter	On/Off	BASS CUT ON/OFF
	Cut Off Freq	BASS CUT FREQ
Distance	On/Off	DS ON/OFF
	Prox.Fx	DS PROXFX
	Time	DS TIME
Limiter	On/Off	LIMITER ON/OFF
	Attack	LIMITER ATTACK
	Release	LIMITER REL.
	Detect HPF	LIMITER D.HPF
	Threshold	LIMITER THRESH.
	Level	LIMITER LEVEL

### Algorithm: STEREO MULTI

Effect Block	Parameter	Abbreviation
Compressor	On/Off	COMP ON/OFF
	Sustain	COMP SUST
	Attack	COMP ATTACK
	Level	COMP LEVEL
Ring Modulator	On/Off	RING ON/OFF
	Frequency	RING FREQ
	Effect Level	RING FX.LVL
	Direct Level	RING DIR.LVL
Equalizer/Wah	On/Off	FILTER ON/OFF
	Effect Type	FILTER TYPE
4Band Equalizer	Low Gain	EQ LOW
	Low-Mid Gain	EQ L.MID G
	Low-Mid Freq	EQ L.MID F
	Low-Mid Q	EQ L.MID Q
	Hi-Mid Gain	EQ H.MID G
	Hi-Mid Freq	EQ H.MID F
	Hi-Mid Q	EQ H.MID Q
	High Gain	EQ HIGH
	Level	EQ LEVEL
	Wah	Wah Type
Polarity		T.WAH POLARTY
Sensitivity		T.WAH SENS
Frequency		T.WAH FREQ
Peak		WAH PEAK
Level		WAH LEVEL
Noise Suppressor	On/Off	NS ON/OFF
	Threshold	NS THRESH.
	Release	NS REL.
Foot Volume	On/Off	FOOT ON/OFF
Modulation	On/Off	MOD ON/OFF
	Effect Type	MOD TYPE
Flanger	Rate	FLANGER RATE
	Depth	FLANGER DEPTH
	Manual	FLANGER MANUAL
	Resonance	FLANGER RESO
	Separation	FLANGER SEP
Chorus	Rate	CHORUS RATE
	Depth	CHORUS DEPTH
	Pre Delay	CHORUS PREDLY
	Effect Level	CHORUS LEVEL
Phaser	Rate	PHASER RATE
	Depth	PHASER DEPTH
	Manual	PHASER MANUAL
	Resonance	PHASER RESO
Pitch Shifter	P.Shift Type	P.SHIFT TYPE
	Pitch	P.SHIFT PITCH
	D:E Balance	P.SHIFT D:E
	Separation	P.SHIFT SEP
Doubling	Delay Time	DOUBL'N DELAY
	Separation	DOUBL'N SEP
	Effect Level	DOUBL'N LEVEL

## Effect parameters assigned to VALUE knobs

Effect Block	Parameter	Abbreviation
Tremolo/Pan	Mode	TRM/PAN MODE
	Rate	TRM/PAN RATE
	Depth	TRM/PAN DEPTH
Delay	On/Off	DELAY ON/OFF
	Type	DELAY TYPE
	Feedback	DELAY FEEDBCK
	Effect Level	DELAY LEVEL
	Delay Time	DELAY TIME

### Algorithm: LO-FI BOX

Effect Block	Parameter	Abbreviation
Lo-Fi	On/Off	LO-FI ON/OFF
	Effect Type	LO-FI TYPE
	Tuning	LO-FI TUNING
	Noise	LO-FI NOISE
	Filter	LO-FI FILTER
	D:E Balance	LO-FI D:E
	Wow Flutter	LO-FI WOW
	Noise	LO-FI NOISE
	Filter	LO-FI FILTER
	D:E Balance	LO-FI D:E
	Pre Filter	LO-FI PRE FLT
	Sample Rate	LO-FI SMPL.R
	Bit	LO-FI BIT
	Post Filter	LO-FI POST FLT
	Effect Level	LO-FI FX.LVL
	Direct Level	LO-FI DIR.LVL
	ModifyFilter	LO-FI MOD FLT
	Cutoff Freq	LO-FI CUTOFF
	Resonance	LO-FI RESO
	Gain	LO-FI GAIN
Noise Suppressor	On/Off	NS ON/OFF
	Threshold	NS THRESH.
	Release	NS REL.

### Algorithm: VO+GT.AMP

Effect Block	Parameter	Abbreviation
Compressor (Mic)	On/Off	M:COMP ON/OFF
	Sustain	M:COMP SUST
	Attack	M:COMP ATTACK
	Level	M:COMP LEVEL
4Band Equalizer	On/Off	M:EQ ON/OFF
	Low Gain	M:EQ LOW
	Low-Mid Gain	M:EQ L.MID G
	Low-Mid Freq	M:EQ L.MID F
	Low-Mid Q	M:EQ L.MID Q
	Hi-Mid Gain	M:EQ H.MID G
	Hi-Mid Freq	M:EQ H.MID F
	Hi-Mid Q	M:EQ H.MID Q
High Gain	M:EQ HIGH	
Level	M:EQ LEVEL	
Noise Suppressor (Mic)	On/Off	M:NS ON/OFF
	Threshold	M:NS THRESH.
	Release	M:NS REL.
Delay (Mic)	On/Off	M:DELAY ON/OFF
	Delay Time	M:DELAY TIME
	Feedback	M:DELAY FEEDBCK
	Effect Level	M:DELAY LEVEL
Compressor (Guitar)	On/Off	E:COMP ON/OFF
	Sustain	E:COMP SUST
	Attack	E:COMP ATTACK
	Level	E:COMP LEVEL

Effect Block	Parameter	Abbreviation
PreAmp	On/Off	E:AMP ON/OFF
	Amp Type	E:AMP TYPE
	Volume	E:AMP VOLUME
	Bass	E:AMP BASS
	Middle	E:AMP MIDDLE
	Treble	E:AMP TREBLE
	Presence	E:AMP PRESNC
	Presence	E:AMP PRESNC
	Master	E:AMP MASTER
	Bright	E:AMP BRIGHT
Gain	E:AMP GAIN	
Speaker Simulator	On/Off	E:SP.SIM ON/OFF
	Speaker Type	E:SP.SIM TYPE
	Mic Setting	E:SP.SIM MIC SET
	Mic Level	E:SP.SIM MIC LVL
	Direct Level	E:SP.SIM DIR.LVL
Noise Suppressor (Guitar)	On/Off	E:NS ON/OFF
	Threshold	E:NS THRESH.
	Release	E:NS REL.
Delay (Guitar)	On/Off	E:DELAY ON/OFF
	Delay Time	E:DELAY TIME
	Feedback	E:DELAY FEEDBCK
	Effect Level	E:DELAY LEVEL

### Algorithm: VO+AC.SIM

Effect Block	Parameter	Abbreviation
Compressor (Mic)	On/Off	M:COMP ON/OFF
	Sustain	M:COMP SUST
	Attack	M:COMP ATTACK
	Level	M:COMP LEVEL
4Band Equalizer (Mic)	On/Off	M:EQ ON/OFF
	Low Gain	M:EQ LOW
	Low-Mid Gain	M:EQ L.MID G
	Low-Mid Freq	M:EQ L.MID F
	Low-Mid Q	M:EQ L.MID Q
	Hi-Mid Gain	M:EQ H.MID G
	Hi-Mid Freq	M:EQ H.MID F
	Hi-Mid Q	M:EQ H.MID Q
	High Gain	M:EQ HIGH
	Level	M:EQ LEVEL
Noise Suppressor (Mic)	On/Off	M:NS ON/OFF
	Threshold	M:NS THRESH.
	Release	M:NS REL.
Delay (Mic)	On/Off	M:DLY ON/OFF
	Delay Time	M:DLY TIME
	Feedback	M:DLY FEEDBCK
	Effect Level	M:DLY LEVEL
Acoustic Guitar Simulator (Guitar)	On/Off	E:ASIM ON/OFF
	Pickup Type	E:ASIM PICKUP
	Character	E:ASIM CHAR
	Top-Hi	E:ASIM TOP-HI
	Top-Mid	E:ASIM TOP-MID
	Body	E:ASIM BODY
	Level	E:ASIM LEVEL
Compressor (Guitar)	On/Off	E:COMP ON/OFF
	Sustain	E:COMP SUST
	Attack	E:COMP ATTACK
	Level	E:COMP LEVEL
Noise Suppressor (Guitar)	On/Off	E:NS ON/OFF
	Threshold	E:NS THRESH.
	Release	E:NS REL.
Delay (Guitar)	On/Off	E:DLY ON/OFF
	Delay Time	E:DLY TIME
	Feedback	E:DLY FEEDBCK
	Effect Level	E:DLY LEVEL

## Effect parameters assigned to VALUE knobs

### Algorithm: VO+ACOUSTIC

Effect Block	Parameter	Abbreviation
Compressor (Mic)	On/Off	M:COMP ON/OFF
	Sustain	M:COMP SUST
	Attack	M:COMP ATTACK
	Level	M:COMP LEVEL
Noise Suppressor (Mic)	On/Off	M:NS ON/OFF
	Threshold	M:NS THRESH.
	Release	M:NS REL.
Acoustic Processor	On/Off	A:AC ON/OFF
	Body	A:AC BODY
	Mic Distance	A:AC MIC.D
	Level	A:AC LEVEL
Compressor (Guitar)	On/Off	A:COMP ON/OFF
	Sustain	A:COMP SUST
	Attack	A:COMP ATTACK
	Level	A:COMP LEVEL
Noise Suppressor (Guitar)	On/Off	A:NS ON/OFF
	Threshold	A:NS THRESH.
	Release	A:NS REL.

# Insert Effect Patch List

## GUITAR

No.	Patch Name	Algorithm
P001	CLEAN JC-120	COSM OD GUITAR AMP
P002	JAZZ TONE AM	COSM OD GUITAR AMP
P003	CLASIC DIST	COSM OD GUITAR AMP
P004	FAT CRNC AMB	COSM OD GUITAR AMP
P005	FUZZ+MS1959	COSM OD GUITAR AMP
P006	R-FIER METAL	COSM OD GUITAR AMP
P007	HiGain BG	COSM OD GUITAR AMP
P008	SOLID DRIVE	COSM OD GUITAR AMP
P009	VO CHORD!	COSM OD GUITAR AMP
P010	METAL LD AMB	COSM OD GUITAR AMP
P011	WARM DRIVE	COSM OD GUITAR AMP
P012	70s US ROCK	COSM OD GUITAR AMP
P013	Studio Amp M	COSM COMP GUITAR AMP
P014	DIRTY FUZZ	COSM OD GUITAR AMP
P015	BG CLEAN AMB	COSM OD GUITAR AMP
P016	EARLY 60s UK	COSM OD GUITAR AMP
P017	MATCH LEAD	COSM OD GUITAR AMP
P018	MsHigain AMB	COSM OD GUITAR AMP
P019	CRUNCH AMBI	COSM OD GUITAR AMP
P020	PRE FLANGER	COSM OD GUITAR AMP
P021	ST DETUNE CR	COSM OD GUITAR AMP
P022	HEAVY!!	COSM OD GUITAR AMP
P023	D-Comp Lead	COSM COMP GUITAR AMP
P024	SMOOTH LEAD	COSM OD GUITAR AMP
P025	SLDN STACK	COSM OD GUITAR AMP
P026	R&R DRIVE	COSM OD GUITAR AMP
P027	FAT DRIVE	COSM OD GUITAR AMP
P028	60s UK	COSM COMP GUITAR AMP
P029	HEAVY FLANGE	COSM OD GUITAR AMP
P030	OCT AW LEAD	COSM OD GUITAR AMP
P031	CountryCOMP	COSM COMP GUITAR AMP
P032	TREMOLO TWIN	COSM OD GUITAR AMP
P033	PEDAL VIBRT	COSM OD GUITAR AMP
P034	LFO FILTER	COSM OD GUITAR AMP
P035	MS1959 LEAD	COSM OD GUITAR AMP
P036	SPACY CLEAN	COSM OD GUITAR AMP
P037	BIG FUNK	COSM COMP GUITAR AMP
P038	UNI-V FUZZ	COSM OD GUITAR AMP
P039	HiGain Boost	COSM OD GUITAR AMP
P040	VO STACK	COSM OD GUITAR AMP
P041	STACK DIST	COSM OD GUITAR AMP
P042	DETUNE BG	COSM OD GUITAR AMP
P043	UK StudioGTR	COSM COMP GUITAR AMP
P044	FAT STRAT	COSM OD GUITAR AMP
P045	COMPRE-BILLY	COSM COMP GUITAR AMP
P046	HEAVY RECT	COSM OD GUITAR AMP
P047	COOL AC DRIV	COSM OD GUITAR AMP
P048	DS+MS HiGain	COSM OD GUITAR AMP
P049	Scoop'dMetal	COSM OD GUITAR AMP
P050	WAH STACK	COSM OD GUITAR AMP

No.	Patch Name	Algorithm
P051	OCT FUZZ	COSM OD GUITAR AMP
P052	WOMAN TONE	COSM OD GUITAR AMP
P053	SCREAM TWEED	COSM OD GUITAR AMP
P054	WAH LEAD	COSM OD GUITAR AMP
P055	BIG!	COSM OD GUITAR AMP
P056	PEDAL OCT UP	COSM OD GUITAR AMP
P057	Clean Lead	COSM COMP GUITAR AMP
P058	FUNK CRY WAH	COSM OD GUITAR AMP
P059	ANOTHER BRIC	COSM OD GUITAR AMP
P060	COOL CRUNCH	COSM OD GUITAR AMP
P061	Fat Clean	COSM COMP GUITAR AMP
P062	R'BILLY CRUN	COSM OD GUITAR AMP
P063	TOUCH WAH	COSM OD GUITAR AMP
P064	AUSTIN BOOGI	COSM OD GUITAR AMP
P065	SPACE PHASER	COSM OD GUITAR AMP
P066	DELAY GATE	COSM OD GUITAR AMP
P067	SLOW GEAR	COSM OD GUITAR AMP
P068	FRETLESS	COSM OD GUITAR AMP
P069	PEDAL OCT EC	COSM OD GUITAR AMP
P070	SPACE ECHO	COSM OD GUITAR AMP
P071	ACOUSTY	ACOUSTIC SIM
P072	Brite Acustc	ACOUSTIC SIM
P073	ACO w/PZO	ACOUSTIC SIM
P074	AC Sim4Slide	ACOUSTIC SIM
P075	Dream Acustc	ACOUSTIC SIM
P076	Tight Bass	BASS SIM
P077	Loose Bass	BASS SIM
P078	BASS SIMw/Ch	BASS SIM
P079	UPRT PHSD!	BASS SIM
P080	GT>FRETLESS!	BASS SIM
P081	Natural AG	ACOUSTIC GUITAR
P082	AcousticSolo	ACOUSTIC GUITAR
P083	MIC'D ACUSTC	ACOUSTIC GUITAR
P084	NICE ACUSTC	ACOUSTIC GUITAR
P085	WIDE ACUSTC	ACOUSTIC GUITAR
P086	SLAP 'n POP	BASS MULTI
P087	Phase Bass	BASS MULTI
P088	FLIPTOP SOUL	COSM BASS AMP
P089	SQUEEZ BASS	COSM COMP BASS AMP
P090	C-StudioBASS	COSM COMP BASS AMP
P091	COSMBsTUBES	COSM BASS AMP
P092	PUNK BASS	COSM BASS AMP
P093	SUSTAIN BASS	COSM COMP BASS AMP
P094	BIG 8-STG BS	BASS MULTI
P095	MIAMI FRETLS	BASS MULTI
P096	STADIUM BASS	COSM COMP BASS AMP
P097	OCTAVE BASS	BASS MULTI
P098	NO FRET SOLO	BASS MULTI
P099	DRIVIN' BASS	COSM BASS AMP
P100	GRUNGE BASS	COSM BASS AMP

## Insert Effect Patch List

No.	Patch Name	Algorithm
P101	MtownLowdown	COSM OD BASS AMP
P102	Liverpool	COSM OD BASS AMP
P103	B-M Exposed	COSM OD BASS AMP
P104	Geddy's	COSM OD BASS AMP
P105	No.1 Player	COSM OD BASS AMP
P106	Bare Bass360	COSM OD BASS AMP
P107	Brite Isle	COSM OD BASS AMP
P108	Roto Drive	COSM OD BASS AMP
P109	CloseSession	COSM OD BASS AMP
P110	Fieldy's	COSM OD BASS AMP
P111	Deep&Throaty	COSM OD BASS AMP
P112	Grunge	COSM OD BASS AMP
P113	Anthony FLNG	COSM OD BASS AMP
P114	Pitch Double	COSM OD BASS AMP
P115	PseudoDefret	COSM OD BASS AMP
P116	Graham Slap	COSM OD BASS AMP
P117	Lowdown	COSM OD BASS AMP
P118	EnhancedSlap	COSM OD BASS AMP
P119	Demon Child	COSM OD BASS AMP
P120	Funkadelic	COSM OD BASS AMP

## MIC

No.	Patch Name	Algorithm
P001	VOCAL COMP 1	COSM VOCAL COMP
P002	VOCAL COMP 2	COSM VOCAL COMP
P003	KICK COMP	COSM VOCAL COMP
P004	SNARE COMP	COSM VOCAL COMP
P005	BRASS COMP	COSM VOCAL COMP
P006	VOCAL EFX 1	VOCAL MULTI
P007	VOCAL EFX 2	VOCAL MULTI
P008	VOCAL EFX 3	VOCAL MULTI
P009	VOCAL EFX 4	VOCAL MULTI
P010	NARRATION	VOCAL MULTI
P011	VOX DOUBLER	VOCAL MULTI
P012	VOX DETUNE	VOCAL MULTI
P013	KARAOKE VOX	VOCAL MULTI
P014	UNISON VOX	VOICE TRANSFORMER
P015	STUTTER VOX	VOICE TRANSFORMER
P016	D. VADER	VOICE TRANSFORMER
P017	ALIEN VOX...	VOICE TRANSFORMER
P018	BULL HORN	VOCAL MULTI
P019	SEAGULLS?	VOICE TRANSFORMER
P020	SOOO DEEP!!!	VOICE TRANSFORMER
P021	BRIGHT CHOIR	VOCAL MULTI
P022	RICH BRASS	VOCAL MULTI
P023	CM+DARK EQ	VOCAL MULTI
P024	CM+VOCAL EQ	VOCAL MULTI
P025	CM+BRIGHT EQ	VOCAL MULTI
P026	ENH+BASS CUT	VOCAL MULTI
P027	ST.AUTOPAN	VOCAL MULTI
P028	SLOW FLANGE	VOCAL MULTI
P029	FAST FLANGE	VOCAL MULTI
P030	SLOW CHORUS	VOCAL MULTI
P031	SLAPBACK DLY	VOCAL MULTI
P032	BIG EQ+S.DLY	VOCAL MULTI
P033	BALLAD EFX	VOCAL MULTI
P034	PTCH FIX-1/2	VOCAL MULTI
P035	PTCH FIX+1/2	VOCAL MULTI
P036	CMP+DES+ENH	VOCAL MULTI
P037	CMP+ENH+EQ	VOCAL MULTI
P038	CMP+DES+EQ	VOCAL MULTI
P039	CMP+EQ+DBL	VOCAL MULTI
P040	CMP+EQ+DTUNE	VOCAL MULTI
P041	57 to 58	MIC MODELING
P042	57 to 421	MIC MODELING
P043	57 to 451	MIC MODELING
P044	DR20 to 421	MIC MODELING
P045	DR20 to 451	MIC MODELING
P046	DR20 to 87	MIC MODELING
P047	C3KB to 57	MIC MODELING
P048	C3KB to 58	MIC MODELING
P049	C3KB to 421	MIC MODELING
P050	C3KB to 451	MIC MODELING

**STEREO**

No.	Patch Name	Algorithm
P001	CMP+FAT EQ	STEREO MULTI
P002	CMP+THIN EQ	STEREO MULTI
P003	CMP+TIGHT EQ	STEREO MULTI
P004	CMP+BIG EQ	STEREO MULTI
P005	CMP+SMALL EQ	STEREO MULTI
P006	T'WAH : UP	STEREO MULTI
P007	T'WAH : DOWN	STEREO MULTI
P008	RING MOD:LO	STEREO MULTI
P009	RING MOD:HI	STEREO MULTI
P010	TOTAL RNGMOD	STEREO MULTI
P011	DEEP FLANGE	STEREO MULTI
P012	LO&SLOW FLNG	STEREO MULTI
P013	LO&FAST FLNG	STEREO MULTI
P014	HI&SLOW FLNG	STEREO MULTI
P015	HI&FAST FLNG	STEREO MULTI
P016	ST CHORUS	STEREO MULTI
P017	SLOW CHORUS	STEREO MULTI
P018	FAST CHORUS	STEREO MULTI
P019	PRE-DLY CHRS	STEREO MULTI
P020	VNTG PHASER	STEREO MULTI
P021	MDRN PHASER	STEREO MULTI
P022	DEEP PHASE	STEREO MULTI
P023	PHAT PHASE	STEREO MULTI
P024	PS: DETUNE	STEREO MULTI
P025	PS: -1 OCTV	STEREO MULTI
P026	PS: +1 OCTV	STEREO MULTI
P027	ST DOUBLER	STEREO MULTI
P028	MONO>>STEREO	STEREO MULTI
P029	SLOW PANNER	STEREO MULTI
P030	FAST PANNER	STEREO MULTI
P031	CHORUS+DELAY	STEREO MULTI
P032	CHRS+TAP DLY	STEREO MULTI
P033	PHS+SLAPBACK	STEREO MULTI
P034	FLNG+TAP DLY	STEREO MULTI
P035	LO COMB FLTR	STEREO MULTI
P036	HI COMB FLTR	STEREO MULTI
P037	120BPM R-MOD	STEREO MULTI
P038	ST PAN+DELAY	STEREO MULTI
P039	ST TREMOLO	STEREO MULTI
P040	120BPM SLICE	STEREO MULTI
P041	1920's RADIO	LO-FI BOX
P042	1940's RADIO	LO-FI BOX
P043	1960's RADIO	LO-FI BOX
P044	EARLY EDISON	LO-FI BOX
P045	VINTAGE 45's	LO-FI BOX
P046	CLASSIC LP	LO-FI BOX
P047	VNTG SAMPLER	LO-FI BOX
P048	1985 SAMPLER	LO-FI BOX
P049	R-MOD SAMPLE	LO-FI BOX
P050	2-BIT DISTOR	LO-FI BOX

**SIMUL**

No.	Patch Name	Algorithm
P001	EQ + JC120	VO+GT.AMP
P002	DELAY+ JC120	VO+GT.AMP
P003	COMP +CLN TW	VO+GT.AMP
P004	EQ + DRV TW	VO+GT.AMP
P005	COMP +SM AMP	VO+GT.AMP
P006	EQ + CRUNCH	VO+GT.AMP
P007	EQ + MATCH	VO+GT.AMP
P008	DELAY+ match	VO+GT.AMP
P009	BRT. EQ + VO	VO+GT.AMP
P010	LITE CM + vo	VO+GT.AMP
P011	EQ&CMP+BLUES	VO+GT.AMP
P012	COMP&EQ + BG	VO+GT.AMP
P013	EQ&DELAY +bg	VO+GT.AMP
P014	EQ&DL+ML (1)	VO+GT.AMP
P015	CM&DL+ml (1)	VO+GT.AMP
P016	DELAY+ML 1+2	VO+GT.AMP
P017	CM&EQ+ml LD	VO+GT.AMP
P018	CHRS&DL+SLDN	VO+GT.AMP
P019	HVY CM+MTLms	VO+GT.AMP
P020	BIG EQ+METAL	VO+GT.AMP
P021	DIRECT+H-STD	VO+AC.SIM
P022	BRT.EQ+S-STD	VO+AC.SIM
P023	CMP&EQ+H-JUM	VO+AC.SIM
P024	CMP&EQ+S-JUM	VO+AC.SIM
P025	LNG DL+H-ENH	VO+AC.SIM
P026	BIG CM+S-ENH	VO+AC.SIM
P027	BIG EQ+H-PZO	VO+AC.SIM
P028	DL EFX+S-PZO	VO+AC.SIM
P029	CMP&EQ+PZO 1	VO+AC.SIM
P030	DL EFX+PZO 2	VO+AC.SIM
P031	DIRECT+SIM 1	VO+AC.SIM
P032	HVY CM+SIM 2	VO+AC.SIM
P033	HVY EQ+SIM 3	VO+AC.SIM
P034	50msDL+SIM 4	VO+AC.SIM
P035	CMP&EQ+SIM 5	VO+AC.SIM
P036	COMP +AC.MIC	VO+ACOUSTIC
P037	COMP+CLS.MIC	VO+ACOUSTIC
P038	COMP+DIS.MIC	VO+ACOUSTIC
P039	COMP+FAR MIC	VO+ACOUSTIC
P040	COMP+DYN.MIC	VO+ACOUSTIC
P041	COMP+CDN.MIC	VO+ACOUSTIC
P042	COMP +DIRECT	VO+ACOUSTIC
P043	N.S.+VNT.CDN	VO+ACOUSTIC
P044	COMP +COMP 1	VO+ACOUSTIC
P045	D.I. +COMP 2	VO+ACOUSTIC
P046	COMP +COMP 3	VO+ACOUSTIC
P047	N.SUP+COMP 4	VO+ACOUSTIC
P048	COMP +COMP 5	VO+ACOUSTIC
P049	COMP+SML.MIC	VO+ACOUSTIC
P050	COMP+LRG.MIC	VO+ACOUSTIC

# Vocal Tool Box Patch List

No.	Patch Name	Algorithm
P001	Smooth Alto	PITCH CORRECTION
P002	Smooth Sop.	PITCH CORRECTION
P003	Smooth Tenor	PITCH CORRECTION
P004	Smooth Bari.	PITCH CORRECTION
P005	Machine Tune	PITCH CORRECTION

No.	Patch Name	Algorithm
P006	Clean Harmny	HARMONY SEQUENCE
P007	Natural Cho.	HARMONY SEQUENCE
P008	Wide Chorus	HARMONY SEQUENCE
P009	Spacy Chorus	HARMONY SEQUENCE
P010	Bad Harmony	HARMONY SEQUENCE

# Speaker Modeling Patch List

No.	Patch Name
P001	SuperFit 90
P002	P.GenBlk 90
P003	P.E-Bs 90
P004	P.Mack 90
P005	SmalCube 90
P006	WhiteCon 90
P007	W.C+tiss 90
P008	S.Radio 90
P009	SmallTV 90
P010	BoomBox 90
P011	BB.LowBs 90
P012	SuperFit 50
P013	P.GenBlk 50
P014	P.E-Bs 50
P015	P.Mack 50

No.	Patch Name
P016	SmalCube 50
P017	WhiteCon 50
P018	W.C+tiss 50
P019	S.Radio 50
P020	SmallTV 50
P021	BoomBox 50
P022	BB.LowBs 50
P023	SuperFit 30
P024	P.GenBlk 30
P025	P.E-Bs 30
P026	P.Mack 30
P027	SmalCube 30
P028	WhiteCon 30
P029	W.C+tiss 30
P030	S.Radio 30

No.	Patch Name
P031	SmallTV 30
P032	BoomBox 30
P033	BB.LowBs 30
P034	SuperFit CM
P035	P.GenBlk CM
P036	P.E-Bs CM
P037	P.Mack CM
P038	SmalCube CM
P039	WhiteCon CM
P040	W.C+tiss CM
P041	S.Radio CM
P042	SmallTV CM
P043	BoomBox CM
P044	BB.LowBs CM

# Mastering Tool Kit Patch List

No.	Patch Name
P001	Mix Down
P002	Pre Master
P003	Live Mix
P004	Pop Mix
P005	Dance Mix
P006	Jingl Mix
P007	Hard Comp
P008	Soft Comp
P009	Clean Comp
P010	Dance Comp

No.	Patch Name
P011	Orch Comp
P012	Vocal Comp
P013	Acoustic
P014	Rock Band
P015	Orchestra
P016	Low Boost
P017	Brighten
P018	DJs Voice
P019	Phone Vox

# Preset Rhythm Arrangement List

No.	Name	Tempo	Beat	Kit	Bass
P001	ARG.ROCK 01	130	4/4	HEAVY	FINGERED
P002	ARG.ROCK 02	88	4/4	ROOM	FINGERED
P003	ARG.ROCK 03	72	4/4	ROOM	PICK
P004	ARG.ROCK 04	92	4/4	ROOM	FINGERED
P005	ARG.ROCK 05	184	4/4	ROOM	FINGERED
P006	ARG.ROCK 06	120	4/4	HEAVY	PICK
P007	ARG.ROCK 07	236	4/4	HEAVY	PICK
P008	ARG.ROCK 08	76	4/4	ROOM	FINGERED
P009	ARG.ROCK 09	150	4/4	ROOM	PICK
P010	ARG.ROCK 10	168	4/4	ROOM	FINGERED
P011	ARG.ROCK 11	210	4/4	HEAVY	PICK
P012	ARG.ROCK 12	168	4/4	HEAVY	FINGERED
P013	ARG.ROCK 13	250	4/4	HEAVY	FINGERED
P014	ARG.ROCK 14	94	4/4	HEAVY	PICK
P015	ARG.ROCK 15	98	4/4	ROOM	PICK
P016	ARG.ROCK 16	108	4/4	ROOM	FINGERED
P017	ARG.ROCK 17	130	4/4	HEAVY	FINGERED
P018	ARG.ROCK 18	98	4/4	ROOM	FINGERED
P019	ARG.ROCK 19	126	4/4	ROOM	FINGERED
P020	ARG.ROCK 20	113	4/4	ROOM	PICK
P021	ARG.ROCK 21	126	4/4	ROOM	PICK
P022	ARG.ROCK 22	118	4/4	HEAVY	PICK
P023	ARG.ROCK 23	120	4/4	ROOM	FINGERED
P024	ARG.ROCK 24	114	4/4	ROOM	FINGERED
P025	ARG.ROCK 25	140	4/4	HEAVY	FINGERED
P026	ARG.ROCK 26	98	4/4	ROOM	SLAP
P027	ARG.ROCK 27	110	4/4	ROOM	PICK2
P028	ARG.ROCK 28	130	4/4	STD1	FINGERED
P029	ARG.ROCK 29	126	4/4	STD1	FINGERED
P030	ARG.ROCK 30	113	4/4	ROOM	FRETLESS
P031	ARG.ROCK 31	104	4/4	STD1	FINGERED
P032	ARG.ROCK 32	86	4/4	ROOM	PICK
P033	ARG.ROCK 33	137	5/4	HEAVY	FINGERED
P034	ARG.ROCK 35	128	4/4	ROOM	FINGERED
P035	ARG.ROCK 36	102	4/4	ROOM	PICK
P036	ARG.ROCK 37	138	4/4	STD1	FINGERED
P037	ARG.POP 01	120	4/4	ROOM	PICK
P038	ARG.POP 02	86	4/4	STD2	FINGERED
P039	ARG.POP 03	130	4/4	STD1	FINGERED
P040	ARG.POP 04	215	4/4	JAZZ	FINGERED2
P041	ARG.POP 05	124	4/4	HEAVY	PICK
P042	ARG.POP 06	92	5/4	ROOM	PICK
P043	ARG.POP 07	185	4/4	JAZZ	ACOUSTIC
P044	ARG.POP 08	100	4/4	JAZZ	FINGERED
P045	ARG.POP 09	96	4/4	STD1	ACOUSTIC
P046	ARG.POP 10	151	4/4	JAZZ	PICK
P047	ARG.POP 11	120	4/4	HEAVY	FINGERED
P048	ARG.POP 12	112	4/4	STD2	MUTED
P049	ARG.POP 13	110	4/4	ROOM	FINGERED
P050	ARG.BALAD 01	66	4/4	808	FRETLESS

No.	Name	Tempo	Beat	Kit	Bass
P051	ARG.BALAD 02	70	4/4	STD2	FINGERED
P052	ARG.BALAD 03	60	4/4	JAZZ	FINGERED
P053	ARG.BALAD 04	58	4/4	STD2	FINGERED
P054	ARG.BALAD 05	64	4/4	ROOM	FINGERED
P055	ARG.BALAD 06	72	4/4	STD2	FRETLESS
P056	ARG.BALAD 07	89	6/8	STD2	FINGERED
P057	ARG.BALAD 08	50	6/8	ROOM	FINGERED
P058	ARG.BALAD 09	89	4/4	STD2	PICK
P059	ARG.BLUES 01	120	4/4	STD1	FINGERED
P060	ARG.BLUES 02	55	4/4	STD2	FINGERED
P061	ARG.BLUES 03	148	4/4	JAZZ	ACOUSTIC
P062	ARG.BLUES 04	192	4/4	STD1	FINGERED
P063	ARG.BLUES 05	160	4/4	ROOM	PICK2
P064	ARG.BLUES 06	178	4/4	STD1	FINGERED
P065	ARG.BLUES 07	124	4/4	STD1	PICK
P066	ARG.BLUES 08	124	4/4	ROOM	FINGERED
P067	ARG.R&B 01	100	4/4	ROOM	FINGERED2
P068	ARG.R&B 02	131	4/4	STD1	SLAP
P069	ARG.R&B 03	92	4/4	STD1	FINGERED
P070	ARG.R&B 04	145	4/4	STD1	FINGERED
P071	ARG.R&B 05	108	4/4	JAZZ	FINGERED2
P072	ARG.R&B 06	92	4/4	ROOM	PICK
P073	ARG.R&B 07	154	4/4	STD1	FINGERED
P074	ARG.R&B 08	148	4/4	STD1	FINGERED
P075	ARG.R&B 09	96	4/4	STD1	FINGERED
P076	ARG.JAZZ 01	140	4/4	JAZZ	ACOUSTIC
P077	ARG.JAZZ 02	180	5/4	JAZZ	ACOUSTIC
P078	ARG.JAZZ 03	168	4/4	JAZZ	FINGERED
P079	ARG.JAZZ 04	192	4/4	JAZZ	ACOUSTIC
P080	ARG.JAZZ 05	150	4/4	JAZZ	ACOUSTIC
P081	ARG.JAZZ 06	93	6/8	JAZZ	ACOUSTIC
P082	ARG.FUSON 01	126	4/4	ROOM	SLAP
P083	ARG.FUSON 02	148	4/4	ROOM	FINGERED
P084	ARG.FUSON 03	116	4/4	ROOM	SLAP
P085	ARG.FUSON 04	136	4/4	ROOM	SLAP
P086	ARG.FUSON 05	100	4/4	STD1	FINGERED
P087	ARG.DANCE 01	102	4/4	808	SOLID
P088	ARG.DANCE 02	93	4/4	HIP-HOP	SOLID
P089	ARG.DANCE 03	114	4/4	HOUSE	SOLID
P090	ARG.DANCE 04	165	4/4	808	PLUCK
P091	ARG.DANCE 05	117	4/4	HOUSE	SOLID
P092	ARG.LATIN 01	108	4/4	STD1	ACOUSTIC
P093	ARG.LATIN 02	125	4/4	JAZZ	ACOUSTIC
P094	ARG.LATIN 03	146	4/4	JAZZ	FINGERED
P095	ARG.LATIN 04	132	4/4	REGGAE	FRETLESS
P096	ARG.CNTRY 01	94	4/4	ROOM	FINGERED
P097	ARG.CNTRY 02	100	4/4	JAZZ	FINGERED
P098	ARG.CNTRY 03	72	4/4	STD1	FINGERED
P099	ARG.CNTRY 04	100	4/4	JAZZ	FINGERED
P100	ARG.CNTRY 05	144	4/4	JAZZ	FINGERED

# Preset Drum Pattern List

Pattern Name	Recommended Tempo	Beat	Number of measures					
			IN	V1	F1	V2	F2	END
ROCK 01	140	4/4	4	2	1	2	1	4
ROCK 02	88	4/4	4	2	1	2	1	4
ROCK 03	72	4/4	2	2	1	2	1	2
ROCK 04	92	4/4	4	4	1	2	1	1
ROCK 05	184	4/4	4	4	1	2	1	5
ROCK 06	120	4/4	2	2	1	2	1	2
ROCK 07	236	4/4	4	2	1	4	1	4
ROCK 08	76	4/4	4	4	1	4	1	5
ROCK 09	150	4/4	5	2	1	2	1	6
ROCK 10	168	4/4	4	4	1	4	1	5
ROCK 11	210	4/4	8	4	2	4	2	4
ROCK 12	168	4/4	4	2	1	2	1	3
ROCK 13	250	4/4	8	4	1	4	1	3
ROCK 14	94	4/4	4	2	1	2	1	4
ROCK 15	98	4/4	4	4	1	4	1	4
ROCK 16	108	4/4	4	2	1	2	1	3
ROCK 17	130	4/4	4	2	1	2	1	5
ROCK 18	98	4/4	4	2	1	2	1	3
ROCK 19	126	4/4	4	2	1	2	1	6
ROCK 20	113	4/4	4	2	1	2	1	2
ROCK 21	126	4/4	4	2	1	2	1	5
ROCK 22	118	4/4	5	2	1	2	1	3
ROCK 23	120	4/4	4	4	1	4	1	2
ROCK 24	114	4/4	4	2	1	2	1	6
ROCK 25	140	4/4	4	2	1	2	1	4
ROCK 26	98	4/4	4	4	1	4	1	3
ROCK 27	110	4/4	4	2	1	4	1	5
ROCK 28	130	4/4	6	2	1	2	1	5
ROCK 29	126	4/4	4	2	1	2	1	4
ROCK 30	113	4/4	4	4	1	4	1	5
ROCK 31	104	4/4	4	2	1	2	1	6
ROCK 32	86	4/4	1	4	1	4	1	2
ROCK 33	137	5/4	2	4	1	4	1	6
ROCK 34	128	4/4	4	4	1	4	1	6
ROCK 35	102	4/4	4	2	1	2	1	2
ROCK 36	138	4/4	4	2	1	2	1	4
POP 01	120	4/4	2	2	1	2	1	4
POP 02	86	4/4	4	4	1	4	1	7
POP 03	130	4/4	2	2	1	2	1	4
POP 04	215	4/4	2	2	1	2	1	4
POP 05	124	4/4	6	2	1	2	1	6
POP 06	92	5/4	5	2	1	2	1	4
POP 07	185	4/4	2	2	1	2	1	4
POP 08	100	4/4	4	1	1	2	1	3
POP 09	96	4/4	2	2	1	2	1	3
POP 10	151	4/4	4	2	1	4	1	4
POP 11	120	4/4	2	2	1	2	1	4
POP 12	112	4/4	4	2	1	2	1	6
POP 13	110	4/4	2	2	1	2	1	4
BALLAD01	66	4/4	4	4	1	4	1	8
BALLAD02	70	4/4	4	2	1	2	1	5
BALLAD03	60	4/4	8	4	1	4	1	8
BALLAD04	58	4/4	4	4	1	4	1	6
BALLAD05	64	4/4	2	2	1	2	1	2
BALLAD06	72	4/4	4	2	1	2	1	5
BALLAD07	89	6/8	8	2	1	2	1	5
BALLAD08	50	6/8	4	4	1	2	1	5
BALLAD09	89	6/8	3	2	1	2	1	3

Pattern Name	Recommended Tempo	Beat	Number of measures					
			IN	V1	F1	V2	F2	END
BLUES 01	120	4/4	5	4	1	4	1	6
BLUES 02	55	4/4	4	4	1	4	1	4
BLUES 03	148	4/4	4	4	1	4	1	7
BLUES 04	192	4/4	4	4	1	4	1	6
BLUES 05	160	4/4	4	4	1	4	1	5
BLUES 06	178	4/4	4	4	1	4	1	6
BLUES 07	124	4/4	4	4	1	4	1	5
BLUES 08	124	4/4	4	4	1	4	1	5
R&B 01	100	4/4	4	2	1	2	1	2
R&B 02	131	4/4	4	2	1	2	1	5
R&B 03	92	4/4	4	2	1	2	1	4
R&B 04	145	4/4	4	2	1	2	1	5
R&B 05	108	4/4	4	2	1	2	1	5
R&B 06	92	4/4	4	2	1	2	1	4
R&B 07	154	4/4	2	2	1	2	1	5
R&B 08	148	4/4	4	2	1	2	1	5
R&B 09	96	4/4	4	2	1	2	1	3
JAZZ 01	140	4/4	4	4	1	4	1	5
JAZZ 02	180	5/4	4	2	1	2	1	8
JAZZ 03	168	4/4	8	8	1	8	1	6
JAZZ 04	192	4/4	8	8	1	8	1	7
JAZZ 05	150	4/4	4	4	1	4	1	4
JAZZ 06	93	6/8	4	4	1	4	1	6
FUSION01	126	4/4	4	2	1	2	1	4
FUSION02	148	4/4	6	2	1	2	1	6
FUSION03	116	4/4	5	2	1	2	1	3
FUSION04	136	4/4	4	2	1	2	1	2
FUSION05	100	4/4	4	4	1	4	1	5
DANCE 01	102	4/4	2	4	1	4	1	2
DANCE 02	93	4/4	1	4	1	4	1	1
DANCE 03	114	4/4	4	2	1	2	1	4
DANCE 04	165	4/4	4	4	1	4	1	4
DANCE 05	117	4/4	4	2	1	2	1	4
LATIN 01	108	4/4	4	2	1	2	1	2
LATIN 02	125	4/4	6	4	1	4	1	5
LATIN 03	146	4/4	1	2	1	2	1	3
LATIN 04	132	4/4	1	4	1	4	1	3
CNTRY 01	94	4/4	5	4	1	4	1	7
CNTRY 01	100	4/4	1	4	1	4	1	4
CNTRY 01	72	4/4	4	2	1	2	1	5
CNTRY 01	100	4/4	5	4	1	4	1	5
CNTRY 01	144	4/4	8	4	1	4	1	7

# Preset Bass Pattern List

Pattern Name	Recommended Tempo	Beat	Number of measures					
			IN	V1	F1	V2	F2	END
ROCK 01	140	4/4	4	2	1	2	1	4
ROCK 02	88	4/4	4	2	1	2	1	4
ROCK 03	72	4/4	2	2	1	2	1	2
ROCK 04	92	4/4	4	4	1	2	1	1
ROCK 05	184	4/4	4	4	1	2	1	5
ROCK 06	120	4/4	2	2	1	2	1	2
ROCK 07	236	4/4	4	2	1	4	1	4
ROCK 08	76	4/4	4	4	1	4	1	5
ROCK 09	150	4/4	5	2	1	2	1	6
ROCK 10	168	4/4	4	4	1	4	1	5
ROCK 11	210	4/4	8	4	2	4	2	4
ROCK 12	168	4/4	4	2	1	2	1	3
ROCK 13	250	4/4	8	4	1	4	1	3
ROCK 14	94	4/4	4	2	1	2	1	4
ROCK 15	98	4/4	4	4	1	4	1	4
ROCK 16	108	4/4	4	2	1	2	1	3
ROCK 17	130	4/4	-	2	1	2	1	5
ROCK 18	98	4/4	4	2	1	2	1	3
ROCK 19	126	4/4	4	2	1	2	1	6
ROCK 20	113	4/4	-	2	1	2	1	2
ROCK 21	126	4/4	4	2	1	2	1	5
ROCK 22	118	4/4	5	2	1	2	1	3
ROCK 23	120	4/4	-	4	1	4	1	2
ROCK 24	114	4/4	4	2	1	2	1	6
ROCK 25	140	4/4	4	2	1	2	1	4
ROCK 26	98	4/4	4	4	1	4	1	3
ROCK 27	110	4/4	4	2	1	4	1	5
ROCK 28	130	4/4	6	2	1	2	1	5
ROCK 29	126	4/4	4	2	1	2	1	4
ROCK 30	113	4/4	4	4	1	4	1	5
ROCK 31	104	4/4	4	2	1	2	1	6
ROCK 32	86	4/4	1	4	1	4	1	2
ROCK 33	137	5/4	-	4	1	4	1	6
ROCK 34	128	4/4	4	4	1	4	1	6
ROCK 35	102	4/4	4	2	1	2	1	2
ROCK 36	138	4/4	4	2	1	2	1	4
POP 01	120	4/4	-	2	1	2	1	4
POP 02	86	4/4	4	4	1	4	1	7
POP 03	130	4/4	2	2	1	2	1	4
POP 04	215	4/4	-	2	1	2	1	4
POP 05	124	4/4	6	2	1	2	1	6
POP 06	92	5/4	5	2	1	2	1	4
POP 07	185	4/4	2	2	1	2	1	4
POP 08	100	4/4	4	1	1	2	1	3
POP 09	96	4/4	-	2	1	2	1	3
POP 10	151	4/4	-	2	1	4	1	4
POP 11	120	4/4	-	2	1	2	1	4
POP 12	112	4/4	4	2	1	2	1	6
POP 13	110	4/4	-	2	1	2	1	4
BALLAD01	66	4/4	4	4	1	4	1	8
BALLAD02	70	4/4	4	2	1	2	1	5
BALLAD03	60	4/4	8	4	1	4	1	8
BALLAD04	58	4/4	4	4	1	4	1	6
BALLAD05	64	4/4	2	2	1	2	1	2
BALLAD06	72	4/4	4	2	1	2	1	5
BALLAD07	89	6/8	8	2	1	2	1	5
BALLAD08	50	6/8	4	4	1	2	1	5
BALLAD09	89	6/8	3	2	1	2	1	3

Pattern Name	Recommended Tempo	Beat	Number of measures					
			IN	V1	F1	V2	F2	END
BLUES 01	120	4/4	5	4	1	4	1	6
BLUES 02	55	4/4	4	4	1	4	1	4
BLUES 03	148	4/4	4	4	1	4	1	7
BLUES 04	192	4/4	4	4	1	4	1	6
BLUES 05	160	4/4	4	4	1	4	1	5
BLUES 06	178	4/4	4	4	1	4	1	6
BLUES 07	124	4/4	4	4	1	4	1	5
BLUES 08	124	4/4	4	4	1	4	1	5
R&B 01	100	4/4	4	2	1	2	1	2
R&B 02	131	4/4	4	2	1	2	1	5
R&B 03	92	4/4	-	2	1	2	1	4
R&B 04	145	4/4	4	2	1	2	1	5
R&B 05	108	4/4	4	2	1	2	1	5
R&B 06	92	4/4	4	2	1	2	1	4
R&B 07	154	4/4	2	2	1	2	1	5
R&B 08	148	4/4	4	2	1	2	1	5
R&B 09	96	4/4	4	2	1	2	1	3
JAZZ 01	140	4/4	4	4	1	4	1	5
JAZZ 02	180	5/4	4	2	1	2	1	8
JAZZ 03	168	4/4	8	8	1	8	1	6
JAZZ 04	192	4/4	8	8	1	8	1	7
JAZZ 05	150	4/4	4	4	1	4	1	4
JAZZ 06	93	6/8	4	4	1	4	1	6
FUSION01	126	4/4	4	2	1	2	1	4
FUSION02	148	4/4	6	2	1	2	1	6
FUSION03	116	4/4	5	2	1	2	1	3
FUSION04	136	4/4	4	2	1	2	1	2
FUSION05	100	4/4	4	4	1	4	1	5
DANCE 01	102	4/4	2	4	1	4	1	2
DANCE 02	93	4/4	-	4	1	4	1	1
DANCE 03	114	4/4	-	2	1	2	1	4
DANCE 04	165	4/4	-	4	-	4	1	-
DANCE 05	117	4/4	4	2	1	2	1	4
LATIN 01	108	4/4	4	2	1	2	1	2
LATIN 02	125	4/4	6	4	1	4	1	5
LATIN 03	146	4/4	1	2	1	2	1	3
LATIN 04	132	4/4	-	4	1	4	1	3
CNTRY 01	94	4/4	5	4	1	4	1	7
CNTRY 01	100	4/4	1	4	1	4	1	4
CNTRY 01	72	4/4	4	2	1	2	1	5
CNTRY 01	100	4/4	5	4	1	4	1	5
CNTRY 01	144	4/4	8	4	1	4	1	7

# User Loop Phrase List

No.	WAV File Name
A001	\\AIRBRUSH\B NOHAT.WAV
A002	\\AIRBRUSH\BRSH BT.WAV
A003	\\AIRBRUSH\CRASH.WAV
A004	\\AIRBRUSH\VERSE.WAV
A005	\\AIRBRUSH\VERSE2.WAV
A006	\\BASH IT\BRIDGE.WAV
A007	\\BASH IT\BRIDGE2.WAV
A008	\\BASH IT\CHORFILL.WAV
A009	\\BASH IT\CHORUS.WAV
A010	\\BASH IT\CRASH.WAV
A011	\\BASH IT\CRASH2.WAV
A012	\\BASH IT\VERSE.WAV
A013	\\BASH IT\VERSE2.WAV
A014	\\BIG STICK\BREAK1.WAV
A015	\\BIG STICK\BRIDGE1.WAV
A016	\\BIG STICK\CHORUS1.WAV
A017	\\BIG STICK\END CRASH1.WAV
A018	\\BIG STICK\INTRO1.WAV
A019	\\BIG STICK\VERSE1.WAV
A020	\\BIG STICK\VERSE2.WAV
A021	\\BUBBLE\DR & PERC\BREAK1.WAV
A022	\\BUBBLE\DR & PERC\CHORUS1.WAV
A023	\\BUBBLE\DR & PERC\END CRASH1.WAV
A024	\\BUBBLE\DR & PERC\LIGHT.WAV
A025	\\BUBBLE\DR & PERC\VERSE1.WAV
A026	\\BUBBLE\DR & PERC\VERSE2.WAV
A027	\\BUBBLE\DRUMS\BREAK1.WAV
A028	\\BUBBLE\DRUMS\CHORUS1.WAV
A029	\\BUBBLE\DRUMS\END CRASH1.WAV
A030	\\BUBBLE\DRUMS\LIGHT.WAV
A031	\\BUBBLE\DRUMS\VERSE1.WAV
A032	\\BUBBLE\DRUMS\VERSE2.WAV
A033	\\BUBBLE\PERC LOOP\FULL LOOP END.WAV
A034	\\BUBBLE\PERC LOOP\FULL LOOP.WAV
A035	\\BUBBLE\PERC LOOP\LOOP1 END.WAV
A036	\\BUBBLE\PERC LOOP\LOOP1.WAV
A037	\\BUBBLE\PERC LOOP\LOOP2 END.WAV
A038	\\BUBBLE\PERC LOOP\LOOP2.WAV
A039	\\BUBBLE\PERC LOOP\LOOP3.WAV
A040	\\BUBBLE\PERC LOOP\LOOP4 END.WAV
A041	\\BUBBLE\PERC LOOP\LOOP4.WAV
A042	\\BUBBLE\PERC LOOP\LOOP5 END.WAV
A043	\\BUBBLE\PERC LOOP\LOOP5.WAV
A044	\\EASY GO\DR & PERC\BREAK.WAV
A045	\\EASY GO\DR & PERC\BRIDGE.WAV
A046	\\EASY GO\DR & PERC\CHORUS.WAV
A047	\\EASY GO\DR & PERC\END
A048	\\EASY GO\DR & PERC\INTRO.WAV
A049	\\EASY GO\DR & PERC\SOLO.WAV
A050	\\EASY GO\DR & PERC\VERSE.WAV

No.	WAV File Name
B001	\\EASY GO\DRUMS\BREAK.WAV
B002	\\EASY GO\DRUMS\BRIDGE.WAV
B003	\\EASY GO\DRUMS\CHORUS.WAV
B004	\\EASY GO\DRUMS\END CRSH.WAV
B005	\\EASY GO\DRUMS\INTRO.WAV
B006	\\EASY GO\DRUMS\SOLO.WAV
B007	\\EASY GO\DRUMS\VERSE.WAV
B008	\\EASY GO\PERC\PERC END.WAV
B009	\\EASY GO\PERC\PERC.WAV
B010	\\FAST ONE\DR & PERC\BREAK.WAV
B011	\\FAST ONE\DR & PERC\BRIDGE.WAV
B012	\\FAST ONE\DR & PERC\CHORUS.WAV
B013	\\FAST ONE\DR & PERC\END CRSH.WAV
B014	\\FAST ONE\DR & PERC\INTRO.WAV
B015	\\FAST ONE\DR & PERC\VERSE.WAV
B016	\\FAST ONE\DRUMS\BREAK.WAV
B017	\\FAST ONE\DRUMS\BRIDGE.WAV
B018	\\FAST ONE\DRUMS\CHORUS.WAV
B019	\\FAST ONE\DRUMS\END CRSH.WAV
B020	\\FAST ONE\DRUMS\INTRO.WAV
B021	\\FAST ONE\DRUMS\VERSE.WAV
B022	\\FAST ONE\PERC\PERC END.WAV
B023	\\FAST ONE\PERC\PERC.WAV
B024	\\FLY\DRUMS\ALT BEAT.WAV
B025	\\FLY\DRUMS\CHORUS.WAV
B026	\\FLY\DRUMS\END CRASH.WAV
B027	\\FLY\DRUMS\END CRASH2.WAV
B028	\\FLY\DRUMS\FILL.WAV
B029	\\FLY\DRUMS\FILL10.WAV
B030	\\FLY\DRUMS\FILL9.WAV
B031	\\FLY\DRUMS\HAT END.WAV
B032	\\FLY\DRUMS\INTRO5.WAV
B033	\\FLY\DRUMS\LIGHT.WAV
B034	\\FLY\DRUMS\SAMPLE2.WAV
B035	\\FLY\DRUMS\TOM BEAT.WAV
B036	\\FLY\DRUMS\VERSE.WAV
B037	\\FLY\PERC LOOP\FULL LOOP END.WAV
B038	\\FLY\PERC LOOP\FULL LOOP.WAV
B039	\\FLY\PERC LOOP\LESLIE END.WAV
B040	\\FLY\PERC LOOP\LESLIE.WAV
B041	\\FLY\PERC LOOP\LOOP1 END.WAV
B042	\\FLY\PERC LOOP\LOOP1.WAV
B043	\\FLY\PERC LOOP\LOOP2 END.WAV
B044	\\FLY\PERC LOOP\LOOP2.WAV
B045	\\FLY\PERC LOOP\LOOP3 END.WAV
B046	\\FLY\PERC LOOP\LOOP3.WAV
B047	\\FLY\PERC LOOP\LOOP4 END.WAV
B048	\\FLY\PERC LOOP\LOOP4.WAV
B049	\\FLY\DR & PERC\ALT BEAT.WAV
B050	\\FLY\DR & PERC\CHORUS.WAV

## User Loop Phrase List



No.	WAV File Name
C001	\\FLYDR & PERC\END CRASH.WAV
C002	\\FLYDR & PERC\END CRASH2.WAV
C003	\\FLYDR & PERC\FILL.WAV
C004	\\FLYDR & PERC\FILL10.WAV
C005	\\FLYDR & PERC\FILL9.WAV
C006	\\FLYDR & PERC\HAT END.WAV
C007	\\FLYDR & PERC\INTRO5.WAV
C008	\\FLYDR & PERC\LIGHT.WAV
C009	\\FLYDR & PERC\SAMPLE2.WAV
C010	\\FLYDR & PERC\TOM BEAT.WAV
C011	\\FLYDR & PERC\VERSE.WAV
C012	\\HAIRY\CHORUS 1.WAV
C013	\\HAIRY\CHORUS 2.WAV
C014	\\HAIRY\END CRSH.WAV
C015	\\HAIRY\INTRO.WAV
C016	\\HAIRY\VER FILL.WAV
C017	\\HAIRY\VERSE.WAV
C018	\\HEAVY RAIN\BRIDGE.WAV
C019	\\HEAVY RAIN\CHORUS.WAV
C020	\\HEAVY RAIN\CHORUS2.WAV
C021	\\HEAVY RAIN\END CRASH.WAV
C022	\\HEAVY RAIN\FILL3.WAV
C023	\\HEAVY RAIN\INTRO.WAV
C024	\\HEAVY RAIN\VERSE.WAV
C025	\\HIGH STEP\BRIDGE.WAV
C026	\\HIGH STEP\BRIDGE2.WAV
C027	\\HIGH STEP\BRIDGE3.WAV
C028	\\HIGH STEP\BRIDGE4.WAV
C029	\\HIGH STEP\CHORUS.WAV
C030	\\HIGH STEP\CHORUS2.WAV
C031	\\HIGH STEP\END CRASH.WAV
C032	\\HIGH STEP\VERSE.WAV
C033	\\HIGH STEP\VERSE2.WAV
C034	\\ROCK HEAD\DR & PERC\ALT BEAT.WAV
C035	\\ROCK HEAD\DR & PERC\BRIDGE.WAV
C036	\\ROCK HEAD\DR & PERC\CHORUS.WAV
C037	\\ROCK HEAD\DR & PERC\END CRSH.WAV
C038	\\ROCK HEAD\DR & PERC\FILL.WAV
C039	\\ROCK HEAD\DR & PERC\FILL2.WAV
C040	\\ROCK HEAD\DR & PERC\INTRO.WAV
C041	\\ROCK HEAD\DR & PERC\TOM BEAT.WAV
C042	\\ROCK HEAD\DR & PERC\VERSE.WAV
C043	\\ROCK HEAD\DRUMS\ALT BEAT.WAV
C044	\\ROCK HEAD\DRUMS\BRIDGE.WAV
C045	\\ROCK HEAD\DRUMS\CHORUS.WAV
C046	\\ROCK HEAD\DRUMS\END CRSH.WAV
C047	\\ROCK HEAD\DRUMS\FILL.WAV
C048	\\ROCK HEAD\DRUMS\FILL2.WAV
C049	\\ROCK HEAD\DRUMS\INTRO.WAV
C050	\\ROCK HEAD\DRUMS\TOM BEAT.WAV

No.	WAV File Name
D001	\\ROCK HEAD\DRUMS\VERSE.WAV
D002	\\ROCK HEAD\PERC\LOOP1 END.WAV
D003	\\ROCK HEAD\PERC\LOOP1.WAV
D004	\\ROCK HEAD\PERC\LOOP2 END.WAV
D005	\\ROCK HEAD\PERC\LOOP2.WAV
D006	\\ROCK HEAD\PERC\LOOP3 END.WAV
D007	\\ROCK HEAD\PERC\LOOP3.WAV
D008	\\ROCK HEAD\PERC\PERC END.WAV
D009	\\ROCK HEAD\PERC\PERC.WAV
D010	\\STRAIGHT UP\BREAK.WAV
D011	\\STRAIGHT UP\BRIDGE.WAV
D012	\\STRAIGHT UP\CHORUS.WAV
D013	\\STRAIGHT UP\END CRASH.WAV
D014	\\STRAIGHT UP\INTRO.WAV
D015	\\STRAIGHT UP\SOLO.WAV
D016	\\STRAIGHT UP\TOM BEAT.WAV
D017	\\STRAIGHT UP\TOM BEAT2.WAV
D018	\\STRAIGHT UP\VERSE.WAV
D019	\\STRAIGHT UP\VERSE2.WAV
D020	\\TURBULENT FILTH\100_138.WAV
D021	\\TURBULENT FILTH\100_224A.WAV
D022	\\TURBULENT FILTH\100_231A.WAV
D023	\\TURBULENT FILTH\100_421A.WAV
D024	\\TURBULENT FILTH\100_422C.WAV
D025	\\TURBULENT FILTH\120_138.WAV
D026	\\TURBULENT FILTH\120_224A.WAV
D027	\\TURBULENT FILTH\120_231A.WAV
D028	\\TURBULENT FILTH\120_421A.WAV
D029	\\TURBULENT FILTH\120_422C.WAV
D030	\\TURBULENT FILTH\140_138.WAV
D031	\\TURBULENT FILTH\140_224A.WAV
D032	\\TURBULENT FILTH\140_231A.WAV
D033	\\TURBULENT FILTH\140_421A.WAV
D034	\\TURBULENT FILTH\140_422C.WAV
D035	\\YOUNG GUNS\BRIDGE.WAV
D036	\\YOUNG GUNS\CRASH.WAV
D037	\\YOUNG GUNS\ENDING.WAV
D038	\\YOUNG GUNS\TOM BEAT.WAV
D039	\\YOUNG GUNS\VERSE.WAV
D040	\\YOUNG GUNS\VERSE2.WAV

# Harmony Sequence Chord Note List

Chord types that enable chord conversion (26 types and N.C.) consist of the following notes.

The following shows chord types with the root C.

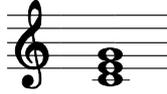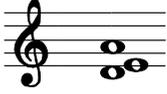---	(N.C)	6		mM7	
Maj		6(9)		m7	
M7		m6		m7b5	
M9		m6(9)		m9	
7		9		dim	
7b5		add9		sus4	
7(13)		madd9		7sus4	
* The 13th of the chord is not played.					
7b9		mM9		aug	
7#9		m		aug7	

\* Chords are automatically inverted such that each of the notes comprising the chord falls within one octave of the original solo vocal pitch.

\* As Harmony Sequence features three voices, it does not allow sounding of all of the original constituent notes in every chord.

# Troubleshooting

If the BR-1200CD does not function as you expect, please check the following points before assuming that a malfunction has occurred. If this does not resolve the problem, contact a nearby Roland service center or your dealer.

## Problems with the sound

### No sound

- **Is the power of the BR-1200CD and of the connected equipment turned on?**
- **Is the audio cable connected correctly?**
- **Are any audio cables broken?**
- **Has the volume of the connected amp or mixer been lowered?**
- **Has the master fader or headphone volume of the BR-1200CD been lowered?**
- **Was the heel end of the expression pedal all the way down?**
- **Are you attempting to play back a short phrase of less than 0.5 seconds? (Phrases of 0.5 seconds or less cannot be played.)**
- **Has the Mastering Tool Kit Auto Fade In/Out function been set to ON while the BR-1200CD is being used in Mastering mode?**

When the Auto Fade In/Out function is set to ON, sounds may not be played, depending on the location of the playback.

### The volume level of the instrument connected to INPUT/MIC or GUITAR BASS jack is too low.

- **Could you be using a connection cable that contains a resistor?**  
Use a connection cable that does not contain a resistor.

### A specific track cannot be heard

- **Has the track volume been lowered?**  
In some cases the actual volume level may not match the position of the fader, for example when the scene has been switched. If so, move the fader up and down so that the volume level will match the fader position.
- **Is the V-Track setting for a different V-Track?**
- **Has the track type been set correctly?**
- **Has the track been muted? (The REC TRACK indicator will be blinking in green.)**
- **Is the BR-1200CD in Mastering mode?**  
In Mastering mode, sounds are output only from Tracks 11/12.

### The input cannot be heard

- **Has the sound source been correctly connected to either an input jack or connector?**  
If a connection is made to both the 1/4" phone mono jack and the XLR connector, priority will be given to the 1/4" phone mono jack.  
The INPUT 1/MIC 1 jack (or XLR connector) and the GUITAR/BASS jack share the same internal circuitry, and when a connection has been made to both of these input jacks, the GUITAR/BASS jack will be selected automatically.
- **Did you adjust the SENS knob?**
- **Has INPUT SELECT been muted? (The INPUT SELECT indicator will be dark.)**
- **Has the INPUT LEVEL knob been set to "MIN"?**
- **If you are using a condenser microphone, is phantom power turned on?**
- **Is the BR-1200CD in Mastering mode?**  
Input-source sounds are not output in Mastering mode. Use with the BR-1200CD switched to Input mode.
- **Was the heel end of the expression pedal all the way down?**

### Can't use the expression pedal to control an effect

- **Is the minimum volume set to "0" or to an appropriate value? (p. 124)**
- **Is the effect (Foot Volume, Pitch Shifter, Wah, Vibratio) that you wish to control from the expression pedal turned on?**  
The expression pedal can control all of the above effects simultaneously.
- **Is the type (P.Shift Type, Wah Type) of the effect you wish to control set to "PEDAL" ?**

### Cannot record

- **Does the hard disk have insufficient remaining capacity?**
- **Has the recording mode (INPUT, BOUNCE, MASTERING) been selected correctly?**
- **Has the Scrub Playback function been turned on?**

### The recorded sound contains noise or distortion

- **Is the input sensitivity set appropriately?**

If the input sensitivity is too high, the recorded sound will be distorted. If it is too low, the input sound will be buried in noise. Adjust the SENS knob so that the level meter moves as much as possible without causing the PEAK indicator to light.
- **Are the effect settings appropriate?**

Using overdrive, distortion, or compression with the insert effects may increase noise and distortion.
- **Are the equalizer settings appropriate?**

Some equalizer settings can cause the sound to distort even though the PEAK indicator does not light. Readjust the equalizer.
- **Are the track output levels appropriate?**

If you hear noise or distortion after bouncing tracks, the output level of the tracks was too high.
- **Is a mic with high output impedance connected directly to the BR-1200CD?**

The BR-1200CD is designed with a wide margin of headroom. Also, since the MIC 1 and MIC 2 jacks are low impedance inputs, the recording level may be too low, depending on the response of some mics. In such cases, connect the mic via a mic preamp to the BR-1200CD, so that they can be boosted to line level before recording.

### Problems with the hard disk

#### Hard disk data was damaged

If hard disk data has been damaged, the following causes are possible. Please initialize the hard disk (using physical formatting) once again. (p. 285)

- **Was the power turned off while the disk drive was operating?**
- **Was a strong physical shock applied to the disk drive?**

#### Little available space remaining on the hard disk

- **Do you have numerous recorded songs and/or loop phrases stored on the hard disk?**
- **Is [SIMUL] or [LINE] selected for the INPUT SELECT, or are stereo tracks selected for the recording tracks?**

Recording with stereo tracks halves the remaining recording time, and this is indicated in the display.
- **Was the drive partitioned into multiple drives (partitions) when it was initialized?**

### Problems with the CD-R/RW drive

#### Cannot remove the CD-R/RW disc

- **Is the power turned on?**

The CD-R/RW disc cannot be removed unless the power is turned on.
- **Is a screen for reading from, or writing to CD-R/RW discs showing in the display?**

It is not possible to eject the disc when you're in a screen for reading/writing CD-R/RW discs. Press [EXIT] several times to return to the top screen, then press the EJECT button again.

#### Cannot read from/write to CD-R/RW discs

- **Is the BR-1200CD in a level position?**
- **Was a strong physical shock applied to the CD-R/RW drive?**
- **Is the disc correctly placed in the CD-R/RW drive?**
- **Are you using the right type of CD-R/RW disc?**
- **Are you using a CD-R disc that has already been written to, or a CD-RW disc that may be too old?**
- **Is the CD-R/RW drive being "force ejected?"**

Pressing a straightened paper clip or similar object into the "emergency eject hole" in the CD-R/RW drive's front side forces ejection of the CD-R/RW disc. However, the CD-R/RW drive may not operate correctly after this is done. Should this be the case, turn off the power, then turn it back on again.

## Synchronization problems

### Cannot synchronize

When using MTC to synchronize the BR-1200CD with a MIDI sequencer, the BR-1200CD must be the master device.

- Is the MIDI cable connected correctly?
- Is the MIDI cable broken?
- Has the sync generator been set to the desired synchronization method (MTC or MIDI Clock)? (p. 246)
- If you are synchronizing with MTC, has the other device been set to the same MTC type? (p. 246)
- Has the MIDI sequencer been set correctly?
- Is the MIDI sequencer ready to play back?
- Does the other device support the MMC commands of the BR-1200CD?

### Cannot record MIDI Clock (cannot use the sync track)

- Is the external MIDI sequencer set to transmit MIDI Clock/Start/Stop?

### Cannot control faders using MIDI

- Is the MIDI cable connecting the external MIDI sequencer connected correctly?
- Have you made the settings that enable the external MIDI sequencer to record and play back the fader information transmitted from the BR-1200CD?

Fader messages are transmitted and received using Control Change #7 (Volume). The external MIDI sequencer must be set so it is able to transmit and receive such MIDI messages.

## Problems with USB

### The message "Waiting..." does not turn off

- Is the USB cable properly connected?
- Is your computer's operating system compatible with the BR-1200CD?

Windows: Windows Me/2000 /XP

Macintosh: Mac OS 9.1.x, 9.2.x, OS X

## Other problems

### When the power is turned on, the previous data has not been saved correctly

It is possible that the power of the BR-1200CD was turned off without using the POWER switch. The lost data cannot be recovered.

# Error Messages

## Blank Disc!

**Cause:** Disc in the CD-R/RW drive contains no data.

**Action:** Load a CD-R/RW disc that has data written on it.

## Cannot Punch In for CD-R/RW!

**Cause:** You attempted to press [REC] after you had already pressed [PLAY] when directly bouncing tracks to a CD-R/RW disc (p. 87).

**Action:** To bounce tracks directly to a CD-R/RW disc, first press [REC] and then [PLAY].

## Cannot Select Same Track!

**Cause:** You attempted to select the same track more than once during Track Edit (p. 99–p. 109), WAV/AIFF Export (p. 263, p. 270), or another procedure.

**Action:** Select a different track.

## CD Full!

**Cause 1:** The CD-R/RW disc is full, and no more data can be written to it.

**Action 1:** Reduce the amount of data to be written, then try again.

**Cause 2:** When creating an audio CD, the total time of the tracks exceeds the capacity of the CD-R/RW disc.

**Action 2:** Reduce the number of songs to be written, then try again.

## CD Read Error!

**Cause:** An error occurred while reading data from the CD-R/RW disc.

**Action 1:** This may be due to a low-quality or dated disc. Try using a new CD-R/RW disc.

**Action 2:** The CD-R/RW drive's pickup may be dirty. Try cleaning the pickup (p. 8).

## CD Write Error!

**Cause:** An error occurred while writing data to the CD-R/RW disc.

**Action 1:** This may be due to a low-quality or dated disc. Try using a new CD-R/RW disc.

**Action 2:** The CD-R/RW drive's pickup may be dirty. Try cleaning the pickup (p. 8).

## Clock Error!

**Cause:** Reception of the MIDI timing clock was interrupted during recording of the Sync Track.

**Action:** Make sure that the MIDI cable is connected correctly and check whether the external MIDI device was turned off during the recording process.

## Data Too Large!

**Cause 1:** You attempted to import an SMF exceeding 250 KB.

**Action 1:** Prepare the SMF to be loaded so that it is no more than 250 KB.

**Cause 2:** You attempted to create a loop phrase using waveform data thirty minutes or longer.

**Action 2:** Use waveform data less than thirty minutes long.

## Data Too Short!

**Cause 1:** You attempted to load a waveform file lasting 0.5 seconds or less.

**Action 1:** Prepare the waveform file so that it is longer than 0.5 seconds.

**Cause 2:** You attempted to write an audio CD with a track that is less than four seconds in length.

**Action 2:** Prepare tracks being written to audio CDs so that they are at least four seconds long.

**Cause 3:** You attempted to create a loop phrase using waveform data less than 0.5 seconds in length.

**Action 3:** Use waveform data that is at least 0.5 seconds long.

## Data Type Not Supported!

**Cause:** You are attempting to load a file or disc in an incompatible format.

**Action:** Use a file in a compatible format.

## Disc Not Ready!

**Cause:** There is no CD-R/RW disc in the drive.

**Action:** Place a CD-R/RW disc in the drive.

## Drive Busy!

**Cause:** The data on the hard disk has become fragmented, causing delays in reading and writing data.

**Action 1:** Reduce the number of tracks that are played back simultaneously. Use track bouncing (or other means) to combine tracks, or erase or cut data from tracks which you do not need to play back, and then try the playback again.

**Action 2:** Reduce the number of tracks that are being recorded simultaneously.

**Action 3:** If using the drum and bass patterns or loop phrases, press the Track button, causing the button's indicator to go out.

**Action 4:** First, back up the data on the hard disk to a CD-R/RW disc (p. 230), then after initializing the hard disk (p. 285), recover the data from the CD-R/RW disc (p. 231).

\* In cases of unfavorable disk access conditions, such as when track editing, punch-in recording, etc. is used to connect phrases (musical data) of several seconds.

**Event Memory Full!**

**Cause:** The BR-1200CD has used up all the events that can be handled by one song.

**Action:** Perform the Song Optimize operation. (p. 112)

**Finalized Disc**

**Cause:** Data has already been written to the CD-R/RW disc, and the data has been finalized.

**Action:** Place a CD-R/RW disc that has not been finalized in the drive.

**HDD Damaged! Can't Access HDD.**

**Cause:** Data could not be read from or written to the hard disk.

**Action:** There is a possibility that the hard disk has been damaged. Shut down the BR-1200CD as instructed and send it for repair.

**HDD Full!**

**Cause:** There is insufficient free space on the hard disk.

**Action 1:** Erase unneeded data.

**Action 2:** Perform the Song Optimize operation. (p. 112)

**HDD Read Error!**

**Cause:** An error occurred while reading data from the hard disk.

**Action:** The hard disk must be initialized (p. 285).

**HDD Write Error!**

**Cause:** An error occurred while writing data to the hard disk.

**Action:** The hard disk must be initialized. Also, the song data you had been attempting to save will be lost.

**Insert Disc #\*\*\*!**

**Cause:** During recovery of backup data located on multiple CD-R/RW discs, the disc of the requested number was not placed in the drive.

**Action:** Place the disc with the requested number in the drive.

**Lack of Events!**

**Cause:** It is not possible to execute Undo or Redo if fewer than 200 events remain.

**Action:** Perform the Song Optimize operation. (p. 112)

**Marker Memory Full!**

**Cause:** The BR-1200CD has used up all the marker memory (100 markers) that can be handled by one song.

**Action:** Delete unneeded markers.

**Medium Error!**

**Cause:** There is a problem with the CD-R/RW disc or hard disk. Alternatively, the disc on the CD-R/RW drive is unreadable.

**Action 1:** Confirm that the correct type of disc is placed in the CD-R/RW drive.

**Action 2:** Use a new CD-R/RW disc.

**Action 3:** Use the following procedure to initialize the hard disk.

**MIDI Error!**

**Cause 1:** Active Sensing is on, and it has detected that no MIDI message transmissions have taken place for more than approximately 400 ms.

**Action 1:** Check the external MIDI device connected to MIDI IN to make sure it is turned on, and that the settings are correct. Also, confirm that the MIDI cable has not been disconnected.

**Cause 2:** Processing has been overloaded due to high volumes of MIDI messages received from the external MIDI device.

**Action 2:** Reduce the amount of MIDI messages transmitted by the external MIDI device.

**No Data!**

**Cause 1:** You attempted to modify marker or scene data when none existed.

**Cause 2:** You attempted to UNDO an action on a track that does not contain any data.

**Cause 3:** You attempted to create an audio CD with no data in the tracks or songs, or you attempted to export a WAV or AIFF file.

**Action:** First create data.

**No File!**

**Cause 1:** During a USB import operation, no file was copied from the PC to the USB folder.

**Action 1:** Copy the file from the PC to the USB folder.

**Cause 2:** The copied file is not of WAV or AIFF format.

**Action 2:** Copy a file of WAV or AIFF format.

**Not Blank Disc!**

**Cause:** The CD-R/RW disc already has data written to it.

**Action:** Place a CD-R/RW disc with no data written to it (a blank disc) in the CD-R/RW drive.

If using a CD-RW disc, you can erase the data on the disc in order to create a blank disc (p. 237).

### Not CD-RW Disc!

**Cause:** The disc is not a CD-R/RW disc, so the data cannot be erased.

**Action:** Use a CD-R/RW disc.

### Pattern Memory Full!

**Cause:** The total number of sounds in the drum and bass patterns has exceeded 10,000.

**Action:** Delete unneeded patterns (p. 169, p. 182).

### Protected Song!

**Cause:** Since Song Protect is ON, the operation cannot be executed.

**Action:** Turn Song Protect Off. (p. 113)

### Select Track!

**Cause:** You attempted to execute a track editing operation without specifying the track to which the operation will apply.

**Action:** Specify the track, and then execute the editing operation.

### Select Data!

**Cause:** The data or files upon which the operation is to be performed have not yet been specified.

**Action:** Select data or files and repeat the operation.

### Set Location!

**Cause:** No target data or file has been selected yet.

**Action:** Select the data before continuing.

### Stop Recorder!

**Cause:** The operation you attempted cannot be done while the recorder is running (playing or recording).

**Action:** Press [STOP] to stop playback or recording.

### Sync Track Full!

**Cause:** All of the remaining memory was used up during the Sync Track recording process.

**Action:** No further recording will be possible. Reduce the recording time and repeat the recording process.

### Too Many Songs!

**Cause 1:** The song creation operation would result in the number of songs exceeding 999.

**Action 1:** Erase unneeded songs (p. 111) and repeat the song creation process.

**Cause 2:** The import operation would result in the number of songs exceeding 999.

**Action 2:** Erase unneeded songs (p. 111) and repeat the song import operation.

### Too Long Name!

**Cause:** The names of files and folders on the current CD-R/RW disc are too long.

**Action:** Add up the lengths of all file names and folder names, and then modify these names to reduce the total number of characters to 236 or less.

### Too Many Tracks!

**Cause:** You attempted to write more than 99 tracks to the audio CD being created.

**Action:** Reduce the number of tracks you are writing to 99 or fewer tracks.

### Wrong Disc!

**Cause:** A disc other than the required CD-R/RW disc is placed in the drive.

**Action:** Place a CD-R/RW disc in the drive.

## 1. Receive data

### ■ Channel Voice Messages

#### ● Note off

Status	2nd byte	3rd byte
8nH	kkH	vvH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 kk = Note number: 00H - 7FH (0 - 127)  
 vv = Note off velocity: 00H - 7FH (0 - 127)

#### ● Note on

Status	2nd byte	3rd byte
9nH	kkH	vvH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 kk = Note number: 00H - 7FH (0 - 127)  
 vv = Note on velocity: 01H - 7FH (1 - 127)

- \* Received via drums MIDI channel when the MIDI parameter "Drums Ch." is set to 1-16; plays drum sound.
- \* Received via bass MIDI channel when the MIDI parameter "Bass Ch." is set to 1-16; plays bass sound.
- \* Drum sounds correspond to note numbers as follows.

Drum name	Note number
Hi-Q	D#1 (27)
Stick	G 1 (31)
Metronome (click)	A 1 (33)
Metronome (bell)	A#1 (34)
Kick 2	B 1 (35)
Kick 1	C 2 (36)
Snare 1	D 2 (38)
Snare 2	E 2 (40)
Tom 1	F 2 (41)
Closed hi-hat	F#2 (42)
Tom 2	A 2 (45)
Open hi-hat	A#2 (46)
Tom 3	C 3 (48)
Crash cymbal	C#3 (49)
Tom 4	D 3 (50)
Ride cymbal	D#3 (51)
Cow bell	G#3 (56)
Claves	D#5 (75)

#### ● Control Change

##### ○ Bank Select (Controller number 0, 32)

Status	2nd byte	3rd byte
BnH	00H	00H
BnH	20H	llH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 mm,ll = Bank number: 00 00H - 7F 7FH (bank.1 - bank.16384)

- \* When the MIDI parameter Effects P.C. is set to PC+BANK, this is transmitted via the MIDI channel selected in the Effects Ch. setting when insert effects patches are switched.

##### ○ Volume (Controller number 7)

Status	2nd byte	3rd byte
BnH	07H	vvH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 vv = Volume: 00H - 7FH (0 - 127)

- \* Received via each track's MIDI channel when the MIDI parameter "MIDI Fader" is set to ON; controls the track volume.

##### ○ Expression (Controller number 11)

Status	2nd byte	3rd byte
BnH	0BH	vvH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 vv = Expression: 00H - 7FH (0 - 127)

- \* Received via the MIDI channel set for the EXP PEDAL when the MIDI parameter "MIDI Fader" is set to ON; controls the effects in the same manner as operating the EXP PEDAL.

##### ● Program Change

Status	2nd byte
CnH	ppH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 pp = Program number: 00H - 7FH (prog. 1 - prog. 128)

- \* When the MIDI parameter Effects P.C. is set to PC ONLY or PC+BANK, this is received via the MIDI channel selected in the Effects Channel setting and is used to switch the insert effects.

- \* Bank Select and Program numbers correspond to the insert effect patch banks and numbers as shown below.

Bank Select		Program Number	Patch	
MSB	LSB		Bank	Number
00H	00H	00H-77H	GUITAR	P001-P120
	01H	00H-31H	MIC	P001-P050
	03H	00H-31H	STEREO	P001-P050
	04H	00H-31H	SIMUL	P001-P050
01H	00H	00H-77H	GUITAR	U001-U120
	01H	00H-31H	MIC	U001-U050
	03H	00H-31H	STEREO	U001-U050
	04H	00H-31H	SIMUL	U001-U050
02H	00H	00H-77H	GUITAR	S001-S120
	01H	00H-31H	MIC	S001-S050
	03H	00H-31H	STEREO	S001-S050
	04H	00H-31H	SIMUL	S001-S050

### ■ Channel Mode Messages

##### ○ All Sound OFF (Controller number 120)

Status	2nd byte	3rd byte
BnH	78H	00H

n = MIDI channel number: 0H - FH (ch.1 - ch.16)

- \* Received via drums MIDI channel when the MIDI parameter "Drums Ch." is set to 1-16; mutes the playing drum sounds.
- \* Received via bass MIDI channel when the MIDI parameter "Bass Ch." is set to 1-16; mutes the playing drum sounds.

##### ○ Reset All Controllers (Controller number 121)

Status	2nd byte	3rd byte
BnH	79H	00H

n = MIDI channel number: 0H - FH (ch.1 - ch.16)

- \* Received via the MIDI channel set for the EXP PEDAL when the MIDI parameter "MIDI Fader" is set to ON.

- \* When this message is received, the EXP PEDAL is reset to 127.

##### ○ All Note Off (Control number 123)

Status	2nd byte	3rd byte
BnH	7BH	00H

n = MIDI channel number: 0H - FH (ch.1 - ch.16)

- \* Received via bass MIDI channel when the MIDI parameter "Bass Ch." is set to 1-16; turns the playing bass note off.

# MIDI Implementation

## ■ System Realtime Message

### ● Timing Clock

Status  
F8H

\* Received during creation of sync tracks in the Sync Track screen.

### ● Start

Status  
FAH

\* Received when creation of the sync track begins in the Sync Track screen.

### ● Stop

Status  
FCH

\* Received when creation of the sync track is finished in the Sync Track screen.

### ● Active Sensing

Status  
FEH

\* When Active Sensing is received, the unit will begin monitoring the intervals of all further messages. While monitoring, if the interval between messages exceeds approximately 400 ms, the same processing will be carried out as when Reset All Controllers is received, and message interval monitoring will be halted.

## ■ System Exclusive Message

Status	Data byte	Status
F0H	iiH,ddH,.....,eeH	F7H

F0H: System Exclusive Message status  
 ii = ID number: an ID number (manufacturer ID) to indicate the manufacturer whose Exclusive message this is. Roland's manufacturer ID is 41H. ID numbers 7EH and 7FH are extensions of the MIDI standard; Universal Non-realtime Messages (7EH) and Universal Realtime Messages (7FH).  
 dd,....,ee = data: 00H - 7FH (0 - 127)  
 F7H: EOX (End Of Exclusive)

## ■ Universal Non-realtime System Exclusive Messages

### ● Identity Request Message

Status	Data byte	Status
F0H	7EH,dev,06H,01H	F7H

Byte	Explanation
F0H	Exclusive status
7EH	ID number (Universal Non-realtime Message)
dev	Device ID (dev: 10H - 1FH, 7FH)
06H	Sub ID#1 (General Information)
01H	Sub ID#2 (Identity Request)
F7H	EOX (End Of Exclusive)

\* Only a device ID of 7FH or message matching the BR-1200CD's device ID is received.  
 \* When this message is received, Identity Reply message (p. 346) will be transmitted.

#### About Device ID

Exclusive messages are not assigned to any particular MIDI channel. Instead, they have their own special control parameter called device ID. The Roland exclusive messages use device IDs to specify various devices.

#### How to set the device ID:

- Press [UTILITY], move the cursor to [MIDI], then press [ENTER/YES]. The MIDI settings screen appears.
- Move the cursor to "Device ID," then rotate the TIME/VALUE dial to set the device ID. The Device ID can be set to any number from 17 to 32. It was set to 17 at the factory.

## 2. Data Transmission

### ■ Channel Voice Messages

#### ● Note off

Status	2nd byte	3rd byte
8nH	kkH	vvH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 kk = Note number: 00H - 7FH (0 - 127)  
 vv = Note off velocity: 00H - 7FH (0 - 127)

#### ● Note on

Status	2nd byte	3rd byte
9nH	kkH	vvH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 kk = Note number: 00H - 7FH (0 - 127)  
 vv = Note on velocity: 01H - 7FH (1 - 127)

- \* Transmitted by drum pattern using the selected MIDI channel number when the MIDI parameter "Drums Ch." is set to 1-16.
- \* Transmitted by bass pattern using the selected MIDI channel number when the MIDI parameter "Bass Ch." is set to 1-16.
- \* Transmitted according to the content of the SMF during playback of SMFs.
- \* Notes sounded by the drum pattern correspond to note numbers as follows.

Rhythm Guide Tone	Note Number
Hi-Q	D#1 (27)
Stick	G 1 (31)
Metronome (click)	A 1 (33)
Metronome (bell)	A#1 (34)
Kick 2	B 1 (35)
Kick 1	C 2 (36)
Snare 1	D 2 (38)
Snare 2	E 2 (40)
Tom 1	F 2 (41)
Closed hi-hat	F#2 (42)
Tom 2	A 2 (45)
Open hi-hat	A#2 (46)
Tom 3	C3 (48)
Crash cymbal	C#3 (49)
Tom 4	D 3 (50)
Ride cymbal	D#3 (51)
Cow bell	G#3 (56)
Claves	D#5 (75)

#### ● Polyphonic Key Pressure

Status	2nd byte	3rd byte
AnH	kkH	vvH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 kk = note number: 00H - 7FH (0 - 127)  
 vv = Polyphonic Key Pressure: 00H - 7FH (0 - 127)

\* Transmitted according to the content of the SMF during playback of SMFs.

#### ● Control Change

\* Transmitted according to the content of the SMF during playback of SMFs.

#### ○ Bank Select (Controller number 0, 32)

Status	2nd byte	3rd byte
BnH	00H	mmH
BnH	20H	llH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 mm, ll = Bank number: 00 00H - 7F 7FH (bank.1 - bank.16384)

- \* When the MIDI parameter Effects P.C. is set to PC+BANK, this is transmitted via the MIDI channel selected in the Effects Ch. setting when insert effects patches are switched.
- \* For the correspondence between Bank Select/Program numbers and the insert effect patch banks/numbers, see p. 343.

#### ○ Volume (Controller number 7)

Status	2nd byte	3rd byte
BnH	07H	vvH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 vv = Volume: 00H - 7FH (0 - 127)

\* When the MIDI parameter "MIDI Fader" is set to ON, this is transmitted via the MIDI channel set for a track when the corresponding track fader is moved.

## ○ Expression (Controller number 11)

Status	2nd byte	3rd byte
BnH	0BH	vvH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 vv = Expression: 00H - 7FH (0 - 127)

\* When the MIDI parameter "MIDI Fader" is set to ON, this is transmitted via the MIDI channel set for the EXP PEDAL when the EXP PEDAL is operated.

## ● Program Change

Status	2nd byte
CnH	ppH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 pp = Program number: 00H - 7FH (prog.1 - prog.128)

- \* Transmitted according to the content of the SMF during playback of SMFs.
- \* When the MIDI parameter Effects P.C. is set to PC ONLY or PC+BANK, this is transmitted via the MIDI channel selected in the Effects Channel setting when insert effects patches are switched.
- \* For the correspondence between Bank Select/Program numbers and the insert effect patch banks/numbers, see p. 343.

## ● Channel Pressure

Status	2nd byte
DnH	vvH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 vv = Channel Pressure: 00H - 7FH (0 - 127)

\* Transmitted according to the content of the SMF during playback of SMFs.

## ● Pitch Bend Change

Status	2nd byte	3rd byte
EnH	llH	mmH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 mm, ll = Pitch Bend value: 00 00H - 40 00H - 7F 7FH (- 8192 - 0 - +8191)

\* Transmitted according to the content of the SMF during playback of SMFs.

## ■ Channel Mode Messages

\* Transmitted according to the content of the SMF during playback of SMFs.

## ● All Sound Off (Controller number 120)

Status	2nd byte	3rd byte
BnH	78H	00H

n = MIDI channel number: 0H - FH (ch.1 - ch.16)

## ● Reset All Controllers (Controller number 121)

Status	2nd byte	3rd byte
BnH	79H	00H

n = MIDI channel number: 0H - FH (ch.1 - ch.16)

## ● All Notes Off (Controller number 123)

Status	2nd byte	3rd byte
BnH	7BH	00H

n = MIDI channel number: 0H - FH (ch.1 - ch.16)

## ● Omni Off (Controller number 124)

Status	2nd byte	3rd byte
BnH	7CH	00H

n = MIDI channel number: 0H - FH (ch.1 - ch.16)

## ● Omni On (Controller number 125)

Status	2nd byte	3rd byte
BnH	7DH	00H

n = MIDI channel number: 0H - FH (ch.1 - ch.16)

## ● Mono (Controller number 126)

Status	2nd byte	3rd byte
BnH	7EH	mmH

n = MIDI channel number: 0H - FH (ch.1 - ch.16)  
 mm = mono number: 00H - 10H (0 - 16)

## ● Poly (Controller number 127)

Status	2nd byte	3rd byte
BnH	7FH	00H

n = MIDI channel number: 0H - FH (ch.1 - 16)

## ■ System Common Messages

### ● Quarter Frame Messages

Status	Second
FIH	mmH (= 0nnndddd)

nnn = Message type: 0 = Frame count LS nibble  
 1 = Frame count MS nibble  
 2 = Seconds count LS nibble  
 3 = Seconds count MS nibble  
 4 = Minutes count LS nibble  
 5 = Minutes count MS nibble  
 6 = Hours count LS nibble  
 7 = Hours count MS nibble

dddd = 4 bit nibble data: 0H - FH (0 - 15)

\* If the Sync parameter "Sync Gen." is set to "MTC," quarter frame messages of the time code type specified by "MTC Type" will be transmitted when the BR-1200CD is running (recording or playing). The transmitted time counts are summed to "SMPTE (MTC) Offset Time" as the song top is "00:00:00:00".

Bit Field is assigned as follows.

Frame Count	xxxxxyyy
xxx	Reserved (000)
yyyyy	Frame No. (0-29)

Seconds Count	xyyyyyyy
xx	Reserved (00)
yyyyyy	Seconds (0-59)

Minutes Count	xyyyyyyy
xx	Reserved (00)
yyyyyy	Minutes (0-59)

Hours Count	xyzzzzzz
x	Reserved (0)
yy	Time Code Type

\* The time code types defined by the MIDI specification correspond to the BR-1200CD Sync parameter "MTC Type" as follows.

<u>MIDI specification setting</u>	<u>"MTC Type" setting</u>
0 = 24 Frames / Sec	24
1 = 25 Frames / Sec	25
2 = 30 Frames / Sec (Drop Frame)	29D
3 = 30 Frames / Sec (Non Drop Frame)	29N or 30
zzzzz	Hours

### ● Song Position Pointer

Status	2nd byte	3rd byte
F2H	mmH	nnH

mm, nn=Song position point: 00H 00H - 7FH 7FH

\* The current position is transmitted by the Song Position Pointer Message when the BR-1200CD is stopped, or the locate operation has been performed, if the SYNC parameter "Sync Gen." is set to "MIDI CLOCK."

# MIDI Implementation

## ■ System Realtime Messages

### ● Timing Clock

Status  
F8H

\* Transmitted when "Sync Gen." is "MIDI CLOCK" in the SYNC parameter.

### ● Start

Status  
FAH

\* Transmitted when "Sync Gen." is "MIDI CLOCK" in the SYNC parameter.

### ● Continue

Status  
FBH

\* Transmitted when "Sync Gen." is "MIDI CLOCK" in the SYNC parameter.

### ● Stop

Status  
FCH

\* Transmitted when "Sync Gen." is "MIDI CLOCK" in the SYNC parameter.

### ● Active Sensing

Status  
FEH

\* This is transmitted at intervals of approximately 200 msec.

## ■ System Exclusive Messages

### ● Universal System Exclusive Message

#### ○ Identity Reply Message

\* Receiving Identity Request Message, the BR-1200CD send this message.

<u>Status</u>	<u>Data byte</u>	<u>Status</u>
F0H	7EH, dev, 06H, 02H, 41H, 71H, 01H 00H, 00H, 00H, 00H, 00H, 00H	F7H
<u>Byte</u>	<u>Remarks</u>	
F0H	Exclusive status	
7EH	ID number (Universal Non-realtime Message)	
dev	Device ID (dev: 10H - 1FH)	
06H	Sub ID#1 (General Information)	
02H	Sub ID#2 (Identity Reply)	
41H	ID number (Roland)	
0AH 02H	Device family code	
00H 00H	Device family number code	
00H 00H 00H 00H	Software revision level	
F7H	EOX (End of Exclusive)	

For instructions on setting the device ID, refer to "How to set the device ID:" (p. 344).

#### ○ MIDI Machine Control Command

<u>Status</u>	<u>Data byte</u>	<u>Status</u>
F0H	7FH, Dev, 06H, aaH, ..., bbH	F7H
<u>Byte</u>	<u>Remarks</u>	
F0H	Exclusive Status	
7FH	Universal System Exclusive Realtime Header	
Dev	Device ID (7FH)	
06H	MMC command message	
aaH	command	
:	:	
bbH	command	
F7H	EOX (End of Exclusive)	

#### ○ STOP (MCS)

<u>Status</u>	<u>Data byte</u>	<u>Status</u>
F0H	7FH, Dev, 06H, 01H	F7H
<u>Byte</u>	<u>Remarks</u>	
F0H	Exclusive status	
7FH	Universal System Exclusive Realtime Header	
Dev	Device ID (7FH)	
06H	MMC command message	
01H	STOP (MCS)	
F7H	EOX (End of Exclusive)	

\* If the transport switch [STOP] was pressed, the BR-1200CD transmits this message.

#### ○ DEFERRED PLAY (MCS)

<u>Status</u>	<u>Data byte</u>	<u>Status</u>
F0H	7FH, Dev, 06H, 03H	F7H
<u>Byte</u>	<u>Remarks</u>	
F0H	Exclusive status	
7FH	Universal System Exclusive Realtime Header	
Dev	Device ID (7FH)	
06H	MMC command message	
03H	DEFERRED PLAY (MCS)	
F7H	EOX (End of Exclusive)	

\* If the transport switch [PLAY] was pressed, the BR-1200CD transmits this message.

#### ○ RECORD STROBE

<u>Status</u>	<u>Data byte</u>	<u>Status</u>
F0H	7FH, Dev, 06H, 06H	F7H
<u>Byte</u>	<u>Remarks</u>	
F0H	Exclusive status	
7FH	Universal System Exclusive Realtime Header	
Dev	Device ID (7FH)	
06H	MMC command message	
06H	RECORD STROBE	
F7H	EOX (End of Exclusive)	

\* Transmitted when recording to the audio tracks begins.

#### ○ RECORD EXIT

<u>Status</u>	<u>Data byte</u>	<u>Status</u>
F0H	7FH, Dev, 06H, 07H	F7H
<u>Byte</u>	<u>Remarks</u>	
F0H	Exclusive status	
7FH	Universal System Exclusive Realtime Header	
Dev	Device ID (7FH)	
06H	MMC command message	
07H	RECORD EXIT	
F7H	EOX (End of Exclusive)	

\* Transmitted when recording to the audio tracks ends.

#### ○ MMC RESET

<u>Status</u>	<u>Data byte</u>	<u>Status</u>
F0H	7FH, Dev, 06H, 0DH	F7H
<u>Byte</u>	<u>Remarks</u>	
F0H	Exclusive status	
7FH	Universal System Exclusive Realtime Header	
Dev	Device ID (7FH)	
06H	MMC command message	
0DH	MMC RESET	
F7H	EOX (End of Exclusive)	

\* When powered on the BR-1200CD transmits this message.

## ○LOCATE [MCP]

Format2—LOCATE [TARGET]

Status	Data byte	Status
F0H	7FH, Dev, 06H, 44H, 06H, 01H, hrH, mnH, scH, frH, ffH	F7H

Byte	Remarks
F0H	Exclusive status
7FH	Universal System Exclusive Realtime Header
Dev	Device ID (7FH)
06H	MMC command message
44H	LOCATE (MCP)
06H	Byte count
01H	"TARGET" sub-Command
hrH, mnH, scH, frH, ffH	Standard Time Specification with subframes
F7H	EOX (End of Exclusive)

\* If the efficient Maker of the locate switch is pressed or when moved, the BR-1200CD transmits this message.

## ●MIDI Time Code Command

### ○Full Message

Basic operation of quarter frame messages will be handled.

Status	Data Byte	Status
F0H	7FH, Dev, 01H, 01H, hrH, mnH, scH, frH	F7H

Byte	Remarks
F0H	Exclusive status
7FH	Realtime Universal System Exclusive Header
Dev	Device ID (7FH)
01H	sub-ID #1 (MIDI Time code)
01H	sub-ID #2 (Full message)
hrH	hours and type: 0 yy zzzzz
yy	type: 00 = 24 Flame/sec 01 = 25 Flame/sec 10 = 30 Flame/sec (Drop Format) 11 = 30 Flame/sec (Non Drop Format)
zzzzz:	Hours (00 - 23)
mnH	Minutes (00 - 59)
scH	Seconds (00 - 59)
frH	Frames (00 - 29)
F7H	EOX (End of Exclusive)

\* This message is transmitted when the song position moves.

## 3. Supplementary material

### ●Decimal/Hexadecimal table

(hexadecimal values are indicated by a following "H")

MIDI uses 7-bit hexadecimal values to indicate data values and the address and size of exclusive messages. The following table shows the correspondence between decimal and hexadecimal numbers.

D	H	D	H	D	H	D	H
0	00H	32	20H	64	40H	96	60H
1	01H	33	21H	65	41H	97	61H
2	02H	34	22H	66	42H	98	62H
3	03H	35	23H	67	43H	99	63H
4	04H	36	24H	68	44H	100	64H
5	05H	37	25H	69	45H	101	65H
6	06H	38	26H	70	46H	102	66H
7	07H	39	27H	71	47H	103	67H
8	08H	40	28H	72	48H	104	68H
9	09H	41	29H	73	49H	105	69H
10	0AH	42	2AH	74	4AH	106	6AH
11	0BH	43	2BH	75	4BH	107	6BH
12	0CH	44	2CH	76	4CH	108	6CH
13	0DH	45	2DH	77	4DH	109	6DH
14	0EH	46	2EH	78	4EH	110	6EH
15	0FH	47	2FH	79	4FH	111	6FH
16	10H	48	30H	80	50H	112	70H
17	11H	49	31H	81	51H	113	71H
18	12H	50	32H	82	52H	114	72H
19	13H	51	33H	83	53H	115	73H
20	14H	52	34H	84	54H	116	74H
21	15H	53	35H	85	55H	117	75H
22	16H	54	36H	86	56H	118	76H
23	17H	55	37H	87	57H	119	77H
24	18H	56	38H	88	58H	120	78H
25	19H	57	39H	89	59H	121	79H
26	1AH	58	3AH	90	5AH	122	7AH
27	1BH	59	3BH	91	5BH	123	7BH
28	1CH	60	3CH	92	5CH	124	7CH
29	1DH	61	3DH	93	5DH	125	7DH
30	1EH	62	3EH	94	5EH	126	7EH
31	1FH	63	3FH	95	5FH	127	7FH

D: decimal

H: hexadecimal

Decimal expressions such as used for MIDI channel, Bank Select, and Program Change will be the value 1 greater than the decimal value given in the above table.

Since each MIDI byte carries 7 significant data bits, each byte can express a maximum of 128 different values. Data for which higher resolution is required must be transmitted using two or more bytes. For example a value indicated as a two-byte value of aa bb HH would have a value of  $aa \times 128 + bb$ .

For a signed number (+/-), 40H = -64, 00H = 0, and 3FH = +63. (i.e., the decimal equivalent will be 64 less than the decimal value given in the above table.) For a two-byte signed number, 40 00H = -8192, 00 00H = 0, and 3F 7FH = +8191.

Hexadecimal notation in two 4-bit units is used for data indicated as 'nibbled'. The nibbled two-byte value of 0a 0b H would be  $a \times 16 + b$ .

#### <Example1>

What is the decimal equivalent of 5AH?

From the above table, 5AH = 90.

#### <Example2>

What is the decimal equivalent of the 7-bit hexadecimal values 12 34H?

From the above table, 12H = 18 and 34H = 52

Thus,  $18 \times 128 + 52 = 2356$

#### <Example3>

What is the decimal equivalent of the nibbled expression 0A 03 09 0DH?

From the above table, 0AH = 10, 03H = 3, 09H = 9, 0DH = 13

Thus, the result is  $((10 \times 16 + 3) \times 16 + 9) \times 16 + 13 = 41885$

#### <Example4>

What is the nibbled equivalent of the decimal number 1258?

```

16 ) 1258
    ) 78...10
16 ) 4...14
    ) 0...4
    
```

From the above table, 0=00H, 4=04H, 14=0EH, 10=0AH

Thus the result is 00 04 0E 0AH

# MIDI Implementation Chart

Function...		Transmitted		Recognized		Remarks
Basic Channel	Default Changed	1-16 1-16		1-16 1-16		Memorized
Mode	Default Messages Altered	X X *****		X X X		
Note Number :	True Voice	0-127 *****		0-127 DRUMS: 27-75, BASS: 0-72		
Velocity	Note On Note Off	1-127 64 1-127	*1	1-127 X X		
After Touch	Key's Channel's	O O	*1 *1	X X		
Pitch Bend		O	*1	X		
Control Change	0, 32 0-119 7 11	O O O O	*1 *2 *2	O X O O	*2 *2	Bank Select Volume Expression
Program Change	: True Number	O 0-127	*1	O 0-119	*7	
System Exclusive		O		O	*3	
System Common	: Quarter Frame : Song Position : Song Select : Tune Request	O O X X	*4 *5	X X X X		
System Real Time	: Clock Start : Commands Continue Stop	O O O O	*5 *5 *5 *5	O O X O	*6 *6	
Aux Messages	: All Sound Off : Reset All Controllers : Local On/Off : All Notes Off : Omni On/Off : Mono/Poly : Active Sensing : System Reset	O O O O O O O X	*1 *1 *1 *1 *1	O O X O X X O X	*8 *2 *8	
Notes	* 1 When SMF playbacked, transmit in case of SMF. * 2 MIDI Folder = ON only * 3 Identity Request only * 4 Sync Gen. = MTC only * 5 Sync Gen. = MIDI CLOCK only * 6 Sync Track Recording only * 7 Effects Ch., Drums Ch., or Note Ch only * 8 Bass = ON and Bass Ch. only					

Mode 1 : OMNI ON, POLY  
Mode 3 : OMNI OFF, POLY

Mode 2 : OMNI ON, MONO  
Mode 4 : OMNI OFF, MONO

O : Yes  
X : No

# Specifications

## BR-1200CD: Digital Recording Studio

### ● Tracks

Track: 12      V-Track: 192 (16 V-Tracks per each Track)

\* *Up to 2 tracks can be recorded simultaneously, and up to 12 tracks can be played back simultaneously.*

### ● Maximum Useful Capacity/Recording Time

Internal Hard Disk:

40 G bytes (recording time; 120 hours) (conversion in one track)

\* *The above-listed recording time is approximate. Times may be slightly shorter depending on the number of songs and size of imported loop phrase that were created.*

\* *The above-listed recording time is the total for all the tracks that are used. If each of the twelve tracks contain an equal amount of data, the length of the resulting song will be approximately 1/12 of the above.*

### ● Signal Processing

AD Conversion:      24 bit, AF Method (Guitar/Bass)  
                            24 bit,  $\Delta\Sigma$  Modulation (VOCAL)  
                            24 bit,  $\Delta\Sigma$  Modulation (MULTI-TRACK)  
                            24 bit,  $\Delta\Sigma$  Modulation (STEREO TRACKS)

DA Conversion:    24 bit,  $\Delta\Sigma$  Modulation

Internal Processing: 24 bit (digital mixer section)

Recording Data:    16 bit linear

### ● Sample Rate

44.1 kHz

### ● Frequency Response

20 Hz–20 kHz (+1/-3 dB)

### ● Total Distortion

0.05% or less

(INPUT SENS: CENTER, 1 kHz at nominal output level)

### ● Nominal Input Level (Variable)

GUITAR/BASS jack:    -20 dBu

MIC 1, 2 jacks:        -40 dBu  
(TRS balanced/XLR)

LINE IN jacks:        -10 dBu

### ● Input Impedance

GUITAR/BASS jack:    1 M $\Omega$

MIC 1, 2 jacks:        12.5 k $\Omega$  (HOT-COLD)  
(TRS balanced/XLR)    6.5 k $\Omega$  (HOT-GND, COLD-GND)

LINE IN jack:         22 k $\Omega$

### ● Nominal Output Level

LINE OUT jacks:      -10 dBu

### ● Output Impedance

LINE OUT jack:        2 k $\Omega$

PHONES jack:         100  $\Omega$

### ● Recommended Load Impedance

LINE OUT jack:        20 k $\Omega$  or greater

PHONES jack:         8–50  $\Omega$

### ● Residual Noise Level

LINE OUT jack:        -87 dBu or less

(INPUT SELECT: GUITAR/BASS, input terminated with 1 k $\Omega$ ,  
INPUT SENS: CENTER, IHF-A, typ.)

### ● Interface

DIGITAL OUT:         S/PDIF 16–24 bit (optical type)

USB connector (B type)

### ● Display

64 x 40 mm (Backlit LCD)

### ● Connectors

MIDI IN connector

MIDI OUT connector

USB connector

DIGITAL OUT connector (optical type)

FOOT SW jack (1/4 inch phone type)

EXP PEDAL jack (Stereo 1/4 inch phone type)

LINE OUT jacks (RCA Phono type)

LINE IN jacks (RCA Phono type)

MIC 1, 2 jacks (TRS balanced/XLR)

PHONES jack (Stereo 1/4 inch phone type)

GUITAR/BASS jack (1/4 inch phone type)

## Specifications

### ● Power Supply

DC 12 V; Supply AC Adaptor (Roland PSB-3U)

### ● Power Consumption

3.0 A

### ● Dimensions

478 (W) x 297 (D) x 95 (H) mm

18-7/8 (W) x 11-3/4 (D) x 3-3/4 (H) inches

### ● Weight

4.1 kg / 9 lbs 1 oz (Excluding AC Adaptor)

### ● Accessories

AC Adaptor: PSB-3U

Owner's Manual

Roland Service (information sheet)

CD-ROM "DISCRETE DRUMS"

### ● Options

Expression Pedal: EV-5 (Roland)

Foot Volume/Expression: FV-300L

Foot Switch: FS-5U

Pedal Switch: DP-2 (Roland)

\*  $0\text{ dBu} = 0.775\text{ Vrms}$

### NOTE

In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

# Index

## Symbols

*TMP	119, 138, 144, 150, 160, 174, 188, 199
*TMP(CURRENT)	122–123, 140, 144–145, 150
+	100, 102, 105, 108, 205, 233
=>CHORD	214
=>COPY	168, 182, 208
=>DELETE	169, 182, 208
=>FILL IN	214
=>PRM.	119, 133, 137, 143, 149

## Numerics

12 AUDIO TRACKS	49
12STAGE	305
1-PEDAL	306
1-VOICE	306
1x10"	298
1x12"	298
1x15"	299
1x18"	299
2-MONO	306
2-ST (2-stereo)	306
2x12"	298
2x15"	299
2x2 Chorus	288, 290, 295
3 Band Equalizer	294
3Band Equalizer	290
4 Band Equalizer	294
4 STAGE	305
4Band Equalizer	288–292
4Band Equalizer/Wah	289–291
4x10"	299
4x12"	298
5150DRV	298
60S FUZ	297
7STRING	310
8 STAGE	305
8x10"	299
8x12"	298

## A

A<=>a	122, 168, 181, 193, 207
ABSOLUTE TIME	248
AC	307–308
ac	308
AC adaptor	36
ACC	165, 178–179
Accent	178
Access indicator	26
ACOUSTIC GUITAR	289
Acoustic Guitar Simulator	288, 292–293
Acoustic Processor	289, 292–293
ACOUSTIC SIM	288
Adjusting reverb	126
AF method	20
AIFF	190, 234, 263, 270

AIFF file	233
AKGC3K	304
Algorithm	118, 288
ALL	100, 102, 108–109, 189, 191, 195, 205, 229, 233
ALL icon	283
Amb Density	298
Amb HF Damp	298
Amb Level	298
Amb Pre-Dly	298
Amb Size	298
Ambience	298
AMERCAN	297
AMG	307–308
amg	308
Amp Type	307
ARR EDIT	202
ARR.MOD icon	206
ARRANGEMENT	229
Arrangement mode	156
ARRANGEMENT/PATTERN	156, 197
[ARRANGEMENT/PATTERN]	55–56, 58, 60
ARRANGEMENT/PATTERN button	23
AT.FADE	151–152
ATK	83
ATTACK	128
Attack	296, 300, 302, 317
Attack Time	296
AUDIO	23, 157, 171, 185
Audio CD import screen	239
Audio CD Menu screen	239
Audio CD Player screen	239
Audio CD screen	218
Audio CD Write screen	218–220, 223
AUDIO CD WRITE/PLAY	218
[AUDIO CD WRITE/PLAY]	219–220, 223–224
AUDIO CD WRITE/PLAY button	25
Audio sub mix	277
AUDIO TRACK MIXER faders	23
AUTO FADE IN	151
Auto Fade In setting screen	151
Auto Fade Out setting screen	152
AUTO PUNCH [ON/OFF]	77
AUTO PUNCH IN/OUT	21
Auto punch in/out	76
AUTO PUNCH IN/OUT [IN]	76
AUTO PUNCH IN/OUT [OUT]	76
Auto Scene	92, 94–95
Auto wah	310
AW	310–311

## B

B MAN	299
BACK	178
Back up	6
Backing chorus	136

BACKUP ..... 260  
 BACKUP icon ..... 226, 228, 230  
 Backup Menu screen ..... 226, 228, 230  
 Balance ..... 138  
 BANK  
     GUITAR ..... 288  
     MIC ..... 290  
     SIMUL ..... 292  
 Bank ..... 118–119  
 BASS ..... 171  
 Bass ..... 154, 171–172, 297–299, 307  
 Bass Ch. .... 243  
 Bass Cut Filter ..... 291, 294, 314, 316  
 BASS MULTI ..... 289  
 BASS OD ..... 297  
 Bass pattern ..... 154, 172  
 BASS SIM ..... 288  
 Bass Simulator ..... 288, 294  
 Bass sound ..... 172  
 BASS360 ..... 299  
 BASSWAH ..... 310  
 BD-2 ..... 297  
 BEAT ..... 193, 210  
 Beat ..... 196, 209–210  
 Beat map ..... 209–210  
 Beat Map screen ..... 210  
 BEEP ..... 212  
 BG DRV ..... 297  
 BG LEAD ..... 297, 307  
 BG RHY ..... 297  
 BG STK ..... 308  
 bg stk ..... 308  
 BIPHASE ..... 305  
 Bit ..... 303  
 BLOCK ..... 134, 138, 143  
 BLOCK<= ..... 119, 143, 149  
 BLUES ..... 297, 307  
 BLUESOD ..... 297  
 Body ..... 293  
 BoomBox ..... 313  
 BoomLoB ..... 313  
 BOSSCmp ..... 296  
 BOTTOM ..... 203  
 BOUNCE ..... 21  
 Bounce ..... 82, 86  
 BOUNCE indicator ..... 86  
 BPF ..... 303, 311  
 BPM ..... 58, 159, 161, 175, 187, 197  
 BR-1600CD icon ..... 259  
 BRIGHT ..... 127, 298  
 Bright ..... 298–299, 307  
 BUTTON ..... 194  
 BY MARK ..... 223  
 BY SONG ..... 220  
 BY TRACK ..... 188

**C**

CANCEL ..... 121  
 CD hold time ..... 238  
 CD HoldTime ..... 238  
 CD player ..... 218  
 CD TRACK ..... 91  
 CD Track Marker ..... 222  
 CD-R disc ..... 8  
 CD-R/RW ..... 25, 217, 223  
 CD-R/RW disc ..... 8, 223  
     Compatibility ..... 9  
     Inserting ..... 9  
     Precautions ..... 8  
     Removing ..... 9  
 CD-R/RW drive ..... 26, 219–220, 223–224, 338  
 CD-R/RW drive's internal motor ..... 238  
 CD-RW disc ..... 8  
 CD-RW Erase ..... 237  
 CENTER ..... 298–299, 308  
 CHANNEL EDIT ..... 63, 82  
 Character ..... 293–294  
 CHORD ..... 200  
 Chord ..... 173  
     Deleting ..... 201  
     Inputting ..... 200  
     Inserting ..... 202  
 Chord Map screen ..... 200  
 Chord progression ..... 156  
 Chord specifications ..... 173  
 Chord type ..... 200  
 CHORUS ..... 85, 125  
 Chorus ..... 85, 116, 125, 288, 290–291, 295  
 Chorus Send ..... 138  
 [CHORUS/DELAY] ..... 85  
 CHORUS/DELAY button ..... 22  
 CLEAN ..... 307  
 CLEANTW ..... 297  
 CLEAR button ..... 21, 90  
 CLICK ..... 212  
 CM-30 ..... 142, 313  
 CmpH Attack ..... 317  
 CmpH Ratio ..... 317  
 CmpH Release ..... 317  
 CmpH Thres ..... 317  
 CmpL Attack ..... 317  
 CmpL Ratio ..... 317  
 CmpL Release ..... 317  
 CmpL Thres ..... 317  
 CmpM Attack ..... 317  
 CmpM Ratio ..... 317  
 CmpM Release ..... 317  
 CmpM Thres ..... 317  
 COMMON ..... 137  
 [COMP] ..... 82  
 COMP button ..... 22, 128

- Compatible OS ..... 258  
Compressor ..... 82, 116, 288, 291–292, 296, 317  
Compressor Edit screen ..... 128  
Compressor/Defretter ..... 288–289  
CONCERT ..... 299  
Condenser microphone ..... 278  
Connecting ..... 34  
Contrast ..... 274  
Control Surface ..... 20  
Copy  
    Bass pattern ..... 182  
    Drum pattern ..... 168  
    Loop phrase ..... 194  
    Rhythm arrangement ..... 208  
COPY icon ..... 99, 110, 194  
COPY INS icon ..... 100  
Copying ..... 99, 123  
Copyright ..... 239  
Cord hook ..... 28  
COSM ..... 116  
COSM BASS AMP ..... 289  
COSM COMP BASS AMP ..... 290  
COSM COMP GUITAR AMP ..... 289  
COSM Comp/Limiter ..... 289–290, 296  
COSM OD BASS AMP ..... 290  
COSM OD GUITAR AMP ..... 288  
COSM Overdrive/Distortion ..... 288, 290, 297  
COSM PreAmp&Speaker ..... 288, 290, 297  
COSM VOCAL COMP ..... 291  
Create By Track screen ..... 188  
CRUNCH ..... 297, 307  
CRY WAH ..... 310  
Current position ..... 30  
Cursor ..... 31  
CURSOR buttons ..... 25  
CURVE ..... 152  
CUT icon ..... 107  
Cut Off Freq ..... 294, 314, 316  
Cutoff Freq ..... 303
- D**  
D E Balance ..... 303, 306  
D.CpProtect ..... 280  
DARK ..... 127, 298  
Data CD screen ..... 226  
DATA SAVE/LOAD ..... 226  
DATA SAVE/LOAD button ..... 25  
DC IN (AC adaptor) jack ..... 28  
D-Comp ..... 296  
De-esser ..... 290, 299  
DEFAULT ..... 127  
Defretter ..... 288–290, 300  
DELAY ..... 85  
Delay ..... 85, 116, 125, 288–292, 300  
Delay Time ..... 300, 308, 316  
Delay time ..... 126  
DELAY TYPE ..... 126  
DELETE ..... 122, 166, 168, 179, 181, 193, 199, 201, 204, 207  
Delete  
    Bass pattern ..... 182  
    Drum pattern ..... 169  
DELETE button ..... 21, 76  
Delete screen for drum patterns ..... 169  
Deleting ..... 107  
Demo songs ..... 38  
DENSITY ..... 127  
DEPTH ..... 125  
Depth ..... 295, 300, 302, 304–305, 309–312  
Detect HPF ..... 303  
DIGITAL ..... 303  
Digital copy ..... 280  
DIGITAL OUT connector ..... 28  
Direct Level ..... 297–299, 302–306, 308, 310  
DISC ..... 220, 223  
Disc At Once By Marker ..... 91, 219  
Disc At Once By Song ..... 219–220  
Disc tray ..... 26  
Disk Initialize ..... 285  
Disk memory used for the song ..... 110  
DISP ..... 100, 102, 104, 107, 109, 189, 205, 233, 265  
Display ..... 27  
Display's contrast ..... 274  
Distance ..... 291, 301  
DISTORT ..... 297  
Dither ..... 317  
DIV ..... 285  
DOUBLING ..... 85  
Doubling ..... 85, 117, 125, 288, 290–291, 301  
Doubling effect ..... 301  
DOWN ..... 311  
DR-20 ..... 304  
Drive ..... 297  
Drive Busy! ..... 203  
Driver ..... 258  
Drop format ..... 247  
Drum ..... 60, 158  
Drum Kit ..... 158, 164  
Drum pattern ..... 56, 154, 158, 160  
Drum sounds ..... 60  
DRUM&BASS PATTERN ..... 229  
Drums ..... 54, 154, 157  
Drums Ch. ..... 243  
DRUMS&LP ..... 157, 185  
DRV STK ..... 297  
DS-30A ..... 142, 313  
DS-50A ..... 142, 313  
DS-90A ..... 142, 313  
DST+ ..... 297  
Dynamic microphone ..... 278

## E

EDIT ..... 119  
 [EDIT] ..... 60  
 EDIT button ..... 23  
 EDITED ..... 110  
 Editing ..... 99  
 Effect block ..... 118, 142, 149  
 Effect block connection ..... 121  
 Effect Level ..... 295, 297, 300, 302–303, 305, 308  
 Effect Level1 ..... 310  
 Effect Level2 ..... 310  
 Effect On/Off ..... 293–294, 296–297, 299–310, 315–317  
 Effect Patch ..... 118  
 Effect Type ..... 310  
 EFFECTS ..... 229  
 Effects ..... 52, 116  
 [EFFECTS] ..... 52  
 EFFECTS button ..... 20, 119  
 Effects Ch. .... 255  
 Effects Edit screen ..... 119  
 EFFECTS icon ..... 283  
 Effects Location screen ..... 123  
 Effects P.C. .... 255  
 Effects Patch screen ..... 119  
 Effects Patch Write/Copy screen ..... 122  
 Effects Program Change ..... 255  
 Effects/Rhythm ..... 228  
 Eject ..... 260, 262, 264, 266  
 EJECT button ..... 26, 220–221, 223  
 Electric condenser microphone ..... 279  
 Emergency eject hole ..... 26  
 END (End point) ..... 100, 102, 107, 109, 189, 205, 233  
 ENHANCE ..... 293  
 Enhancer ..... 289–290, 301, 316  
 ENTER/YES button ..... 25  
 [EQ] ..... 83  
 EQ button ..... 22, 130  
 Equalizer ..... 83, 315  
 Equalizer Edit screen ..... 130  
 Equalizer screen ..... 130  
 Equalizer/Wah ..... 288, 290  
 ERASE ..... 161, 175, 199, 204  
 Erase  
     CD-RW disc ..... 237  
     Loop phrase ..... 195  
 ERASE icon ..... 108, 111, 195, 237  
 Erasing ..... 108  
 Error message ..... 340  
 EV-5 ..... 124  
 Exchanging ..... 103  
 EXIT/NO button ..... 25  
 EXP Pedal Ch. .... 253  
 EXP PEDAL jack ..... 28, 124  
 Expander ..... 316  
 ExpH Attack ..... 316

ExpH Ratio ..... 316  
 ExpH Release ..... 316  
 ExpH Thres ..... 316  
 ExpL Attack ..... 316  
 ExpL Ratio ..... 316  
 ExpL Release ..... 316  
 ExpL Thres ..... 316  
 ExpM Attack ..... 316  
 ExpM Ratio ..... 316  
 ExpM Release ..... 316  
 ExpM Thres ..... 316  
 Expression pedal ..... 124, 337  
 Extension ..... 265, 271

## F

F1–F3 ..... 25  
 Fade in ..... 151  
 FADE OUT ..... 152  
 Fade-out ..... 151  
 FADER icon ..... 253  
 Fader position ..... 253  
 FAST ..... 306  
 FAT ..... 310  
 FAT MCH ..... 297  
 FEEDBACK ..... 126  
 Feedback ..... 300, 308  
 Feedback 1 ..... 306  
 [FF] ..... 41  
 FF button ..... 22  
 Filter ..... 303  
 Final Mastering Track ..... 79–80  
 FINALIZE ..... 225  
 Finalize ..... 225  
 Fine 1/2 ..... 306  
 Flanger ..... 288, 290–291, 302  
 Flanging effect ..... 302  
 Flashing green ..... 23  
 Flashing orange ..... 23  
 Flashing orange and green ..... 23  
 Flashing red ..... 23  
 Flat ..... 300, 304  
 FLIPTOP ..... 299  
 FOOT SW jack ..... 28  
 FOOT Switch ..... 39  
 Foot switch ..... 39, 76  
 Foot Volume ..... 288–291  
 Foot Volume On/Off ..... 302  
 Formant ..... 310  
 Formant1 ..... 310  
 Formant2 ..... 310  
 Frame ..... 27, 247  
 Freq ..... 303  
 Frequency ..... 301, 308, 311–312, 314, 316  
 Fretless bass ..... 300  
 FROM (From point) ..... 100, 102

- FULLRNG ..... 297  
 FUNCTION buttons ..... 30  
 FV-300L ..... 124  
 FX ..... 288, 290
- G**  
 Gain ..... 298, 303, 307, 314  
 Gain SW ..... 298  
 GATE ..... 178–179  
 Gate time ..... 178  
 GLOBAL icon ..... 282  
 GM ..... 170, 183, 243  
 Ground terminal ..... 29  
 GS ..... 170, 183, 243  
 [GUITAR/BASS] ..... 50  
 Guitar bank ..... 118  
 GUITAR/BASS ..... 20  
 GUITAR/BASS effects ..... 116  
 GUITAR/BASS jack ..... 26  
 GUV DS ..... 297
- H**  
 H TO HF ..... 305  
 H TO S ..... 305  
 HALL ..... 126  
 HARD ..... 128  
 Hard disk ..... 6, 338  
   Emergency ..... 6  
   Precaution ..... 6  
   Setup ..... 6  
 Hard disk capacity ..... 112  
 Hard Disk Information ..... 284  
 Hard Disk screen ..... 284  
 Harmony Sequence ..... 117, 131, 136  
 Harmony Sequence edit screen ..... 137  
 HD ACCESS indicator ..... 25  
 HDD ..... 231  
 HDD backup ..... 230  
 HDD icon ..... 284  
 HDD recover ..... 231  
 Hed.Dy ..... 304  
 HF DAMP ..... 126–127  
 Hi Cut Freq ..... 295, 300  
 HI FREQ ..... 130  
 HI GAIN ..... 130  
 HI.FEML ..... 133, 138  
 HI.MALE ..... 133, 138  
 HIGH ..... 83, 307  
 High Depth ..... 295  
 High Freq ..... 294, 315  
 High Freq Trimmer ..... 314  
 High Gain ..... 294, 309, 315  
 High Level ..... 295, 317  
 High Pre-Dly ..... 295  
 High Q ..... 294, 315  
 High Rate ..... 295  
 High Type ..... 315  
 Hi-Mid Freq ..... 294, 309, 315  
 Hi-Mid Gain ..... 294, 309, 315  
 Hi-Mid Q ..... 294, 309, 315  
 HPF ..... 303, 311  
 Hum to Half-tone ..... 305  
 Hum to Single ..... 305  
 Human Feel ..... 137  
 Humanizer ..... 288, 290, 302  
 Humbucking-style ..... 305  
 HVY MTL ..... 297
- I**  
 IMPORT ..... 170, 183, 232, 239  
 IMPORT icon ..... 190, 265, 272  
 IN button ..... 21  
 INFO icon ..... 110, 284  
 Information ..... 27  
 Initialize ..... 282  
 INITIALIZE icon ..... 282  
 INPUT ..... 21  
 Input ..... 296, 304, 316  
 Input Gain ..... 315–316  
 INPUT LEVEL knob ..... 21, 62  
 Input Pan ..... 63  
 Input Select ..... 50, 67  
 INPUT SELECT buttons ..... 20  
 INPUT SENS knob ..... 51  
 INPUT SENS knobs ..... 20  
 Input Sensitivity ..... 51  
 Input Type ..... 137  
 Input/Track level meters ..... 27  
 INSERT ..... 121–122, 166, 168, 179, 181, 193, 200, 207, 221  
 Insert  
   Loop phrase ..... 204  
 Insert effect ..... 118  
 Insert effect algorithm list ..... 128, 288  
 Insert effect connection ..... 123  
 Insert effects ..... 52, 116  
 INSERT icon ..... 104  
 Inserting ..... 104  
 INVERSE ..... 304, 313  
 Invert ..... 303  
 ISO9660 ..... 169, 183, 190, 235
- J**  
 JAZZCMB ..... 297  
 JC-120 ..... 297, 307–308  
 JUMBO ..... 293
- K**  
 KNEE ..... 128

**L**

LCD CONTRAST ..... 274  
 LEADSTK ..... 297  
 LEN ..... 203  
 LENGTH ..... 104, 152, 199  
 Length in measures ..... 193  
 LEVEL ..... 126  
 Level ..... 293–294, 296–297, 299, 301–302, 305, 309–312, 314  
 Level 1/2 ..... 306  
 Level Disp. .... 281  
 LEVEL DR ..... 186, 212  
 LEVEL LP ..... 186, 212  
 LIGHT ..... 310  
 Limiter ..... 288, 291, 296, 302, 314, 317  
 LINE ..... 20, 50  
 LINE IN ..... 29  
 LINE OUT jacks ..... 29  
 LINK ON ..... 129–130  
 LO.FEML ..... 133, 138  
 LO.MALE ..... 133, 137  
 LOC ..... 189  
 LOCATION ..... 123, 136  
 Location ..... 91  
 LO-FI BOX ..... 291  
 Lo-Fi Box ..... 291, 303  
 LOOP EFFECTS ..... 64, 84–85  
 Loop effects ..... 84, 116, 125  
 Loop Phrase ..... 155, 185, 228  
 LOOP PHRASE A–H ..... 229  
 LOOP PHRASE ALL ..... 229  
 Loop phrase creation ..... 188  
 Loop Phrase Edit screen ..... 193  
 Loop Phrase Erase screen ..... 195  
 LOOP PHRASE IMPORT ..... 188  
 Loop phrase import ..... 190  
 LOOP PHRASE IMPORT button ..... 25  
 Loop Phrase screen ..... 188  
 Loop Recording ..... 78  
 LOW ..... 84, 307  
 LOW CUT ..... 125, 127  
 Low Cut Filter ..... 303  
 Low Depth ..... 295  
 LOW FREQ ..... 130  
 Low Freq ..... 294, 315  
 Low Freq Trimmer ..... 314  
 LOW GAIN ..... 130  
 Low Gain ..... 294, 309, 315  
 Low Level ..... 295, 317  
 Low Mix Level ..... 301  
 Low Pre-Dly ..... 295  
 Low Q ..... 294, 315  
 Low Rate ..... 295  
 LowCutFilter ..... 295, 302  
 Low-Mid Freq ..... 294, 309, 315  
 Low-Mid Gain ..... 294, 309, 315

Low-Mid Q ..... 294, 309, 315  
 LowType ..... 315  
 LPF ..... 303, 311  
 Lrg.Cn ..... 304  
 Lrg.Dy ..... 304

**M**

M.SCOPE ..... 179  
 Macintosh ..... 258, 267  
 MANUAL ..... 306, 310  
 Manual ..... 302, 305  
 Manual punch in/out ..... 75  
 MAP EDIT ..... 134, 200, 210  
 MARK button ..... 21, 90  
 MARKER ..... 21  
 Marker ..... 27, 43, 90  
 Marker Name ..... 91  
 Marker screen ..... 91–92  
 Marker Stop ..... 92  
 Mas.Fader Ch. .... 253  
 MASTER ..... 251  
 Master ..... 307  
 MASTER fader ..... 25, 40  
 Master level meter ..... 27  
 Master sync ..... 245  
 MASTERING ..... 21  
 MASTERING indicator ..... 146  
 MASTERING TOOL KIT ..... 229  
 Mastering Tool Kit ..... 117  
     Patch copy ..... 151  
     Patch write ..... 150  
 MASTERING TOOL KIT button ..... 23  
 Mastering Tool Kit edit screen ..... 149  
 Mastering Tool Kit parameter ..... 315  
 Mastering Tool Kit Patch Write/Copy screen ..... 150  
 MATCH ..... 307–308  
 match ..... 308  
 MAX ..... 126  
 Maximum useful Capacity ..... 349  
 MCH DRV ..... 297  
 MCHLEAD ..... 297  
 MEAS ..... 193, 199, 210  
 MEASURE ..... 202, 209  
 Measure ..... 27, 164, 209–210  
 MEDIUM ..... 128, 306  
 METAL ..... 307–308  
 METAL D ..... 307  
 METRO ..... 161, 175, 212  
 METRO&LP ..... 185, 211  
 METRONOME ..... 157  
 Metronome ..... 211  
     Sound ..... 212  
 MIC ..... 29  
 MIC bank ..... 118  
 Mic Converter ..... 291, 304

- Mic Distance ..... 293  
MIC effects ..... 116  
Mic Level ..... 298–299, 308  
MIC MODELING ..... 291  
Mic Setting ..... 298–299, 308  
Microphone pre-amp ..... 279  
Microscope ..... 165, 179  
MID ..... 83  
MID FREQ ..... 130  
Mid Freq ..... 294  
MID GAIN ..... 130  
Mid Gain ..... 294  
Mid Level ..... 317  
MID Q ..... 130  
Mid Q ..... 294  
MIDDLE ..... 307–308  
Middle ..... 298–299, 307  
Middle Freq ..... 299  
MIDI ..... 242  
MIDI cable ..... 242  
MIDI channel ..... 242  
MIDI CLK ..... 246  
MIDI connector ..... 242  
MIDI Fader ..... 252  
MIDI icon ..... 243, 251  
MIDI Implementation Chart ..... 242  
MIDI IN ..... 242  
MIDI IN connector ..... 28  
MIDI indicator ..... 25  
MIDI keyboard ..... 254  
MIDI OUT ..... 242  
MIDI OUT connector ..... 28  
MIDI screen ..... 243, 251  
MIDI sequencer ..... 245  
MIDI sound module ..... 243  
MIDI THRU ..... 242  
MIDI time code ..... 246  
MIDI timing clock ..... 245  
MIN ..... 126  
Min.Cn ..... 304  
Mix Level ..... 301, 316  
Mixer ..... 317  
MIXER icon ..... 283  
MMC ..... 251  
MMC Mode ..... 251  
Mode ..... 295, 306, 309, 311  
Model ..... 313  
Modify Filter ..... 303  
Modulation ..... 290–291  
MONO ..... 295  
MOVE ..... 121, 166, 179  
MOVE icon ..... 101  
MOVE INS icon ..... 101  
Moving ..... 101  
MS ..... 307  
MS HI-G ..... 297  
MS STK ..... 308  
ms stk ..... 308  
MS(1) ..... 297  
MS(1+2) ..... 297  
MT-2 ..... 297  
MTC ..... 246–247  
MTC Type ..... 247  
MTL STK ..... 298  
MTLLEAD ..... 298  
MUF FUZ ..... 297
- N**  
N.C. .... 201  
NAME ..... 122, 144, 150, 168, 181, 193, 207  
Name  
    Bass pattern ..... 181  
    Drum pattern ..... 168  
    Rhythm arrangement ..... 207  
NAME icon ..... 114  
NEW ..... 48, 202  
NO. .... 199, 202, 204  
No. .... 91  
Noise ..... 303  
Noise Suppressor ..... 288–292, 304  
Non-chord ..... 137  
Non-chord (- - -) ..... 201  
Non-drop format ..... 247  
NORMAL ..... 127, 285, 298, 304, 313  
Normalize ..... 105  
NORMALIZE icon ..... 106  
Normalize screen ..... 106  
NOTE ..... 179
- O**  
OCT FUZ ..... 297  
Octave ..... 289–290, 304  
Octave Level ..... 304  
OD-1 ..... 297  
OD-2 ..... 297  
ODB-3 ..... 297  
On/Off ..... 137, 296, 313–314  
ON/OFF button ..... 21  
ONLY CUR. PARTITION ..... 285–286  
OPTIMIZE icon ..... 112  
ORG ..... 298–299  
OUT button ..... 21  
Output ..... 304, 317  
Output Level ..... 315  
Output Sp. .... 313  
Overdubbing ..... 68
- P**  
P.Shift Type ..... 306  
PAGE SCROLL buttons ..... 31

Pan .....	63, 82, 137, 288, 290, 300, 304
[PAN] .....	63, 82
PAN button .....	22
Panel Descriptions .....	20
PAN-SQR .....	309
PAN-TRI .....	309
Parametric .....	309
Partition .....	286
Patch name .....	122, 140, 150
Patch number .....	119
Pattern mode .....	156
Pattern Selection screen .....	158, 172, 186–187
Pattern setup .....	158, 172
PC ONLY .....	255
PC+BANK .....	255
PEAK .....	315
Peak .....	311–312
PEAK indicator .....	20, 51
PEDAL .....	306, 310–311
Pedal Pos. ....	310
Pedal wah .....	310
Pedal-type pitch shifter .....	306
PERCENT .....	106
Phantom .....	278
Phantom power .....	35, 278
Phase .....	304, 313
Phaser .....	288, 290–291, 305
PHONES .....	26
PHONES VOLUME .....	26
Pickup Simulator .....	288, 305
Pickup Type .....	293
PIEZO .....	293
Pitch 1/2 .....	306
PITCH CORRECTION .....	132
Pitch Correction .....	117, 131–132
Pitch Correction Edit screen .....	133–134
Pitch Correction Parameter screen .....	133
Pitch shift .....	306
Pitch Shifter .....	288, 290–291, 306
Pitch Shifter pedal .....	124
PLATE .....	127
[PLAY] .....	39
PLAY .....	236, 239
PLAY button .....	22
PLAYER .....	236, 303
Playing .....	39
Playing SMFs .....	236
Polarity .....	311
POS .....	203
Position .....	203
POST FADER .....	281
Post Filter .....	303
Post-fader .....	281
POWER switch .....	28, 36–37
Pre Delay .....	137, 295
Pre Delay 1/2 .....	306
PRE FADER .....	281
Pre Filter .....	303
PRE GAP .....	218
PreAmp .....	289–290, 292
Preamp .....	307
PRE-DELAY .....	125, 127
Pre-fader .....	281
Pre-gap .....	218
Pre-gap setting screen .....	218
Presence .....	298, 307
Preset bass patterns .....	154
Preset drum pattern .....	154
Preset patch .....	118, 132
Preset rhythm arrangement .....	156, 197
PREVIEW .....	190, 193–195, 233
Preview .....	97
Preview SW .....	98
PROCRNC .....	297
PROGRAMMABLE RHYTHM .....	197
Programmable rhythm .....	154
PROTECTED .....	110
Protecting .....	113
Prox.Fx .....	301
Proximity effect .....	301
Punch in .....	75
Punch In/Out .....	75
Punch out .....	75
Pwd. BLK .....	313
Pwd. E-B .....	313
Pwd. MAC .....	313
<b>Q</b>	
QTZ .....	162, 176
Quantize .....	162, 176
<b>R</b>	
Rack160 .....	296
RADIO .....	303
Radio .....	313
Range .....	254
Range of note numbers .....	254
RATE .....	125, 167, 180
Rate .....	295, 302, 304–305, 309–311
RATIO .....	128
Ratio .....	296
Real-time recording .....	160–161, 174–175
Rear Panel .....	28
[REC] .....	66, 68
REC button .....	22
[REC MODE] .....	86, 146
REC MODE button .....	21
REC MODE indicators .....	21
Recording .....	66
Recording level .....	62

- Recording time ..... 349  
Recording Track ..... 66  
RECOVER ..... 227, 229, 231, 261  
Recover screen ..... 227, 229, 231  
Reference pitch ..... 275  
REHEARSAL ..... 162, 176  
Rehearsal ..... 162, 176  
REL ..... 83  
RELATIVE TIME ..... 248  
RELEASE ..... 128  
Release ..... 304, 314, 317  
Release Time ..... 296  
Removable Disk ..... 259  
Removing song protection ..... 113  
Repeat ..... 78  
REPEAT button ..... 22  
RES ..... 163, 177  
Resonance ..... 300, 302–303, 305  
REST ..... 178  
Rest ..... 137  
REV SEND ..... 126  
Reverb ..... 64, 84, 116, 125  
[REVERB] ..... 64, 84  
REVERB button ..... 23, 126  
Reverb Edit screen ..... 126  
Reverb Send ..... 138  
Reverb send level ..... 64  
Reverb Send screen ..... 126  
[REW] ..... 41  
REW button ..... 22  
RF ORNG ..... 297  
RF RED ..... 297  
RF VNTG ..... 297  
RHYTHM ..... 229  
Rhythm arrangement ..... 156, 197  
Rhythm machine ..... 245  
Ring Modulator ..... 288, 290–291, 308  
Rise Time ..... 308  
R-MAN ..... 297  
ROOM ..... 126  
ROTECT icon ..... 113
- S**
- S TO H ..... 305  
Safe To Remove Hardware ..... 260, 262, 264, 266  
Sample Rate ..... 303  
Sampling CD ..... 155, 190  
Save ..... 70  
Saving ..... 71, 122  
Saving a song ..... 114  
Saving songs ..... 37  
Scene ..... 92–93  
SCENE icon ..... 93  
Scene screen ..... 93  
SCMS ..... 239, 280
- Scroll Bar ..... 31  
SCRUB ..... 98  
Scrub ..... 97  
Scrub FROM/TO  
    FROM ..... 98  
    TO ..... 98  
Scrub/Preview screen ..... 98  
[SEARCH] ..... 43  
SEARCH button ..... 21, 90  
Security Slot (SECURITY LOCK) ..... 29  
SELECT ..... 38  
Sensitivity ..... 300–301, 308, 311, 316  
Separation ..... 301–302, 306  
SESSION ..... 299  
SETUP ..... 164, 172  
SHLV ..... 315  
Short Delay ..... 126, 288, 290, 308  
Sibilant Lvl ..... 299  
SIMUL ..... 20, 50  
Simul bank ..... 118  
SIMUL effects ..... 116  
SINGLE ..... 300  
Single to Hum ..... 305  
Single-coil ..... 305  
Size of each partition ..... 284  
SLDN ..... 297, 307  
SLOW ..... 306  
Slow Gear ..... 288, 290, 308  
SMALL ..... 308  
SmallTV ..... 313  
SMF ..... 169, 183, 236  
SMF icon ..... 169, 183  
SMF import ..... 169, 183  
SMF Import screen ..... 170, 183  
SMF player ..... 236  
Sml.Cn ..... 304  
Sml.Dy ..... 304  
SmlCUBE ..... 313  
Smooth ..... 134  
SOFT ..... 128  
Soft Clip ..... 317  
Song backup ..... 226  
Song Backup screen ..... 226  
Song bass pattern ..... 154  
Song Copy ..... 110  
Song drum pattern ..... 154  
Song Erase ..... 111  
SONG icon ..... 110  
Song Information ..... 110  
Song Information screen ..... 110  
Song loop phrase ..... 155, 186  
Song Menu screen ..... 110  
Song Name ..... 110, 114  
Song Name screen ..... 114  
Song New ..... 48

Song number .....	110	Sync Offset .....	250
Song Optimize .....	112	Sync Source .....	249
Song patch .....	118, 132	Sync track .....	248
Song Protect .....	113	SYNC TRK .....	249
Song protection .....	110	SYNC TRK icon .....	249
Song recover .....	227	Synchronization setting screen .....	246
Song rhythm arrangement .....	156, 197	Synchronize .....	245, 339
Song Save .....	70, 114		
Song Select .....	38	<b>T</b>	
SP Modeling .....	313	T.E. ....	299
SPEAKER MODELING .....	229	TAP .....	159, 187, 198
Speaker Modeling .....	117, 142	[TAP] .....	59
Patch copy .....	145	TAP button .....	24
Patch write .....	144	Tap tempo .....	159, 187, 198
SPEAKER MODELING button .....	23	Tap Time .....	300
Speaker Modeling edit screen .....	143	TEMPO .....	58, 159, 187, 203, 209
Speaker Modeling parameter .....	313	Tempo .....	58, 164, 209
Speaker Modeling patch .....	143	Bass pattern .....	173
Speaker Modeling patch screen .....	143	Drum pattern .....	159
Speaker Modeling Patch Write/Copy screen .....	145	Loop phrase .....	187
Speaker Simulator .....	289–290, 292, 308	Rhythm arrangement .....	197
Speaker SW .....	298–299	Tempo map .....	209
Speaker Type .....	298–299, 308	Tempo Map screen .....	209
Split Freq H .....	316	THR .....	83
Split Freq L .....	316	Three-band compressor .....	149
Spr Flat .....	313	THRESHOLD .....	128
START .....	151–152	Threshold .....	296, 302, 304, 314, 317
START (Start point) .....	100, 102, 104, 107, 109, 189, 205, 233	THRU .....	303
STD .....	293	TIME .....	126–127
Steady green .....	23	Time .....	27, 301
Steady red .....	23	Time Disp. ....	248
STEP .....	163, 177	Time Offset .....	248
Step .....	305	TIME/VALUE dial .....	25, 32, 42
Step Rate .....	305	TIMES (copy time) .....	100
Step recording .....	160, 163, 174, 177	TMP .....	119
STEREO .....	295	TO .....	122
Stereo bank .....	118	TO (To point) .....	100, 102
STEREO effects .....	116	TO TRACK icon .....	204
Stereo Link .....	129–130	TONE .....	127
STEREO MULTI .....	291	Tone .....	296, 300, 302, 305
STKCRNC .....	297	TOP .....	203
STOP .....	41	Top .....	293
[STOP] .....	39	Top screen .....	30
STOP button .....	22	Top-Hi .....	293
Stopping .....	39	Top-Mid .....	293
STORE .....	71	TOUCH .....	311
Sub Equalizer .....	288, 309	Touch wah .....	310
Sub Mixer .....	277	[TRACK MUTE] .....	46
Supported combinations of effects .....	117	Track At Once .....	219
SURFACE SCAN .....	285	Track button .....	67
Sustain .....	296	Track buttons .....	23
Swing .....	167, 180	Track Compressor screen .....	128
SWING POS .....	167, 180	Track Copy .....	99
Sync Gen. ....	246	Track Copy screen .....	100
SYNC icon .....	245–246	Track Cut .....	107

- Track Cut screen ..... 107
- Track Edit ..... 99
- Track Erase ..... 108
- Track Erase screen ..... 108
- Track Exchange ..... 103
- Track Exchange screen ..... 103
- Track faders ..... 23, 40
- TRACK icon ..... 99
- Track Insert ..... 104
- Track Insert screen ..... 104
- Track Level ..... 93
- FADER ..... 93
- SCENE ..... 93
- Track Menu screen ..... 99
- Track Move ..... 101
- Track Move screen ..... 101
- Track Mute ..... 46
- TRACK MUTE button ..... 24
- Track Name ..... 80
- Track status ..... 23
- Track Type ..... 49
- Track type ..... 171, 185, 211
- TRACK TYPE indicators ..... 24
- TRACK TYPE SELECT ..... 157, 171, 185–186, 211–212
- Track Type Select ..... 54
- [TRACK TYPE SELECT] ..... 54
- TRACK TYPE SELECT button ..... 24
- Track Type Select screen ..... 157, 171, 185–186, 211–212
- Track types ..... 24
- Transport buttons ..... 41
- Treble ..... 297, 299, 307
- Tremolo ..... 288, 290, 309
- Tremolo/Pan ..... 288, 290–291, 309
- Trk 1 Ch. .... 253
- Trk 11&12 Ch. .... 253
- TRM-SQR ..... 309
- TRM-TRI ..... 309
- Troubleshooting ..... 337
- TRS ..... 34
- TSCREAM ..... 297
- Tuner ..... 275
- TUNER ON/OFF ..... 275
- TUNER ON/OFF button ..... 21
- Tuner screen ..... 275
- Tuning ..... 274, 303
- TURBOOD ..... 297
- Turning off ..... 37
- Turning on ..... 36
- Turntable ..... 303
- TW ..... 310
- TWEED ..... 297
- TWIN ..... 308
- twin ..... 308
- TYPE ..... 85, 125–126
- Type ..... 133, 296–297, 300, 305, 310
- U**
- UNDO/REDO button ..... 25
- Uni-V ..... 288, 309
- Universal serial bus ..... 258
- Unneeded data ..... 112
- UP ..... 311
- USB ..... 258, 339
- USB connector ..... 28
- USB icon ..... 260
- USB screen ..... 260
- USE BASS ..... 49
- USE DRUMS + BASS + LOOP ..... 49
- USE DRUMS + LOOP ..... 49
- User Backup ..... 228
- User Backup screen ..... 228
- User bass pattern ..... 154
- User drum pattern ..... 154
- User loop phrase ..... 155, 186
- User patch ..... 118, 132
- User recover ..... 229
- User rhythm arrangement ..... 156, 197
- UTILITY button ..... 25
- V**
- VALUE knobs ..... 25, 120
- Vibrato ..... 288, 290, 310
- Vibrato pedal ..... 124
- VIEW ..... 200
- Vnt.Cn ..... 304
- VO DRV ..... 297, 307–308
- vo drv ..... 308
- VO LEAD ..... 297
- VO WAH ..... 310
- VO+AC.SIM ..... 292
- VO+ACOUSTIC ..... 292
- VO+GT.AMP ..... 292
- Voc.Dy ..... 304
- VOCAL ..... 20
- [VOCAL] ..... 50
- VOCAL MULTI ..... 290
- VOCAL TOOL BOX ..... 229
- Vocal Tool Box ..... 117, 131
- Patch copy ..... 141
- Patch write ..... 140
- VOCAL TOOL BOX button ..... 23, 132, 136
- Vocal Tool Box Write/Copy screen ..... 140–141
- VOCLEAN ..... 297
- Voice ..... 306
- Voice character ..... 310
- VOICE TRANSFORMER ..... 291
- Voice Transformer ..... 291, 310
- VOICE1 ..... 137
- VOL ..... 203
- Volume ..... 40, 307
- Volume pedal ..... 124

Volume-swell effect .....	308
Vowel .....	302
Vowel1 .....	302
Vowel2 .....	302
VtgRack .....	296
V-Track .....	79
[V-TRACK] .....	44
V-TRACK button .....	24
V-Tracks .....	44

**W**

WAH .....	310
Wah .....	288–291, 310
Wah pedal .....	124
Wah Type .....	311
WAV .....	190, 234, 263, 270
WAV file .....	233
WAV/AIFF export .....	233, 263, 270
WAV/AIFF import .....	232, 265, 271
WAV/AIFF screen .....	232, 234
WAVE .....	232, 234
Wave Shape .....	304, 309
Waveform Data Export screen .....	234
Wh.CONE .....	313
WhTISUE .....	313
Windows .....	258, 260
Wow Flutter .....	303
WR•CPY•DEL .....	161, 176, 178, 207
WRITE .....	218–220, 223
Write screen for drum patterns .....	161
WRITE•COPY .....	122–123, 140–141, 144–145, 150

**X**

XCHANGE icon .....	103
XG .....	170, 183
XLR .....	34–35
Xover Freq .....	295

**Z**

[ZERO] .....	41
ZERO button .....	22



This product complies with the requirements of European Directive 89/336/EEC.

For EU Countries

## FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT

For the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Unauthorized changes or modification to this system can void the users authority to operate this equipment.  
This equipment requires shielded interface cables in order to meet FCC class B Limit.

For Canada

### NOTICE

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

### AVIS

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

For the USA

## DECLARATION OF CONFORMITY Compliance Information Statement

Model Name : BR-1200CD  
Type of Equipment : Digital Recording Studio  
Responsible Party : Roland Corporation U.S.  
Address : 5100 S.Eastern Avenue, Los Angeles, CA 90040-2938  
Telephone : (323) 890-3700

