

# V-AMPIRE LX1200H/LX210

## User's Manual

ENGLISH

Version 1.0 February 2005



[www.behringer.com](http://www.behringer.com)



# V-AMPIRE LX1200H/LX210

## IMPORTANT SAFETY INSTRUCTIONS



**CAUTION:** To reduce the risk of electric shock, do not remove the top cover (or the rear section). No user serviceable parts inside; refer servicing to qualified personnel.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.




This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure—voltage that may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.

## DETAILED SAFETY INSTRUCTIONS:

- 1) Read these instructions.
  - 2) Keep these instructions.
  - 3) Heed all warnings.
  - 4) Follow all instructions.
  - 5) Do not use this apparatus near water.
  - 6) Clean only with dry cloth.
  - 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
  - 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  - 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
  - 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
  - 11) Only use attachments/accessories specified by the manufacturer.
  - 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
  - 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
  - 15) **CAUTION** - These service instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions unless you are qualified to do so.

## FOREWORD



Dear Customer,  
welcome to the team of BEHRINGER users, and thank you very much for expressing your confidence in us by purchasing the V-AMPIRE.

Writing this foreword for you gives me great pleasure, because it represents the culmination of many months of hard work delivered by our engineering team to achieve a very ambitious goal: to create two outstanding guitar amplifiers, whose excellent sound and remarkable functions offer a maxi-

mum on flexibility and performance. The task of designing our new V-AMPIRE amps certainly meant a great deal of responsibility, which we assumed by focusing on you, the discerning user and musician. Meeting your expectations also meant a lot of work and night shifts. But it was fun, too. Developing a product usually brings a lot of people together, and what a great feeling it is when all who participated in such a project can be proud of what they've achieved.

It is our philosophy to share our enjoyment with you, because you are the most important member of the BEHRINGER team. With your highly competent suggestions for new products you've made a significant contribution to shaping our company and making it successful. In return, we guarantee you uncompromising quality as well as excellent technical and audio properties at an extremely reasonable price. All of this will enable you to give free rein to your creativity without being hampered by budget constraints.

We are often asked how we manage to produce such high-quality equipment at such unbelievably low prices. The answer is quite simple: it's you, our customers! Many satisfied customers mean large sales volumes enabling us to get better purchasing terms for components, etc. Isn't it only fair to pass this benefit on to you? Because we know that your success is our success too!

I would like to thank all of you who have made the V-AMPIRE LX210 and LX1200H possible. You have all made your own personal contributions, from the developers to the many other employees at this company, and to you, the BEHRINGER user.

My friends, it's been worth the effort!


Thank you very much,

Uli Behringer

## TABLE OF CONTENTS

<b>1. INTRODUCTION</b> .....	<b>4</b>
1.1 ... before you get started .....	4
1.1.1 Online registration .....	4
1.2 The manual .....	4
<b>2. CONTROL ELEMENTS</b> .....	<b>5</b>
2.1 Front panel .....	5
2.2 Rear panel .....	7
<b>3. OPERATING MODES AND APPLICATIONS</b> .....	<b>8</b>
3.1 Selecting an operating mode in CONFIGURATION mode .....	8
3.2 Live on stage or in a rehearsal room .....	8
3.2.1 LX1200H .....	8
3.2.2 LX210 .....	9
3.3 Rehearsal or recording at home (LX1200H und LX210) .....	9
3.4 Studio recording/recording (LX1200H und LX210) ...	10
<b>4. PRESETS</b> .....	<b>11</b>
4.1 Calling up presets .....	11
4.2 Editing presets .....	11
4.3 Storing presets .....	11
4.4 Discarding an edited preset/restoring a single factory preset .....	11
4.5 Restoring all factory presets .....	11
<b>5. AMP/SPEAKER-SIMULATION</b> .....	<b>11</b>
5.1 Amp descriptions .....	12
5.2 Speaker descriptions .....	13
<b>6. EFFECTS PROCESSOR</b> .....	<b>14</b>
6.1 Wah Wah .....	14
6.2 Effect descriptions .....	14
6.2.1 Reverb and delay algorithms .....	14
6.2.2 Modulation effects .....	14
6.2.3 Combinations of effect algorithms (multi-effects programs) .....	15
6.2.4 Special effects .....	15
6.3 The separate reverb effect .....	15
<b>7. TUNER</b> .....	<b>15</b>
7.1 Tuning your guitar .....	15
7.2 Setting reference pitch "A" .....	15
<b>8. INSTALLATION</b> .....	<b>16</b>
8.1 Mains voltage .....	16
8.2 Audio connections .....	16
8.3 MIDI connections .....	16
8.3.1 Sending/receiving MIDI Sysex data .....	17
<b>9. SPECIFICATIONS</b> .....	<b>17</b>
<b>10. APPENDIX</b> .....	<b>18</b>
<b>11. WARRANTY</b> .....	<b>19</b>

## WARNING!

 Please note that high volume levels may cause permanent damage to your hearing and/or your headphones. Turn all LEVEL controls to the left before you switch on the unit. Be sure to keep the volume at an appropriate level.

# V-AMPIRE LX1200H/LX210

## 1. INTRODUCTION

Congratulations! With the V-AMPIRE, you have the newest generation of modeling guitar amps. It offers an extremely broad range of options and possibilities, the only limit being your own imagination.

### LX1200H

The V-AMPIRE LX1200H is so versatile and has so many features that you will hardly need any other equipment. Use it with a guitar speaker cabinet like our BG412V to deliver either 120 Watts mono or 2 x 60 Watts stereo.

### LX210

With the V-AMPIRE LX210 you own the new combo version of our famous V-AMP 2. It's an allrounder with so many features that you hardly need any other equipment. Use it as a guitar combo to deliver 2 x 60 Watts stereo with internal or external loudspeakers.


However you use your V-AMPIRE, you will always profit from its enormous flexibility.


So enough talk: Nothing will convince you more than what you actually hear and feel when you play your V-AMPIRE.

But ...


### 1.1 ... before you get started

Your V-AMPIRE was carefully packed at the assembly plant to assure secure transport. Should the condition of the cardboard box suggest that damage may have taken place, please inspect the unit immediately and look for physical indications of damage.


 **Damaged equipment should NEVER be sent directly to us. Please inform the dealer from whom you acquired the unit immediately as well as the transportation company from which you took delivery. Otherwise, all claims for replacement/repair may be rendered invalid.**


 **Please always use the original packaging to avoid damage due to storage or shipping.**

 **Never let unsupervised children play with the V-AMPIRE or with its packaging.**

 **Please dispose of all packaging materials in an environmentally friendly fashion.**

Please make sure the unit is provided with sufficient ventilation, and never place the V-AMPIRE in the vicinity of heaters to avoid the risk of overheating.

 **Before you connect the unit to the mains, please make sure that the voltage setting on the unit matches the local voltage! Please refer to the important information on this topic given in chapter 8: "INSTALLATION".**

 **Please make sure that all units have a proper ground connection. For your own safety, never remove or disable the ground conductor from the unit or of the AC power cord. The unit shall always be connected to the mains socket outlet with a protective earthing connection.**

The MIDI connections (IN, OUT/THRU) are for standard DIN connectors. Data is transferred via ground-free opto-couplers. Further information can be found in chapter 8 "INSTALLATION."

#### 1.1.1 Online registration

Please do remember to register your new BEHRINGER equipment right after your purchase by visiting [www.behringer.com](http://www.behringer.com) (alternatively [www.behringer.de](http://www.behringer.de)) and kindly read the terms and conditions of our warranty carefully.

Should your BEHRINGER product malfunction, our goal is to have it repaired as quickly as possible. To arrange for warranty service, please contact the retailer from whom the equipment was purchased. Should your BEHRINGER dealer not be located in your vicinity, you may directly contact one of our subsidiaries. Corresponding contact information is included in the original equipment packaging (Global Contact Information/European Contact Information). Should your country not be listed, please contact the distributor nearest you. A list of distributors can be found in the support area of our website ([www.behringer.com/support](http://www.behringer.com/support)).

Registering your purchase and equipment with us helps us process your repair claims quicker and more efficiently.

Thank you for your cooperation!

### 1.2 The manual

This manual has been designed so that you can get a clear overview of all control elements and at the same time find detailed information on how to use them. To let you quickly get an overview of different topics, we have grouped various control elements according to their function. If you need more information on specific topics, please visit our web site at [www.behringer.com](http://www.behringer.com). For example, there you can find complete information about MIDI implementation.

## 2. CONTROL ELEMENTS

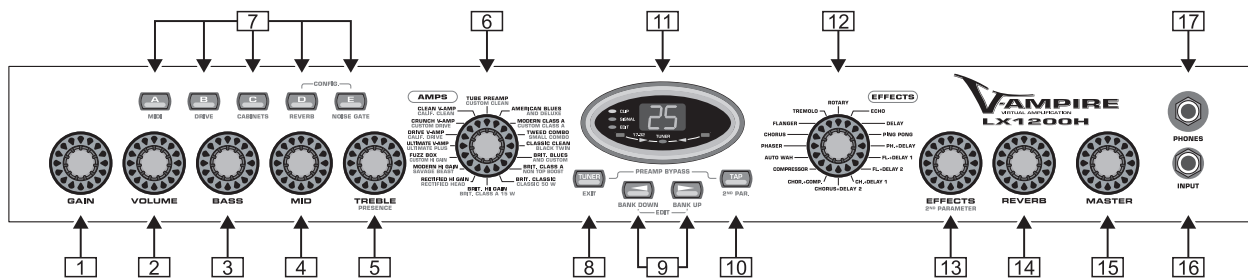


Fig. 2.1: V-AMPIRE's control elements (front panel LX1200H)

### 2.1 Front panel

- 1 The **GAIN** control determines the distortion level and the saturation of an amp simulation.
  - 2 The **VOLUME** control determines the volume of the selected preset.
  - 3 The **BASS** control in the EQ section is for boosting or cutting the low-frequency range.
  - 4 The **MID** control is for boosting or cutting the mid-range frequencies.
  - 5 **TREBLE** controls the high-frequency range of the selected preset.
- The LED rings around the **VOLUME**, **BASS**, **MID**, **TREBLE**, **GAIN**, **EFFECTS** and **REVERB** controls each have nine LEDs. On each ring either one LED or two neighboring LEDs (in between position) will light up at a time, indicating a total of 17 different positions.
- If the **TAP** button 10 is pressed, the **TREBLE** control functions as a **PRESENCE** control. This enables you to boost/cut a high-frequency filter tuned to whatever amp model is active, thus simulating the frequency-dependent negative feedback of tube amps.
- 6 The **AMPS** control is for selecting one of 32 different amplifier simulation models. The control is surrounded by a ring of 16 LEDs. Each LED corresponds to two types of amplifiers. The first 16 simulations can be selected by turning the **AMPS** control.

To select the simulation models 17 - 32, press down the **TAP** button while making your selection by turning the **AMPS** control.

- The LED "17 - 32" in the bottom left-hand corner of the **DISPLAY** indicates that one of the simulation models 17 - 32 has been selected.

In addition, you can activate a **PREAMP BYPASS** by pressing the button combination **TUNER** 8 and **TAP** 10 for using the V-AMPIRE as effects unit. If **PREAMP BYPASS** has been selected, none of the LEDs on the **AMPS** control lights up. To disable **PREAMP BYPASS**, simply select a different amp model or press both buttons again.

- 7 These five buttons are for selecting a preset (A - E) within one bank.

In **EDIT** mode (activated by simultaneously pressing the arrow buttons described in 9), the buttons perform the function printed directly below them:

- ▲ **A**: Accesses the **MIDI** functions. Use the arrow buttons to set the **MIDI** channels (1 through 16) for transmitting and receiving **MIDI** data.  
  
If you use button **A** in **EDIT** mode to select the **MIDI** function and then press the **TAP** button, the **MIDI OUT** connector is set to act as a **MIDI THRU**. In this setting (the **TAP** LED is lit) no **MIDI** data is sent, but the device passes on the signal received at the **MIDI IN** connection.
- ▲ **B**: Selects the **DRIVE** function. This noticeably raises distortion and volume. Use the arrow buttons to switch **DRIVE** on and off. The **DRIVE** function is wired pre **GAIN** control.
- While editing the **DRIVE** function, you can also activate and adjust the **Wah-Wah** effect by turning the **EFFECTS** control. The LEDs surrounding the **EFFECTS** control indicate the position of the pedal. If none of the LEDs light up, the **Wah-Wah** is not activated.
- ▲ **C**: This button activates the **CABINETS** mode. Use the arrow buttons to select the type of speaker or combination of speakers you want. You can also switch off the speaker simulation completely ("-"). For further details, please refer to chapter 5.2.
- ▲ **D**: Use this button to select the **REVERB** function. The arrow buttons can be used to select one of nine different types of reverb in addition to the multi-effects processor. For further details see chapter 6.3.
- ▲ **E**: Here you can activate the **NOISE GATE** function. Use the arrow buttons to adjust the noise reduction threshold.
- After preset editing, please press **TUNER/EXIT** to quit (the **EDIT MODE** LED dies out).
- CONFIGURATION**: If you press the **D** and **E** buttons simultaneously, you can select the general operating mode of your V-AMPIRE, allowing adjustments to different studio and live situations (see chapter 3). To do that, first exit the **EDIT** mode by pressing **TUNER** ("Exit").
- 8 The **TUNER** button is for switching on the tuner. In addition, this button can be used to quit **EDIT** mode ("Exit").
- 9 Use the two arrow buttons to select a different bank (**BANK DOWN** and **BANK UP**). You can skip banks by holding each of the buttons down. To activate the **EDIT** mode, press both buttons simultaneously. If you press one of the buttons **A - E** (7) in that mode, the arrow buttons can be used for setting parameters.

# V-AMPIRE LX1200H/LX210

[10] The *TAP* button has seven functions:

- ▲ “**Tap**”: Tap the rhythm of a piece of music on the *TAP* button and the selected effect automatically adapts to the tempo of the music.
- ▲ “**Presence**”: While holding down the *TAP* button, you can use the *TREBLE* control to change the *PRESENCE* setting of the amp model you’ve selected.
- ▲ “**2<sup>nd</sup> parameter**”: You also can access the second effects parameter set by using the *EFFECT* control while holding down the *TAP* button.
- ▲ “**Amp Models 17 - 32**”: Keep the *TAP* button pressed down and select an amp model using the *AMPS* control.
- ▲ “**MIDI Thru**”: The *MIDI OUT* connector can be set to act as *MIDI THRU* (see [7] “A”).
- ▲ “**Drive**”: Using the *TAP* button and the *EFFECT* control changes the sound of the *Wah-Wah* effect.
- ▲ “**Input Gain**”: By pressing the *TAP* button in the configuration menu (see [7]) you change the value (please refer to chapter 3.1 for further information).

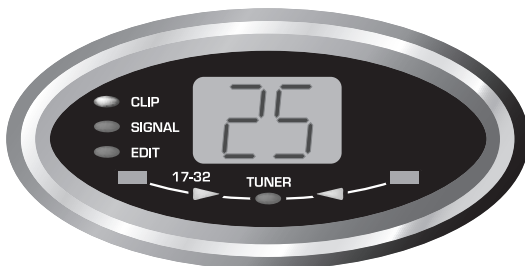


Fig. 2.2: V-AMPIRE display

[11] The *DISPLAY* shows you which preset bank you have selected and gives you information on parameter changes when you are editing. In *TUNER* mode the *DISPLAY* shows the pitch of the instrument connected to the unit. If one of the amplifier simulations 17 - 32 has been selected, the LED in the bottom left-hand corner of the *DISPLAY* lights up. Applied signals are indicated by the green *SIGNAL* LED, overload signals by the red *CLIP* LED.

[12] This control is for selecting an effect or a combination of effects. This encoder-type rotary control is also surrounded by a ring of 16 LEDs. Each LED corresponds to one specific effects preset.

[13] If an effect has been selected via [12], its part of the overall sound can be set using this *EFFECTS* control. If you select the “Compressor” effect, you can use the *EFFECTS* control to adjust the compression intensity. Turning the control to the left until all the LEDs are off disables the effect. This is known as an effects bypass.

☞ **By pressing the *TAP* button, you can set a second effects parameter using the *EFFECTS* control (see table 6.1).**

[14] Using the *REVERB* control, you can gradually add reverb to your overall sound. By turning it to the left until all the LEDs are off, you deactivate the reverb. To fade out the original signal, turn the control to the right until only the last LED lights up.

[15] The *MASTER* control determines the overall volume of your device.

☞ **This is the only “conventional” non-programmable control. All other controls are encoder-type rotary controls whose settings can be stored as a preset.**

[16] The *INPUT* socket is the 1/4" connector for your guitar. Please use a standard 1/4" TS connector.

[17] The stereo *PHONES* connector allows you to monitor the audio signal with standard headphone (e.g. BEHRINGER HP series).

☞ **Your V-AMPIRE automatically activates studio mode 1 (S1) when connecting headphones. In this mode the digital speaker simulations are activated. With the headphones plugged in, you are able to select any other configuration, e.g. for monitoring purposes (see also chapter 3).**

☞ **If you did not choose a speaker simulation with the current setting and connect headphones, the device will automatically switch to a speaker simulation. This will increase the listener’s sound impression. Please refer to table 5.2 for detailed information on the various speaker/amp combinations. However, you can intentionally change or deactivate the simulation when using headphones by selecting “-” in the *CABINETS* mode (see [7] C).**

## WARNING!

☞ **Please note that high volume levels may cause permanent damage to your hearing and/or your headphones. Turn all *LEVEL* controls to the left before you switch on the unit. Be sure to keep the volume at an appropriate level.**

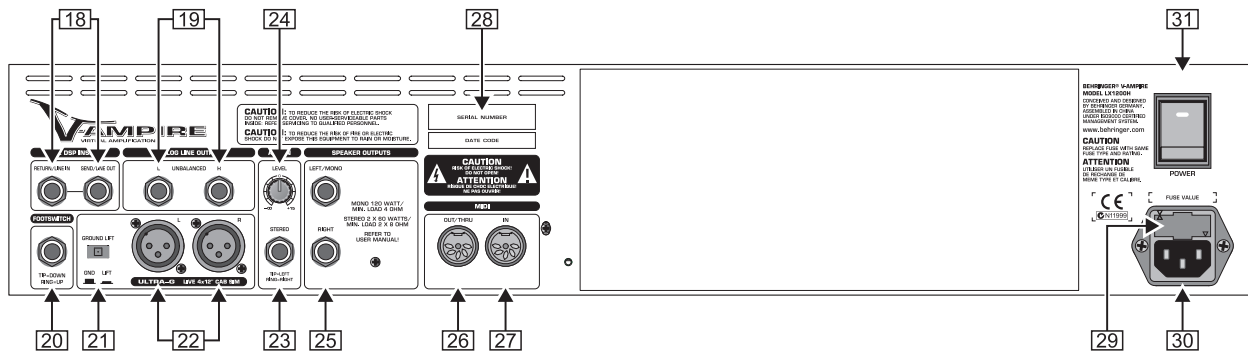


Fig. 2.3: Control elements of the V-AMPIRE (rear panel LX1200H)

## 2.2 Rear panel

- 18 The V-AMPIRE features a serial insert path for external effects. Connect the *SEND/LINE OUT* connector to the input of your effects device. The *SEND/LINE OUT* output is taken directly pre-digital processor (PRE DSP), which means you can use this connector also to record a “dry” direct signal without any effect added. Connect the *RETURN/LINE IN* connector to the output of your external effects device.
- 19 When using the serial insert path, please do not set the effects device to 100% effects signal (“wet”); otherwise, the direct signal will be missing.
- 20 As soon as the VAMPIRE’s *LINE IN (Return)* is connected, the signal is automatically routed to the DSP. The input signal from the front will then be interrupted at this point.
- 21 The *ANALOG LINE OUTPUTS* provide the stereo signal without analog speaker simulation applied.  
Use these connectors, for example, to connect an external amp on stage.
- 22 You may use both balanced and unbalanced plugs with the *LINE OUTS*.
- 23 Connect the stereo connector of your FS112V footswitch (included) to the *FOOTSWITCH* socket. This will enable you to recall the presets from one bank. To switch on the tuner, hold down the *DOWN* button on the footswitch for more than two seconds. You can also switch the tuner off again using the same button.
- 24 The *GROUND LIFT* switch disconnects (switch pressed) the ground connection at the *DI OUT* outputs to effectively eliminate hum noise resulting from ground loops. When the switch is pressed (*LIFT*), the ground connection is interrupted.
- 25 The *DI OUT* output provides the balanced stereo signal of your V-AMPIRE. Connect this output (L/R) to two balanced microphone inputs on your mixing console. With configuration modes L1 and L2 the maximum level is reduced to -10 dBu so that you can directly connect them to the mic inputs of your mixing console.
- 26 The *AUX IN* connector socket enables you to feed in additional stereo signals. This way, you can for example play a drum computer or a playback.
- 27 The *AUX LEVEL* control is used for determining the volume of the signal received at the *AUX IN* input.
- 28 Connect two loudspeakers (*LEFT/MONO* or *RIGHT*) to these connectors.


- 29 LX1200H: A loudspeaker with minimum 4  $\Omega$  impedance and 120 Watt power handling can be connected to the left output (mono). Two speakers with minimum 8  $\Omega$ /60 Watts each can be connected to both outputs. Our ULTRASTACK BG412 series speakers are a perfect match because they can be operated in either mono or stereo mode.
- 30 LX210: Without external loudspeakers the internal speakers run at 2 x 60 Watts stereo. You may connect two 8  $\Omega$ /60-Watt speakers on the left and right outputs. In this case, the internal speakers automatically shut off. For example, when using only the right output, it runs together with the left internal speaker while the right internal speaker shuts off. Alternatively, when using the left output, the left internal speaker shuts off and only the right internal speaker is active. Our ULTRASTACK BG412 Series is perfect for this application (at 8  $\Omega$  min.).
- 31 This is the *MIDI OUT/THRU* connector. It is configured as *MIDI OUT* but can be set to act as a *MIDI THRU* connector (see 7 A).
- 32 Use the *MIDI IN* to connect a foot controller, for example, the BEHRINGER MIDI FOOT CONTROLLER FCB1010 (see chapter 8.3 for details).
- 33 SERIAL NUMBER.
- 34 FUSE HOLDER/VOLTAGE SELECTOR. Before connecting the unit to the mains, make sure that the voltage setting matches your local voltage.  
A blown fuse should only be replaced by a fuse of the same type and rating. On some units, the fuse holder can be switched to one of two positions, i.e. 230 V and 120 V. When operating the unit outside Europe at 120 V, a higher fuse rating is required (see chapter 8 “INSTALLATION”).
- 35 The mains connection is on an IEC receptacle. An appropriate power cord is included.
- 36 Use the *POWER* switch to put the V-AMPIRE into operation. The *POWER* switch should be in the “off” position (not pressed) if you want to connect the device to the mains.
- 37 Attention: The *POWER* switch does not fully disconnect the unit from the mains. To disconnect the unit from the mains, pull out the main cord plug or appliance coupler. When installing the product, ensure the plug or appliance coupler is readily operable. Unplug the power cord completely when the unit is not used for prolonged periods of time.

# V-AMPIRE LX1200H/LX210

## 3. OPERATING MODES AND APPLICATIONS

One outstanding V-AMPIRE feature is that you can choose which parts of the signal you want to route to the outputs. To adapt your device perfectly to the various studio and live applications you can choose between 5 different operating modes (CONFIGURATIONS). Independent of the settings stored in the presets, these operating modes determine where the signal for the line outs and headphones comes from so that both left and right output signal can be used for different purposes.

Because the choice of the most suitable operating mode depends on where you use it, we have described some typical applications.

 **With the headphone plugged, the device automatically switches into S1 operating mode.**

### 3.1 Selecting an operating mode in CONFIGURATION mode

Operating mode	OUTPUTS L	OUTPUTS R
Studio 1 (S1)	<b>Stereo operation</b> with effects, amp and speaker simulation	
Studio 2 (S2)	Amp and speaker simulation, dry, <b>w/o</b> effects	Amp and speaker simulation, dry, <b>with</b> effects
Studio 3 (S3)	Amp simulation dry, <b>w/o</b> effects	Amp simulation <b>with</b> effects
	<b>Phones/XLR outputs</b> additionally with analog ULTRA-G speaker simulation	
Live 1 (L1)	<b>Stereo operation:</b> Amp and speaker simulation, 3-band EQ + Effects	
Live 2 (L2)	<b>Connector outputs</b> <b>Stereo operation:</b> <b>w/o</b> cab simulation but with 3-band EQ, amp simulations + effects	
	<b>Phones/XLR outputs</b> additionally with analog ULTRA-G speaker simulation	

Table 3.1: Operating modes (CONFIGURATIONS)

The settings of the configurations are made in the configuration menu by simultaneously pressing the buttons D and E. The display shows the current configuration. Use the arrow buttons to select another configuration. Please refer to table 3.1 for information on the corresponding output signals.

 **By pressing the TAP button and adjusting the GAIN control you can additionally adapt the input amplification to particularly loud pick ups.**

In the configuration menu you can adapt the input gain to different pick up types. To do this, keep the TAP button pressed and the surrounding GAIN control LEDs show the current setting. Turning the GAIN control from its center position to the left you will reduce the input amplification which probably is recommendable with very loud pick up types. GAIN settings in clockwise direction are only recommended with very weak pick up types.

Quit the configuration menu by pressing TUNER/EXIT.

### 3.2 Live on stage or in a rehearsal room

#### 3.2.1 LX1200H

Figure 3.1 shows a single 4 Ω speaker cabinet connected to the left speaker output (mono) to deliver the full 120 Watts.

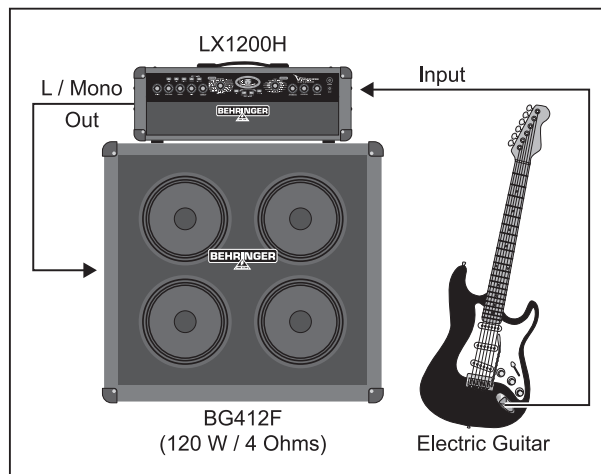


Fig. 3.1: Mono operation at 4 Ω impedance

Figure 3.2 shows a stereo cabinet (e.g. the BG412V from our ULTRASTACK series) connected to the left and right speaker outputs. The cabinet is then powered by 2 x 60 Watts at 2 x 8 Ω impedance to get the most from the V-AMPIRE's stereo effects.

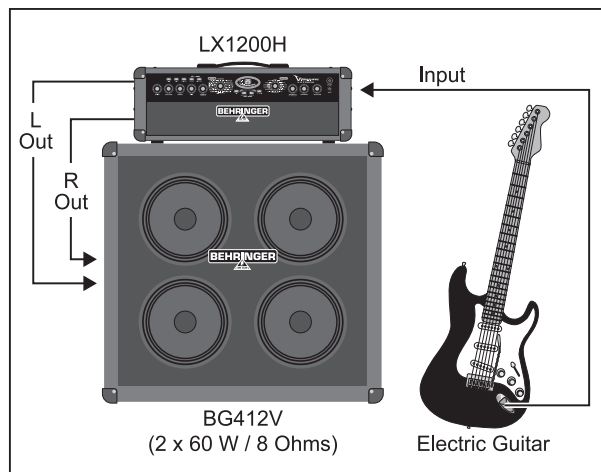


Fig. 3.2: Stereo operation at 2 x 8 Ω impedance

Our favourite operating mode for live applications is Live 2 (L2), i.e., a mono signal (1 x 4 Ω) or a stereo signal (2 x 8 Ω), with all effects, amp simulation and live EQ but no speaker simulation. The XLR output has analog ULTRA-G speaker simulation that can be connected to a sound reinforcement system. Here, the MASTER control only influences the stage volume but not the XLR output level.

If you want to listen to a digital speaker simulation using an amplifier, select L1.



# V-AMPIRE LX1200H/LX210

## 3.2.2 LX210

You can connect both speaker outputs to an external stereo speaker arrangement, e.g. our BG412S. In this configuration the V-AMPIRE also delivers 2 x 60 W into 8  $\Omega$  per side (fig. 3.3).

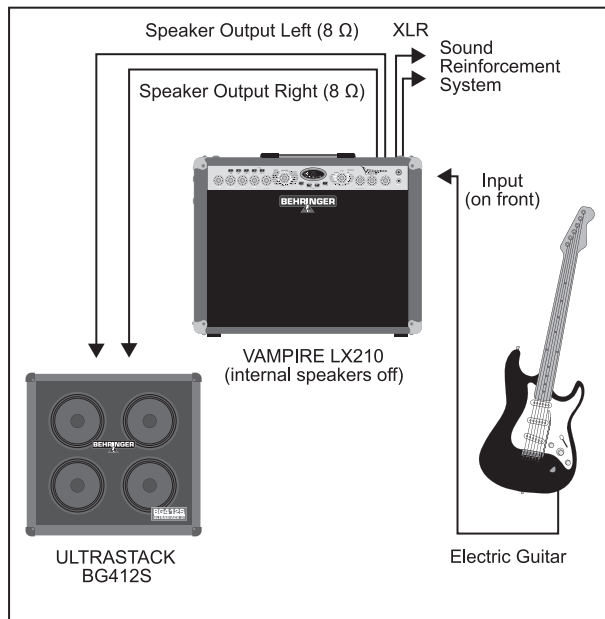


Fig. 3.3: Operation with external 2 x 8  $\Omega$  stereo box

Alternatively, just one external 8  $\Omega$  speaker may be connected to the right or left speaker output. This also represents a stereo configuration, because just the corresponding internal speaker is muted, the other one is still active (fig. 3.4).

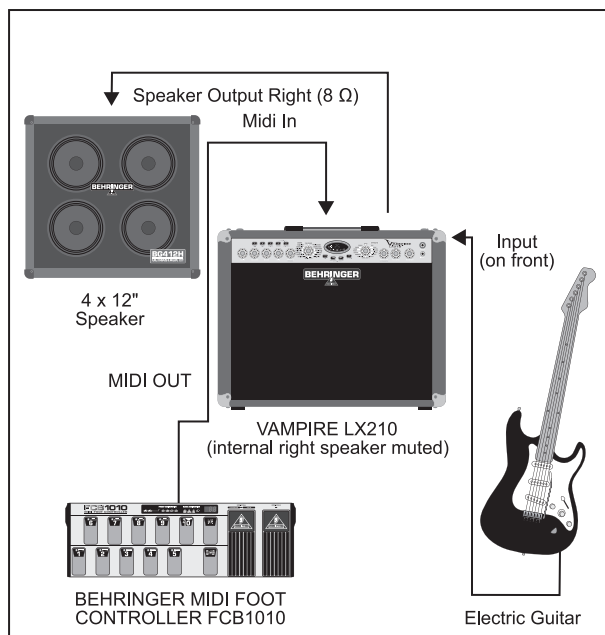


Fig. 3.4: Stereo operation with external 4  $\Omega$  box and internal speaker

## 3.3 Rehearsal or recording at home (LX1200H und LX210)

When using headphones, the V-AMPIRE will switch into studio mode 1 (S1). This mode is particularly suitable for rehearsals or when recording/monitoring. You could also use live mode 1 (L1) which applies an additional 3-band EQ.

**When connecting headphones, the amp signal is automatically muted. Thus, if you unplug the headphones we strongly recommend to turn the MASTER control to the very left. The XLR output is independent of the MASTER control setting. This allows to tap into a line signal for recording purposes, even when MASTER control is set to minimum.**

Using studio mode 2 (S2) at home can be a good idea when it comes to recording an amp sound without effects ("dry") but monitoring it with effects ("wet"). Working this way, you are able to choose the effects you want later during mixdown. In this case you would route the left output to the soundcard of your computer and monitor the right output via your mixing console.

Figure 3.5 shows a typical home/rehearsal room application.

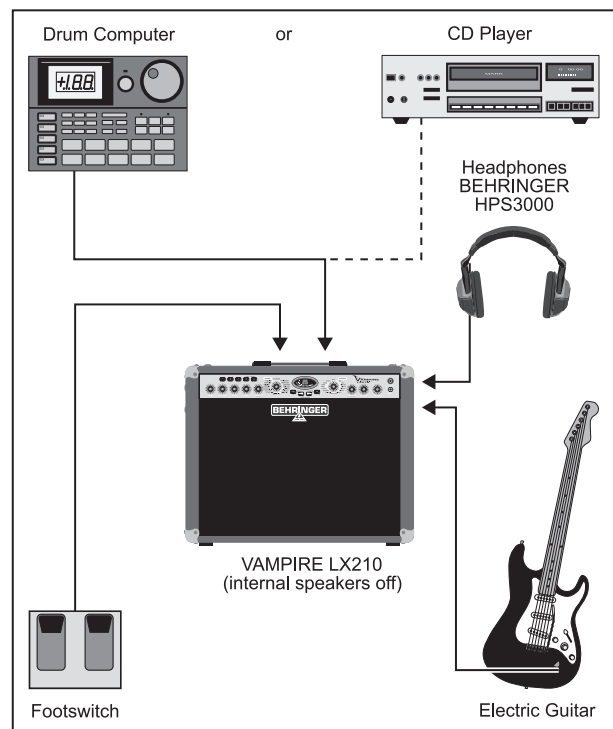


Fig. 3.5: Standard home/rehearsal setup

One advantage of rehearsing at home is that there is often a computer available which allows you to design, edit, send, receive and archive new presets comfortably and effectively. Download our V-AMP DESIGN software free of charge at [www.v-amp.com](http://www.v-amp.com). You can create your own presets even with minimum system requirements (Windows PC with MIDI interface or gameport MIDI adapter). On the V-AMP homepage you also find an online preset database (ULI, user library interface) with plenty of presets created by other V-AMP users and famous artists. Here, you can upload your own favorite presets and make them accessible for other users.

# V-AMPIRE LX1200H/LX210

## 3.4 Studio recording/recording (LX1200H und LX210)

As with rehearsals at home or anywhere else, the V-AMPIRE can be connected directly to a mixing console or recording device via its XLR outputs. In addition, you can use the pre DSP insert send to record the same direct guitar signal without needing another DI-box for impedance adjustment.

In the studio you can raise the volume to take full advantage of the V-AMPIRE's own sound. This can be of particular interest if you have a particular speaker cabinet with its own sonic character, or if acoustic feedback from the guitar speaker to the guitar is desired. For the first scenario, you will need to use a microphone to capture this special loudspeaker tonal quality. For the second scenario, you can directly feed the XLR output into the console without the feedback sound being gone. We recommend mode L2, with 3-band EQ but without digital speaker simulation.

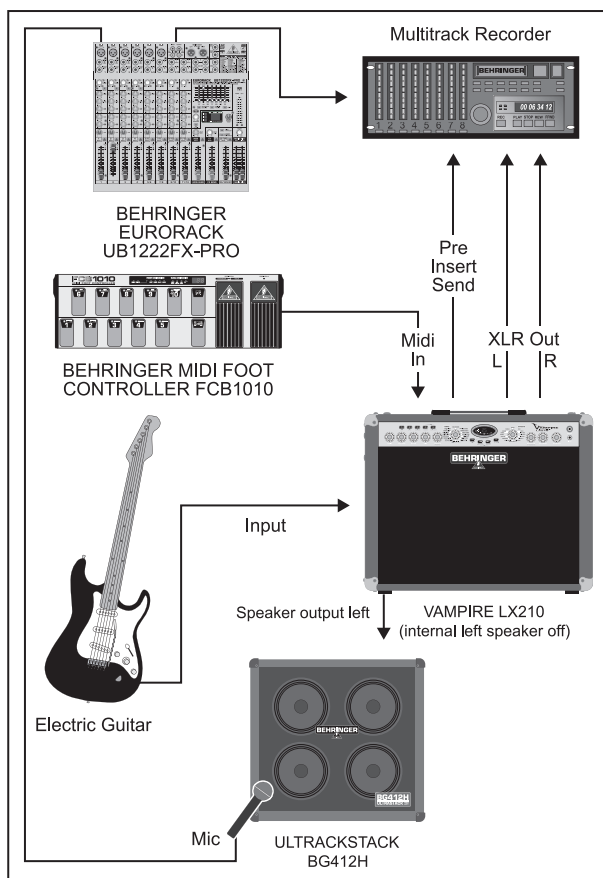


Fig. 3.6: Expanded recording setup with a multitrack-recorder and a mixing console

## 4. PRESETS

Your V-AMPIRE features 125 overwritable presets divided into 25 banks. In other words, there are five presets available per bank. Each preset consists of a maximum of five "ingredients":

- ▲ amp simulation (including GAIN, EQ and VOLUME settings)
- ▲ cabinet simulation
- ▲ pre-amp effect, such as noise gate, compressor, auto wah and wah-wah
- ▲ post-amp multi-effect, such as delay, modulation effect, or a combination of both
- ▲ reverb effect

The enclosed sheet shows an overview of all the presets.

### 4.1 Calling up presets

When you power on your V-AMPIRE, it automatically loads the last used preset. In the following example, the last preset selected was preset D in bank 25:

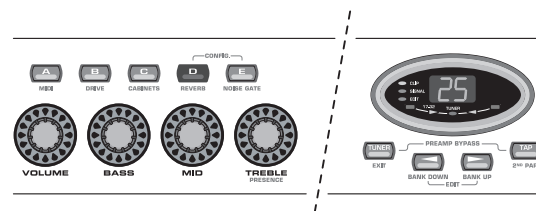


Fig. 4.1: Calling up presets

In this case, by pressing button A, B, C or E you can immediately call up another preset of the same bank. The two arrow buttons (BANK UP and BANK DOWN) enable you to switch banks.


The display always shows which bank has been selected. When you switch banks, the preset has to be called up by pressing one of the buttons A - E. One LED lights up to show you which preset in the respective bank has been activated.

### 4.2 Editing presets

Editing presets is fast and simple. One option is to call up a preset you like and then start editing it. Select an amp model by means of the AMPS encoder. The LED on the preset button flashes (e.g. D) and signals that you have made a change to the preset.


Now change the settings of the VOLUME, BASS, MID, TREBLE and GAIN controls as you like. If you select an effect, you can adjust its ratio in the overall sound using the EFFECTS control. You then switch to EDIT mode by pressing the arrow buttons simultaneously. If you use buttons B - E to activate the DRIVE, CABINETS, REVERB and NOISE GATE functions respectively and then edit using the arrow buttons, the value of the respective parameter is shown in the display. To quit EDIT mode, briefly press the TUNER button.

If you hold the TAP button down while using the TREBLE control, you can raise or lower an additional high-frequency filter (PRESENCE). This simulates the frequency-dependent negative feedback of tube amps.

 **Apart from compressor and auto wah, all the multi-effects have a speed-based parameter. Say you want to set the effect you've selected to the tempo of your playback: just tap the TAP button twice in time to the music and the effect tempo will match the tempo of your piece.**

## 4.3 Storing presets

To store your edited preset, hold down the preset button required for approx. 2 seconds for the preset to be overwritten (the corresponding LED lights up throughout).

 You do not necessarily have to store your edited preset in place of the original preset selected. If you choose a different storage position, select the preset bank you want using the arrow buttons (BANK UP and BANK DOWN). You can store your changes by holding down the preset button for approx. two seconds. For example, you can edit a preset originally stored in bank 5, position D, and then store it in bank 6, position A.

## 4.4 Discarding an edited preset/restoring a single factory preset

If you have edited a preset and find that you don't like the edited version, you can, of course, discard it. Let's assume you've selected and then edited preset C (the corresponding LED has lit up), but you would now like to return to the configuration stored previously. Simply select another preset. The next time you call up the preset, the temporarily edited version is discarded. After editing, you can also hold down the two arrow buttons until "Pr" appears in the display, which brings back the factory preset that was originally stored there. However, you then have to save it again by holding down the corresponding preset button for approx. two seconds.

## 4.5 Restoring all factory presets


All factory presets can be restored as follows: Hold down buttons D and E and then switch on the device. "CL" appears in the display. Now release the two buttons and press the two arrow buttons simultaneously. This erases all the edited presets you have stored and restores the factory presets. Please refer to chapter 8.3.1 if you need information on how to save your settings via MIDI.

## 5. AMP/SPEAKER-SIMULATION

The very heart of the V-AMPIRE sound is its amp/speaker simulation. The 32 simulation models can make work in a home recording studio very much easier because it isn't necessary to mike up the guitar amp. With the V-AMPIRE it is child's play for you to choose one of the legendary guitar amps, be it for Brit Pop, Blues, Heavy Metal or whatever. In addition, you can tailor the sound of the respective amp to suit your ideas and then connect it virtually to one of 15 speaker simulations (cabinets). On top of all that, you can even choose digital effect and reverb types for your virtual amp. See chapter 6 "EFFECTS PROCESSOR" for more details.

When you switch on the device, it automatically loads the last preset selected. The LED ring around the AMPS control shows which amp has been selected. The corresponding LED lights up. To select another amp simply turn the control. Use the VOLUME, BASS, MID, TREBLE and GAIN controls to modify the basic sound of the amp. Hold down the TAP button and turn the TREBLE control to raise or lower an additional high-frequency PRESENCE filter (see [5]).

As a rule, you will want to select an amp first, then a cabinet and finally an effect. See chapter 4 for how to store your modifications. To give you a better overview of the extensive range of amp simulations, we have compiled the following descriptions of the different types of amplifiers.

 When you select an amp simulation, an appropriate speaker simulation is activated automatically (see tab. 5.2). Otherwise, the authenticity of the sound could be affected by an unsuitable cabinet—especially if you are using headphones. Naturally, you can combine the amp simulations with other cabinets according to taste.

## 5.1 Amp descriptions

**AMERICAN BLUES:** This virtual amp is modeled on the Fender Bassman 4 x 10 Combo. Originally designed as a bass amp, it soon became a standard amp of blues legends such as Steve Ray Vaughan or Billy Gibbons due to its characteristic distortion. As you would expect, it packs a solid punch in the bass range, but is still flexible enough in the mid and treble ranges.

**AND DELUXE:** A synthesis of a 1960 Fender Blackface Deluxe and a '50s Fender Bassman. The result is a crystal-clear sound that still simulates the edge of the vintage amps. The sound control gives you even greater scope than the EQ controls on the originals.

**MODERN CLASS A:** This amp is characterized by its slight distortion and sounds almost like hi-fi. It is modeled on the Matchless Chieftain, a very expensive, hand-made amp.

**CUSTOM CLASS A:** The model for this simulation is the Budda Twinmaster. This Class A amp is renowned for its warm sound combined with irresistible tube distortion. Although the original amp does not have a mid control, we have given the capability of suiting the mid range to your taste.

**TWEED COMBO:** This was Jeff Beck's favorite when he recorded the albums *Blow by Blow* and *Wired*. This amp was not actually designed for heavy distortion, but due to its low power, it is ideal for uncompromising overdrive sound.

**SMALL COMBO:** This model is based on the 1960 Tweed Champ. The main attraction of this amp simulation is when the DRIVE function is used a lot. Although this amp was actually designed for beginners on the guitar, it soon became a favorite amp of many guitar aficionados. The reason for that was that it produced an amazingly distorted sound even at low volume.

The Tweed Champ had a volume control, but no EQ control. If you want to get the most authentic sound out of this amp, keep the sound control on your V-AMPIRE in the mid position.

**CLASSIC CLEAN:** Back in the '80s, the Roland JC-120 was the preferred sound of Buzzy Feiten (guitarist with the Dave Weckl Band). The unique quality of this transistor amp's sound is the way its brilliance cuts through any mix. It is ideal for the New Wave sound of the 80s that is making a come-back today. By the way, the JC-120 was also popular among Fender Rhodes pianists.

**BLACK TWIN:** This simulation was modeled on a Fender Blackface Twin from 1965. In the '60s this amp was used by jazz, country and even rock guitarists. What was unique about it was that it was exceptionally loud and was therefore mainly used for live performances. The secret of the Blackface Twin was that although you could play it extremely loud, the distortion remained relatively low.

**BRIT BLUES:** Modeled on the JTM 45, the first Marshall amp ever. This, by the way, was Eric Clapton's favorite amp when he was with Cream. The JTM 45 was the forerunner of many of Marshall's later amps with their distinctive, powerful sound. Extreme gain settings produce a highly compressed and really "dirty" sounding distortion. Combined with a 2 x 12" speaker simulation it produces impressive Bluesbreaker sounds.

**AND CUSTOM:** This simulation is based on a 1965 Marshall JTM 45 Bluesbreaker but has more flexibility of sound control. Turn the GAIN control to the left and this simulation sounds like a Marshall; turn it to the right and it is more reminiscent of the Budda.

# V-AMPIRE LX1200H/LX210

**BRIT CLASS A:** This simulation is modeled on the Vox AC 30. This amp was originally designed in the '60s when guitarists wanted amps with enhanced brilliance, a feature that Vox successfully implemented by means of "revolutionary" bass and treble controls. Brian May and U2's The Edge are probably the best-known users of this sound.

**NON TOP BOOST:** This is a Vox AC 30 as used by Bryan Adams in the recording studio. Unlike the well-known AC 30 with treble boost, the former amp version did not have this feature. This simulation copies the original amp's "normal" channel.

**BRIT CLASSIC:** Based on a 1959 Marshall Plexi 100 Watt, this amp is ideal for producing clean sounds. It was used by Jimi Hendrix, Eric Clapton and Jeff Beck.

**CLASSIC 50 W:** This is also a Plexi, but we have extensively widened its sound range. The sound controls on the original Marshall Plexi 50 Watt hardly had any effect on the sound if distortion was high.

**BRIT HI GAIN:** Compare this model with a Marshall JCM 800. Although the original was renowned mainly for its distorted sounds, this amp also sounds very good with low gain settings. It's good at reproducing Steve Ray Vaughan's and Michael Landau's sounds. In distortion mode it sounds like Gary Moore in his early days, but it's also good for heavy metal.

**BRITISH CLASS A 15 W:** Another Vox model, based on the first channel of an AC 15 from 1960. Unlike the AC 30 this amp had only one 12" speaker, instead of two, and produced a warmer sound. Tip: to make this simulation sound as authentically as possible, leave the BASS and MID controls in mid-travel position and vary the TREBLE control only.

**RECTIFIED HI GAIN:** This model is based on a 1994 Mesa Boogie Dual Rectifier Trem-O-Verb featuring a modern, high-gain sound that also comes over well in a band context. The tone control is post-gain, which allows you to tailor distorted sounds to great effect. This amp is perfect for heavy metal, but also for Steve Lukather sounds. The best-known user of this amp is Dream Theater's guitarist John Petrucci.

**RECTIFIED HEAD:** This simulation is modeled on a Mesa Boogie Dual Rectifier top. Unlike the Trem-O-Verb, this amp produces a more modern high-gain sound. The tone control is most effective at high gain settings.

**MODERN HI GAIN:** Here, too, the tone control is post-gain, allowing the extremely distorted sound to cut through the mix. The MODERN HI GAIN sound is ideal for playing Grunge, but is also used by guitarists such as Steve Vai and Joe Satriani. Among others, Steve Lukather, Nuno Bettencourt and Steve Vai have all popularized the Soldano sound. If you're playing a Gibson Les Paul, MODERN HI GAIN sounds best when you turn down the volume control on the guitar a little.

**SAVAGE BEAST:** Engl is well-known for amps that really cut through. The Savage 120 in particular has built up a large following among guitarists. For some time now Ritchie Blackmore has been a major endorser of this German company, and Randy Hanson, the best Hendrix since Jimi, also swears by this amp. The unique feature of the Savage is its extreme power and is therefore highly popular with heavy metal guitarists. Silent Force/Sinner guitarist Alex Beyrodt has been an enthusiastic Engl user for years. An amp for making yourself heard!

**FUZZ BOX:** This sound is not actually based on any one amp, but on a particular fuzz box. Jimi Hendrix was one of the first guitarists to recognize the potential in this legendary broadband transistor distortion. The humming distortion sound of the FUZZ BOX has returned to popularity with Alternative Rock and Grunge.

**CUSTOM HI GAIN:** This sound goes back to a 1969 50-Watt Marshall Plexi modified by Jose Arrendondo. Arrendondo was none other than Eddie Van Halen's guitar technician. The unique features of this amp are its fine mid-range sounds and its ability to produce the ultimate in gain without making the sound muddy. Warning: highly addictive!

**ULTIMATE V-AMP:** From clean to brutal hi-gain, this "brute" covers the entire range. The ULTIMATE V-AMP is basically a souped-up rectifier amp.

**ULTIMATE PLUS:** Those who find the ULTIMATE V-AMP too tame will find enough gain here for an overdose.

**DRIVE V-AMP:** This simulation is based on a more modern high-gain lead amp producing a soft but precise sound with plenty of drive, making it ideal for lead guitar work. The DRIVE V-AMP is modeled on the Mesa Boogie Mark III.

**CALIFORNIA DRIVE:** Based on the Mesa Boogie Mark II c, this is purely a simulation of its drive channel—definitely the right choice for Santana songs.

**CRUNCH V-AMP:** This amp is ideal for modern blues or jazz. Its sound is not too subtle, but not in-your-face either—it's crunchy, that's all.

**CUSTOM DRIVE:** This simulates the Dumble Overdrive Special—an amp that was at the top of many guitarists' wish-list but beyond their financial means. Dumble amps are hand-made and can be custom-built for the individual guitarist. What we've done here is simulate the drive channel of one of these rare Dumble amps.

**CLEAN V-AMP:** Here we have managed to simulate the sound of a Roland JC-120 and combine it with our BRIT CLASSIC model. The result is the brilliance of a transistor amp which, however, features the cutting power of a Marshall Plexi. Turn the GAIN control clockwise and the Marshall comes in.

**CALIFORNIA CLEAN:** This model is based on the clean channel of the Mesa Boogie Mark II c. It sounds a little like a Fender, but has more of a punch in the mid-range.

**TUBE PREAMP:** Sound engineers were quick to recognize the appeal of tubes. They used tube amps to add warmth to all kinds of sounds. This amp model is not only for refining guitar sounds. Try putting a vocal track through the V-AMPIRE and give it the finishing touch with TUBE PREAMP.


**CUSTOM CLEAN:** This simulation is of the clean channel on our Dumble amp. A clean sound that really cuts through, especially when used with compressor attack settings around 2 ms.

**PREAMP BYPASS:** In this setting, no amp simulation is selected. This makes it possible, for example, to play through an external guitar preamp and only use the effects or the speaker simulation. To activate the PREAMP BYPASS, press TAP and TUNER.

Fender™, Vox™, Marshall™, Mesa Boogie™, Gibson™, Soldano™, Matchless™, Dumble™, Budda™, Tweed™, Engl™, Roland™ and the names of musicians and groups are registered trademarks belonging to the respective owners and are in no way associated with BEHRINGER.

## 5.2 Speaker descriptions

The sound of any guitar combo depends largely on the type and combination of speakers used. In the past 50 years there has been widespread experimentation to find out what type of speaker is best suited to any one specific guitar sound and in what way the sound is modified when a certain speaker is combined with others.

 When you select an amp simulation, an appropriate speaker simulation is activated automatically (see tab. 5.2). Otherwise, the authenticity of the sound could be affected by an unsuitable cabinet—especially if you are using headphones. Naturally, you can combine the amp simulations with other cabinets according to taste.

The character of a loudspeaker is a combination of its power rating, impedance, sound pressure and size, as well as the material it is made of. 8", 10" and 12" speakers have established themselves as the best sizes for electric guitar amplification. The following table shows a list of all V-AMPIRE speaker cabinets:

Cabinets	
-	BYPASS (NO SPEAKER SIMULATION)
1	1 x 8" VINTAGE TWEED
2	4 x 10" VINTAGE BASS
3	4 x 10" V-AMP CUSTOM
4	1 x 12" MID COMBO
5	1 x 12" BLACKFACE
6	1 x 12" BRIT '60
7	1 x 12" DELUXE '52
8	2 x 12" TWIN COMBO
9	2 x 12" US CLASS A
10	2 x 12" V-AMP CUSTOM
11	2 x 12" BRIT '67
12	4 x 12" VINTAGE 30
13	4 x 12" STANDARD '78
14	4 x 12" OFF AXIS
15	4 x 12" V-AMP CUSTOM

Table 5.1: V-AMPIRE cabinets

Amps 1 - 16	#	Loudspeaker simulation
AMERICAN BLUES	2	4 x 10" VINTAGE BASS
MODERN CLASS A	9	2 x 12" US CLASS A
TWEED COMBO	1	1 x 8" VINTAGE TWEED
CLASSIC CLEAN	8	2 x 12" TWIN COMBO
BRIT. BLUES	12	4 x 12" VINTAGE 30
BRIT. CLASS A	11	2 x 12" BRIT. '67
BRIT. CLASSIC	12	4 x 12" VINTAGE 30
BRIT. HI GAIN	12	4 x 12" VINTAGE 30
RECTIFIED HI GAIN	15	4 x 12" V-AMP CUSTOM
MODERN HI GAIN	15	4 x 12" V-AMP CUSTOM
FUZZ BOX	14	4 x 12" OFF AXIS
ULTIMATE V-AMP	15	4 x 12" V-AMP CUSTOM
DRIVE V-AMP	15	4 x 12" V-AMP CUSTOM
CRUNCH V-AMP	15	4 x 12" V-AMP CUSTOM
CLEAN V-AMP	15	4 x 12" V-AMP CUSTOM
TUBE PREAMP	-	No cabinet simulation (for use with vocals)
Amps 17 - 32	#	Loudspeaker simulation
AND DELUXE	2	4 x 10" VINTAGE BASS
CUSTOM CLASS A	9	2 x 12" US CLASS A
SMALL COMBO	1	1 x 8" VINTAGE TWEED
BLACK TWIN	8	2 x 12" TWIN COMBO
AND CUSTOM	12	4 x 12" VINTAGE 30
NON TOP BOOST	11	2 x 12" BRIT. '67
CLASSIC 50 W	13	4 x 12" STANDARD '78
BRIT. CLASS A 15 W	6	1 x 12" BRIT. '60
RECTIFIED HEAD	15	4 x 12" V-AMP CUSTOM
SAVAGE BEAST	13	4 x 12" STANDARD '78
CUSTOM HI GAIN	15	4 x 12" V-AMP CUSTOM
ULTIMATE PLUS	15	4 x 12" V-AMP CUSTOM
CALIF. DRIVE	4	1 x 12" MID COMBO
CUSTOM DRIVE	5	1 x 12" BLACKFACE
CALIF. CLEAN	4	1 x 12" MID COMBO
CUSTOM CLEAN	5	1 x 12" BLACKFACE


Table 5.2: Loudspeaker/amp simulation default settings

# V-AMPIRE LX1200H/LX210


## 6. EFFECTS PROCESSOR

A special feature of your V-AMPIRE is its built-in multi-effects processor module offering 16 different groups of first-class effects such as chorus, flanger, delay, auto wah as well as various effects combinations.

The appendix gives an overview of all MIDI data transmitted and received by your V-AMPIRE.


 **The standard operating mode of the multi-effects processor is stereo, so you can use stereo effects for recording purposes via the LINE OUT or play in stereo using a second amplifier.**

You can adjust up to 3 effects parameters: by turning the EFFECTS control; by tapping the TAP button in the beat of the music; and by turning the EFFECTS control holding down the TAP button. The following table lists the effects parameters.

 **To match speed-based effects to the tempo of the music, press the TAP button at least twice in the beat of the music.**


Effect No.	Effect	EFFECTS control	EFFECTS control with TAP key down	TAP key
1	ECHO CC49, val 1	Mix CC54	Feedback CC53	Delay Time CC50+51
2	DELAY CC49, val 0	Mix CC54	Feedback CC53	Delay Time CC50+51
3	PING PONG CC49, val 2	Mix CC54	Feedback CC53	Delay Time CC50+51
4	PHASER/DELAY CC55, val 1 + CC49, val 0	Delay Mix CC54	Mod. Mix CC59	Delay Time CC50+51
5	FLANGER/DELAY 1 CC55, val 5 + CC49, val 0	Delay Mix CC54	Mod. Mix CC59	Delay Time CC50+51
6	FLANGER/DELAY 2 CC55, val 5 + CC49, val 2	Delay Mix CC54	Mod. Mix CC59	Delay Time CC50+51
7	CHORUS/DELAY 1 CC55, val 3 + CC49, val 0	Delay Mix CC54	Mod. Mix CC59	Delay Time CC50+51
8	CHORUS/DELAY 2 CC55, val 3 + CC49, val 2	Delay Mix CC54	Mod. Mix CC59	Delay Time CC50+51
9	CHORUS/COMPRESSOR CC55, val 4 + CC44, val 1	Sense CC45	Mod. Mix CC59	Modulation Speed CC58
10	COMPRESSOR CC44, val 1	Sense CC45	Attack CC46	-
11	AUTO WAH CC44, val 2	Depth CC45	Speed CC46	-
12	PHASER CC55, val 1	Mix CC59	Feedback CC58	Modulation Speed CC56
13	CHORUS CC55, val 4	Mix CC59	Depth CC57	Modulation Speed CC56
14	FLANGER CC55, val 6	Mix CC59	Feedback CC58	Modulation Speed CC56
15	TREMOLO CC55, val 2	Mix CC59	-	Modulation Speed CC56
16	ROTARY CC55, val 0	Mix CC59	Depth CC57	Modulation Speed CC56

Table 6.1: Effects and MIDI controllers

 **Table 6.1 shows the MIDI controllers for the corresponding parameters. The settings are made via MIDI. A detailed list of all controllable MIDI parameters will be available free of charge on the BEHRINGER internet site: [www.behringer.com](http://www.behringer.com).**

## 6.1 Wah Wah

The MIDI function enables you to use an additional Wah Wah effect. The optimum control of this effect is achieved by using a MIDI foot controller with expression pedal, e.g. our BEHRINGER MIDI FOOT CONTROLLER FCB1010.

 **Adjust the filter characteristic and grade in the DRIVE menu by simultaneously pressing TAP and turning the EFFECTS control (see also [7] B).**

## 6.2 Effect descriptions

The following section contains short descriptions of the effects that can be produced using the multi-effects processor.



### 6.2.1 Reverb and delay algorithms

**REVERB:** Reverb is still the most important effect for mixing or live performance. That's why we at BEHRINGER make a point of giving you as many as nine different reverb programs so that you can use the most suitable reverb program for any situation. The reverb effect can be added separately to all the other effects (see chapter 6.2).

**ECHO:** Echo is similar to the stereo delay effect in that it is a delayed repetition of the input signal. The main difference is that the high-frequency content of the repeated signals steadily decreases. This simulates a tape delay used in the pre-digital era, producing a "vintage sound." In addition, the reflections are routed in turn to the left and right channels, creating a quasi-stereo effect.

**DELAY:** This algorithm delays the input signal, with different tempo settings producing interesting delay effects. U2's The Edge has impressively demonstrated the potential of this effect.

**PING PONG:** A delay effect that changes position in the stereo image.



### 6.2.2 Modulation effects

**PHASER:** The principle behind the phaser is that a second, phase-shifted signal is added to the audio signal. This makes the sound richer and, above all, livelier. This effect is popular among guitarists and keyboard players alike, but was also used extensively in the '70s with other instruments, such as electric pianos. Depending on how you set it, the phaser can be used to produce slightly modulating or strongly alienating effects.

**FLANGER:** This effect is self-explanatory. Originally, the flanger effect was produced by running two synchronized tape recorders at the same time. The same signals (e.g. a guitar solo) were recorded on both machines. Putting a finger on the left reel of one of the machines caused it and the speed of the playback to slow. The resulting delay produced phase shifts of the signals.

**CHORUS:** This effect adds a slightly modulated off-key element to the original signal, thus creating a pleasant floating effect through variations in pitch.



## 6.2.3 Combinations of effect algorithms (multi-effects programs)

**PHASER & DELAY:** Phaser and delay combined.

**FLANGER & DELAY:** Here the input signal is delayed and processed with a pronounced wave-like effect. It is particularly effective for highlighting single notes, but can also be used to make solos more interesting.

**CHORUS & DELAY:** This algorithm combines signal delay with the popular chorus effect.

**CHORUS & COMP:** Incredible sustain effects can be produced with the compressor. This is especially useful for sustaining individual guitar notes. Combined with chorus, it can make the audio signal extremely dense.



## 6.2.4 Special effects

**COMPRESSOR:** A compressor limits the dynamic range of the audio material, thus producing audible and creative sound effects. Pronounced use of the compressor (using the EFFECTS control) allows you to compress the overall dynamic range of the material.

**AUTO WAH:** The legendary wah-wah effect owes its fame mainly to Jimi Hendrix. Describing it is certainly more difficult than simply listening to Hendrix using it on Voodoo Chile. In American funk music of the '70s you can hear auto-wah effects used in a variety of applications. The auto-wah alters its filter frequency automatically depending on the signal's magnitude, rather than being controlled by the position of a pedal.

**TREMOLO:** Simulates the classic Fender Tremolo. It has returned to popularity with trip-hop.

**ROTARY:** This is the quintessential simulation of the classic organ effect normally produced by speakers rotating at slow or fast speed in an extremely heavy speaker cabinet. This effect uses the physical principle of the Doppler effect to modulate the sound.

**NOISE GATE:** Noise gates are used to remove or reduce noise or other interference. Guitar signals in particular are very sensitive to interference. Not only do guitarists often use high-gain settings but guitar pick-ups can amplify unwanted interference. This can be painfully apparent during breaks in the music. And how does a noise gate work? It simply mutes the signal during breaks, eliminating any interference at the same time.

## 6.3 The separate reverb effect

The reverb effect is independent of the multi-effects processor and can be added to the mix signal at any time. To edit the REVERB function, press button D in EDIT mode (pressing the two arrow buttons simultaneously) and use the two arrow buttons to select one of the nine different reverb types available:

Reverb No.	Reverb Type	Quality
1	Tiny Room	Classic room simulation featuring various room sizes from bathroom to cathedral
2	Small Room	
3	Medium Room	
4	Large Room	
5	Ultra Room	Special effect transforming guitar signals into heavenly pad sounds
6	Small Spring	Simulations of typical spring reverbs
7	Medium Spring	
8	Short Ambience	Simulates the early reflections of a reverberant room
9	Long Ambience	

Table 6.2: Different reverb effects

## 7. TUNER

Press the TUNER button to activate the built-in tuner.

### 7.1 Tuning your guitar

The chromatic tuner automatically recognizes the frequencies of all the standard guitar notes. For the A-string this means a frequency of 220 Hz. When you plug your guitar into the device and play an open string, the tuner will recognize and display the note. Since the tuner uses an auto-chromatic scale, it can also recognize semi-tones, which are shown with a "b" in the display.

It may happen, however, that a note is displayed as "A" but is actually slightly out of tune. This is shown by at least one of the four LEDs at the foot of the display lighting up. In certain cases even two of the LEDs may light up, which indicates that the pitch of the note played lies between the pitches represented by the two LEDs. When the circular tuner LED in the middle lights up, this means the note played is in tune.

### 7.2 Setting reference pitch "A"

To give you maximum freedom for tuning your guitar, you can change the preset reference pitch "A". For clarity's sake, let's look at this in more detail.

The so-called concert pitch "A" has been raised steadily over time. For example, the tuning forks used by Bach, Händel or Mozart were 415, 420 or 421 Hz (oscillations per second). Today's orchestras tune to "A" at 444 Hz, and the Berlin Philharmonic Orchestra lead the field with their own concert pitch "A" at 447 Hz.

The reference "A" on your V-AMPIRE has been factory-programmed at 440 Hz. If you are going to play with a big orchestra tuning their instruments to a reference pitch of 444 Hz, you will need a function that allows you to change your reference pitch. To activate this function, switch on the tuner by pressing the TUNER button and switch to EDIT mode by pressing the two arrow buttons simultaneously. The display will show "40", which means 440 Hz. Use the arrow buttons to raise or lower the reference pitch by up to 15 Hz. The display always shows the last two digits as the first digit is always 4. For example, if you start with a reference pitch of 440 Hz and press the right-hand arrow three times, the display will read 43, i.e. 443 Hz. To quit EDIT mode, press either the TUNER or the TAP button. Any changes will be stored automatically. The tones for the other strings on your guitar will automatically be adjusted to the new reference pitch.

# V-AMPIRE LX1200H/LX210

## 8. INSTALLATION

### 8.1 Mains voltage

Before connecting the unit to the mains, please make sure that the voltage setting on the unit matches the local voltage! The fuse holder at the AC power connector has 3 triangular markings. Two of these three triangles are aligned with one another. The unit is set to the voltage shown next to these markings and can be switched over by turning the fuse holder by 180°. **IMPORTANT: This does not apply to export models designed exclusively for 120 V operation!**

**👉 If you set the unit to a different mains voltage, be sure to use a fuse of the correct type and rating. Please refer to chapter 9 "SPECIFICATIONS" for details.**

**👉 Blown fuses must be replaced by fuses of the same type and rating! Please refer to chapter 9 "SPECIFICATIONS" for details.**

The mains connection is made using the enclosed power cord and a standard IEC receptacle. It meets all of the international safety certification requirements.

**👉 Please make sure that all units have a proper ground connection. For your own safety, never remove or disable the ground conductor from the unit or of the AC power cord. The unit shall always be connected to the mains socket outlet with a protective earthing connection.**

### 8.2 Audio connections

The inputs of your V-AMPIRE come as mono 1/4" connectors. All line out, line in and headphones outputs are configured as 1/4" stereo connectors. The line outputs work with both balanced and unbalanced connections.

The DI OUT outputs of your V-AMPIRE are on XLR connectors.

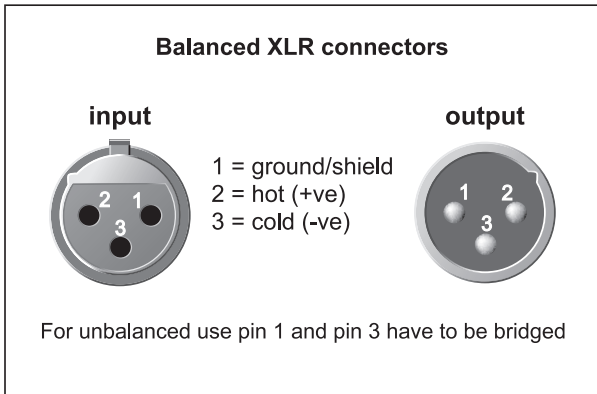


Fig. 8.1: XLR connectors

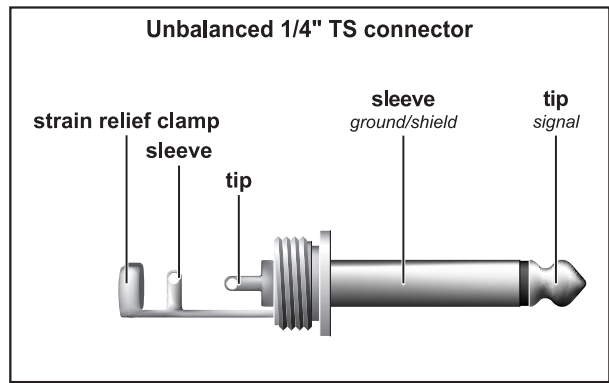


Fig. 8.2: 1/4" TS connector

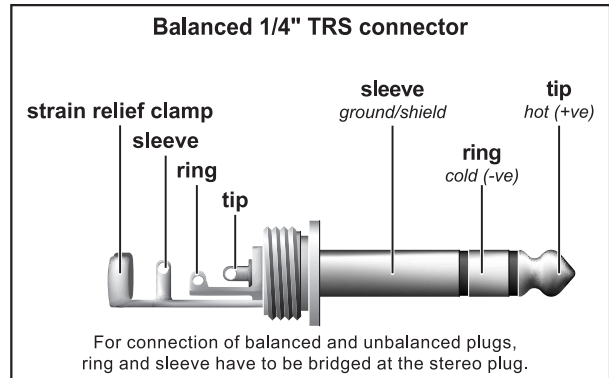


Fig. 8.3: 1/4" TRS connector

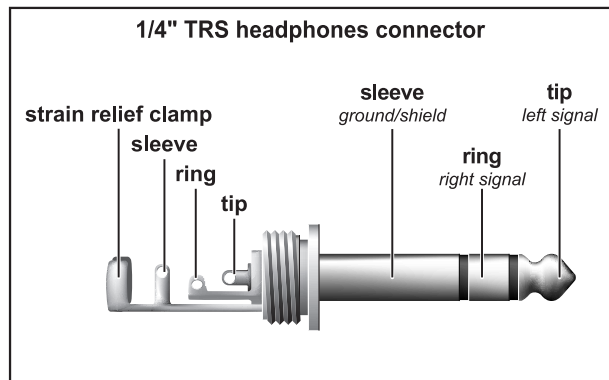


Fig. 8.4: Headphone connector



## 8.3 MIDI connections

The MIDI standard (Musical Instruments Digital Interface) was developed in the early '80s to enable different makes of electronic instruments to communicate with each other. Over the years the range of MIDI applications has constantly expanded, and today it is standard practice to network entire recording studios using the MIDI standard.

The heart of such a network is a computer with sequencer software that controls not only all the keyboards but also effects other peripheral devices. In such a studio set-up you can control the V-AMPIRE in real time from a computer. For live performances in particular, you can also use a MIDI foot controller to control both effect parameters and preset changes.

The MIDI connectors are international-standard 5-pin DIN connectors. To connect your device to other MIDI equipment you will need dedicated MIDI cables. They are commercially available in various standard lengths.

**MIDI IN:** receives MIDI controller data. The receiving channel can be adjusted in EDIT mode by pressing the A button and then using the arrow buttons.

**MIDI OUT/THRU:** used for sending data to a computer or any other devices. You can transmit both preset data and parameter changes. If set to MIDI THRU, the V-AMPIRE does not send its own MIDI information, but passes on the signal received at the MIDI IN connector (see chapter 2.1, [Z] A).

### 8.3.1 Sending/receiving MIDI Sysex data

Your V-AMPIRE can receive system-exclusive data from other MIDI devices provided that the MIDI function (button A) has been activated in EDIT mode. However, this means that all presets on your device will be overwritten automatically. You can also transmit MIDI data from your V-AMPIRE to other devices (total dump) by switching to EDIT mode and pressing the MIDI button until the display reads "d". The total dump function can be useful for transferring all the stored data from your device to a MIDI sequencer and storing it there.

To send individual presets to other devices: switch to EDIT mode by pressing both arrow buttons on the transmitting unit simultaneously, activate the MIDI function and briefly tap the MIDI button. The preset data are first filed in the temporary buffer and can be stored in the preset position of your choice using the store function.

## 9. SPECIFICATIONS

### AUDIO INPUTS

<b>Instrument input</b>	1/4" TS connector, unbalanced
Input impedance	1 M $\Omega$
Max. input level	+9 dBu
<b>Aux In Stereo</b>	1/4" TRS stereo connector
Input impedance	4,7 k $\Omega$
<b>Pre DSP Return Line In</b>	1/4" TS connector, unbalanced
Input impedance	2 k $\Omega$
Max. input level	+9 dBu

### AUDIO OUTPUTS

<b>Analog Line Outputs L/R</b>	1/4" TS connector, unbalanced
Output impedance	ca. 680 $\Omega$
Max. output level	+9 dBu
<b>Pre DSP Send/Line Out</b>	1/4" TS connector, unbalanced
Output impedance	<1 k $\Omega$
Max. output level	+9 dBu
<b>Balanced Line Out</b>	XLR, balanced
Output impedance	100 $\Omega$
Max. output level	+14 dBu (Studio); 0 dBu (Live)
<b>Headphone connector</b>	1/4" TRS connector, unbalanced
Max. output level	+15 dBu/100 $\Omega$ (+23 dBm)

### MIDI

Type	5-pole DIN jacks IN, OUT/THRU
------	-------------------------------

### DIGITAL SIGNAL PROCESSING

Converter	24-Bit Delta-Sigma, 64/128 times oversampling
Dynamics A/D	104 dB @ Preamp Bypass
Dynamics D/A	92 dB
Sampling rate	31,250 kHz
DSP	100 Mips
Delay time	max. 1933 ms
Runtime (Line In > Line Out)	approx. 5 ms

### DISPLAY

Type	two-digit 7-segment LED display
------	---------------------------------

### AMPLIFIER

Mono power (1 x 4 $\Omega$ )	120 W (LX1200H only)
Stereo power (2 x 8 $\Omega$ )	2 x 60 W
Sound pressure level	116 dB @ 1 m

### INTERNAL SPEAKERS (LX210)

Type	2 x 10" BUGERA™
Impedance	8 $\Omega$
Load capacity	70 W (IEC) / 140 W (DIN)

### POWER SUPPLY

Mains voltage	USA/Canada 120 V~, 60 Hz China 220 V~, 50 Hz Europe/U.K./Australia 230 V~, 50 Hz Japan 100 V~, 50 - 60 Hz 120/230 V~, 50 - 60 Hz
General export model	200 W max.
Power consumption	200 W max.
Fuse	for mains voltages 100 - 120 V~: <b>T 5 A H 250 V</b> for mains voltages 200 - 240 V~: <b>T 2.5 A H 250 V</b>
Mains connection	Standard ICE receptacle

### DIMENSIONS/WEIGHT

#### LX1200H

Dimensions (H x W x D)	226 mm (9") x 612 mm (24") x 266 mm (10 1/2")
Weight	ca. 14.6 kg (32 1/5 lb)

#### LX210

Dimensions (H x W x D)	491 mm (19 1/3") x 611 mm (24") x 265 mm (10 1/2")
Weight	ca. 21.5 kg (47 1/2 lb)

BEHRINGER continuously strives to assure the highest quality standards possible. Required modifications may be implemented without prior notice. Technical data and the appearance of the unit may deviate from the above values and/or illustrations.

## 10. APPENDIX

MIDI Implementation Chart			
Function	Transmitted	Received	Remarks
MIDI Channel	1-16	1-16	-
Mode	N	N	-
Note Number	N	N	-
Velocity	N	N	-
After Touch	N	N	-
Pitch Bender	N	N	-
Control Change	-	-	-
1	N (request only)	Y	Wah Pedal
7	N (request only)	Y	Volume Pedal
12	Y	Y	Amp Gain (0-127)
13	Y	Y	Amp Treble (0-127)
14	Y	Y	Amp Mid (0-127)
15	Y	Y	Amp Bass (0-127)
16	Y	Y	Amp Vol (0-127)
17	Y	Y	Presence (0-127)
18	Y	Y	Reverb Mix (0-127) *2
19	Y (skipped on request)	Y	Amp Type (0-32) with default cabinet *3
20	Y (skipped on request)	Y	Fx Type (0-15) with defaults *1
21	Y	Y	Fx off/on (0/127)
22	Y	Y	Reverb Send off/on (0/127)
23	Y	Y	Cabinet Type (0-15) *5
24	Y	Y	Reverb Type (0-8) *4
25	Y	Y	Noise Gate Level (0-15)
26	Y	Y	Drive off/on (0/127)
27	Y	Y	Wah off/position (0/1-127)
44	N (request only)	Y	pre Effect Type (0-2) *6
45	Y	Y	pre Effect Par 1 *6
46	Y	Y	pre Effect Par 2 *6
47	N (request only)	Y	pre Effect Par 3 *6
48	N (request only)	Y	pre Effect Par 4 *6
49	N (request only)	Y	Delay Type (0-2) *7
50	Y	Y	Delay Time hi (0-117) *8
51	Y	Y	Delay Time lo (0-127) *8
52	N (request only)	Y	Delay Spread (0-127)
53	Y	Y	Delay Feedback (0-127)
54	Y	Y	Delay Mix (0-127) *9
55	N (request only)	Y	post Fx Mode (0-6) *10
56	Y	Y	post Fx Par 1 *10
57	Y	Y	post Fx Par 2 *10
58	Y	Y	post Fx Par 3 *10
59	Y	Y	post Fx Mix (0-127) *11
60	N (request only)	Y	Assign Effects Control (0-15) *1
61	N (request only)	Y	Amp Type (0-32) w/o cabinet change *3
64	N	Y	Tap (Value > 63)
80	N	Y	Request Controls (Value = 80)
81	N (request only)	Y	Set Pos (0-15), Set Character (32-127)
82	Y	Y	Tuner Bypass Volume (0-127)
83	Y	Y	Tuner Center Frequency (25-55)
84	Y	Y	Configuration (0-4=S1,S2,L1,L2,L3)
85	Y	Y	Live EQ Treble (0-127)
86	Y	Y	Live EQ Mid (0-127)
87	Y	Y	Live EQ Bass (0-127)
89	Y	Y	Input Gain (0-127)
90	Y	Y	Wah character (0-127)
Program Change	Y (0-124)	Y (0-124,127)	127=Tuner
System Exclusive	Y	Y	see SysEx Documentation
System Common	N	N	-
System Real Time	N	N	-
Running Status	Y (2s Timeout)	Y	-

Table 10.1: MIDI implementation

## 11. WARRANTY

### § 1 OTHER WARRANTY RIGHTS AND NATIONAL LAW

1. This warranty does not exclude or limit the buyer's statutory rights provided by national law, in particular, any such rights against the seller that arise from a legally effective purchase contract.

2. The warranty regulations mentioned herein are applicable unless they constitute an infringement of national warranty law.

### § 2 ONLINE REGISTRATION

Please do remember to register your new BEHRINGER equipment right after your purchase by visiting [www.behringer.com](http://www.behringer.com) (alternatively [www.behringer.de](http://www.behringer.de)) and kindly read the terms and conditions of our warranty carefully.

Registering your purchase and equipment with us helps us process your repair claims quicker and more efficiently.

Thank you for your cooperation!

### § 3 WARRANTY

1. BEHRINGER (BEHRINGER International GmbH including all BEHRINGER subsidiaries listed on the enclosed page, except BEHRINGER Japan) warrants the mechanical and electronic components of this product to be free of defects in material and workmanship for a period of one (1) year\* from the original date of purchase, in accordance with the warranty regulations described below. If the product shows any defects within the specified warranty period that are not excluded from this warranty as described under § 5, BEHRINGER shall, at its discretion, either replace or repair the product using suitable new or reconditioned parts. In the case that other parts are used which constitute an improvement, BEHRINGER may, at its discretion, charge the customer for the additional cost of these parts.

2. If the warranty claim proves to be justified, the product will be returned to the user freight prepaid.

3. Warranty claims other than those indicated above are expressly excluded.

### § 4 RETURN AUTHORIZATION NUMBER

1. To obtain warranty service, the buyer (or his authorized dealer) must call BEHRINGER (see enclosed list) during normal business hours **BEFORE** returning the product. All inquiries must be accompanied by a description of the problem. BEHRINGER will then issue a return authorization number.

2. Subsequently, the product must be returned in its original shipping carton, together with the return authorization number to the address indicated by BEHRINGER.

3. Shipments without freight prepaid will not be accepted.

### § 5 WARRANTY REGULATIONS

1. Warranty services will be furnished only if the product is accompanied by a copy of the original retail dealer's invoice. Any product deemed eligible for repair or replacement under the terms of this warranty will be repaired or replaced.

2. If the product needs to be modified or adapted in order to comply with applicable technical or safety standards on a national or local level, in any country which is not the country for which the product was originally developed and manufactured, this modification/adaptation shall not be considered a defect in materials or workmanship. The warranty does not cover any such modification/adaptation, irrespective of whether it was carried out properly or not. Under the terms of this warranty, BEHRINGER shall not be held responsible for any cost resulting from such a modification/adaptation.

3. Free inspections and maintenance/repair work are expressly excluded from this warranty, in particular, if caused by improper handling of the product by the user. This also applies to defects caused by normal wear and tear, in particular, of faders, crossfaders, potentiometers, keys/buttons, tubes, guitar strings, illuminants and similar parts.

4. Damages/defects caused by the following conditions are not covered by this warranty:

- ▲ improper handling, neglect or failure to operate the unit in compliance with the instructions given in BEHRINGER user or service manuals.
- ▲ connection or operation of the unit in any way that does not comply with the technical or safety regulations applicable in the country where the product is used.
- ▲ damages/defects caused by force majeure or any other condition that is beyond the control of BEHRINGER.

5. Any repair or opening of the unit carried out by unauthorized personnel (user included) will void the warranty.

6. If an inspection of the product by BEHRINGER shows that the defect in question is not covered by the warranty, the inspection costs are payable by the customer.

7. Products which do not meet the terms of this warranty will be repaired exclusively at the buyer's expense. BEHRINGER will inform the buyer of any such circumstance. If the buyer fails to submit a written repair order within 6 weeks after notification, BEHRINGER will return the unit C.O.D. with a separate invoice for freight and packing. Such costs will also be invoiced separately when the buyer has sent in a written repair order.

### § 6 WARRANTY TRANSFERABILITY

This warranty is extended exclusively to the original buyer (customer of retail dealer) and is not transferable to anyone who may subsequently purchase this product. No other person (retail dealer, etc.) shall be entitled to give any warranty promise on behalf of BEHRINGER.

### § 7 CLAIM FOR DAMAGES

Failure of BEHRINGER to provide proper warranty service shall not entitle the buyer to claim (consequential) damages. In no event shall the liability of BEHRINGER exceed the invoiced value of the product.

\* Customers in the European Union please contact BEHRINGER Germany Support for further details.

Technical specifications and appearance subject to change without notice. The information contained herein is correct at the time of printing. The names of companies, institutions or publications pictured or mentioned and their respective logos are registered trademarks of their respective owners. Their use neither constitutes a claim of the trademarks by BEHRINGER® nor affiliation of the trademark owners with BEHRINGER®. BEHRINGER® accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph or statement contained herein. Colours and specification may vary slightly from product. Products are sold through our authorised dealers only. Distributors and dealers are not agents of BEHRINGER® and have absolutely no authority to bind BEHRINGER® by any express or implied undertaking or representation. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording of any kind, for any purpose, without the express written permission of BEHRINGER Spezielle Studiotechnik GmbH. BEHRINGER® is a registered trademark.

ALL RIGHTS RESERVED. © 2005 BEHRINGER Spezielle Studiotechnik GmbH,  
Hanns-Martin-Schleyer-Str. 36-38, 47877 Willich-Münchheide II, Germany.  
Tel. +49 2154 9206 0, Fax +49 2154 9206 4903