

***Congratulations on the purchase of your new T-Rex pedal***

## ALBERTA

The **GAIN** knob controls the amount of distortion .

The **LEVEL** knob sets the overall volume.

The **TONE** knob affects the top end (edge) of your signal without compromising sonic quality, allowing you to dial in the perfect tonal flavor.

Controls:                    GAIN, LEVEL and TONE

Connections:            INPUT: ¼ inch jack  
                              OUTPUT: ¼ inch jack  
                              EXTERNAL POWER JACK: 2.1 mm

Power supply:            9-12V DC adapter or 9V alkaline battery.

Open the battery cover on the back using a flat tipped screwdriver in the slot. Remember to position the battery correctly.

*T-Rex Engineering January 2003*