



# MEGA GO PAR64

## BATTERY REPLACEMENT

The following instructions will help you replace your dead battery in the Mega Go Par64. To replace the battery you need to carefully follow these instructions. If you have any questions please contact American DJ customer support.

**Customer Support:** American DJ provides a customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at [www.AmericanDJ.com](http://www.AmericanDJ.com) for any comments or suggestions. Service Hours are Monday through Friday 8:00 a.m. to 4:30 p.m. Pacific Standard Time.

Voice: (800) 322-6337  
Fax: (323) 582-2941  
E-mail: [support@AmericanDJ.com](mailto:support@AmericanDJ.com)



Start by unscrewing the six phillips screws that secures the cover lens.



After you unscrew the six screws, carefully remove the lens.






Once the lens cover has been removed, unscrew the 4 phillips screws that hold the LED panel in place.

Carefully, slowly, and gently lift the LED panel up and away. DO NOT remove the panel all of the way, it is still connected to the PC board.

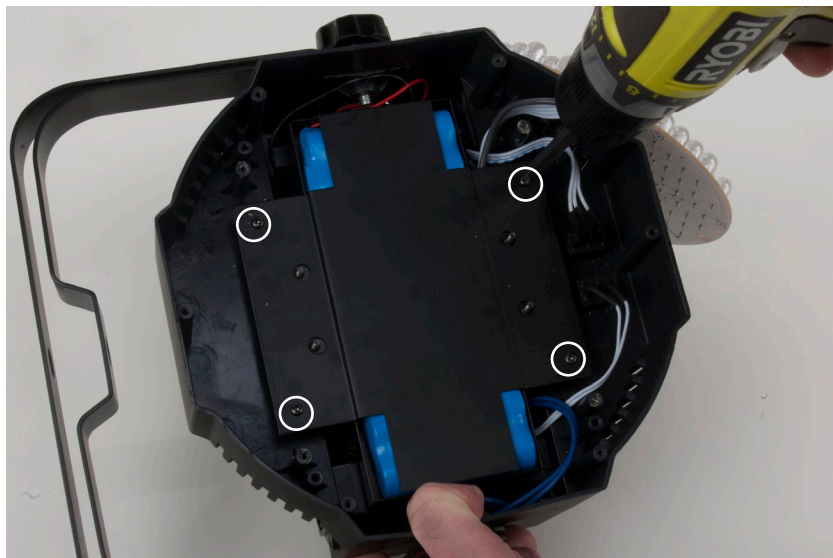
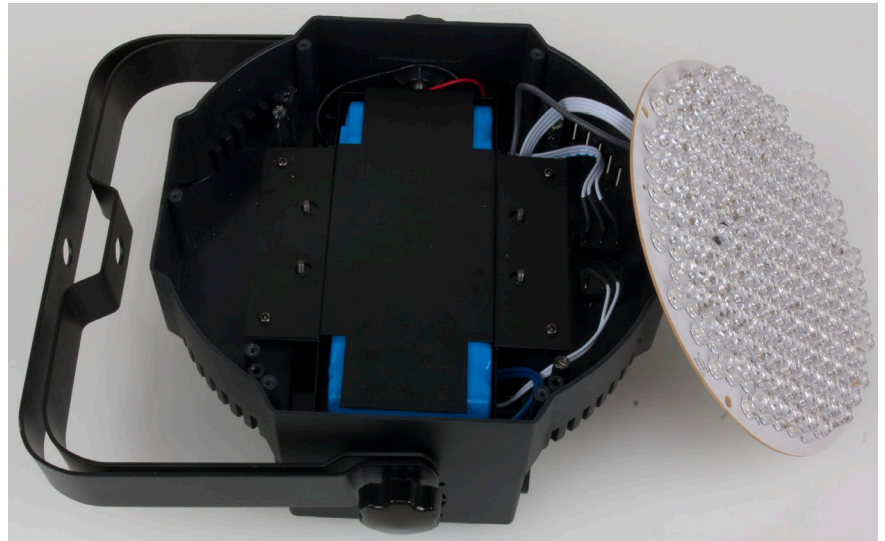


After setting the LED panel to the side, uscrew and remove the 4 phil-lips screws that hold the battery cover in place.

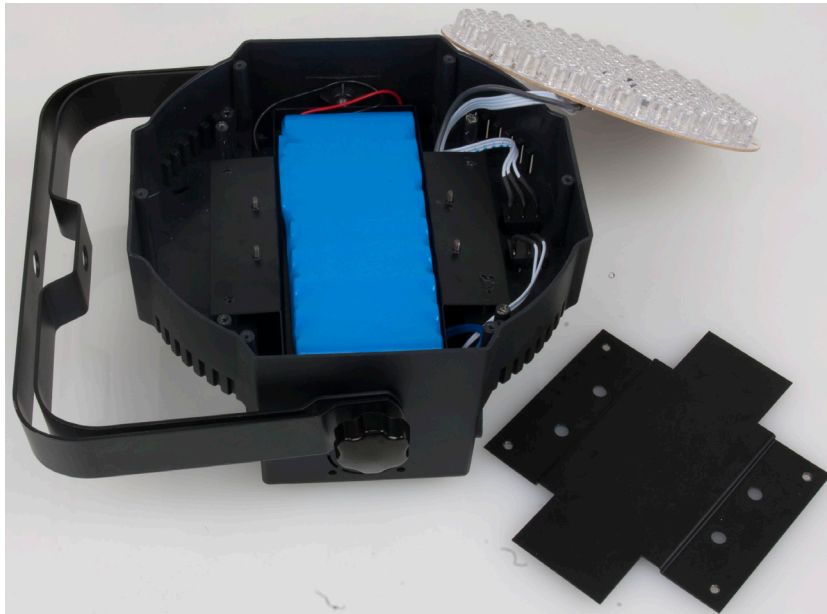

Remove the battery cover to access the battery.

Set the battery cover to the side, then pick up the battery from its cradle. After picking up the battery, pick up the battery cradle to access the PC board.

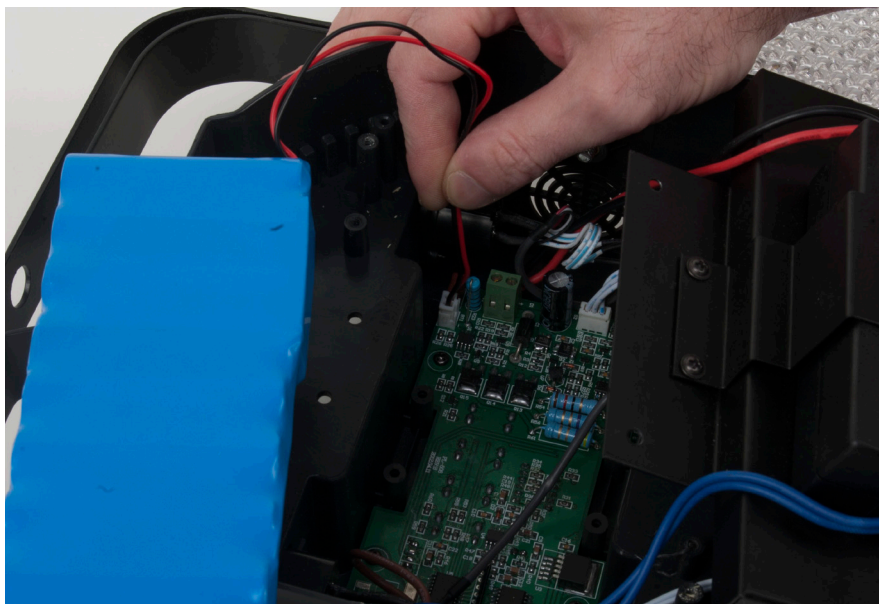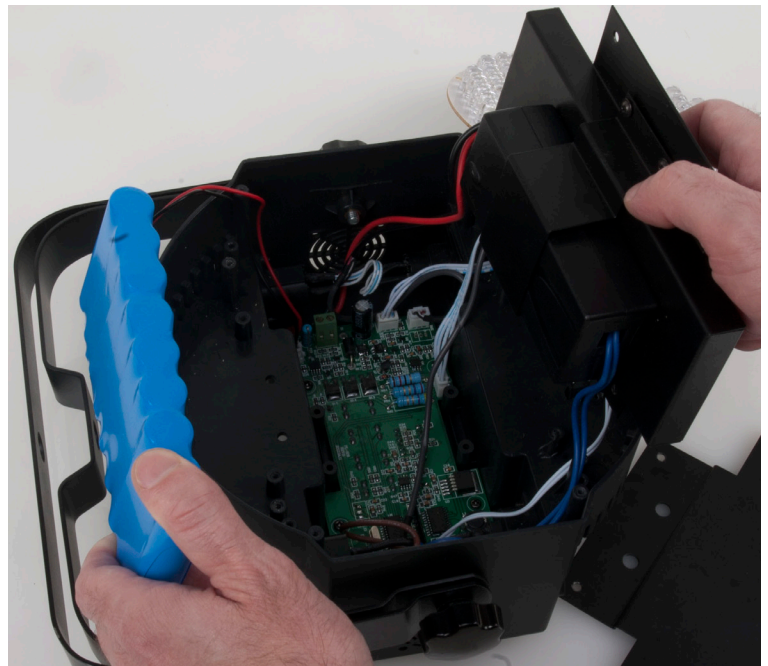

Set the battery and battery cradle to the side. Follow the battery wire to its connection point on the PC board. Disconnect the wire from the PC board and remove the battery.

After the battery has been removed, connect your new battery and reassemble in reverse order.