

Congratulations on the purchase of your new T-Rex pedal

TREMSTER

The **MODE** button allows you to switch between a tremolo or vibrato effect.

The tremolo effect works like a repeatedly radical change in volume whereas the vibrato effect has a more subtle volume change.

The **DEPTH** knob controls the depth of the volume oscillation.

The **VOLUME** knob sets the overall volume

In the 12 o'clock position, the volume level is 1:1. When turned fully clockwise, the input signal is boosted 15dB.

The **SPEED** knob determines the oscillation speed.

Controls: MODE, DEPTH, VOLUME and SPEED.

Connections: INPUT: ¼ inch jack
 OUTPUT: ¼ inch jack
 EXTERNAL POWER JACK: 2.1 mm

Power supply: 9-12V DC adapter or 9V alkaline battery.

Open the battery cover on the back using a flat tipped screwdriver in the slot. Remember to position the battery correctly.

T-Rex Engineering January 2003