

ULTRABASS

BX1200

User's Manual

Version 1.4 April 2002

ENGLISH



BEHRINGER
INSTRUMENT AMPLIFICATION

SAFETY INSTRUCTIONS

CAUTION: To reduce the risk of electrical shock, do not remove the cover (or back). No user serviceable parts inside; refer servicing to qualified personnel.



WARNING: To reduce the risk of fire or electrical shock, do not expose this appliance to rain or moisture.



This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure – voltage that may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Read the manual.

DETAILED SAFETY INSTRUCTIONS:

All the safety and operation instructions should be read before the appliance is operated.

Retain Instructions:

The safety and operating instructions should be retained for future reference.

Heed Warnings:

All warnings on the appliance and in the operating instructions should be adhered to.

Follow instructions:

All operation and user instructions should be followed.

Water and Moisture:

The appliance should not be used near water (e.g. near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool etc.).

Ventilation:

The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa rug, or similar surface that may block the ventilation openings: or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

Heat:

The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.

Power Source:

The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

Grounding or Polarization:

Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.

Power-Cord Protection:

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles and the point where they exit from the appliance.

Cleaning:

The appliance should be cleaned only as recommended by the manufacturer.

Non-use Periods:

The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

Object and Liquid Entry:

Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

Damage Requiring Service:

The appliance should be serviced by qualified service personnel when:

- the power supply cord or the plug has been damaged; or
- objects have fallen, or liquid has been spilled into the appliance; or
- the appliance has been exposed to rain; or
- the appliance does not appear to operate normally or exhibits a marked change in performance; or
- the appliance has been dropped, or the enclosure damaged.

Servicing:

The user should not attempt to service the appliance beyond that which is described in the Operating Instructions. All other servicing should be referred to qualified service personnel.

FOREWORD

Dear Customer,

Welcome to the team of ULTRABASS users and thank you very much for expressing your confidence in BEHRINGER products by purchasing the BEHRINGER BX1200.

It is one of my most pleasant tasks to write this letter to you, because it is the culmination of many months of hard work delivered by our engineering team to reach a very ambitious goal: to present you with an outstanding Bass Workstation that gives you maximum flexibility and performance with its unique sound character and broad range of functions. The task to design the new ULTRABASS certainly meant a great deal of responsibility, which we assumed by focusing on you, the discerning user and musician. It also meant a lot of work and night shifts to accomplish this goal. But it was fun, too. Developing a product usually brings a lot of people together, and what a great feeling it is when everybody who participated in such a project can be proud of what we've achieved.

It is our philosophy to share our joy with you, because you are the most important member of the BEHRINGER team. With your highly competent suggestions for new products you've greatly contributed to shaping our company and making it successful. In return, we guarantee you uncompromising quality (manufactured under ISO9000 certified management system) as well as excellent technical and audio properties at an extremely favorable price. All of this will enable you to fully unfold your creativity without being hampered by budget constraints.

We are often asked how we can make it to produce such high-grade devices at such unbelievably low prices. The answer is quite simple: it's you, our customers! Many satisfied customers means large sales volumes enabling us to get better conditions of purchase for components, etc. Isn't it only fair to pass this benefit back to you? Because we know that your success is our success, too!

I would like to thank all people whose help on "Project ULTRABASS" has made it all possible. Everybody has made very personal contributions, starting from the designers of the unit (thanks to Axel and Jan who pushed the DYNAMIZER preamp technology) to the many staff members in our company and finally to you, the user of BEHRINGER products.

My friends, it's been worth the trouble!

Thank you very much,

A handwritten signature in black ink, appearing to read 'U. Behringer', with a long horizontal flourish extending to the right.

Uli Behringer

ULTRABASS

Ultra-flexible 120-Watt, 2-channel Bass Workstation with ULTRABASS processor and SHAPE filter

- ▲ Powerful 120-Watt (RMS) Bass Workstation with bass reflex cabinet
- ▲ Special custom-made 12" aluminum speaker for tight, powerful sound
- ▲ 2-channel operation with dedicated volume controls
- ▲ Additional ULTRABASS sub-harmonics processor for ultra-low frequencies
- ▲ Revolutionary SHAPE filter for extensive sound manipulation
- ▲ Innovative DYNAMIZER technology provides ultimate punch
- ▲ Musical opto-limiter for maximum volume without distortion or pumping effects
- ▲ Indestructible, short-circuit proof power amp with two-speed fan
- ▲ Active 4-band EQ for comprehensive sound control
- ▲ Balanced direct output (XLR) for easy connection to a mixing console
- ▲ Master volume control and headphones output
- ▲ Connector for external speaker cabinets
- ▲ Dedicated tuner output
- ▲ Amp in and preamp out connectors for hooking up other bass amplifiers and preamps
- ▲ Insert loop for outboard or pedal effects
- ▲ Tape input for line-level signals (e.g. CD player, drum machine)
- ▲ Tape output for recording and live applications
- ▲ Dual footswitch for channel selection and sub-harmonics processor included
- ▲ Toroidal transformer for maximum power reserves
- ▲ Extremely rugged construction ensures long life even under the most demanding conditions
- ▲ Manufactured under ISO9000 certified management system

ULTRABASS BX1200

TABLE OF CONTENTS

1. INTRODUCTION	6
1.1 The design concept	6
1.1.1 The DYNAMIZER technology	6
1.2 Before you begin	7
1.3 Control elements	7
1.3.1 Front panel	7
1.3.2 Rear panel	8
2. WIRING EXAMPLES	9
2.1 Standard setup comprising footswitch, external drum computer, tuner and headphones	9
2.2 Expanded setup with external effects device, external speaker and mixing console	10
2.3 Setup for master/slave operation	10
2.3.1 The ULTRABASS BX1200 as master device	10
2.3.2 The ULTRABASS BX1200 as slave device controlled by an external amp/preamp	10
3. THE SHAPE FUNCTION	10
4. THE ULTRABASS FUNCTION	11
5. INSTALLATION	11
5.1 Mains voltage	11
5.2 Mains connection	11
5.3 Audio connections	11
5.3.1 Loudspeaker connector	12
6. SPECIFICATIONS	13
7. WARRANTY	14

WARNING!



It should be pointed out, that extreme output volumes may damage your ears and/or your headphones. Turn down all LEVEL controls before you switch on the unit. Always pay attention to an appropriate volume.

1. INTRODUCTION

With the BX1200 you have acquired a state-of-the-art 2-channel Bass Workstation that sets new standards in bass amp engineering. Right from the start, our goal has been to design a revolutionary amp that stands out from the herd of “ordinary” bass amplifiers. And indeed, the BX1200 gives you plenty of functionality and a broad range of connection and expansion options. In short: you’ll be fascinated to find that the BX1200 is a Workstation with a character.

BEHRINGER is an audio engineering company that has been successfully developing products for studio and live applications for many years now. Our range of products includes microphones and a variety of 19" devices (compressors, enhancers, noise-gates, tube processors, headphone amps, digital effects devices, DI boxes, etc.) as well as monitoring and P.A. speakers plus professional live and recording consoles. You will find all of our technical know-how combined in your BX1200.

We also set great store by flexibility, which has become a particularly important factor in the music business over the past few years. Modern bass players need to offer a broad range of sounds, but should still be able to play in different kinds of applications at short notice: home recording, studio, live concerts. For this reason, it has always been our prime concern to give you a Bass Workstation that offers you a complete set of useful functions, but can still be operated intuitively and quickly.

Additionally, the world of electric bass playing has changed: new basses, with five or six strings, are being launched all the time, there are effects devices and the desire to create one’s own “unique” sound—which can only be achieved with innovative amplifiers. The unique ULTRABASS BX1200 gives you pioneering sounds coming from an extremely compact design.

As technology advances, you’ve got to keep track of latest technological breakthroughs to avoid falling by the wayside. Which is what we did, by continuously improving this Bass Workstation and including many of your valuable suggestions.

Experience a new-generation Bass Workstation with fascinating features:

- ▲ Astounding sound diversity through filter and sub-harmonics processor.
- ▲ State-of-the-art amplifier technology combined with a built-in bass cabinet gives you precision in the treble and punch in the bass range.
- ▲ The high-grade and custom-built 12" aluminum speaker opens up new dimensions in terms of sound.
- ▲ The rugged and compact design makes the ULTRABASS your favorite amp for club gigs and rehearsals.
- ▲ The trapezoidal cabinet allows you to use the BX1200 as an active floor monitor for the bass player in your band.
- ▲ Plenty of power plus a built-in DI output—even on big stages you’ll cut a fine figure with your BX1200.

1.1 The design concept

We designed the BX1200 to finally start the world of bass amp design moving. Your absolutely low-noise and indestructible Bass Workstation represents the current state of the art.

The robust cabinet is made of high-grade and non-polluting E1-MDF boards, which are grooved, multi-glued and free of formaldehydes. This is to make sure that your BX1200 keeps on working even when the going gets tough.

1.1.1 The DYNAMIZER technology

When it comes to amplifying the signals delivered by electric instruments, you’ve got to separate the wheat from the chaff. Unlike mixed or mastered signals, electric instruments usually deliver extremely high signal peaks which, when raised in gain, produce nasty distortion. How an amplifier responds to these signal peaks can therefore be seen as one of its most essential quality features.

Many manufacturers use limiters preceding the power stage to limit dynamic signal peaks. However, the problem is the preamp, which is why we’ve equipped the BX1200 with our unique DYNAMIZER preamp circuit that gives you a lively and punchy sound with signal peaks—even if the amp reaches its power limits. Extreme signal peaks are limited effectively while the average level and hence the power of the overall signal is raised. The sound gets more vivid and powerful in character, without any unmusical distortion. With its opto-limiter in the power stage it is virtually impossible to overdrive the ULTRABASS BX1200.

1.2 Before you begin

Your BX1200 was carefully packed in the factory and the packaging is designed to protect the unit from rough handling. Nevertheless, we recommend that you carefully examine the packaging and its contents for any signs of physical damage, which may have occurred during transit.

👉 If the unit is damaged, please do not return it to BEHRINGER, but notify your dealer and the shipping company immediately, otherwise claims for damage or replacement may not be granted. Shipping claims must be made by the consignee.

Be sure that there is enough space around the unit for cooling and please do not place the ULTRABASS on high temperature devices such as radiators etc. to avoid overheating.

👉 Before you connect your ULTRABASS to the mains, please make sure that your local voltage matches the voltage required by the unit!

The mains connection of the BX1200 is made by using the enclosed mains cable and a standard IEC receptacle. It meets all of the international safety certification requirements.

👉 Please make sure that all units have a proper ground connection. For your own safety, never remove or disable the ground connector of the unit or of the AC power cable.

You will find additional information in chapter 5 "INSTALLATION".

1.3 Control elements

1.3.1 Front panel

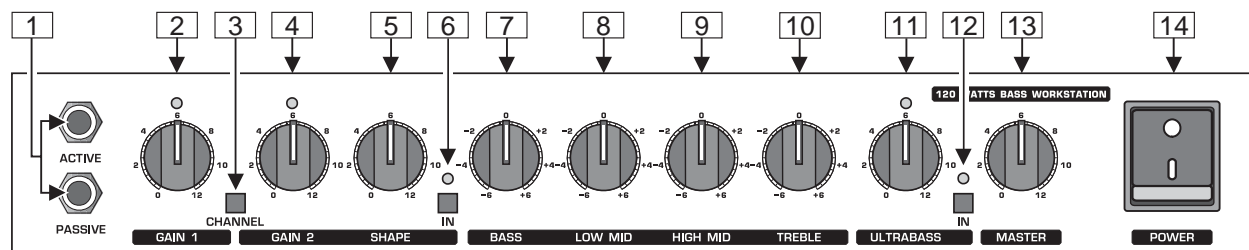 


Fig. 1.1: Front panel control elements

- 1 These are the inputs for your electric bass guitar. The *ACTIVE* jack is for active basses, the *PASSIVE* jack for passive instruments with low output levels.
 - 2 The *GAIN 1* control governs the volume of the first channel. When this channel is active, the LED above the *GAIN 1* control lights up.
 - 3 Press the *CHANNEL* button to select either of the two ULTRABASS channels.
 - 4 The *GAIN 2* control sets the volume for the second channel. When this channel is active, the LED above the *GAIN 2* control lights up.
 - 5 With the *SHAPE* button 6 activated, use the *SHAPE* control to modify the sound of the filter on channel 2.
- 👉 The SHAPE filter is available on channel 2 only and has no effect on channel 1.**
- 6 The *IN* button activates the *SHAPE* filter: the LED above the button lights up.
 - 7 The *BASS* control in the EQ section allows you to boost or cut the bass frequencies.
 - 8 With the *LOW MID* control you can boost/cut the low midrange frequencies.
 - 9 The *HIGH MID* control adjusts the boost/cut of the upper midrange frequencies.
 - 10 The *TREBLE* control allows you to boost/cut the upper treble range on your BX1200.

- 11 Use the sub-harmonics processor (button 12 pressed) to add ultra-low bass signals by turning the *ULTRABASS* control. The processing intensity is displayed by the LED above the control. Unlike the *SHAPE* filter, the *ULTRABASS* circuit is effective on both channels.
- 12 Press the *IN* button to switch on the sub-harmonics processor: the LED above the button lights up.
- 13 Use the *MASTER* control to set the overall volume of your BX1200.
- 14 Press the *POWER* switch to switch on the BX1200.

1.3.2 Rear panel

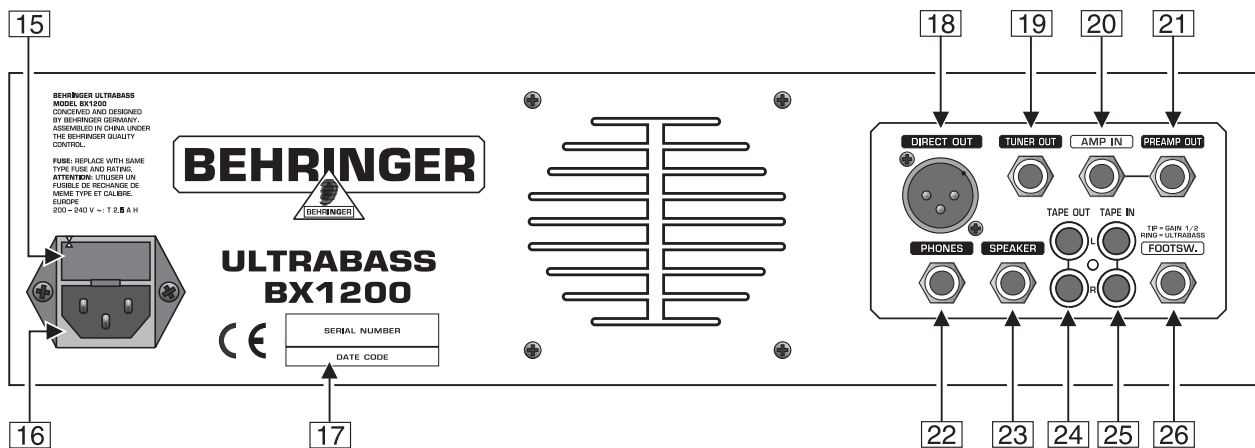 


Fig. 1.2: Rear panel connectors

- 15 **FUSE HOLDER/VOLTAGE SELECTOR.** Please make sure that your local voltage matches the voltage indicated on the unit, before you attempt to connect and operate the BX1200. Blown fuses may only be replaced by fuses of the same type and rating. Some models allow for inserting the fuse holder in two different positions, in order to switch over from 230 V to 115 V operation, and vice versa. Please note that for 115 V operation outside Europe, you need to use a fuse of a higher rating (see chapter 5 "INSTALLATION").
- 16 Use the enclosed power cord to connect the unit to the mains.
- 17 **SERIAL NUMBER.** Please take the time to have the warranty card filled out completely by your specialized dealer, and return it within 14 days after the date of purchase, so as to be entitled to benefit from our extended warranty. Or use our online registration option available on the World Wide Web under www.behringer.com.
- 18 Use the balanced *DIRECT OUT* XLR output to feed the audio signal from your *ULTRABASS* to an external mixing console. The *DIRECT OUT* signal is post-EQ.
- 19 The *TUNER OUT* provides a *GAIN* and EQ-independent input signal for connection to a tuner.
- 20 Use the *AMP IN* to feed in the output signal from an external bass amplifier.
- 21 The *PREAMP OUT* allows you to drive an external bass amplifier.
- The AMP IN and PREAMP OUT connectors can also be used to insert an external effects device such as our BEHRINGER VIRTUALIZER PRO DSP2024P. Simply connect the PREAMP OUT to the input, and the AMP IN to the output of the effects unit.**
- 22 The 1/4" stereo jack allows you to monitor the BX1200's audio signal with a pair of headphones. Connecting the headphones will mute the built-in speaker.
- 23 Use the *SPEAKER* jack to connect an external bass cabinet. If this cabinet features an audio output you can add further cabinets in a series configuration.
- External bass cabinets should have a sufficient power rating and preferably an impedance of 4 ohms to avoid speaker damage.**
- 24 The *TAPE OUT* (cinch) supplies the audio signal of your *ULTRABASS*, for example to send it to a recording machine.

- 25 The *TAPE IN* (cinch) allows you to connect an external signal source such as a drum computer or other machine providing audio playbacks.
- 26 Connect your foot pedal to the *FOOTSWITCH* jack to select either of the two channels on your BX1200 or to enable/disable the sub-harmonics processor.

2. WIRING EXAMPLES

2.1 Standard setup comprising footswitch, external drum computer, tuner and headphones

The standard setup is intended for sessions and rehearsals. Instead of a drum computer you can of course use any other source that provides audio playbacks, e.g. a cassette recorder or CD player.

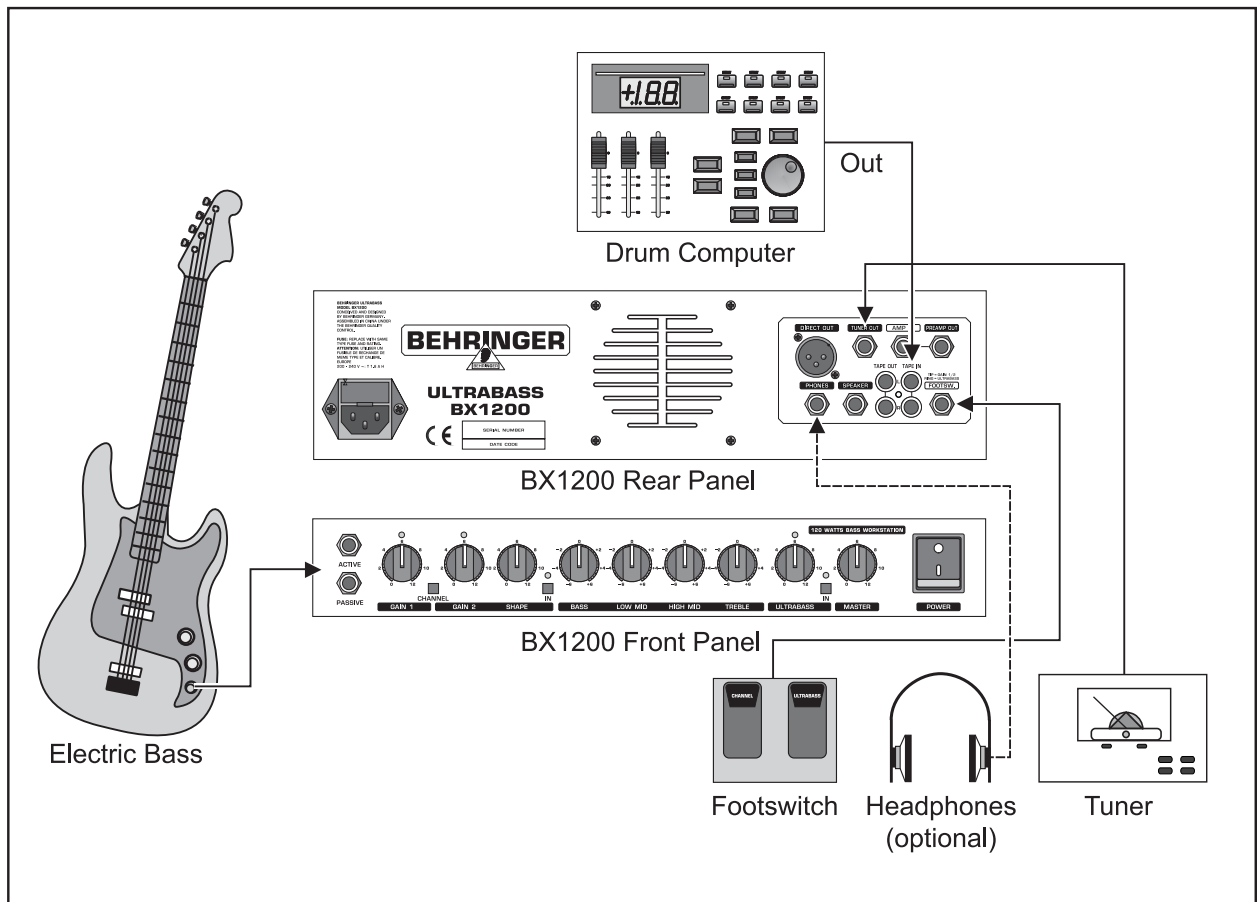 


Fig. 2.1: Standard setup

2.2 Expanded setup with external effects device, external speaker and mixing console

For gigs or rehearsals with your band we recommend the wiring scheme shown here, which builds on the standard setup.

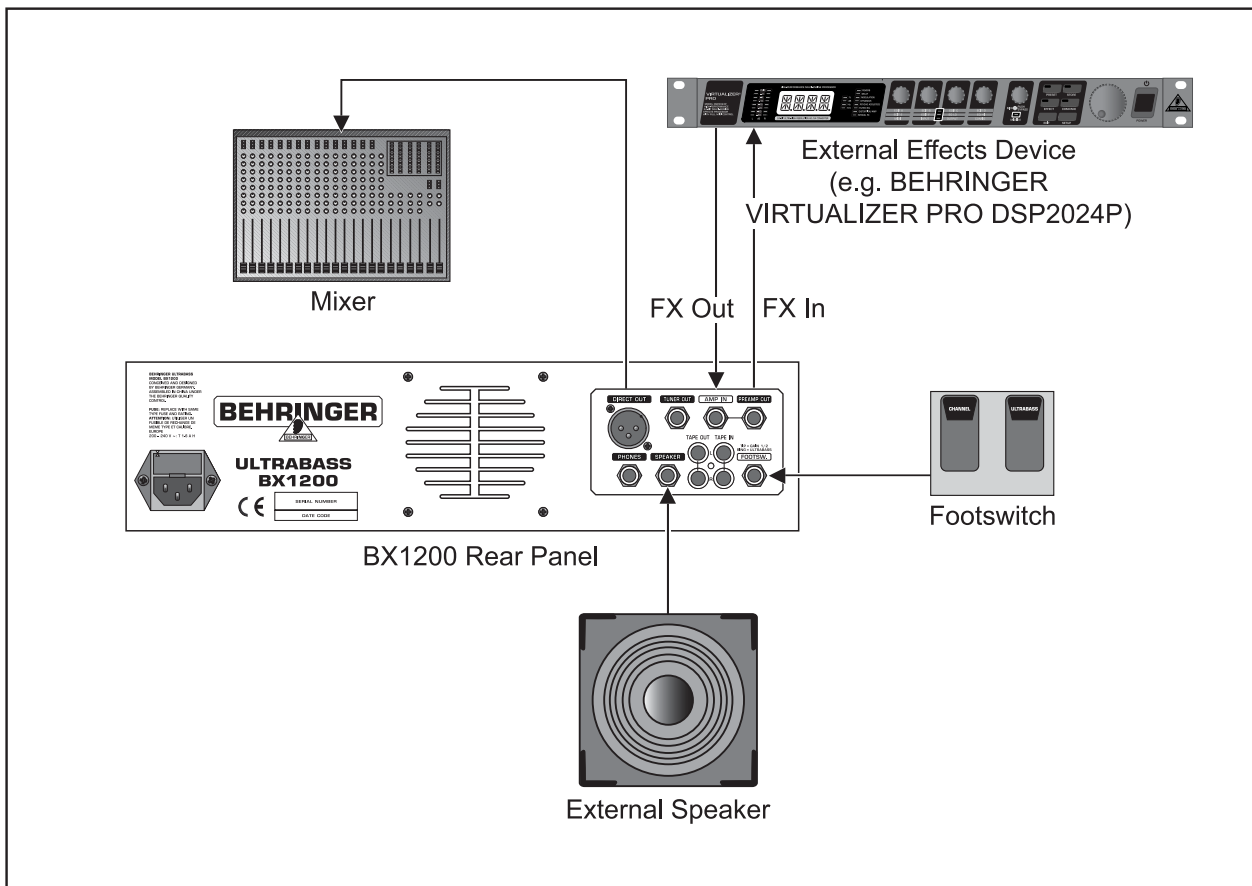 


Fig. 2.2: Expanded setup

2.3 Setup for master/slave operation

2.3.1 The ULTRABASS BX1200 as master device

The PREAMP OUT jack allows you to connect the BX1200 to an external power amp, using a commercial instrument cable equipped with mono phone plugs. Then, connect the PREAMP OUT jack to the input jack on the external power amp.

2.3.2 The ULTRABASS BX1200 as slave device controlled by an external amp/preamp

To use the power amp of your ULTRABASS for an external amp or preamp you need to connect the line output of the external amplifier to the AMP IN jack on your BX1200.

3. THE SHAPE FUNCTION

The SHAPE function on your BX1200 provides a revolutionary type of filter that you can use to modify your bass sound in full detail. The filter allows you to shape your sound—which is a must for bass players today. Extreme filter settings will give your bass sound more power, for example:

You want to play a live bass solo but the sound doesn't cut through. The solo should stand out, rather than being drowned. Use the 2 channels to set up a solid basic sound plus a very distinctive solo sound (channel 1 = basic sound; channel 2 = solo sound, because the SHAPE filter is effective on channel 2 only). Connect a footswitch to toggle between the two channels.

The SHAPE filter is a bargain when you are using two different bass guitars. Maybe you want to change from a jazz bass to a fretless bass, and vice versa—two instruments with a completely different sound. During gigs you often lack the time to set up your amp for a different instrument, so you'll be happy to have a BX1200, because you can use channel 2 and its SHAPE filter for your fretless sound, and channel 1 for the jazz bass.

4. THE ULTRABASS FUNCTION

Extremely low bass sounds playing one octave below the lowest available bass guitar frequency are quite trendy in current music productions. Often, you can do this in studios only, because most bass amplifiers have no sub-harmonics function. Not so with your BX1200: the ULTRABASS processor gives you the ultimate tool to shape up-to-date sounds.

You'll be surprised how deep your bass can sound with the ULTRABASS function of your BX1200. Extreme settings can be particularly interesting if you want to give your sound some flavor in the treble range. For example, sustained notes played on the D and G strings can sound as if played on a fretless bass. By the way: when you use the SHAPE filter set to a low cutoff frequency (which is a nice setting for growling sounds), but feel that there's not enough power in the bass range, the sub-harmonics processor will be there to help you: even though the sound is still growling, it now has much more depth.

5. INSTALLATION

5.1 Mains voltage

Please ensure that your BX1200 is set to the correct supply voltage before you connect the unit to the AC power system! Three triangular markings can be found on the fuse holder at the AC power connection socket. Two of these three triangles will be aligned with one another. The ULTRABASS is set to the operating voltage shown next to these markings and can be switched over by twisting the fuse holder by 180°. **IMPORTANT: This does not apply to export models designed only for 115 V AC!**

5.2 Mains connection

The mains connection is made by using the enclosed mains cable and a standard IEC receptacle. It meets all of the international safety certification requirements.

 **Please make sure that all units have a proper ground connection. For your own safety, never remove or disable the ground conductor of the unit or of the AC power cable.**

5.3 Audio connections

The BEHRINGER ULTRABASS is equipped with mono phone jacks, except for the headphones output which is on a stereo jack. The DIRECT OUTput is on a balanced XLR connector. The Tape Ins and Outs are on cinch connectors.

 **Please ensure that only qualified personnel install and operate the BX1200. During installation and operation the user must have sufficient electrical contact to earth. Electrostatic charges might affect the operation of the unit.**

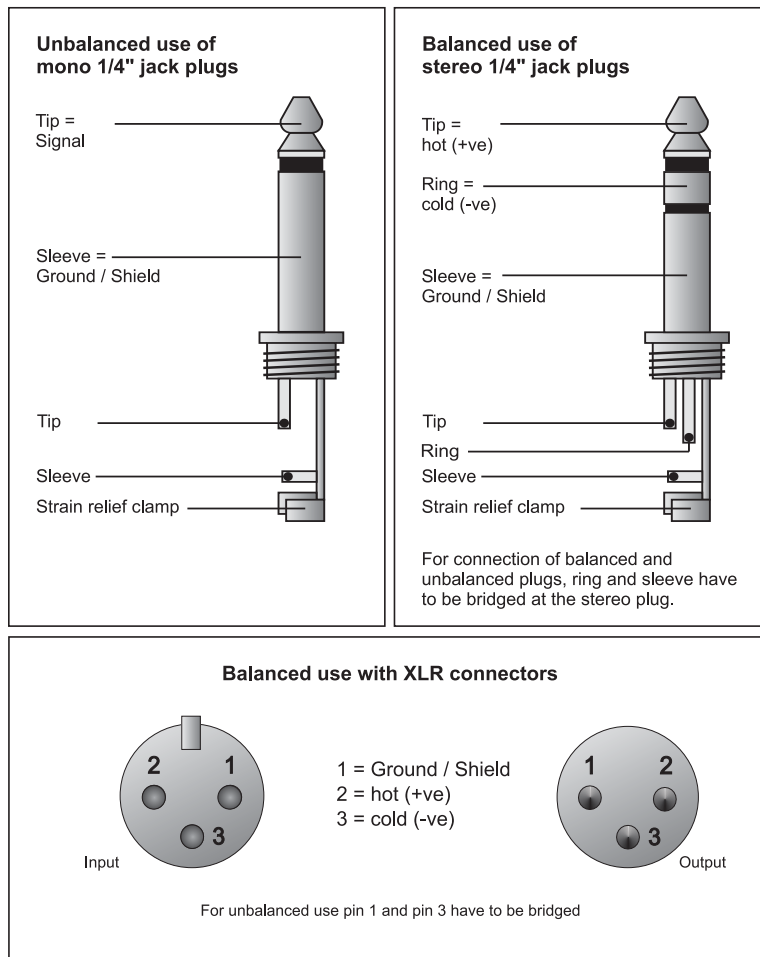 


Fig. 5.1: Different plug types

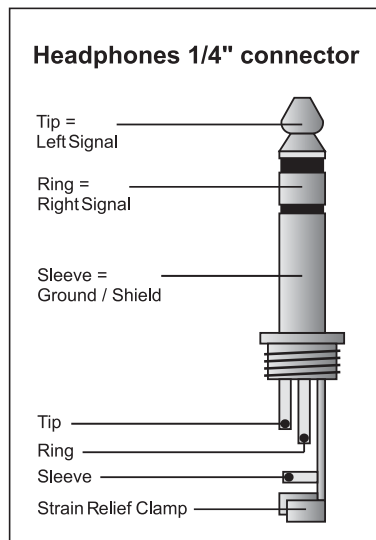 


Fig. 5.2: Wiring of a stereo headphones 1/4" plug

5.3.1 Loudspeaker connector

Your BX1200 features a speaker jack that allows you to hook up a supplementary speaker. If this speaker has an audio output, you can add further speakers in a series configuration. Optimum adaptation is ensured with 4-ohm speakers.

6. SPECIFICATIONS

AUDIO INPUTS

E-Bass input (Active)	1/4" mono jack
Input impedance	approx. 68 k Ω unbalanced
E-Bass input (Passive)	1/4" mono jack
Input impedance	approx. 1 M Ω unbalanced
Amp Input	1/4" mono jack
Input impedance	approx. 10 k Ω unbalanced
Tape Input	Cinch connector
Input impedance	approx. 10 k Ω unbalanced

AUDIO OUTPUTS

Headphones connector	1/4" stereo jack
Tuner connector	1/4" mono jack
Output impedance	approx. 300 Ω unbalanced
Speaker connector	1/4" mono jack
Output impedance	min. 4 Ω unbalanced
Preamp Output	1/4" mono jack
Output impedance	< 200 Ω unbalanced
Direct Output	XLR connector
Output impedance	approx. 300 Ω unbalanced, approx. 200 Ω balanced
Tape Output	Cinch connector
Output impedance	approx. 2.2 k Ω unbalanced

SYSTEM SPECIFICATIONS

Power amp output	120 Watts into 4 Ω ; 240 V ~
------------------	-------------------------------------

LOUDSPEAKER

Type	12" Special Custom Made Aluminum Speaker
Impedance	4 Ω
Power rating	120 Watts RMS

POWER SUPPLY

Mains voltages	USA/Canada	120 V ~, 60 Hz
	U.K./Australia	240 V ~, 50 Hz
	Europe	230 V ~, 50 Hz
	General export model	100 - 120 V ~, 200 - 240 V ~, 50 - 60 Hz
Power consumption	approx. 32 Watts min. approx. 260 Watts max.	
Fuse	100 - 120 V ~: T 5 A H 200 - 240 V ~: T 2.5 A H	
Mains connection	Standard IEC receptacle	

PHYSICAL

Dimensions (H x W x D)	approx. 20 1/8" (509,3 mm) x 16 1/8" (410,2 mm) x 16" (405,9 mm)
Weight	approx. 22 kg

BEHRINGER is constantly striving to maintain the highest professional standards. As a result of these efforts, modifications may be made from time to time to existing products without prior notice. Specifications and appearance may differ from those listed or illustrated.

7. WARRANTY

§ 1 WARRANTY CARD/ONLINE REGISTRATION

To be protected by the extended warranty, the buyer must complete and return the enclosed warranty card within 14 days of the date of purchase to BEHRINGER Spezielle Studiotechnik GmbH, in accordance with the conditions stipulated in § 3. Failure to return the card in due time (date as per postmark) will void any extended warranty claims. Based on the conditions herein, the buyer may also choose to use the online registration option via the Internet (www.behringer.com or www.behringer.de).

§ 2 WARRANTY

1. BEHRINGER (BEHRINGER Spezielle Studiotechnik GmbH including all BEHRINGER subsidiaries listed on the enclosed page, except BEHRINGER Japan) warrants the mechanical and electronic components of this product to be free of defects in material and workmanship for a period of one (1) year* from the original date of purchase, in accordance with the warranty regulations described below. If the product shows any defects within the specified warranty period that are not excluded from this warranty as described under § 3 and 4, BEHRINGER shall, at its discretion, either replace or repair the product using suitable new or reconditioned parts. In the case that other parts are used which constitute an improvement, BEHRINGER may, at its discretion, charge the customer for the additional cost of these parts.

2. If the warranty claim proves to be justified, the product will be returned to the user freight prepaid.

3. Warranty claims other than those indicated above are expressly excluded.

§ 3 RETURN AUTHORIZATION NUMBER

1. To obtain warranty service, the buyer (or his authorized dealer) must call BEHRINGER (see enclosed list) during normal business hours **BEFORE** returning the product. All inquiries must be accompanied by a description of the problem. BEHRINGER will then issue a return authorization number.

2. Subsequently, the product must be returned in its original shipping carton, together with the return authorization number to the address indicated by BEHRINGER.

3. Shipments without freight prepaid will not be accepted.

§ 4 WARRANTY REGULATIONS

1. Warranty services will be furnished only if the product is accompanied by a copy of the original retail dealer's invoice. Any product deemed eligible for repair or replacement by BEHRINGER under the terms of this warranty will be repaired or replaced within 30 days of receipt of the product at BEHRINGER.

2. If the product needs to be modified or adapted in order to comply with applicable technical or safety standards on a national or local level, in any country which is not the country for which the product was originally developed and manufactured, this modification/adaptation shall not be considered a defect in materials or workmanship. The warranty does not cover any such modification/adaptation, irrespective of whether it was carried out properly or not. Under the terms of this warranty, BEHRINGER shall not be held responsible for any cost resulting from such a modification/adaptation.

3. Free inspections and maintenance/repair work are expressly excluded from this warranty, in particular, if caused by improper handling of the product by the user. This also applies to defects caused by normal wear and tear, in particular, of faders, potentiometers, keys/buttons and similar parts.

4. Damages/defects caused by the following conditions are not covered by this warranty:

▲ improper handling, neglect or failure to operate the unit in compliance with the instructions given in BEHRINGER user or service manuals.

▲ connection or operation of the unit in any way that does not comply with the technical or safety regulations applicable in the country where the product is used.

▲ damages/defects caused by force majeure or any other condition that is beyond the control of BEHRINGER.

5. Any repair or opening of the unit carried out by unauthorized personnel (user included) will void the warranty.

6. If an inspection of the product by BEHRINGER shows that the defect in question is not covered by the warranty, the inspection costs are payable by the customer.

7. Products which do not meet the terms of this warranty will be repaired exclusively at the buyer's expense. BEHRINGER will inform the buyer of any such circumstance. If the buyer fails to submit a written repair order within 6 weeks after notification, BEHRINGER will return the unit C.O.D. with a separate invoice for freight and packing. Such costs will also be invoiced separately when the buyer has sent in a written repair order.

§ 5 WARRANTY TRANSFERABILITY

This warranty is extended exclusively to the original buyer (customer of retail dealer) and is not transferable to anyone who may subsequently purchase this product. No other person (retail dealer, etc.) shall be entitled to give any warranty promise on behalf of BEHRINGER.

§ 6 CLAIM FOR DAMAGES

Failure of BEHRINGER to provide proper warranty service shall not entitle the buyer to claim (consequential) damages. In no event shall the liability of BEHRINGER exceed the invoiced value of the product.

§ 7 OTHER WARRANTY RIGHTS AND NATIONAL LAW

1. This warranty does not exclude or limit the buyer's statutory rights provided by national law, in particular, any such rights against the seller that arise from a legally effective purchase contract.

2. The warranty regulations mentioned herein are applicable unless they constitute an infringement of national warranty law.

* Customers in the European Union please contact BEHRINGER Germany Support for further details.

The information contained in this manual is subject to change without notice. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording of any kind, for any purpose, without the express written permission of BEHRINGER Spezielle Studiotechnik GmbH.

BEHRINGER and VIRTUALIZER are registered trademarks. ALL RIGHTS RESERVED.

© 2002 BEHRINGER Spezielle Studiotechnik GmbH.

BEHRINGER Spezielle Studiotechnik GmbH, Hanns-Martin-Schleyer-Str. 36-38, 47877 Willich-Münchheide II, Germany

Tel. +49 (0) 21 54 / 92 06-0, Fax +49 (0) 21 54 / 92 06-30