

Eliminator® LIGHTING

E 141 OCTO BAR

CAUTION! Please read and understand these instructions before installing or operating this unit.

Operating Instructions:

The E 141/Octo Bar is a simple, chasing, color wash for clubs and dj's. This unit features an internal microphone, chase speed control, and sound sensitivity knob that allows the beams to chase at your control. Turning the knob on the left in clockwise direction will make the unit more sensitive to sound. The E 141/Octo Bar's beams will chase to the beat of the music. The E 141/Octo Bar is ready to be hung or set on the ground in a safe position. When mounting this unit to truss be sure to use a clamp. Plug the unit in to a standard 110 wall outlet. After plugging the unit in, turn the sound sensitivity knob 20°, and the chase speed knob (on the right) can be in any position. The fixture will then be in sound-active mode, and will react to the beat of the music via the internal microphone.

Lamp Replacement: Disconnect the units main power supply. Unscrew and replace the bulbs that need changing. Reconnect the power supply. Be sure to follow all the handling instruction that are included with your new lamp.

SPECIFICATIONS:

Model:	E 141/Octo Bar
Lamp:	8 x EL-R20 120V 50W
Weight:	12 lbs./ 5.4Kgs.
Size:	6.5"(L) x 30.5"(W) x 6.5"(H)
Fuse:	5 Amp GMA 250v
Supply Voltage:	120V
Working Position:	Any Safe position
Duty Cycle:	None
Colors:	4 Colors
Warranty:	90 Days

Caution! Never open unit when in use. Always disconnect main power before serving or replacing lamp. Remember to always replace with the exact same type lamp and fuse.

HALOGEN LAMP WARNING!

This fixture is fitted with halogen lamps which are highly susceptible to damage if improperly handled. Never touch lamp with bare fingers as the oil from your hands will shorten lamp life. Also, never move the fixture until the lamp has had ample time to cool. Remember, lamps are not covered under warranty conditions.