

OPERATION

LEDS

1

RECORD

PRESS FOOTSWITCH
ONCE



2

PLAY

PRESS FOOTSWITCH
ONCE



3

OVERDUB

PRESS FOOTSWITCH
ONCE



4

UNDO/REDO

WHILE PLAYING, PRESS
& HOLD FOOTSWITCH



5

STOP

PRESS FOOTSWITCH
TWICE



6


CLEAR

WHILE STOPPED, PRESS
& HOLD FOOTSWITCH



JAMMAN EXPRESS XT QUICK START

HOOKUP DIAGRAM

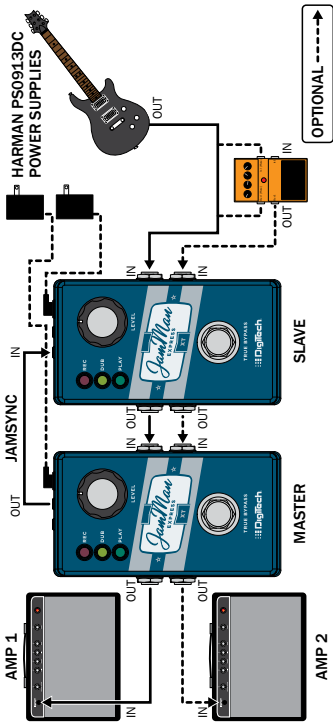

NOTE: For best noise performance, use an isolated power supply.