

PROJECT VIEW


Jump back to Project View



Show next / previous eight Groups



Show next / previous Group

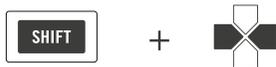

Navigate Pattern View by eight Patterns



Navigate Pattern View by one Pattern



Show master output, group output, or external input on level meters



Navigate between Scene Banks



Set loop between two Scenes



Create a loop in between Scenes



BROWSE

Scroll the result list in steps of ten entries



Load next / previous preset



Set favorites



Restore filter created before




Reset and jump to the beginning



STEP


Select the amount of Sounds you want to sequence in STEP mode

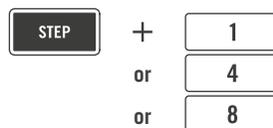

Navigate through Pattern Pages



Jump to a specific Pattern Page

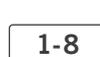

Jump to a specific Pattern Page Bank



Activate Pattern Follow




You can erase events of a specific Sound (PAD MODE) or notes of the same pitch (KEYBOARD) under the playhead



PAT LENGTH

Press any click-pad on the 8x8 click-pad Matrix to set the length of your Pattern in bars

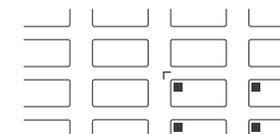

Or use the Encoder to set the length of your Pattern



GRID

Choose between common Pattern Grid settings



PIANO ROLL

One octave up or down



One semitone up or down



ARP

Choose an ARP preset by pressing one of the Scene click-pads



VARIATION

Apply VARIATION settings




KEYBOARD

Show next / previous eight Groups




Show next / previous Group

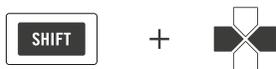

Preferences can be set for Keyboard Layout in the **HARDWARE** tab of **SETTINGS** on Maschine+.

NOTES

Select a NOTES mode

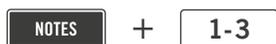


Add notes on the 8x8 click-pad Matrix to each of your NOTES modes. Edited modes will be saved with the Project / Group

MACRO / CONTROL

While holding the **MACRO** or **CONTROL** click-pad:

► Show Macros or Controls for Sounds on the Smart Strips

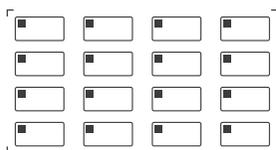

► Show Macros or Controls for Groups on the Smart Strips



► Show Macros or Controls for Master on the Smart Strips



Navigate through plugin slots



Show next or previous parameter page




The flashing LED indicates the focused Sound, Group or the Master and their respective controls on the Smart Strips


LEVEL / AUX / TUNE / SWING

While holding the **LEVEL-**, **AUX-**, **TUNE-**, or **SWING-** click-pad:

► Show LEVELS, AUX-levels, Tune or Swing for Sound 1-8 on the Smart Strips

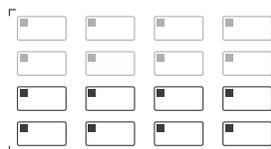

► Show LEVELS, AUX-levels, Tune or Swing for Sound 9-16 on the Smart Strips

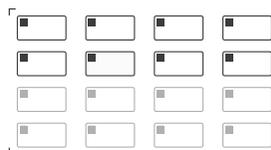

Hold **SHIFT + LEVEL** to show the panning for either the Groups or the Sounds on the Smart Strips



Hold **SHIFT + AUX** to show AUX 2 for either the Groups or the Sounds on the Smart Strips



Show next or previous eight Sounds



LOCK

Create different LOCK states saved on the 8x8 click-pad Matrix.




GLOBAL FUNCTIONS

Hold **SHIFT** to fine edit parameter values (This Also applies to some on-screen-overlay parameters)



Clear modulation from a specific parameter

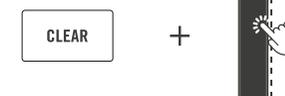

When holding **MACRO**, **LEVEL**, **AUX**, **CONTROL**, **TUNE** or **SWING**, double tap on a Smart Strip to reset the parameter to default



Switch between momentary and toggle behavior (e.g. **MUTE**, **SOLO**)

