

WT-82 Users Guide and Manual

1. Tuning Procedure

1. Power button for ON/OFF

The power will be turned on & off by each press of Power button. This tuner will be turned off after 20 minutes automatically.

2. Note button for tuning note selection.

Press Note button *shortly* in Auto mode –

Auto mode will be changed to manual mode.

Press Note button for *2 seconds* in Manual mode –

Manual mode will be returned to Auto mode.

Press Note button for *4 seconds* in Chromatic mode –

Chromatic mode will be changed to Guitar mode.

3. Tuning Guide LEDs

These LEDs will help the discrimination of tuning process.

When the instrument is in tune, tuning needle stops in the center.

Then, green LED in the middle will light up.

If the pitch of string is sharp, the red LED in the right will light up.

If the pitch of string is flat, the red LED in the left will light up.

Tuning System Guide

Power: Power on & off of tuner system

Note: Tuning note selection

Auto Chromatic – Manual Chromatic – Auto Guitar – Manual guitar

RED Tuning guide LED for sharp tune

>green< Tuning guide LED for right tune

b RED Tuning guide LED for flat tune

(Specifications)

1. Mode : Auto & Manual tuning mode
2. Tuning Range : A0(27.5 Hz) ~ C8(4, 186.0 Hz)
3. Tuning Note
Chromatic Mode : C, C#, D, D#, E, F, F#, G, G#, A, A#, B
Guitar Mode : 6E, 5A, 4D, 3G, 2B, 1E
4. Accuracy : +/- 0.5 Cents
5. Indicator : LCD & 3 LEDs