

FW-1082 Read Me

This document includes important information that was not ready in time for manual printing. Where this document contradicts the manual, the information in this document should be used.

Changing the clock setting

To change the clock setting of the FW-1082 from the surface:

1. The unit must be in MON MIX mode
2. Press & hold SHIFT then press the desired clock setting key

Japanese language display in SoftLCD

- Only DAWs and control surface protocols that support Unicode will transmit the data to SoftLCD that is required to display Japanese language. At this time only Sonar supports Unicode.