

iPB-10: QUICK START GUIDE

GAIN BASS MIDDLE TREBLE AMP



Icons for MIDI, USB, and USB-C connectivity.

Compressor CS

LEVEL ATTACK SUSTAIN

Mod Screamer Tube OverDrive

DRIVE TONE LEVEL

flanger affair

RATE RANGE COLOR

Intensity Speed

MX


phaser

Delay DM

REPEAT RATE ECHO INTENSITY

Bank 5 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20

Deluxe Special 1 Brown Sugar 2 Learned to Fly 3 Jimmy Tone 4 Roadhouse 5

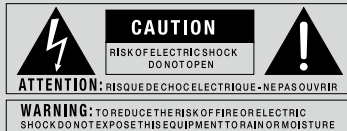

The symbols shown above are internationally accepted symbols that warn of potential hazards with electrical products. The lightning flash with arrowpoint in an equilateral triangle means that there are dangerous voltages present within the unit. The exclamation point in an equilateral triangle indicates that it is necessary for the user to refer to the owner's manual.

These symbols warn that there are no user serviceable parts inside the unit. Do not open the unit. Do not attempt to service the unit yourself. Refer all servicing to qualified personnel. Opening the chassis for any reason will void the manufacturer's warranty. Do not get the unit wet. If liquid is spilled on the unit, shut it off immediately and take it to a dealer for service. Disconnect the unit during storms to prevent damage.

WARNING FOR YOUR PROTECTION READ THE FOLLOWING:

KEEP THESE INSTRUCTIONS

HEED ALL WARNINGS

FOLLOW ALL INSTRUCTIONS

THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING LIQUID AND NO OBJECT FILLED WITH LIQUID, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS

CLEAN ONLY WITH A DRY CLOTH.

DO NOT BLOCK ANY OF THE VENTILATION OPENINGS. INSTALL IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS.

DO NOT INSTALL NEAR ANY HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS, STOVES, OR OTHER APPARATUS (INCLUDING AMPLIFIERS) THAT PRODUCE HEAT.

ONLY USE ATTACHMENTS/ACCESSORIES SPECIFIED BY THE MANUFACTURER.

UNPLUG THIS APPARATUS DURING LIGHTNING STORMS OR WHEN UNUSED FOR LONG PERIODS OF TIME.

DO NOT DEFEAT THE SAFETY PURPOSE OF THE POLARIZED OR GROUNDING-TYPE PLUG. A POLARIZED PLUG HAS TWO BLADES WITH ONE WIDER THAN THE OTHER. A GROUNDING TYPE PLUG HAS TWO BLADES AND A THIRD GROUNDING PRONG. THE WIDE BLADE OR THIRD PRONG ARE PROVIDED FOR YOUR SAFETY. IF THE PROVIDED PLUG DOES NOT FIT YOUR OUTLET, CONSULT AN ELECTRICIAN FOR REPLACEMENT OF THE OBSOLETE OUTLET.

PROTECT THE POWER CORD FROM BEING WALKED ON OR PINCHED PARTICULARLY AT PLUGS, CONVENIENCE RECEPTACLES, AND THE POINT WHERE THEY EXIT FROM THE APPARATUS.

REFER ALL SERVICING TO TO QUALIFIED SERVICE PERSONNEL. SERVICING IS REQUIRED WHEN THE APPARATUS HAS BEEN DAMAGED IN ANY WAY, SUCH AS POWER-SUPPLY CORD OR PLUG IS DAMAGED, LIQUID HAS BEEN SPILLED OR OBJECTS HAVE FALLEN INTO THE APPARATUS, THE APPARATUS HAS BEEN EXPOSED TO RAIN OR MOISTURE, DOES NOT OPERATE NORMALLY, OR HAS BEEN DROPPED.

MAINS DISCONNECT: THE PLUG SHALL REMAIN READILY OPERABLE. FOR RACK-MOUNT OR INSTALLATION WHERE PLUG IS NOT ACCESSIBLE, AN ALL-POLE MAINS SWITCH WITH A CONTACT SEPARATION OF AT LEAST 3 MM IN EACH POLE SHALL BE INCORPORATED INTO THE ELECTRICAL INSTALLATION OF THE RACK OR BUILDING.

▶ Quick Start Guide

1 ▶ Download the free iPB-Nexus app by DigiTech to your iPad from the App Store



4 ▶ Plug-In the iPB-10 and turn it on. Launch the iPB-Nexus app from your iPad. Select the pedalboard on your iPad you want to play



2 ▶ Connect your guitar and amp to the iPB-10



5 ▶ Turn up the volume and enjoy!



3 ▶ Open the protective frame of the iPB-10, connect your iPad, and rest it in the dock of the iPB-10.

