

BOSE[®]



Bose[®] Bluetooth[®] Audio adapter

Owner's Guide | Brugervejledning | Bedienungsanleitung | Gebruiksaanwijzing | Guía de usuario
Omistajan opas | Notice d'utilisation | Manuale di istruzioni | Felhasználói útmutató
Podręcznik użytkownika | Guia dos proprietários | Bruksanvisningen
Thai | Korean | S Chinese | T Chinese | Japan | Arabic

Important Safety Information

Please read this owner's guide carefully and save it for future reference.



The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this owner's guide.

WARNINGS:

- To reduce the risk of fire or electric shock, do not expose the product to rain or moisture.
 - Do not place naked flame sources, such as lighted candles, on or near the product.
 - Do not expose this product to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the product. As with any electronic products, use care not to spill liquids into any part of the product. Exposure to liquids may create a failure and/or a fire hazard.
-



WARNING: Contains small parts which may be a choking hazard. Not suitable for children under age 3.

CAUTIONS:

- Do not make unauthorized alterations to this product; doing so may compromise safety, regulatory compliance, system performance, and may void the warranty.
 - Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.
-

- The product label is located on the bottom of the product.
- Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- This product must be used indoors. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.
- This product is intended to be used only with the power supply provided.
- The speaker wire and interconnect cables included with the system are not approved for in-wall installation. Please check your local building codes for the correct type of wire and cable required for in-wall installation.
- Operate this product within the temperature range of 32° F to 113° F (0° C to 45° C).

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

The *Bluetooth*[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Bose Corporation is under license.

© 2013 CSR plc and its group companies. The aptX[®] mark and aptX logo are trade marks of CSR plc or one of its group companies and may be registered in one or more jurisdictions.

© 2014 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

Important Safety Information

Information about products that generate electrical noise

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.



Bose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and all other applicable EU directive requirements. The complete declaration of conformity can be found at : www.Bose.com/compliance



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class [B] digital apparatus complies with Canadian ICES-003.

CAN ICES-3 (B) / NMB-3 (B)

This (These) device(s) comply with FCC and Industry Canada RF radiation exposure limits set forth for general population.

It (They) must not be co-located or be operating in conjunction with any other antennas or transmitters.

Tested temperature range: 32° F to 113° F (0° C to 45° C).

Names and Contents of Toxic or Hazardous Substances or Elements						
Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)
PCBs	X	O	O	O	O	O
Metal parts	X	O	O	O	O	O
Plastic parts	O	O	O	O	O	O
O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T 11363-2006.						
X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T 11363-2006.						

Contents

Introduction

About your Bose® <i>Bluetooth</i> ® Audio adapter	5
System features	5
Unpacking.....	5

Setup

Connecting the adapter to your audio system	6
Option 1: optical cable.....	6
Option 2: 3.5 mm audio cable.....	7
Option 3: 3.5 mm female to RCA cable.....	7
Bose® Solo 15, Bose® CineMate® 15/10, Bose® Solo and Bose® Solo 10 systems	8
Connecting to AC power	8
Completing source setup.....	9

Operation

Selecting the Bose® <i>Bluetooth</i> ® Audio adapter	10
For the Bose® Solo 15 system	10
Pairing a mobile device	10
Pairing another mobile device.....	11
Connecting a paired mobile device	11
Multi-point connectivity	11
<i>Bluetooth</i> ® indicator	12
Adapter memory.....	12
Clearing memory.....	12

Care and Maintenance

Troubleshooting	13
Cleaning.....	13
Contacting customer service	13
Limited warranty	13

About your Bose® *Bluetooth*® Audio adapter

 
The Bose® *Bluetooth*® Audio adapter allows you to stream music from your smartphone, tablet, laptop or other *Bluetooth* enabled device through your audio system.

System features


- Wirelessly connect to your smartphone, tablet or other *Bluetooth* enabled device.
- Connect up to three devices using multi-point connectivity.
- Pair up to eight *Bluetooth* enabled devices.
- Stream CD-quality audio using your aptX® enabled device.

Unpacking

Carefully unpack the carton and confirm that the following parts are included:



Bose® *Bluetooth*® Audio adapter

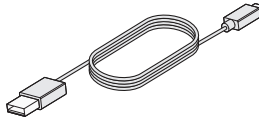 

Power supply cord



 
AC power supply




Optical cable



3.5 mm audio cable



 3.5 mm female to RCA cable



Power supply adapters
(included in certain regions)

Note: If part of the system is damaged, do not use it. Contact your authorized Bose dealer or Bose customer service. Refer to the contact sheet in the carton.

Setup

Connecting the adapter to your audio system


Connect the adapter to your system using a provided cable. Refer to your audio system owner's guide to choose the best cable for connecting sources.

Note: Do not make more than one audio connection.

Option 1: optical cable

The optical cable is the preferred connection to your system. If your system does not have an optical connector, see "Option 2: 3.5 mm audio cable" on page 7.

 1. Remove the clear protective cap from both ends of the cable.

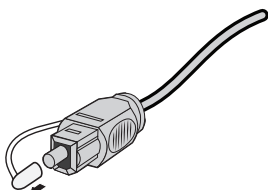


2. Align the plug with the **OPTICAL** connector on the adapter and insert the plug carefully.

Note: The connector's hinged door swings inward when inserting the plug.

CAUTION: Inserting the plug in the wrong orientation can damage the plug and the connector.

 3. Firmly push the plug into the connector until it clicks.
 4. Insert the other end of the cable into your system's optical connector.
- Note:** Make sure the input you have selected does not have any other sources connected.

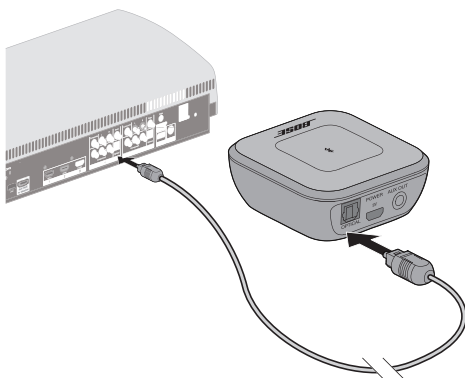


Option 2: 3.5 mm audio cable

Use the 3.5 mm audio cable if your system does not have an optical connector. Refer to your audio system owner's guide for more information on connecting sources.

Note: If your system has an RCA analog connector, see "Option 3: 3.5 mm female to RCA cable".

 
1. Insert one end of the 3.5 mm audio cable into the **AUX OUT** connector on the adapter.
2. Insert the other end into a 3.5 mm AUX IN connector on your system.

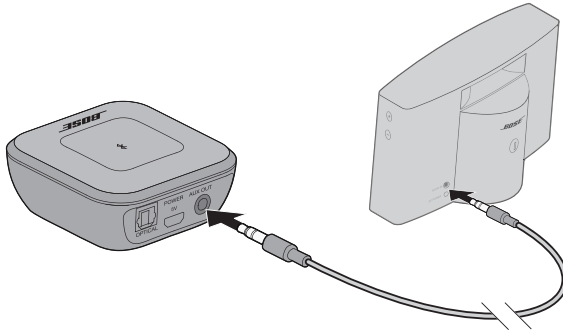

Option 3: 3.5 mm female to RCA cable

Use this connection method for the Bose® Solo, Bose® Solo 10, Bose® Solo 15 and Bose® CineMate® 15/10 systems to ensure the adapter will work properly. See "Bose® Solo 15, Bose® CineMate® 15/10, Bose® Solo and Bose® Solo 10 systems" on page 8.

 1. Connect the 3.5 mm female to RCA cable to the 3.5 mm audio cable.

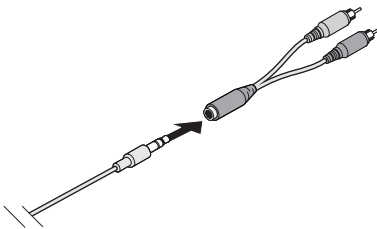

2. Insert the other end of the 3.5 mm audio cable into the **AUX OUT** connector on the Bose® *Bluetooth*® audio adapter.
3. Insert the RCA analog cable into the RCA (red and white) connectors on your system.

Setup

Bose® Solo 15, Bose® CineMate® 15/10, Bose® Solo and Bose® Solo 10 systems

 
Connect your system with the 3.5 mm female to RCA cable. See “Option 3: 3.5 mm female to RCA cable” on page 7.

For the Bose® Solo 15 system: See “Selecting the Bose® *Bluetooth*® Audio adapter” on page 10.


For the Bose® CineMate® 15/10, Bose® Solo and Bose® Solo 10 systems: Power off other connected audio devices. The CineMate system will not automatically switch to your Bose® *Bluetooth*® Audio adapter if another connected device remains on.

Connecting to AC power

1. Plug the small end of the power supply cord into the adapter's **POWER** connector.

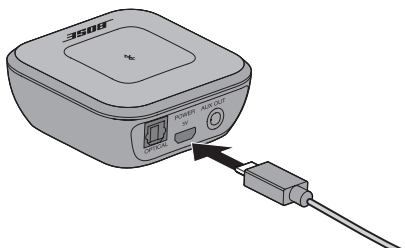


 2. Plug the large end of the power supply cord into the AC power supply's connector.

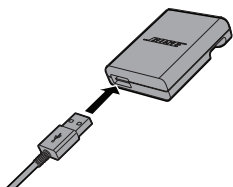

3. Extend the prongs. If needed, snap on the power supply adapter for your region.

 Remove an adapter by pressing back on the release (A) and lifting the adapter up and off (B).

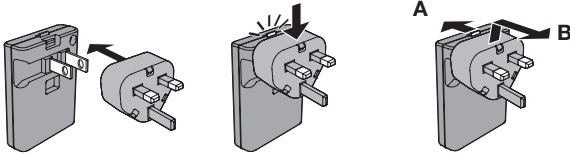

The adapter is in discoverable mode (the indicator blinks blue) once it is powered.



Completing source setup

After powering the Bose® Bluetooth® Audio adapter, You may need to set it up as a source for your audio system with these additional steps:

- Ensure your audio system is on and active.
- Ensure the volume is turned up.
- If applicable, follow any on-screen instructions.

Refer to your audio system owner's guide for more information.

Operation

Select the Bose® *Bluetooth*® Audio adapter

You may have to change the source input to the one the Bose® *Bluetooth*® Audio adapter is connected to on your audio system. Refer to your audio system owner's guide for more information on selecting sources.

For the Bose® Solo 15 system


Ensure that your system software is up to date (see your Bose® Solo 15 system owner's guide for software update instructions).

1. On your remote, press and hold  until the LED flashes and your system emits a tone (a few seconds).

Your system switches to the **Analog** input, where the Bose® *Bluetooth*® Audio adapter is connected.

2. Pair your mobile device. See "Pairing a mobile device" on page 10.

To exit the Bose® *Bluetooth*® Audio adapter source:

 
On your remote, press and hold  until the LED flashes and your system emits a tone (a few seconds). Your system returns to your previous source.

Pairing a mobile device

After you connect the adapter to power, the Bose® *Bluetooth*® Audio adapter is ready to pair with your device.

The *Bluetooth* indicator blinks blue.

1. On your mobile device, turn *Bluetooth* on.
2. Select **Bose Bluetooth Audio Adapter**.

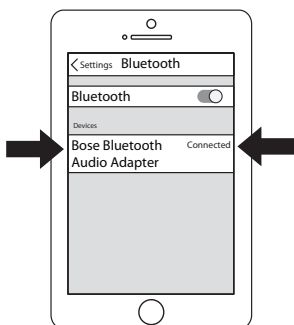


Note: Some devices may require a passcode. Enter **0000** if prompted.

When pairing is complete, the indicator glows solid white and your audio system emits a tone.

Note: If you are unable to pair your device, clear the adapter's memory. See "Adapter memory" on page 12.

Pairing another mobile device

1. Power on your audio system and *Bluetooth*® enabled device.
2. Press  on the adapter.
The *Bluetooth* indicator blinks blue.
3. On your mobile device, turn *Bluetooth* on.
4. Select **Bose Bluetooth Audio Adapter**.

Note: Some devices may require a passcode. Enter **0000** if prompted.

When pairing is complete, the indicator glows solid white.

The adapter's memory can hold up to eight devices. See "Adapter memory" on page 12.

Connecting a paired mobile device

If you have disconnected your device by turning off *Bluetooth*® or by connecting a fourth device, you will have to re-connect your device. You do not have to re-pair your device unless you have cleared the adapter's memory, or have paired more than 8 devices. See "Adapter memory" on page 12.

1. Power on your mobile device.
2. On your mobile device, turn *Bluetooth* on.
3. Select **Bose Bluetooth Audio Adapter**.

Until the device connects, the *Bluetooth* indicator on the adapter blinks white. When the adapter and *Bluetooth* enabled device have successfully connected, the indicator glows white and emits a tone through your audio system.

Multi-point connectivity

Multi-point connectivity enables your Bose® *Bluetooth*® Audio adapter to maintain an active connection with up to three mobile devices.

1. Pair and connect your *Bluetooth* enabled devices. See "Pairing a mobile device" on page 10.
2. Play music from your first connected device.
3. Pause your first device, and play music from your second or third connected device.


The second or third device's music plays from your audio system.

Notes:

- You must pause your music from your active device to play another connected device.
- If you activate a fourth device, the device that has been inactive the longest is replaced.

Operation

Bluetooth® indicator


The  (*Bluetooth* indicator) displays different *Bluetooth* connectivity states of the adapter through the LED.

Indicator	Status
Blinking blue	Discoverable and ready to pair with a device.
Blinking white	Attempting to connect to a paired device.
Solid white	Connected to a paired device.
Slow blinking white	Performing system updates.
Solid blue	Network standby (ready to reconnect with a device).
Blinks white twice	Paired device list removed.

Adapter memory


The Bose® *Bluetooth*® Audio adapter's memory holds up to eight paired devices. When the memory is full with eight devices and an additional device is paired, the last device paired is deleted from memory and the newly paired device is added.

Clearing memory



Press and hold  on the adapter (about 10 seconds). The indicator quickly blinks white and emits a tone through your audio system when the device list is cleared.

All *Bluetooth* enabled devices are cleared from the Bose® *Bluetooth*® Audio adapter, and the adapter becomes discoverable. To pair additional devices see "Pairing a mobile device" on page 10.

To re-pair a deleted device:

1. Clear the **Bose Bluetooth Audio Adapter** from your mobile device's *Bluetooth* list.
2. Press  on the adapter.
The *Bluetooth* indicator blinks blue.
3. Select **Bose Bluetooth Audio Adapter** from your mobile device's *Bluetooth* list.

Troubleshooting

Problem	What to do
Adapter is not powered	<ul style="list-style-type: none">• Firmly connect both ends of the power supply cable.• Connect the power supply to a live AC (mains) outlet.
Adapter does not pair with mobile device	<ul style="list-style-type: none">• On your mobile device, turn off <i>Bluetooth</i>[®] and turn it back on.• Remove the adapter from the <i>Bluetooth</i> list on your mobile device. Try pairing again.• Pair another mobile device.• Clear the adapter's memory: Press and hold  for 10 seconds. Try pairing again. See "Adapter memory" on page 12.
No sound from a <i>Bluetooth</i> enabled device	<ul style="list-style-type: none">• Power on your audio system.• Turn up the volume on your audio system and on your <i>Bluetooth</i> enabled device (or music app).• Try pairing another mobile device.• Select the correct source input for the adapter on your audio system.• Connect the adapter to an optical connector that does not have a video output already connected.• For more information on connecting sources to your audio system, refer to your audio system owner's guide.
Poor sound quality from a <i>Bluetooth</i> enabled device	<ul style="list-style-type: none">• Move the mobile device closer to the adapter, and away from any interference.• Try pairing another mobile device.
Cannot connect to multiple devices	<ul style="list-style-type: none">• Make sure your devices are paired.• Clear the adapter's memory: Press and hold  for 10 seconds. Try pairing again. See "Adapter memory" on page 12.

Cleaning

Clean the surface of the system with a soft, dry cloth.

- Do not use solvents, chemicals, or sprays.
- Do not allow liquids to spill into any openings.

Contacting customer service

For additional help, contact Bose[®] Customer Service. Refer to the contact sheet in the carton.

Limited warranty

Your system is covered by a limited warranty. Details of the limited warranty are provided on the product registration card that is included in the carton. Please refer to the card for instructions on how to register. Failure to register will not affect your limited warranty rights.

The warranty information provided with this product does not apply in Australia and New Zealand. See our website at www.bose.com.au/warranty or www.bose.co.nz/warranty for details of the Australia and New Zealand warranty.



728051-0010

BOSE[®]
Better sound through research[®]

©2014 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM728051 Rev.00