

electro-harmonix

MEMORY TOY ANALOG DELAY WITH MODULATION

Congratulations on your purchase of the Electro-Harmonix **MEMORY TOY**...a compact analog delay that takes its heritage from our 1970's Memory Man and the legendary Deluxe Memory Man. Like the Memory Boy, the **MEMORY TOY** is based on the Deluxe Memory Man analog circuit. A modulation switch allows quick access to lush analog chorus.

— POWER —

Your **MEMORY TOY** comes supplied with a 9 volt battery. **WARNING:** When using a power adaptor, use only a **96DC-200BI**. Do not use any other adapters. Using other adapters, even those made by Electro-Harmonix, could cause harm to the unit, the adapter or you.

— OPERATING INSTRUCTION and CONTROLS —

Connect your guitar to the **INPUT** jack of the **MEMORY TOY** and the **AMP** jack to your amplifier. The **MEMORY TOY** can be used in combination with other effects devices. Experiment with any combination to develop your own unique sound. The footswitch toggles between effect and true bypass modes.

DELAY – Controls the delay time of your **MEMORY TOY**. The range of delay time is from 30ms to 550ms. Turn the delay time clockwise to increase the delay amount.

BLEND – The **BLEND** control allows you to vary the mix of direct and delayed signals from 100% dry when set counter-clockwise to 100% wet at full clockwise.

FEEDBACK – The **FEEDBACK** control increases the number of delay repeats or multiple echoes. At high settings the unit will begin to self-oscillate. Fairly high feedback with short delay settings produces a reverb type of effect.

MOD Switch – When set to the **ON** position, the **MOD** switch will enable a slow modulation on the delay time similar to the chorus modulation of the Deluxe Memory Man. Set the **MOD** switch to the **OFF** position to disable all modulation.

INPUT JACK – Connect the output of your instrument or another effects pedal to this jack. The input impedance presented at the **INPUT** jack is 1 M Ω .

AMP JACK – Connect the **AMP** jack to your amplifier input or the input of another effects pedal.

STATUS LED and FOOTSWITCH – When the **STATUS LED** is lit, the Memory Toy is in effect mode. When the **LED** is off, the Memory Toy is in true bypass mode. Use the **FOOTSWITCH** to toggle between the two modes.

