

***Congratulations on the purchase of your new T-Rex pedal***

## MUDHONEY

The **BOOST** button switches between moderate and high gain.

The **GAIN** knob controls the amount of distortion.

The **LEVEL** knob sets the overall volume.

In the 12 o'clock position, the volume level is 1:1. When turned fully clockwise, the input signal is boosted 15dB.

The **TONE** knob affects the top end (edge) of your signal without compromising sonic quality, allowing you to dial in the perfect tonal flavor.

Controls: BOOST, GAIN, LEVEL and TONE

Connections: INPUT: ¼ inch jack  
OUTPUT: ¼ inch jack  
EXTERNAL POWER JACK: 2.1 mm

Power supply: 9-12V DC adapter or 9V alkaline battery.

Open the battery cover on the back using a flat tipped screwdriver in the slot. Remember to position the battery correctly.

*T-Rex Engineering January 2003*