


フェライト・コアの取り付け方

FA-66 をお使いになる前に必ずフェライト・コアを取り付けてください。

6ピン ↔ 6ピン・タイプの FireWire (IEEE 1394) ケーブルを使って、FA-66 とコンピューターを接続する場合には、付属のフェライト・コアを取り付けてください。電磁ノイズ防止用ですので取り外さないでください。

1. フェライト・コアを FireWire (IEEE 1394) ケーブルに取り付けます。

※ 必ず、プラグの間近に取り付けてください。

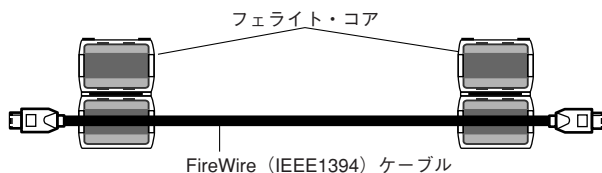


2. カチッと音がするまで押し込みます。



3. 周辺機器を FA-66 に接続する場合、周辺機器と FA-66 を接続する FireWire (IEEE 1394) ケーブルにも付属のフェライト・コアを取り付けてください。

※ お使いの周辺機器に付属のケーブルが細い場合、取り付けしたフェライト・コアが緩んで動いてしまうことがあります。このような場合は、バンドやテープなどで固定してください。固定用のバンドは 1 本付属しています。

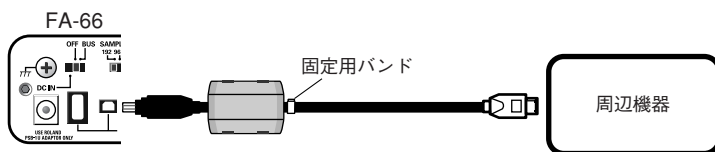

※ フェライト・コアを取り付けるとき、指などを挟まないようにご注意ください。

※ フェライト・コアを閉めるとき、ケーブルを無理に挟まないでください。

© 2005 ローランド株式会社

本書の一部、もしくは全部を無断で複製・転載することを禁じます。


Attaching the Ferrite Core

You must attach the ferrite core before using the FA-66.

If you use a 6-pin ↔ 6-pin FireWire (IEEE 1394) cable to connect the FA-66 to your computer, you must attach the included ferrite core. This is for the purpose of preventing electromagnetic noise; do not remove it.

1. Attach the ferrite core to the FireWire (IEEE 1394) cable.

* You must attach it near the plug.

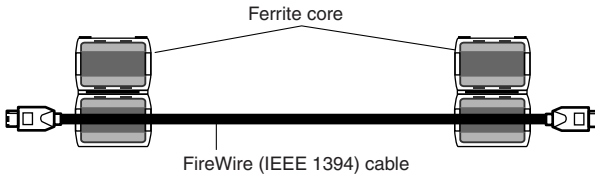


2. Press the halves together until they click shut.



3. If you connect a peripheral device to the FA-66, you must also attach the included ferrite core to the FireWire (IEEE 1394) cable that connects the peripheral device to the FA-66.

* If the cable included with your peripheral is thin, the attached ferrite core may slide along the cable. If so, use a band or adhesive tape to fasten the ferrite core in place. One such band is included.

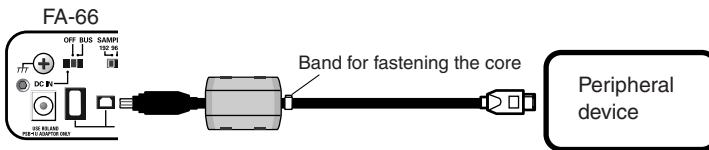

* Be careful not to pinch your fingers when attaching the ferrite core.

* Do not damage the cable by pinching it excessively with the ferrite core.

Copyright ©2005 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.