# iPad 2, 3 and 4 Tray Kit Installation Instructions

# ! IMPORTANT!

The contents of this kit allow you to replace the iPad tray insert currently installed on the DL806 or DL1608 mixer with an iPad 2, 3 and 4 tray insert. Before installing, ensure that you have the right iPad, docking connector and tray insert for your combination. See the **iPad to DL Compatibility Matrix** for the latest information: http://www.mackie.com/products/dlseries/specs

Please first read these instructions carefully to ensure you feel capable of completing the described tasks. Failure to follow the exact instructions in this document may result in personal injury or damage to the DL806, DL1608, iPad, or contents of the kit and may **void the warranty**, as well.

Web: http://www.mackie.com/support Email: techmail@loudtechinc.com

Phone: 425-487-4333 Toll-free: 800-898-3211

#### **Parts**

iPad 2-3-4 Tray Kit Contents - Part No. 2043587:

iPad 2-3-4 Tray Insert – Part No. 2037908 This instruction sheet – Part No. 2043592


#### **Tools**

Required Tools (not included):


#1 Phillips screwdriver

### iPad Tray Insert Removal

1. Remove the four screws holding the tray insert to the mixer, numbered 1 to 4 in the illustration below. Keep the screws in a safe place, as you will use them again.

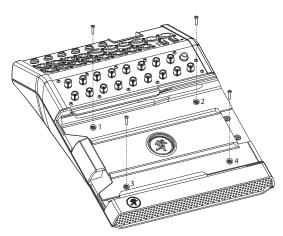


2. Remove the tray insert from the mixer and save it somewhere safe! You might need to use it again.

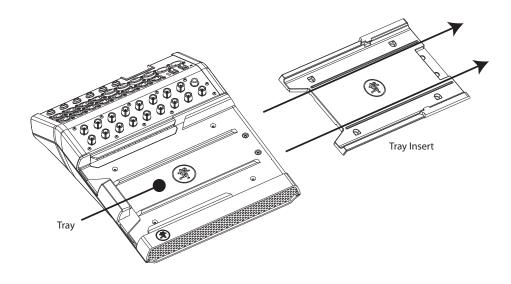

## iPad 2, 3 and 4 Tray Insert Install

1. Slide the iPad 2, 3 and 4 tray insert on top of the mixer, making sure to line up the sides and the screw holes.

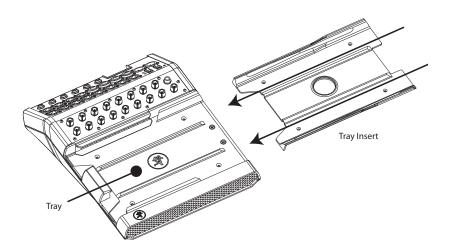

- 2. Place the screws back into the DL mixer from where you just removed them. Screw them into place, but do not overtighten. If the iPad fit is too tight, loosen all four screws, then tighten the ones closest to the connector first.
- 3. To use the PadLock™ with the iPad 2, 3 and 4 tray after removing an iPad Air Tray you will need to remove the two nylon washers from each PadLock screw. Put the driver into the screw head and use it to hold the screw from rotating. With minimal pressure applied, rotate the washer with your fingers until it is completely removed. Repeat the process for both washers. Keep them in a safe place in case you need to use them again.

