

*Pioneer*

Music Management Software

**rekordbox**<sup>TM</sup>

Operating Instructions



---

---

# Contents

## How to read this manual

The names of displays, menus, and buttons in this manual are enclosed in brackets. (e.g. [Collection] pane, [File] menu, [▶/⏸])

## 01 About rekordbox

Features of rekordbox.....	3
Preparing for playback with rekordbox.....	3
Using rekordbox in combination with a DJ player.....	4
Launching rekordbox.....	4
Names of parts.....	5

## 02 Preparing for playback on rekordbox

Adding music files to Collection.....	6
Editing the information on a music file.....	6
Listening to music files.....	7
Setting Cue.....	8
Setting Loop.....	8
Save Cue or Loop in the memory.....	9
Setting Hot Cue.....	9
Organizing music files by using Playlist.....	10
Organizing Hot Cue by using Hot Cue Bank List.....	11

## 03 Playback on a DJ player

Playback with a USB device.....	12
Playback with a LAN cable connection (PRO DJ LINK).....	13

## 04 Additional information

Setting Preferences.....	14
Menu List.....	14
Genre List.....	15
Troubleshooting.....	16
COPYRIGHT WARNING.....	16
Disclaimer.....	16

# About rekordbox

## Features of rekordbox

rekordbox is an application for managing music files which can be played back on a Pioneer DJ Player (i.e. CDJ-2000, CDJ-900).

rekordbox can be used to classify and search for music files stored on your computer and create playlists used for DJ performance.

rekordbox allows you to detect, measure and adjust the beats, tempos (BPM) and other elements of your music files prior to performance.

rekordbox can be used to set and store point information (for cueing, looping, hot cueing, etc.) prior to performance.

Data that has been detected and measured, as well as any points which have been set and stored using rekordbox, can be used in combination with a Pioneer DJ Player (i.e. CDJ-2000, CDJ-900) to achieve outstanding DJ performance.

## QUANTIZE

By detecting and adjusting the beats of music files ahead of time using rekordbox, cue and loop points, etc., can be set and played on beat even when the DJ player buttons are pressed roughly.

## CUE/LOOP POINT MEMORY

By creating and saving cue/loop points ahead of time using rekordbox, the cue/loop points can be called out on the DJ players. Up to 10 cue/loop points per music file can be saved with rekordbox.

## HOT CUE

By creating hot cues ahead of time on rekordbox, the hot cues can be called out on the DJ players. Up to 3 hot cues per music file can be saved with rekordbox.

## PLAYLIST

By creating playlists of favorite music files ahead of time using rekordbox, music files can be selected quickly on the DJ players.

## HOT CUE BANK LIST

Combinations of three hot cues (**A**, **B** and **C**) to be used on the DJ player can be created with rekordbox as hot cue bank lists. Cues of different music files can be combined and registered on the hot cue bank lists.

Multiple hot cue bank lists can be prepared, allowing you to quickly call out and play a greater number of hot cue combinations than ever before on the DJ players.

## TAG LIST


In addition to playlists, music files you plan to play next can be temporarily collected in rekordbox's tag list. The rekordbox tag list can be shared on DJ players connected to the computer by LAN cable (up to 4 players). This function is extremely convenient for selecting tracks during live performances using multiple DJ players reciprocally. For details, see *Playback with a LAN cable connection (PRO DJ LINK)* on page 4.

## HISTORY

The history of music files played on DJ players (track and point information) can be fed back to rekordbox.

## Preparing for playback with rekordbox

Install rekordbox on your computer from the included CD-ROM before use. See "Read Before Use (separate document)" for details about the software end user license agreement, system requirements, installation procedures, and support and disclaimer for rekordbox.

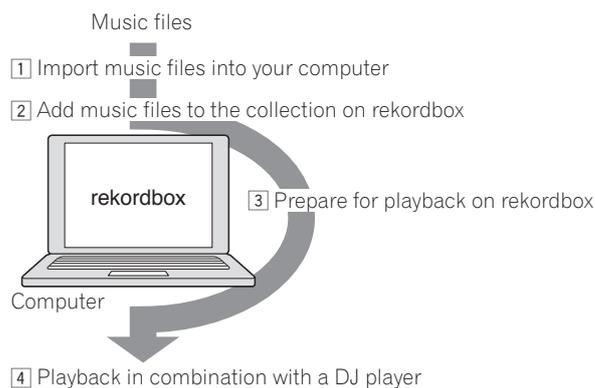

### 1 Importing music files into your computer.

Have music files ready on your computer.

- rekordbox does not have the capability of importing music files from an audio CD. Also, it cannot help you purchase music files on the Internet. It is recommended to have music files ready on your computer which have been imported by another application.

### 2 Add music files to the collection on rekordbox.

Analyze and measure the beat and tempo (BPM) of a music file.

- You can import the tag information of music files (MP3, AAC, etc.) as well as information on music files from the iTunes library.

### 3 Preparing for playback on rekordbox.

Set various performance points (Cue, Loop, and Hot Cue).

- Create playlists (Playlist and Hot Cue Bank List).
- You can import a Playlist (M3U and PLS) created by other software programs as well as a Playlist from the iTunes library.

### 4 Playback in combination with a DJ player.

You can play music files on a Pioneer DJ player (i.e. CDJ-2000, CDJ-900) by using the point information and playlists prepared with rekordbox in advance.

- Playback history, playback count, and point information which is saved on a Pioneer DJ player (i.e. CDJ-2000, CDJ-900) can be imported and applied to the rekordbox collection.

## Using rekordbox in combination with a DJ player

Be sure to read the notes on installation and the connection procedure found in the operating instructions for your Pioneer DJ player before connecting it to your computer.


Read the operating instructions for your Pioneer DJ player for details about SD memory cards or USB devices (flash memory or hard disk) that can be used on the DJ player.

Up-to-date information regarding which Pioneer DJ Players can be used in combination with rekordbox can be found at the website: <http://www.prodjnet.com/rekordbox/support/>

### Playback with a USB device

You can deliver music files and their related data saved with rekordbox to your DJ player by using USB devices (flash memory or hard disk) without the hassle of bringing your computer to the DJ booth (page 12).


- With some DJ players (i.e. CDJ-2000), SD memory cards can be used instead of USB devices.

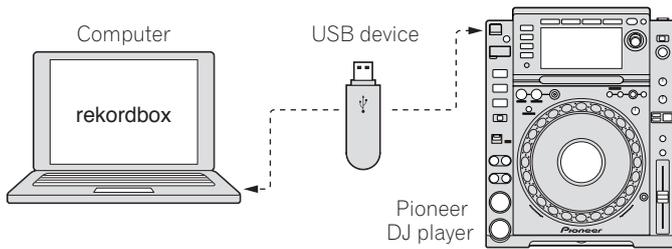


### Playback with a LAN cable connection (PRO DJ LINK)

PRO DJ LINK functions are not supported in rekordbox v1.0. rekordbox can be downloaded to obtain these features (see *Using the support site* on page 16).

You can load music files and their related data saved with rekordbox onto your DJ player in real time if you connect the DJ player to a computer with a LAN cable (page 13).

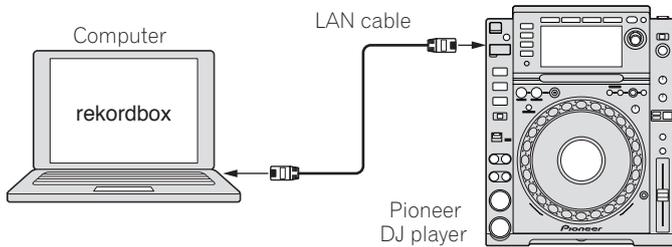

You can load the music files and their related data saved with rekordbox onto up to 4 DJ players if you connect the computer to a DJ player with a LAN cable and a switching hub (page 13).

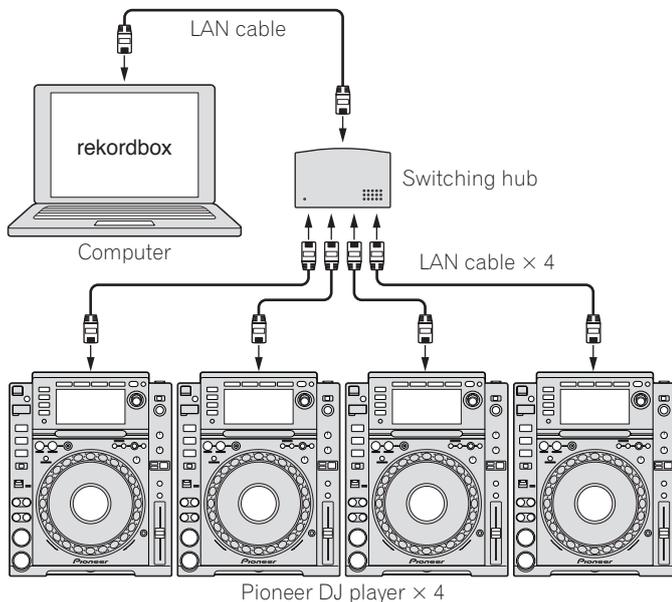

## Launching rekordbox

Log on as the user which was set as the computer's administrator before using rekordbox.

### For Mac OS X:

Open the [Application] folder with Finder, then double-click [rekordbox 1.x.x.app].


The 1.x.x indicates the rekordbox version.

### For Windows Vista® or Windows® XP:

Click on the windows [Start] menu button, then [All Programs] > [Pioneer] > [rekordbox 1.x.x] > [rekordbox 1.x.x].

The 1.x.x indicates the rekordbox version.

## Names of parts

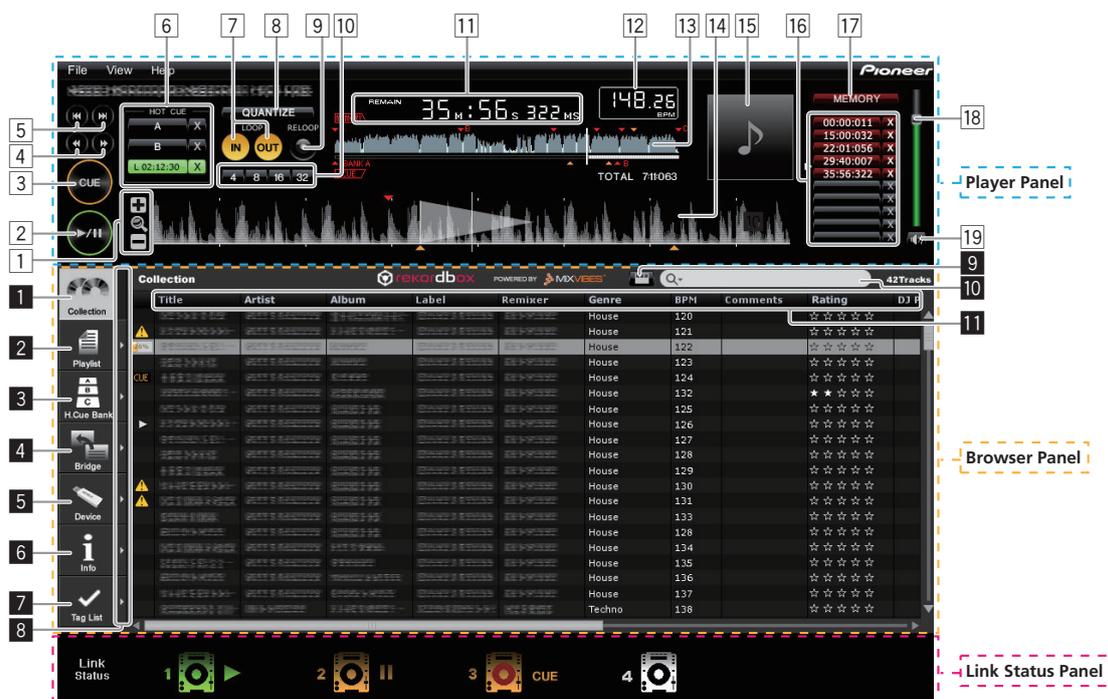

### Player Panel

- 1 **+ / Q / -**  
Enlarges or reduces waveform displays.
- 2 **► / II (page 7)**
- 3 **CUE (page 8)**
- 4 **◀◀ / ▶▶**  
Press and hold during playback to fast-forward or fast-rewind (search).
- 5 **◀◀ / ▶▶**  
Moves to the beginning of a track (track search).
  - Click [▶▶] to move to the beginning of the next track.
  - Click [◀◀] to move to the beginning of the track currently being played. Press twice to move to one track before the current track.
- 6 **HOT CUE (A, B, C) (page 9)**
- 7 **LOOP IN/LOOP OUT (page 8)**
- 8 **QUANTIZE (page 8)**
- 9 **RELOOP (page 8)**
- 10 **Auto Beat Loop (4, 8, 16, 32) (page 8)**
- 11 **Time display (TIME/REMAIN), minute (M), second (S), millisecond (MS)**  
1000 milliseconds equal 1 second.
  - Click [TIME] to switch [REMAIN (time remaining display)].
  - Click [REMAIN] to switch [TIME (time elapsed display)].
- 12 **BPM display (BPM) (page 7)**  
Displays BPM (Beats Per Minute) of the track currently being played.
- 13 **Waveform display**
- 14 **Enlarged waveform display**  
Drag to the left or to the right to move the playback position forward or backward.
- 15 **Artwork image (page 6, 10, 11)**
- 16 **Cue/Loop Call (page 9)**
- 17 **MEMORY (page 9)**
- 18 **Volume**  
Drag up or down to adjust the volume.
- 19 **Mute**  
Press to mute the sound.

### Browser Panel

- 1 **Collection (page 6)**  
Displays the [Collection] pane in the browser panel.
- 2 **Playlist (page 10)**  
Displays the [Playlist] pane in the browser panel.
- 3 **H. Cue Bank (page 11)**  
Displays the [Hot Cue Bank List] pane in the browser panel.
- 4 **Bridge (page 6)**  
Displays the [Bridge] pane in the browser panel.
- 5 **Device (page 12)**  
Displays the [Device] pane in the browser panel.
- 6 **Info (page 6)**  
Displays the [Information] pane in the browser panel.
- 7 **Tag List (page 13)<sup>1)</sup>**  
Displays the [Tag List] pane in the browser panel.
- 8 **Display panes side by side**  
Displays panes side by side to the right of the pane currently being displayed. To close a pane being displayed on the right side, click [◀] in the top left corner of the pane.
- 9 **Category filter (page 7)**
- 10 **Search filter (page 6)**
- 11 **Column header (page 7)**

### Link Status Panel (page 13)<sup>1)</sup>

- 1) PRO DJ LINK functions (Link Status and Tag List) are not supported in rekordbox v1.0. rekordbox can be downloaded to obtain these features (see *Using the support site* on page 16).

---

---


# Preparing for playback on rekordbox

---

---

## Adding music files to Collection

Register the music files saved on your computer as a music collection of rekordbox.

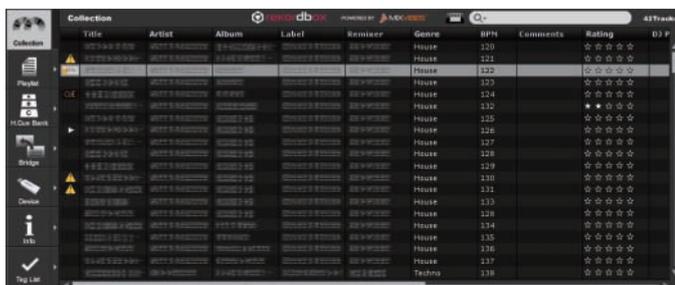

### 1 Click .

The [Collection] pane is displayed.

### 2 Select [File] menu > [Import] > [File].

The [Add to Collection] window is displayed.

### 3 Select a music file and click [Open].

The music file is added to Collection, and the tag information of the music file is registered and displayed. Analysis of the music file begins, and  is displayed to the left of the music file being analyzed. The status then disappears when the analysis is completed.

- To add all music files contained in a folder, select [File] menu > [Import] > [Folder].
- You can also add a music file by opening Finder or Windows Explorer and dragging the music file to the [Collection] pane.
- The tag information may not be displayed when a WAV or AIFF file is added to Collection. The tag information types which can be registered from a music file are ID3 tags (v1, v1.1, v2.2.0, v2.3.0, and v2.4.0) or meta tags.
- To remove a music file from Collection, right click the music file to be deleted in the [Collection] pane and choose [Remove] from the shortcut menu which appears. The music file itself is not deleted from the computer although it is removed from Collection.

---

## Adding music files from the iTunes library

### 1 Click .

The [Collection] pane is displayed.

### 2 Click on the right of .

The [Collection] pane and the [Bridge] pane are displayed on the left and right sides of the browser panel respectively.

### 3 Click on the left of [Bridge-iTunes], then click [All Tracks].

A list of the iTunes music files is displayed.

### 4 Drag the iTunes music file from the [Bridge] pane to the [Collection] pane.

The music file is added to Collection and the information of the music file is registered from iTunes and displayed.

- Music files can also be added by right-clicking the iTunes music file in the [Bridge] pane and selecting [Add to Collection].

---

---

## Editing the information on a music file

### 1 Click .

The [Collection] pane is displayed.

### 2 Click on the right of .

The [Collection] pane and the [Information] pane are displayed on the left and right sides of the browser panel respectively.

### 3 Click a music file in the [Collection] pane.

The [Summary] tab is displayed in the [Information] pane.

### 4 Click the [Info] tab in the [Information] pane.

The [Info] tab is displayed in the [Information] pane.

### 5 Select and edit an item.

The information for the music file is changed.

---

## Adding an artwork image to a music file

The artwork image formats which can be added to a music file are JPEG and PNG (extensions: ".jpg", ".jpeg", ".png").

### 1 Click the [Artwork] tab in the [Information] pane.

### 2 Open Finder/Windows Explorer.

### 3 Drag an image file from Finder/Windows Explorer to the [Artwork] tab.

The artwork image is added to the music file.

---

## Reload the tag information of a music file

When an external application is used to modify the music file tag information, this tag information must be reloaded in rekordbox to properly display any changes.

- When a music file's tag information is reloaded, the contents edited at the [Information] and [Artwork] tabs are replaced with the reloaded tag information.

### 1 Click the [Info] tab in the [Information] pane.

### 2 Click in the top-left corner of the [Info] tab.

The tag information of a music file is reloaded.

- You can reload the tag information of a music file by selecting [File] menu > [Reload Tags].

---

## Search for a music file using Search filter

### 1 Click .

The [Collection] pane is displayed.

### 2 Click on the left of [Search filter].

A pop-up menu is displayed.

### 3 Select and click an item from the pop-up menu.

### 4 Enter characters in [Search filter] with the computer keyboard.

The music files containing these characters are filtered based on the item selected in step 3.

- The original track list reappears if you delete the search term entered.

## Changing the arrangement of music files

### 1 Click

The [Collection] pane is displayed.

### 2 Click a column header.



The arrangement of music files is changed.

- Each time you click, the arrangement toggles between ascending and descending orders.

### ❖ Searching for a music file by character entry

#### Enter a character with the computer keyboard as a continuation of step 2.

The cursor moves to a music file starting with the character entered.

- If you enter another character, the cursor moves to the first music file in alphabetical order beginning with the current character combination.

## Changing the arrangement of a column

### 1 Click

The [Collection] pane is displayed.

### 2 Drag the column header to the left or to the right.

The arrangement of the column is changed.

### ❖ Toggling between showing and hiding a column

#### Right-click the column header, then select the target item from the pop-up list.

The mode toggles between showing and hiding a column.

## Searching a music file with the category filter

### 1 Click

The [Collection] pane is displayed.

### 2 Click

A category ([Genre], [Artist], or [Album]) is displayed.

### 3 Select and click a category.

Only the music files in the selected category are displayed.

## Listening to music files

Play a music file and check the beat and tempo (BPM).



### 1 Drag a music file from the browser panel to the player panel.

The music file is loaded.

### 2 Click [▶/||].

Playback starts.

- The enlarged waveform display shows the beat grid which is generated when the music file was added.
- The BPM display shows the tempo measured when the music file was added.

## Adjusting the beat grid

The enlarged waveform display shows the beat grid in white vertical dashes. The beat grid can be adjusted by the following procedure.

### 1 Click [▶/||] during playback.

Playback is paused.

### 2 Drag the enlarged waveform display to the left or to the right.

Adjust the beat grid such that the desired position fits into the white line in the middle of the enlarged waveform display.

### 3 Right-click the enlarged waveform display and select [Adjust Beat Grid].

The paused position is set as the foundation point for the beat grid, and the white beat marks appearing before and after are adjusted accordingly.

### ❖ Re-analyzing music files

#### Right-click a music file and select [Analyze Track].

The waveform data of a music file is analyzed. The detected beat and the measured tempo are saved on your computer.


- If you re-analyze a music file, any previous adjustments to the beat grid will be overwritten by the newly-resulting beat grid from the re-analysis.

---

---

## Setting Cue

Set the Cue Point.

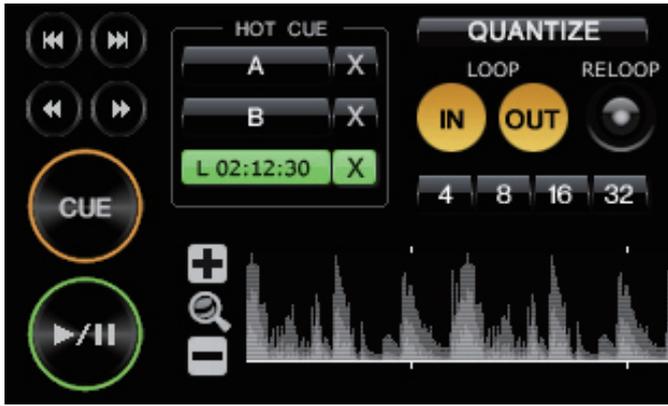

---

---

### 1 Click [▶/||] during playback.

Playback is paused.

### 2 Click [CUE].

The paused position is set as a Cue Point. The **CUE** indicator lights up, and the ▶/|| indicator flashes. Sound is not output at this time.

- When a new Cue Point is set, the previously set Cue Point is deleted.
- When you load another music file, the previously set Cue Point is deleted. See *Save Cue or Loop in the memory* on page 9 for how to save a Cue Point.

---

---

## Returning to Cue Point (Back Cue)

### Click [CUE] during playback.

Playback instantaneously returns to and pauses at the set Cue Point.

- To start playback from the Cue Point, click [▶/||].

---

---

## Checking Cue Point (Cue Point Sampler)

### Press and hold [CUE] after returning to the Cue Point.

Playback starts from the Cue Point while you press and hold [CUE].

---

---

## Setting Cue Point during playback (Real Time Cue)

### Click [LOOP IN] during playback at the position where you want to set the Cue Point.

The clicked position is set as a Cue Point.

- When [QUANTIZE] is turned on, the Cue Point is automatically adjusted to the beat grid near the position where you clicked [LOOP IN].

---

---

## Setting Loop

### 1 Click [LOOP IN] during playback at the position (Loop In Point) where you want to start Loop playback.

Loop In Point is set.

- This operation is not necessary if you have already set a Cue Point as a Loop In Point.

### 2 Click [LOOP OUT] at the position (Loop Out Point) where you want to end Loop playback.

The Loop Out Point is set, and Loop playback starts from the Loop In Point.

- When [QUANTIZE] is turned on, the Loop Point is automatically adjusted to the beat grid near the position where you clicked [LOOP IN] or [LOOP OUT].
- When the Loop Point is newly set, the previously set Loop Point is deleted.
- When you load another music file, the previously set Loop Point is deleted. See *Save Cue or Loop in the memory* on page 9 for how to save a Loop Point.

---

---

## Canceling Loop playback (Loop Exit)

### Click [RELOOP] during Loop playback.

Playback continues after the Loop Out Point without returning to the Loop In Point.

---

---

## Returning to Loop playback (Reloop)

### Click [RELOOP] during playback after Loop has already exited.

Playback returns to the previously set Loop In Point, and Loop playback resumes.

---

---

## Setting Loop automatically (Auto Beat Loop)

A 4/8/16/32 beat Loop is automatically set from the clicked position corresponding to the BPM of the music file currently being played.

### Click [4], [8], [16], or [32] during playback.

Loop playback starts.

- When [QUANTIZE] is turned on, the Loop Point is automatically adjusted to the beat grid near the position where you clicked [4], [8], [16], or [32].

## Save Cue or Loop in the memory

You can save multiple Cue and Loop Points which have been set for a specific track. Once saved, these points can be called out from the memory at a later time.



### 1 Set Cue Point or Loop Point.

### 2 Click [MEMORY].

The points saved are displayed in the **Cue/Loop Call** button.

- By using the **Cue/Loop Call** button, up to ten Cue or Loop Points can be saved for each music file.
- Click [MEMORY] during Loop playback to save a Loop Point. The Loop Point is displayed in the **Cue/Loop Call** button.

## Calling Cue or Loop from memory

### 1 Load a music file for which you want to call a Cue Point or Loop Point.

The Cue Point or Loop Point is displayed in the **Cue/Loop Call** button.

### 2 Click the Cue/Loop Call button to start playback from the set Cue/Loop Point position.

The playback position is moved to the selected point and paused.


### 3 Click [▶/||].

Playback starts from the Cue or Loop point.

- To delete the already saved Cue Point or Loop Point, click [X] on the right of the **Cue/Loop Call** button whose Cue/Loop Point you wish to delete.

## Setting Hot Cue

You can set a Cue Point or Loop Point to [HOT CUE] (A, B, C). Press [HOT CUE] to start playback instantaneously from the point saved in the button.

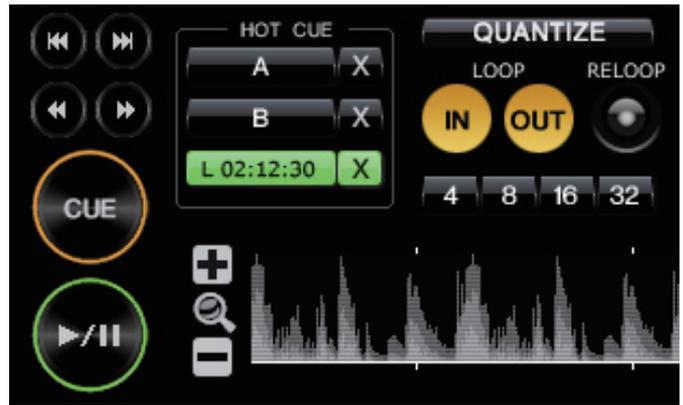

Click any of [HOT CUE] (A, B, or C) during playback or pause at the position you want to set to a Hot Cue.

The clicked position or Loop playback is set as [HOT CUE]. The recorded position is displayed in [HOT CUE].

## Checking Hot Cue

Click [HOT CUE] where the recorded position is displayed.

Playback starts instantaneously from the point recorded in the button.

- To delete the recorded point, click [X] on the right of the [HOT CUE] you want to delete.

## Setting Cue or Loop saved in the memory as Hot Cue

### 1 Load a music file in which a Cue Point or Loop Point is saved.

The Cue Point or Loop Point is displayed in the **Cue/Loop Call** button.

### 2 Click the Cue/Loop Call button you want to set as a Hot Cue.

The playback position is moved to the selected point and paused.


### 3 Click any of [HOT CUE] (A, B, or C) you want to record.

The recorded position is displayed in [HOT CUE].

---

## Organizing music files by using Playlist

You can organize the music collection on rekordbox by creating a Playlist prior to performance.

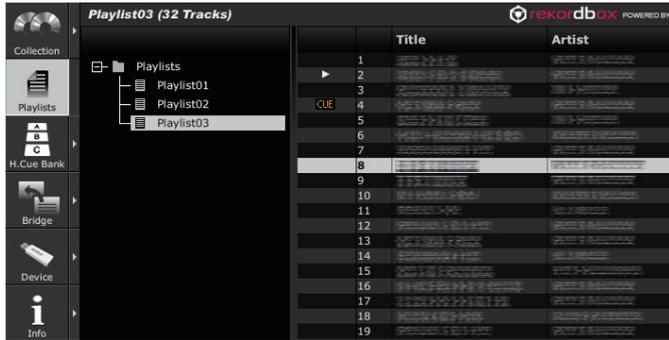

### 1 Click

The [Playlist] pane is displayed.

**2 Right-click the [Playlist] folder and select [Create New Playlist].**  
[untitled playlist] is added under the [Playlist] folder.

**3 Enter the name of the Playlist with the computer keyboard and press the Enter key.**  
The name of Playlist is changed.

### 4 Click [▶] on the right of

The [Playlist] pane and the [Collection] pane are displayed on the left and right sides of the browser panel respectively.

**5 Drag a music file from the [Collection] pane to the [Playlist] pane.**

The music file is added to Playlist.

- You can also add a music file by dragging it from the [Bridge] pane or other Playlist.

---

## The Playlist file is registered and added to Playlist

The file formats of Playlist which can be registered are M3U and PLS (extensions: "m3u", "pls").

### 1 Click

The [Playlist] pane is displayed.

**2 Select [File] menu > [Import] > [Playlist].**

The [Import] window is displayed.

**3 Select Playlist and click [Open].**

The playlist is added to the [Playlist] pane and the music file information is loaded from iTunes and displayed.

---

## Adding Playlist from the iTunes library

### 1 Click

The [Playlist] pane is displayed.

### 2 Click [▶] on the right of

The [Playlist] pane and the [Bridge] pane are displayed on the left and right sides of the browser panel respectively.

**3 Click [+] on the left of [Bridge-iTunes], then click [+] on the left of [Playlist].**

A list of the iTunes playlists is displayed.

**4 Drag the iTunes playlist from the [Bridge] pane to the [Playlist] pane.**

The playlist is added to the [Playlist] pane and the music file information is loaded from iTunes and displayed.

- Playlists can also be added by right-clicking the iTunes playlist in the [Bridge] pane and selecting [Import].

---

## Organizing Playlist by using a folder

### 1 Click

The [Playlist] pane is displayed.

**2 Right-click the [Playlist] folder and select [Create New Folder].**  
[untitled folder] is added under the [Playlist] folder.

**3 Enter the name of the folder with the computer keyboard and press the Enter key.**

**4 Drag Playlist to the newly created folder.**

Playlist is moved under the newly created folder.

- To delete the folder, right click the folder and choose [Delete] from the shortcut menu which appears. All contents of the folder, including Playlists and subfolders, are deleted.
- To delete a Playlist, right click Playlist and choose [Delete] from the shortcut menu which appears.
- To remove a music file from Playlist, right click the music file and choose [Remove] from the shortcut menu which appears.

### ❖ Adding an artwork image to a Playlist

The artwork image file formats which can be added to Playlist are JPEG or PNG (extensions: "jpg", "jpeg", "png").

**1 Right-click Playlist and select [Add Artwork].**

The [Add Artwork] window is displayed.

**2 Select an image file and click [Open].**

The artwork image is added to Playlist.

---

## Changing the track order in Playlist (dragging)

**1 Click the heading of the column displaying the track order.**

Each time you click, the arrangement toggles between ascending and descending orders.

**2 Drag a music file and change the track order.**

- If the songs are sorted by any column header besides that which displays the track order, a music file cannot be dragged and reordered.

---

## Changing the track order in Playlist (sorting)

**1 Click the name of a column header for which you want to change the track order.**

Each time you click, the arrangement toggles between ascending and descending orders.


**2 Right-click the name of the column header and select [Renummer Track Order].**

The tracks are renumbered to match the newly-sorted track order.

## Organizing Hot Cue by using Hot Cue Bank List

A Hot Cue Bank can be used to save Hot Cue information from different music files. Up to three points can be saved as Hot Cue Banks **A**, **B**, and **C**. These are collectively referred to as a Hot Cue Bank List. You can load Hot Cue Bank Lists onto a DJ player, which while performing, can be used in rhythmic succession to create combinations of samples from different tracks.

- With some DJ players (i.e. CDJ-900), Hot Cue Bank Lists cannot be loaded onto the DJ player.

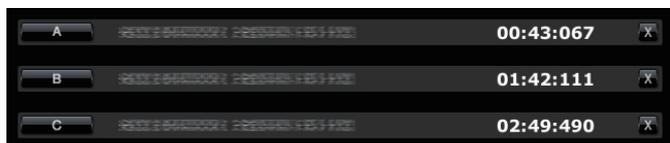

### 1 Click

The [Hot Cue Bank List] pane is displayed.

### 2 Right-click the [Hot Cue Bank List] folder and select [Create New Hot Cue Bank List].

[untitled hot cue bank list] is added under the [Hot Cue Bank List] folder.

### 3 Enter the name of the list with the computer keyboard and press the Enter key.

The name of Hot Cue Bank List is changed.

## Setting Hot Cue Bank

Click any of the Hot Cue Bank buttons (**A**, **B**, or **C**) during playback or pause at the position where you want to set to the Hot Cue Bank.

The clicked position or Loop playback is set to the **Hot Cue Bank** button. The recorded point is also displayed in the **Hot Cue Bank** button.

## Checking Hot Cue Bank

Click the Hot Cue Bank button where the recorded point is displayed.

The track displayed beside the button is loaded, and playback starts instantaneously from the recorded point.

- To delete the recorded point, click [X] on the right of the Hot Cue Bank you want to delete.

## Setting Cue or Loop saved in the memory as Hot Cue Bank

### 1 Load a music file in which a Cue Point or Loop Point is saved.

The Cue Point or Loop In Point is displayed in the **Cue/Loop Call** button.

### 2 Click the Cue/Loop Call button you want to set as the Hot Cue Bank.

The playback position is moved to the selected point and paused.

### 3 Click the Hot Cue Bank button (**A**, **B**, or **C**) you want to record.

The recorded point is displayed in the **Hot Cue Bank** button.

## Setting Hot Cue to Hot Cue Bank

### 1 Load a music file in which the Hot Cue is recorded.

The recorded point is displayed in [HOT CUE].

### 2 Click [▶/||] if a music file is being played back.

Playback is paused.

### 3 Click the [HOT CUE] you want to set to a Hot Cue Bank.

The playback position is moved to the selected point and paused.

### 4 Click the Hot Cue Bank button (**A**, **B**, or **C**) you want to record.

The recorded point is displayed in the **Hot Cue Bank** button.

## Organizing Hot Cue Bank List by using a folder

### 1 Click

The [Hot Cue Bank List] pane is displayed.

### 2 Right-click the [Hot Cue Bank List] folder and select [Create New Folder].

[untitled folder] is added under the [Hot Cue Bank List] folder.

### 3 Enter the name of the folder with the computer keyboard and press the Enter key.

### 4 Drag Hot Cue Bank List to the newly created folder.

Hot Cue Bank List is moved under the newly created folder.

- To delete the folder, right click the folder and choose [Delete] from the shortcut menu which appears. All contents of the folder, including Hot Cue Bank Lists and subfolders, are deleted.
- To delete a Hot Cue Bank List, right click Hot Cue Bank List and choose [Delete] from the shortcut menu which appears.

### ❖ Adding an artwork image to Hot Cue Bank List

The artwork image file formats which can be added are JPEG or PNG (extensions: "jpg", "jpeg", "png").

### 1 Right-click Hot Cue Bank List and select [Add Artwork].

The [Add Artwork] window is displayed.


### 2 Select an image file and click [Open].

The artwork image is added to Hot Cue Bank List.

# Playback on a DJ player

## Playback with a USB device

You can deliver music files and their related data saved with rekordbox to your DJ player by using USB devices (flash memory or hard disk) without the hassle of bringing your computer to the DJ booth.

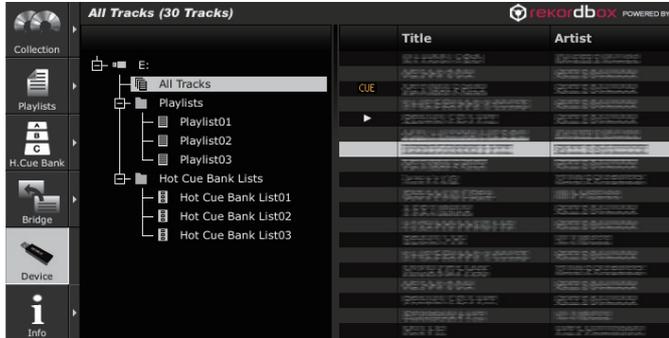

## Setting the USB device

1 Click .  
The [Device] pane is displayed.

2 Click  for the USB device whose settings you want to change.

- The following settings are changed.

General	Device Name	Set the name to be displayed when the device is connected to the DJ player.
	Background Color	Set the background color to be displayed when the device is connected to the DJ player.
Category	Active Categories	Select the categories and their order for display on the DJ player. For instructions on using the Library Browsing function with DJ players, refer to the DJ player's operating instructions.
Sort	Active Sort Options	Select the sort options and their order for display on the DJ player. For instructions on using the Library Browsing function with DJ players, refer to the DJ player's operating instructions.
	Pink	
Color	Red	
	Orange	You can change the color description representing any of the eight colors used to categorize music files on the DJ player. For instructions on using the Library Browsing function with DJ players, refer to the DJ player's operating instructions.
	Yellow	
	Green	
	Aqua	
	Blue	
	Purple	

## Saving music files in a USB device

1 Click .  
The [Device] pane is displayed.

2 Click  on the left of the  mark for the music file you want to save.  
The contents of the USB device are displayed.

3 Click [All Tracks].

4 Click  on the right of .  
The [Device] pane and the [Collection] pane are displayed on the left and right sides of the browser panel respectively.

5 Drag a music file from the [Collection] pane to the [Device] pane.  
The music file and its related data are saved in the USB device.

- You can also add a music file by dragging it from the [Bridge] pane to the [Device] pane.

## Saving Playlist in a USB device

1 Click .  
The [Device] pane is displayed.

2 Click  on the left of the  mark for the playlist you want to save.  
The contents of the USB device are displayed.

3 Click  on the left of the [Playlist] folder.

4 Click  on the right of .  
The [Device] pane and the [Playlist] pane are displayed on the left and right sides of the browser panel respectively.

5 Drag Playlist from the [Playlist] pane to the [Device] pane.  
Both the Playlist and its music files are saved in the USB device.

- This can also be accomplished by dragging a Playlist from the [Bridge] pane to the [Device] pane.

## Saving Hot Cue Bank List in a USB device

1 Click .  
The [Device] pane is displayed.

2 Click  on the left of the  mark for the hot cue bank list you want to save.  
The contents of the USB device are displayed.

3 Click  on the left of the [Hot Cue Bank List] folder.

4 Click  on the right of .  
The [Device] pane and the [Hot Cue Bank List] pane are displayed on the left and right sides of the browser panel respectively.

5 Drag Hot Cue Bank List from the [Hot Cue Bank List] pane to the [Device] pane.  
Both the Hot Cue Bank List and its music files are saved in the USB device.

## Playback by connecting a USB device to a DJ player

For details about settings or playback from a USB device, refer to the operating instructions for the DJ player.

- With some DJ players (i.e. CDJ-2000), SD memory cards can be used instead of USB devices.
- With some DJ players (i.e. CDJ-900), Hot Cue Bank Lists cannot be loaded onto the DJ player.

## Creating a Playlist based on the order of tracks played back on a DJ player

### 1 Connect the USB device that was used for playback on the DJ player to the computer.

If a playback history on the DJ player is recorded on a USB device, the [Save History as Playlist] window is displayed.

### 2 Press [OK].

A Playlist is created based on the playback history.

- When the Playlist is created, the playback history recorded on a USB device is deleted.

### ❖ Creating a Playlist from a playback history after the [Save History as Playlist] window has been cancelled

### 1 Click .

The [Device] pane is displayed.

### 2 Click the [HISTORY] folder to display the playback history list from the DJ player.

### 3 Right-click the playback history you want to save and select [Save as Playlist].

A Playlist is created on the [Playlist] pane.

## Register the information for the music files updated on a DJ player

### 1 Connect the USB device that was used for playback on the DJ player to the computer.

### 2 Click .

The [Device] pane is displayed.

### 3 Right-click on the USB device from which you want to import information and select [Update Collection].

The [Update Collection with USB Device] window is displayed.

- The information on the music file is updated.
- The [Update Collection with USB Device] window is automatically closed when the update is completed.
- The following information is updated.
  - Cue Point and Loop Point
  - Hot Cue
- If you click [Cancel] during the update process, the [Update Collection with USB Device] window is closed.

## Playback with a LAN cable connection (PRO DJ LINK)

PRO DJ LINK functions (Link Status and Tag List) are not supported in rekordbox v1.0. rekordbox can be downloaded to obtain these features (see *Using the support site* on page 16).

You can load the music files and their related data saved with rekordbox in real time if you connect your computer to a DJ player with a LAN cable. The music files and their related data can be transmitted to up to four DJ players by making a connection to a switching hub.

- If you connect the computer to a DJ player, a DJ player icon is displayed on the link status panel.
- For details about connections, refer to the operating instructions for the DJ player.
- You can change the order of the DJ player icons displayed in the link status panel by dragging them to the left or to the right.



## Loading music files onto a DJ player

### 1 Click .

The [Collection] pane is displayed.

### 2 Drag a music file from the [Collection] pane to .

The music file is loaded onto the DJ player, and playback starts.

- You can also load a music file by dragging it from the [Playlist] pane or the [Bridge] pane.

## Sharing music files by using Tag List

Tag List is a reference list to be shared with multiple DJ players displayed in the link status panel in real time.

If you add a music file from rekordbox to the Tag List, you can load and play back the added music file through the DJ player.

### 1 Click .

The [Collection] pane is displayed.

### 2 Click [▶] on the right of .

The [Collection] pane and the [Tag List] pane are displayed on the left and right sides of the browser panel respectively.

### 3 Drag a music file from the [Collection] pane to the [Tag List] pane.

The music file is added to the [Tag List] pane.

- You can also add a music file by dragging it from the [Playlist], [Bridge], or [Device] pane.
- You can add up to sixty music files.

## Playback on a DJ player by using Tag List

For details about how to access the Tag List from a DJ player displayed in the link status panel, refer to the operating instructions for the DJ player.

The DJ player connected by LAN cable is not interconnected with the player panel of rekordbox. The player panel of rekordbox cannot be controlled by operating the DJ player.

---

---

# Additional information

---

---

## Setting Preferences

Select **[File]** menu > **[Preferences]** to open the **[Preferences]** window.

General / Audio / Keyboard		
General	Language	Set the language to be used in the display.
	Tooltips	Set whether or not pop-up hints are displayed.
	Location of Track Analysis Files	Set where to save the analyzed waveform data of a music file.
Audio	Audio Device	Set the audio output device.
	Sample Rate <sup>[1]</sup>	Set the sampling frequency of audio data sent to an audio device.
	Buffer Size <sup>[2]</sup>	Set the number of samples sent to an audio device for each data transmission.
	Output Channels	Set the audio output channel when there are multiple outputs from an audio device.
Keyboard	Assigns a keyboard shortcut to each button in the player panel.	

[1] A high sampling rate allows the user to achieve a playback quality close to that of the original track. However, as the amount of audio data increases, the load on the audio device also increases.

[2] A large buffer size reduces audio skipping (audio interruption). However, as the transmission delay (latency) increases, the time gap also increases between the playback position of the music file displayed on the screen and the actual audio output.

Export/Color		
Export	Category	Select the categories and their order for display on the DJ player. For instructions on using the Library Browsing function with DJ players, refer to the DJ player's operating instructions.
	Sort	Select the sort options and their order for display on the DJ player. For instructions on using the Library Browsing function with DJ players, refer to the DJ player's operating instructions.
Color	You can change the color description representing any of the eight colors used to categorize music files on the DJ player. For instructions on using the Library Browsing function with DJ players, refer to the DJ player's operating instructions.	
	<ul style="list-style-type: none"><li>• This setting applies to all DJ players displayed in the link status panel.</li><li>• This setting is applied as the [Device] pane's default. It can be set separately for different USB devices (page 12).</li></ul>	

---

---

## Menu List

[File] Menu	
Import > File (page 6)	
Import > Folder (page 6)	
Import > Playlist (page 10)	
Preferences	
Exit	
[View] Menu	
Full Screen	Display the rekordbox window in full view.
[Help] Menu	
rekordbox Help	Open the operating instructions for this software.
Support Site	Access the support site for this software.
About rekordbox	Display the version of this software.

## Genre List

If a genre name does not exist in the tag information of a music file, the genre code is converted into one of the following categories in English.

Blues	Blues
Classic Rock	Classic Rock
Country	Country
Dance	Dance
Disco	Disco
Funk	Funk
Grunge	Grunge
Hip-Hop	Hip-Hop
Jazz	Jazz
Metal	Metal
New Age	New Age
Oldies	Oldies
Other	Other
Pop	Pop
R&B	R&B
Rap	Rap
Reggae	Reggae
Rock	Rock
Techno	Techno
Industrial	Industrial
Alternative	Alternative
Ska	Ska
Death Metal	Death Metal
Pranks	Pranks
Soundtrack	Soundtrack
Euro-Techno	Euro-Techno
Ambient	Ambient
Trip-Hop	Trip-Hop
Vocal	Vocal
Jazz + Funk	Jazz + Funk
Fusion	Fusion
Trance	Trance
Classical	Classical
Instrumental	Instrumental
Acid	Acid
House	House
Game	Game
Sound Clip	Sound Clip
Gospel	Gospel
Noise	Noise
Alternative Rock	Alternative Rock
Bass	Bass
Soul	Soul
Punk	Punk
Space	Space
Meditative	Meditative
Instrumental Pop	Instrumental Pop
Instrumental Rock	Instrumental Rock
Ethnic	Ethnic
Gothic	Gothic
Darkwave	Darkwave
Techno-Industrial	Techno-Industrial
Electronic	Electronic
Pop-Folk	Pop-Folk
Eurodance	Eurodance
Dream	Dream
Southern Rock	Southern Rock
Comedy	Comedy
Cult	Cult
Gangsta	Gangsta
Top 40	Top 40
Christian Rap	Christian Rap
Pop/Funk	Pop/Funk
Jungle	Jungle
Native American	Native American
Cabaret	Cabaret
New Wave	New Wave
Psychedelic	Psychedelic
Rave	Rave
Showtunes	Showtunes
Trailer	Trailer
Lo-Fi	Lo-Fi
Tribal	Tribal
Acid Punk	Acid Punk
Acid Jazz	Acid Jazz
Polka	Polka
Retro	Retro
Musical	Musical
Rock & Roll	Rock & Roll
Hard Rock	Hard Rock

Folk	Folk
Folk/Rock	Folk/Rock
National Folk	National Folk
Swing	Swing
Fast fusion	Fast Fusion
Bebop	Bebop
Latin	Latin
Revival	Revival
Celtic	Celtic
Bluegrass	Bluegrass
Avantgarde	Avantgarde
Gothic Rock	Gothic Rock
Progressive Rock	Progressive Rock
Psychedelic Rock	Psychedelic Rock
Symphonic Rock	Symphonic Rock
Slow Rock	Slow Rock
Big Band	Big Band
Chorus	Chorus
Easy Listening	Easy Listening
Acoustic	Acoustic
Humour	Humour
Speech	Speech
Chanson	Chanson
Opera	Opera
Chamber Music	Chamber Music
Sonata	Sonata
Symphony	Symphony
Booty Bass	Booty Bass
Primus	Primus
Porn Groove	Porn Groove
Satire	Satire
Slow Jam	Slow Jam
Club	Club
Tango	Tango
Samba	Samba
Folklore	Folklore
Ballad	Ballad
Power Ballad	Power Ballad
Rhythmic Soul	Rhythmic Soul
Freestyle	Freestyle
Duet	Duet
Punk Rock	Punk Rock
Drum Solo	Drum Solo
A Capella	A Capella
Euro-House	Euro-House
Dance Hall	Dance Hall
Goa	Goa
Drum & Bass	Drum & Bass
Club-House	Club-House
Hardcore	Hardcore
Terror	Terror
Indie	Indie
BritPop	BritPop
Negerpunk	Negerpunk
Polsk Punk	Polsk Punk
Beat	Beat
Christian Gangsta Rap	Christian Gangsta Rap
Heavy Metal	Heavy Metal
Black Metal	Black Metal
Crossover	Crossover
Contemporary Christian	Contemporary Christian
Christian Rock	Christian Rock
Merengue	Merengue
Salsa	Salsa
Thrash Metal	Thrash Metal
Anime	Anime
Jpop	Jpop
Synthpop	Synthpop

---

---

# Troubleshooting

---

## Using the support site

Before making an inquiry about rekordbox operations and technical support, refer to the operating instructions for rekordbox and check the FAQs published on the support site for rekordbox.

### <Support Site for rekordbox>

<http://www.prodjnet.com/rekordbox/support/>

- To make an inquiry about rekordbox, you need to register as a user in advance on the support site for rekordbox.
- You need to enter the license key for your user registration. Have the license key ready. Also, be sure not to forget the login name (your e-mail address) and the password specified for your user registration, as well as the license key.
- Pioneer Corporation collects your personal information for the following purposes:
  - 1 To provide customer support for your purchased product
  - 2 To inform you of product or event information by e-mail
  - 3 To reflect your opinions collected by survey on product planningYour personal information is kept confidential corresponding to the privacy policy set forth by our company. You can check our privacy policy on the support site for rekordbox.
- When making inquiries regarding rekordbox, please be sure to furnish your computer type and specifications (CPU, installed memory, other connected peripherals, etc.), the operating system and version used, and concrete information regarding the issue at hand.

For an inquiry about configuring your computer with peripheral devices other than our products and the corresponding technical support, contact each manufacturer or retailer.
- rekordbox is subject to upgrade for enhanced function and performance. The upgrade program can be downloaded on the support site. We strongly recommend you upgrade your software on a regular basis to keep the latest updates on your system.

---

---

## COPYRIGHT WARNING

- The use of rekordbox is restricted with regard to the playing and copying of copy-protected music contents.

The program may not operate properly if copy-protect encryption data is embedded in recorded media. Playback, analysis, and other operations may stop if copy-protect encryption data is detected to be embedded in recorded media.
- The materials you record are for your own listening enjoyment, and cannot be used for other purposes without permission from the copyright owner.

Music recorded from CDs and other media may be protected by the copyright laws of individual countries as well as by international convention. You are solely responsible for the lawful use of the recordings you make.

When handling music that has been downloaded over the Internet, the person who has downloaded the music is fully responsible for using the music in compliance with his/her contract with the site from which the music was downloaded.

---

---

## Disclaimer

- Please note that Pioneer will accept no responsibility whatsoever for any loss of information registered using this software. Therefore, please write down this registration information and safeguard it carefully.
- Please note that the music files that can be read and played with this software are as shown on the table below.

Music files	Compatible formats	Encoding method	Bit depth	Bit rate	Sampling frequency	File extension
MP3 files	MPEG-1 AUDIO LAYER-3	CBR, VBR	16 bit	32 kbps to 320 kbps	32 kHz, 44.1 kHz, 48 kHz	.mp3
	MPEG-2 AUDIO LAYER-3	CBR, VBR	16 bit	16 kbps to 160 kbps	16 kHz, 22.05 kHz, 24 kHz	.mp3
AAC files	MPEG-4 AAC LC	CBR, VBR	16 bit	8 kbps to 320 kbps	16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz	.m4a, .mp4
WAVE files		Uncompressed PCM	16 bit, 24 bit	—	44.1 kHz, 48 kHz	.wav
AIFF files		Uncompressed PCM	16 bit, 24 bit	—	44.1 kHz, 48 kHz	.aif, .aiff

It may not be possible to read or play music files including both audio and video or copyright-protected music files.

- Pioneer and rekordbox are trademarks or registered trademarks of the Pioneer Corporation.
- Microsoft®, Windows Vista®, and Windows® are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Apple, Macintosh, Mac OS, iTunes, and Finder are registered trademarks of Apple Inc. in the United States and/or other countries.
- The audio compression technology for MP3 is offered under the license of Fraunhofer IIS and Thomson Multimedia.

This product has been licensed for nonprofit use. This product has not been licensed for commercial purposes (for profit-making use), such as broadcasting (terrestrial, satellite, cable or other types of broadcasting), streaming on the Internet, Intranet (a corporate network) or other types of networks or distributing of electronic information (online digital music distribution service). You need to acquire the corresponding licenses for such uses. For details, visit <http://www.mp3licensing.com>.
- The names of companies and products mentioned herein are the trademarks of their respective owners.

Published by Pioneer Corporation.  
Copyright © 2009 Pioneer Corporation.  
All rights reserved.

## PIONEER CORPORATION

4-1, MEGURO 1-CHOME, MEGURO-KU, TOKYO 153-8654, JAPAN

<DRI1001-B>  
rekordbox version 1.0.1