


INTIMIDATOR

WASH ZOOM 450 IRC

User Manual

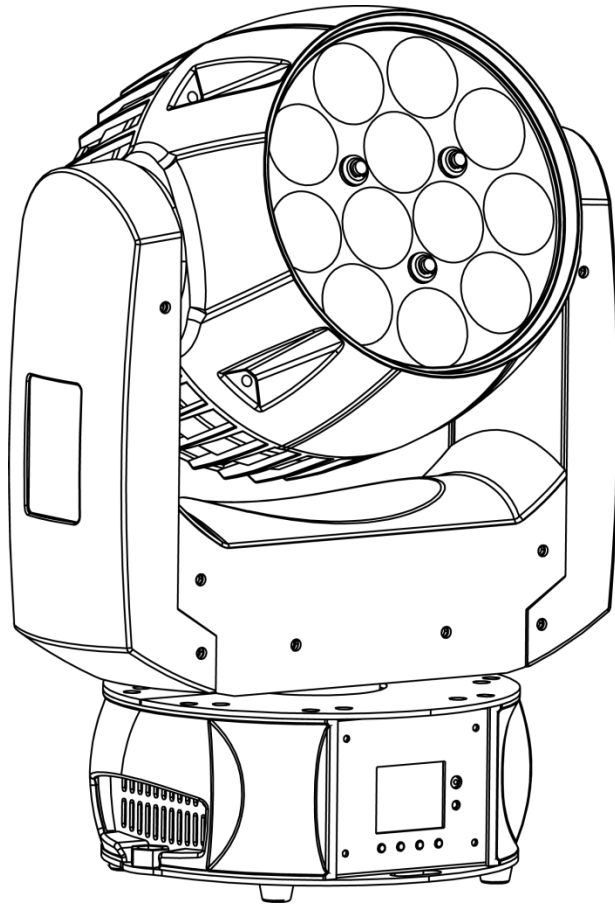


CHAUVET®

TABLE OF CONTENTS

1. Before You Begin	4
What Is Included	4
Unpacking Instructions	4
Claims	4
Text Conventions	4
Symbols	4
Disclaimer	4
Product at a Glance	5
Safety Notes	5
2. Introduction	6
Product Overview	6
Product Dimensions	7
3. Setup	8
AC Power	8
Fuse Replacement	8
Power Linking	8
Mounting	9
Orientation	9
Rigging	9
4. Operation	10
Control Panel Operation	10
Menu Map	10
Configuration (DMX)	11
Starting Address	11
DMX Personalities	11
DMX Channel Assignments and Values	12
29CH	12
Intimidator Wash Zoom 450 IRC Zones of Control	12
29CH (cont.)	13
29CH (cont.)	14
29CH (cont.)	15
14CH	16
14CH (cont.)	17
14CH (cont.)	18
Configuration (Standalone)	19
Automatic Mode	19
Sound-Active Mode	19
Sound Sensitivity	19
Pan/Tilt Orientation	20
Pan/Tilt Angle Range	20
Pan/Tilt Speed	20
Dimmer Curve	20
Dimmer Speed	20
Color Balance	21
Display Timeout	21
Display Orientation	21
Fans	21
Reset	21
Load Factory Defaults	21
System Info	21
IR Mode	22

IRC-6 Operation.....	22
Master/Slave Mode	23
5. Maintenance	24
Product Maintenance	24
6. Technical Specifications	25
Returns.....	26
Contact Us	27

1. BEFORE YOU BEGIN

What Is Included

- Intimidator Wash Zoom 450 IRC
- Hanging Bracket with Mounting Hardware
- Power Cord
- Warranty Card
- Quick Reference Guide

Unpacking Instructions

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

Claims




If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Text Conventions

Convention	Meaning
1—512	A range of values
50/60	A set of values of which only one can be chosen
Settings	A menu option not to be modified
Menu > Settings	A sequence of menu options to be followed
<ENTER>	A key to be pressed on the product's control panel
ON	A value to be entered or selected

Symbols

Symbol	Meaning
	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions. Download the latest version from www.chauvetlighting.com.

The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

© Copyright 2019 Chauvet & Sons, Inc. All rights reserved.

Electronically published by Chauvet in the United States of America.

CHAUVET, the Chauvet logo, Intimidator Wash Zoom 450 IRC, and Intimidator Wash Zoom are registered trademarks or trademarks of Chauvet & Sons Inc. (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

Product at a Glance

Use on Dimmer	⊘	Auto Programs	✓
Outdoor Use	⊘	Auto-ranging Power Supply	✓
Sound-Active	✓	Replaceable Fuse	✓
DMX	✓	User-Serviceable	⊘
Master/Slave	✓		

Safety Notes

Please read the following Safety Notes carefully before working with the product. The Notes include important safety information about installation, usage, and maintenance.



- Always connect the product to a grounded circuit to avoid the risk of electrocution.
- Always disconnect the product from the power source before cleaning or replacing the fuse.
- Avoid direct eye exposure to the light source while the product is on.
- Make sure the power cord is not crimped or damaged.
- Never disconnect the product from power cord by pulling or tugging on the cord.
- If mounting the product overhead, always secure to a fastening device using a safety cable.
- Make sure there are no flammable materials close to the product when operating.
- Do not touch the product's housing when operating because it may be very hot.




- Always make sure that the voltage of the outlet to which you are connecting the product is within the range stated on the decal or rear panel of the product.
- The product is for indoor use only! (IP20) To prevent risk of fire or shock, do not expose the product to rain or moisture.
- Always install the product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Be sure that no ventilation slots on the product's housing are blocked.
- Never connect the product to a dimmer.
- Make sure to replace the fuse with another of the same type and rating.
- Never carry the product from the power cord or any moving part. Always use the hanging/mounting bracket.
- The maximum ambient temperature (Ta) is 104 °F (40 °C). Do not operate the product at higher temperatures.
- In the event of a serious operating problem, stop using the product immediately.
- Never try to repair the product. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.




Keep this User Manual for future use. If you sell the product to someone else, be sure that they also receive this document.

2. INTRODUCTION


Product Overview

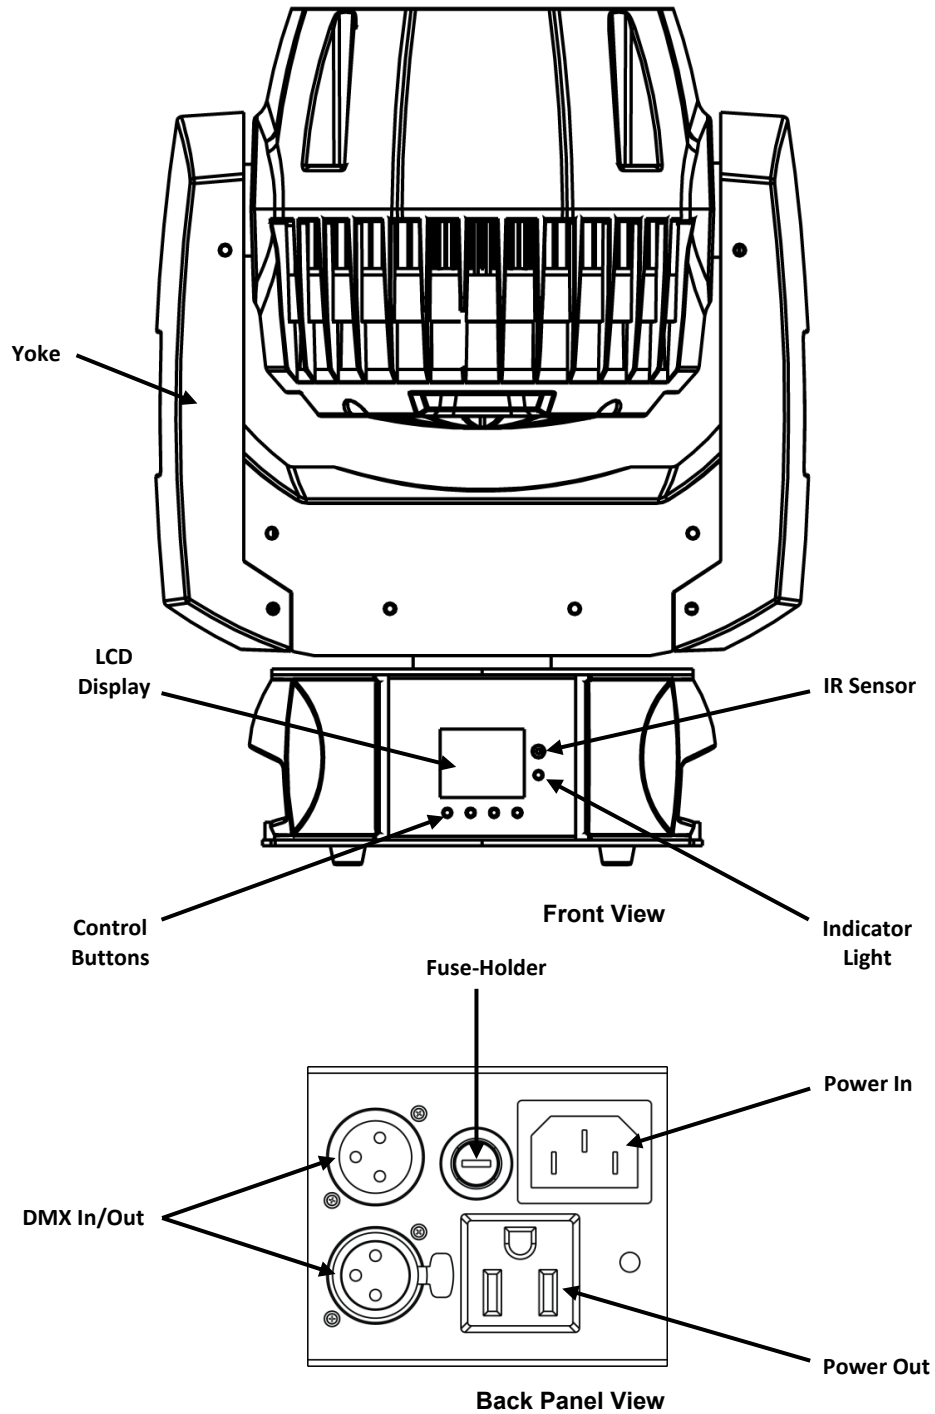

Product Dimensions

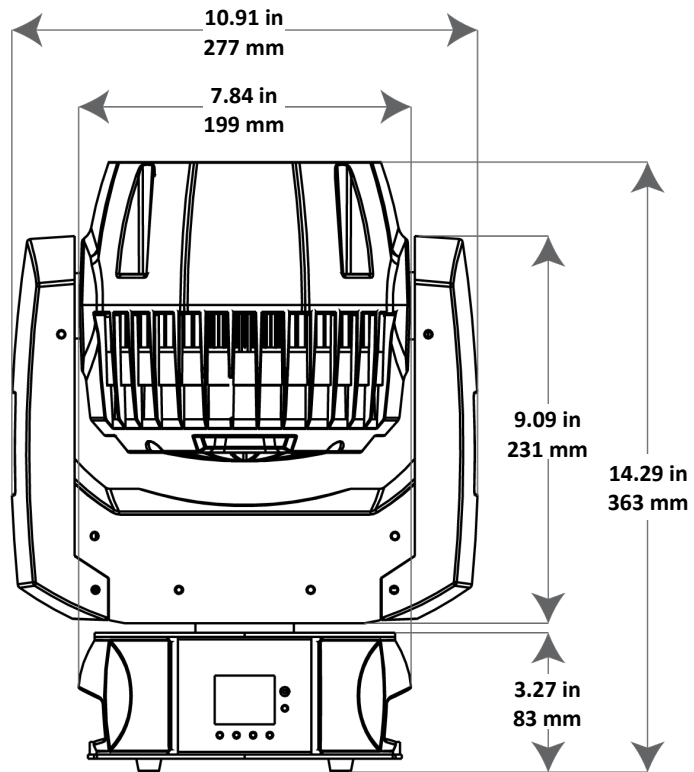

Front View

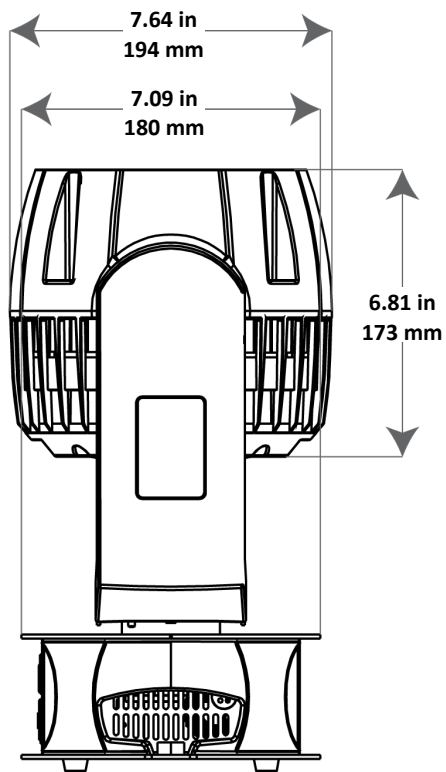

Side View

3. SETUP

AC Power

The Intimidator Wash Zoom 450 IRC has an auto-ranging power supply and it can work with an input voltage range of 100 to 240 VAC, 50/60 Hz. To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart. The listed current rating indicates the product's average current draw under normal conditions.



- **Always connect the product to a protected circuit (circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.**
- **To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.**



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

Fuse Replacement


1. Disconnect the product from power.
2. Using a flat-head screwdriver, unscrew the fuse holder cap from the housing.
3. Remove the blown fuse.
4. Replace with a fuse of the same type and rating.
5. Screw the fuse holder cap back in place and reconnect power.



- **Disconnect the product from the power outlet before replacing the fuse.**
- **Always replace a blown fuse with another of the same type and rating.**

Power Linking

The product provides power linking via the IEC outlet located in the back of the product. Please see the diagram below for further explanation.

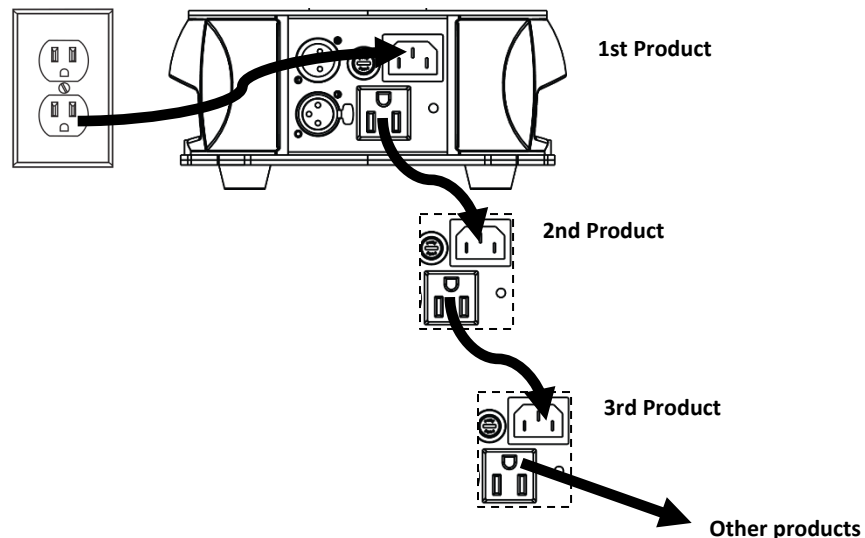

Power Linking Diagram



You can power link up to 4 Intimidator Wash Zoom 450 IRC products on 120 VAC or up to 8 Intimidator Wash Zoom 450 IRC products on 230 VAC.



The power linking diagram corresponds to the North American version of the product ONLY! If using the product in other markets, you must consult with the local Chauvet distributor as power linking connectors and requirements may differ in your country or region.

Mounting


Before mounting the product, read and follow the safety recommendations indicated in the [Safety Notes](#).

Orientation


The Intimidator Wash Zoom 450 IRC may be mounted in any position; however, make sure adequate ventilation is provided around the product.

Rigging

- Before deciding on a location for the product, always make sure there is easy access to the product for maintenance and programming purposes.
- Make sure that the structure or surface onto which you are mounting the product can support the product's weight. See the [Technical Specifications](#) for weight information. The CLP-15 clamp from Chauvet is appropriate for this product.
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, you should use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, you must always consider the length of the power linking cable and mount the products close enough for the cable to reach.
- The rubber feet also serve as floor supports. When mounting the product on the floor, make sure that the product and cables are away from people and vehicles.

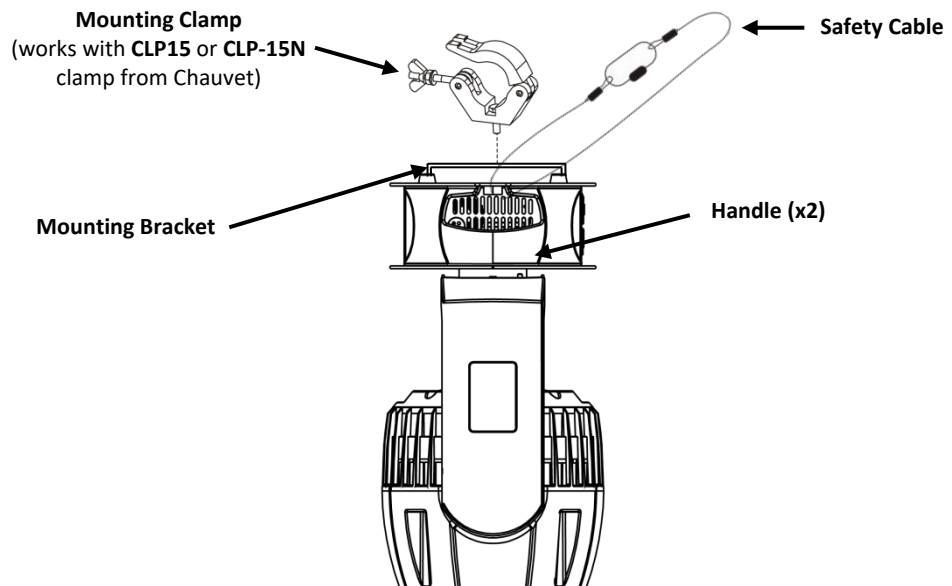

Mounting Diagram

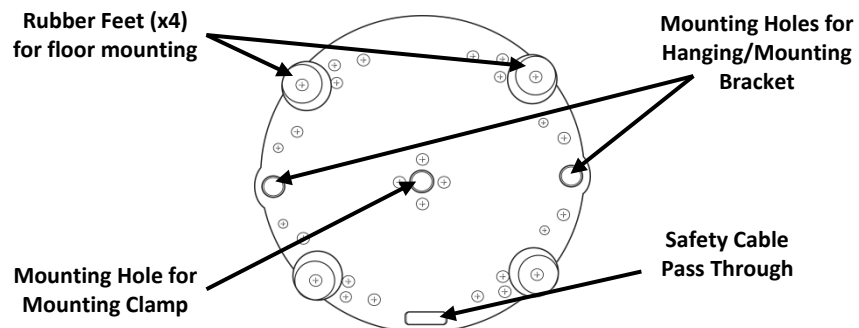

When using only one mounting clamp with this fixture, you must use a clamp with a captive bolt to prevent accidental loosening.

4. OPERATION

Control Panel Operation

To access the control panel functions, use the four buttons located underneath the display. Please refer to the [Product Overview](#) to see the button locations on the control panel.

Button	Function
<MENU>	Press to find an operation mode or to back out of the current menu option
<UP>	Press to scroll up the list of options or to find a higher value
<DOWN>	Press to scroll down the list of options or to find a lower value
<ENTER>	Press to activate a menu option or a selected value

Menu Map

Main Function	Programming Levels		Description
Address	001–512		Sets the DMX starting address
Run Mode	DMX	14CH	Selects DMX mode
		29CH	
	Slave	Slave 1–4	Selects slave mode
	Sound		Selects sound-active mode
	Auto		Selects auto program
	IR		Selects infrared control
Setup	Pan Reverse	OFF	Normal pan operation
		ON	Reverse pan operation
	Tilt Reverse	OFF	Normal tilt operation
		ON	Reverse tilt operation
	Pan Angle	540	Selects the 540° pan angle range
		360	Selects the 360° pan angle range
		180	Selects the 180° pan angle range
	Tilt Angle	270	Selects the 270° tilt angle range
		180	Selects the 180° tilt angle range
		90	Selects the 90° tilt angle range
	P/T Speed	Normal	Selects the panning/tilting speed
		Fast	
		Slow	
	Fans	Auto	Sets fan speed according to temperature
		Full	Fan speed set to full speed
	Display	OFF	Display background light turns off after inactivity
		ON	Display background light stays on
	Screen Rev	OFF	Normal display
		ON	Reverse display
	Dimmer Curve	Square	Selects the dimmer curve mode
		I Square	
		SCurve	
		Linear	
	Dimmer Speed	Fast	Selects the dimmer speed
		Smooth	
	Color Balance	RED	Selects color balance (100 to 255)
		GREEN	
		BLUE	
		WHITE	
	Sensitivity	001–100	Sets sound sensitivity
	Reset		Resets the product
	Factory Set		Loads factory defaults
Sys Info	Ver VX		Displays the software version
	Running Mode XXXXX		Displays the current running mode
	DMX Address XXX		Displays the current DMX address
	Temperature XXX		Displays the LED temperature in Celsius

Configuration (DMX)

Set the product in DMX mode to control with a DMX controller.

1. Connect the product to a suitable power outlet.
2. Connect a DMX cable from the DMX output of the DMX controller to the DMX input socket on the product.

Starting Address

When selecting a starting DMX address, always consider the number of DMX channels the selected DMX mode uses. If you choose a starting address that is too high, you could restrict the access to some of the product's channels.

The Intimidator Wash Zoom 450 IRC uses up to 29 DMX channels in its 29-channel DMX mode, which defines the highest configurable address to **484**.

If you are not familiar with the DMX protocol, download the DMX Primer from www.chauvetlighting.com.

To select the starting address, do the following:

1. Press **<MENU>**.
2. Use **<UP>** or **<DOWN>** to choose **Address**.
3. Press **<ENTER>**.
4. Use **<UP>** or **<DOWN>** to select the starting address.
5. Press **<ENTER>**.

DMX Personalities

The Intimidator Wash Zoom 450 IRC has two DMX personalities, a 29-channel personality and a 14-channel personality.


To choose which DMX personality to use, follow the steps below:

1. Press **<MENU>**.
2. Use **<UP>** or **<DOWN>** to choose **Run Mode**.
3. Press **<ENTER>**.
4. Use **<UP>** or **<DOWN>** to select **DMX**.
5. Press **<ENTER>**.
6. Use **<UP>** or **<DOWN>** to choose either **29CH** (to choose the 29-channel personality) or **14CH** (to choose the 14-channel personality).
7. Press **<ENTER>**.

DMX Channel Assignments and Values

29CH	Channel	Function	Value	Percent/Setting
	1	Pan	000 ⇄ 255	0–540°
	2	Fine Pan	000 ⇄ 255	Fine control of pan
	3	Tilt	000 ⇄ 255	0–270°
	4	Fine Tilt	000 ⇄ 255	Fine control of tilt
	5	Speed	000 ⇄ 255	Pan/Tilt speed (fast to slow)
	6	Red	000 ⇄ 255	0–100%
	7	Green	000 ⇄ 255	0–100%
	8	Blue	000 ⇄ 255	0–100%
	9	White	000 ⇄ 255	0–100%
	10	Red	000 ⇄ 255	0–100%
	11	Green	000 ⇄ 255	0–100%
	12	Blue	000 ⇄ 255	0–100%
	13	White	000 ⇄ 255	0–100%
	14	Red	000 ⇄ 255	0–100%
	15	Green	000 ⇄ 255	0–100%
	16	Blue	000 ⇄ 255	0–100%
	17	White	000 ⇄ 255	0–100%
	18	Red	000 ⇄ 255	0–100%
	19	Green	000 ⇄ 255	0–100%
	20	Blue	000 ⇄ 255	0–100%
	21	White	000 ⇄ 255	0–100%

Intimidator Wash Zoom 450 IRC Zones of Control

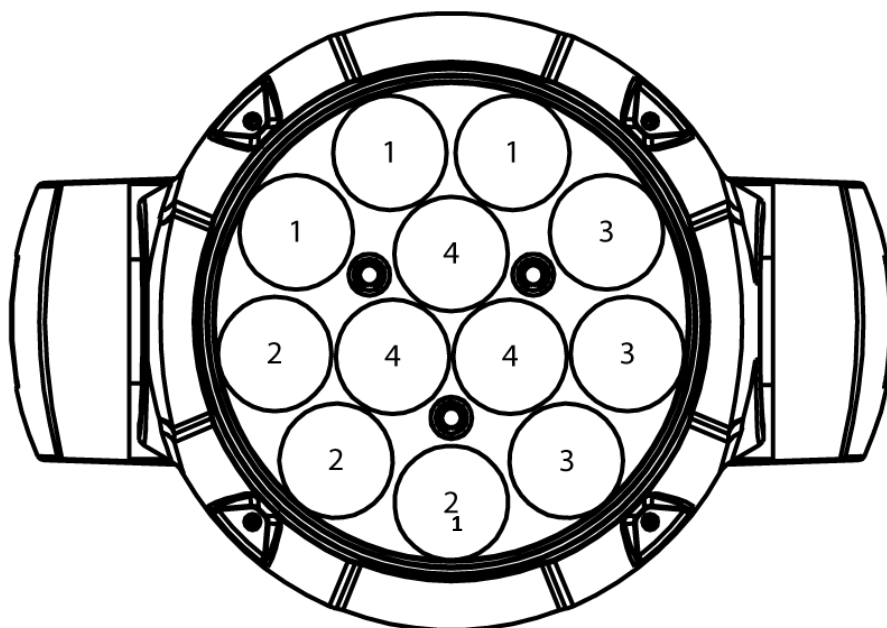

29CH
(cont.)

Channel	Function	Value	Percent/Setting
22	Colors	000⇌004	No function
		005⇌009	Color 1
		010⇌014	Color 2
		015⇌019	Color 3
		020⇌024	Color 4
		025⇌029	Color 5
		030⇌034	Color 6
		035⇌039	Color 7
		040⇌044	Color 8
		045⇌049	Color 9
		050⇌054	Color 10
		055⇌059	Color 11
		060⇌064	Color 12
		065⇌069	Color 13
		070⇌074	Color 14
		075⇌079	Color 15
		080⇌084	Color 16
		085⇌089	Color 17
		090⇌094	Color 18
		095⇌099	Color 19
		100⇌104	Color 20
		105⇌109	Color 21
		110⇌114	Color 22
		115⇌119	Color 23
		120⇌124	Color 24
		125⇌129	Color 25
		130⇌134	Color 26
		135⇌139	Color 27
		140⇌144	Color 28
		145⇌149	Color 29
		150⇌154	Color 30
		155⇌159	Color 31
		160⇌164	Color 32
		165⇌169	Color 33
		170⇌174	Color 34
		175⇌179	No function
		180⇌201	Clockwise color change (fast to slow)
		202⇌207	Stop (color stays in the current color)
		208⇌229	Counter-clockwise color change (fast to slow)
		230⇌234	No function
		235⇌249	Color jump (fast to slow)
		250⇌255	Sound-Active colors

29CH
(cont.)

Channel	Function	Value	Percent/Setting
23	Built in Control	000⇔015	No function
		016⇔031	Zone macro 1
		032⇔047	Zone macro 2
		048⇔063	Zone macro 3
		064⇔079	Zone macro 4
		080⇔095	Zone macro 5
		096⇔111	Zone macro 6
		112⇔127	Zone macro 7 (zone macros 1–6)
		128⇔143	Built-in Auto 1
		144⇔159	Built-in Auto 2
		160⇔175	Built-in Auto 3
		176⇔191	Built-in Auto 4
		192⇔207	Built-in Auto 5
		208⇔223	Built-in Auto 6
		224⇔239	Built-in Auto 7
		240⇔255	Built-in Auto 8 (built-in auto 1–7)
24	Built in Speed	000⇔255	Zone macros and built-in auto speed (slow to fast)
25	Dimmer	000⇔255	0–100%
26	Shutter	000⇔019	Closed
		020⇔024	Open
		025⇔064	Strobe effect (fast to slow)
		065⇔069	Open
		070⇔084	Fast on, slow off (fast to slow)
		085⇔089	Open
		090⇔104	Slow on, fast off (fast to slow)
		105⇔109	Open
		110⇔124	Random shutter (fast to slow)
		125⇔129	Open
		130⇔144	Random fast on, slow off (fast to slow)
		145⇔149	Open
		150⇔164	Random slow on, fast off (fast to slow)
		165⇔169	Open
		170⇔184	Pulse effect 1 (fast to slow)
		185⇔189	Open
		190⇔204	Pulse effect 2 (fast to slow)
		205⇔209	Open
		210⇔224	Gradually on and off (fast to slow)
		225⇔229	Open
		230⇔244	Pulse effect 3 (fast to slow)
		245⇔255	Open
27	Zoom	000⇔255	Zoom in and out

29CH
(cont.)

Channel	Function	Value	Percent/Setting
28	Control Functions	000⇔009	No function
		010⇔014	Blackout while panning/tilting
		015⇔019	No function
		020⇔049	Reserved for future use
		050⇔054	Reset pan
		055⇔059	Reset tilt
		060⇔064	Reset zoom
		065⇔069	Reset rotation
		070⇔074	Reset all
		075⇔079	No function
		080⇔084	Reverse pan/tilt
		085⇔089	Reverse pan
		090⇔094	Reverse tilt
		095⇔099	Cancel reverse pan
		100⇔104	Cancel reverse tilt
		105⇔109	Cancel reverse pan/tilt
		110⇔114	Pan/Tilt normal speed
		115⇔119	Pan/Tilt fast speed
		120⇔124	Pan/Tilt slow speed
		125⇔129	Fan full speed
		130⇔134	Fan auto speed
		135⇔139	Dimmer fast
		140⇔144	Dimmer smooth
		145⇔255	No function
29	Movement Macros	000⇔007	No function
		008⇔023	Automatic movement macro 1
		024⇔039	Automatic movement macro 2
		040⇔055	Automatic movement macro 3
		056⇔071	Automatic movement macro 4
		072⇔087	Automatic movement macro 5
		088⇔103	Automatic movement macro 6
		104⇔119	Automatic movement macro 7
		120⇔135	Automatic movement macro 8
		136⇔151	Sound-Active movement macro 1
		152⇔167	Sound-Active movement macro 2
		168⇔183	Sound-Active movement macro 3
		184⇔199	Sound-Active movement macro 4
		200⇔215	Sound-Active movement macro 5
		216⇔231	Sound-Active movement macro 6
		232⇔247	Sound-Active movement macro 7
		248⇔255	Sound-Active movement macro 8

14CH	Channel	Function	Value	Percent/Setting
	1	Pan	000⇔255	0–540°
	2	Tilt	000⇔255	0–270°
	3	Pan/Tilt Speed	000⇔255	Pan/Tilt speed (fast to slow)
	4	Red	000⇔255	0–100%
	5	Green	000⇔255	0–100%
	6	Blue	000⇔255	0–100%
	7	White	000⇔255	0–100%
	8	Built-in Control	000⇔015	No function
			016⇔031	Zone macro 1
			032⇔047	Zone macro 2
			048⇔063	Zone macro 3
			064⇔079	Zone macro 4
			080⇔095	Zone macro 5
			096⇔111	Zone macro 6
			112⇔127	Zone macro 7 (zone macros 1–6)
			128⇔143	Built-in Auto 1
			144⇔159	Built-in Auto 2
			160⇔175	Built-in Auto 3
			176⇔191	Built-in Auto 4
			192⇔207	Built-in Auto 5
			208⇔223	Built-in Auto 6
			224⇔239	Built-in Auto 7
			240⇔255	Built-in Auto 8 (built-in auto 1–7)
	9	Built-in Speed	000⇔255	Zone macros and built-in auto speed (slow to fast)
	10	Dimmer	000⇔255	0–100%

14CH
(cont.)

Channel	Function	Value	Percent/Setting
11	Shutter	000⇄019	Closed
		020⇄024	Open
		025⇄064	Strobe effect (fast to slow)
		065⇄069	Open
		070⇄084	Fast on, slow off (fast to slow)
		085⇄089	Open
		090⇄104	Slow on, fast off (fast to slow)
		105⇄109	Open
		110⇄124	Random shutter (fast to slow)
		125⇄129	Open
		130⇄144	Random fast on, slow off (fast to slow)
		145⇄149	Open
		150⇄164	Random slow on, fast off (fast to slow)
		165⇄169	Open
		170⇄184	Pulse effect 1 (fast to slow)
		185⇄189	Open
		190⇄204	Pulse effect 2 (fast to slow)
		205⇄209	Open
		210⇄224	Gradually on and off (fast to slow)
		225⇄229	Open
		230⇄244	Pulse effect 3 (fast to slow)
		245⇄255	Open
12	Zoom	000⇄255	Zoom in and out
13	Control Functions	000⇄009	No function
		010⇄014	Blackout while panning/tilting
		015⇄019	No function
		020⇄049	Reserved for future use
		050⇄054	Reset pan
		055⇄059	Reset tilt
		060⇄064	Reset zoom
		065⇄069	Reset rotation
		070⇄074	Reset all
		075⇄079	No function
		080⇄084	Reverse pan/tilt
		085⇄089	Reverse pan
		090⇄094	Reverse tilt
		095⇄099	Cancel reverse pan
		100⇄104	Cancel reverse tilt
		105⇄109	Cancel reverse pan/tilt
		110⇄114	Pan/Tilt normal speed
		115⇄119	Pan/Tilt fast speed
		120⇄124	Pan/Tilt slow speed
		125⇄129	Fan full speed
		130⇄134	Fan auto speed
		135⇄139	Dimmer fast
		140⇄144	Dimmer smooth
		145⇄255	No function

14CH
(cont.)

Channel	Function	Value	Percent/Setting
14	Movement Macros	000⇔007	No function
		008⇔023	Automatic movement macro 1
		024⇔039	Automatic movement macro 2
		040⇔055	Automatic movement macro 3
		056⇔071	Automatic movement macro 4
		072⇔087	Automatic movement macro 5
		088⇔103	Automatic movement macro 6
		104⇔119	Automatic movement macro 7
		120⇔135	Automatic movement macro 8
		136⇔151	Sound-Active movement macro 1
		152⇔167	Sound-Active movement macro 2
		168⇔183	Sound-Active movement macro 3
		184⇔199	Sound-Active movement macro 4
		200⇔215	Sound-Active movement macro 5
		216⇔231	Sound-Active movement macro 6
		232⇔247	Sound-Active movement macro 7
		248⇔255	Sound-Active movement macro 8

Configuration (Standalone)

Set the product in one of the standalone modes to control without a DMX controller.

- Connect the product to power.



Never connect a product that is operating in any standalone mode (Automatic, Sound-Active, or Manual) to a DMX string connected to a DMX controller. Products in standalone mode may transmit DMX signals that could interfere with the DMX signals from the controller.

Automatic Mode

To enable the Automatic mode, do the following:

1. Press **<MENU>**.
2. Use **<UP>** or **<DOWN>** to choose **Run Mode**.
3. Press **<ENTER>**.
4. Use **<UP>** or **<DOWN>** to select **Auto**.
5. Press **<ENTER>**.

Sound-Active Mode

To enable the Sound-Active mode, follow the instructions below:

1. Press **<MENU>**.
2. Use **<UP>** or **<DOWN>** to choose **Run Mode**.
3. Press **<ENTER>**.
4. Use **<UP>** or **<DOWN>** to select **Sound**.
5. Press **<ENTER>**.



The product will only respond to low frequencies of music (bass and drums).

Sound Sensitivity

To set the sound sensitivity, do the following:

1. Press **<MENU>**.
2. Use **<UP>** or **<DOWN>** to choose **Setup**.
3. Press **<ENTER>**.
4. Use **<UP>** or **<DOWN>** to select **Sensitivity**.
5. Press **<ENTER>**.
6. Use **<UP>** or **<DOWN>** to select **001-100**, low to high.
7. Press **<ENTER>**.

Pan/Tilt Orientation

To select whether the Intimidator Wash Zoom 450 IRC will operate with normal panning or inverted panning, follow the instructions below:

1. Press **<MENU>**.
2. Use **<UP>** or **<DOWN>** to choose **Setup**.
3. Press **<ENTER>**.
4. Use **<UP>** or **<DOWN>** to select **Pan Reverse**.
5. Press **<ENTER>**.
6. Use **<UP>** or **<DOWN>** to select **ON** or **OFF**.
7. Press **<ENTER>**.

To select whether the Intimidator Wash Zoom 450 IRC will operate with normal tilting or inverted tilting, do the following:

1. Press **<MENU>**.
2. Use **<UP>** or **<DOWN>** to choose **Setup**.
3. Press **<ENTER>**.
4. Use **<UP>** or **<DOWN>** to select **Tilt Reverse**.
5. Press **<ENTER>**.
6. Use **<UP>** or **<DOWN>** to select **ON** or **OFF**.
7. Press **<ENTER>**.

Pan/Tilt Angle Range

To select which pan angle range to use, follow the instructions below:

1. Press **<MENU>**.
2. Use **<UP>** or **<DOWN>** to choose **Setup**.
3. Press **<ENTER>**.
4. Use **<UP>** or **<DOWN>** to select **Pan Angle**.
5. Press **<ENTER>**.
6. Use **<UP>** or **<DOWN>** to select **540**, **360**, or **180**.
7. Press **<ENTER>**.

To select which tilt angle range to use, do the following.

1. Press **<MENU>**.
2. Use **<UP>** or **<DOWN>** to choose **Setup**.
3. Press **<ENTER>**.
4. Use **<UP>** or **<DOWN>** to select **Tilt Angle**.
5. Press **<ENTER>**.
6. Use **<UP>** or **<DOWN>** to select **240**, **180**, or **90**.
7. Press **<ENTER>**.

Pan/Tilt Speed

To set the pan/tilt speed, follow the instructions below:

1. Press **<MENU>**.
2. Use **<UP>** or **<DOWN>** to choose **Setup**.
3. Press **<ENTER>**.
4. Use **<UP>** or **<DOWN>** to select **P/T Speed**.
5. Press **<ENTER>**.
6. Use **<UP>** or **<DOWN>** to select **Normal**, **Fast**, or **Slow**.
7. Press **<ENTER>**.

Dimmer Curve

To set the dimmer curve, do the following:

1. Press **<MENU>**.
2. Use **<UP>** or **<DOWN>** to choose **Setup**.
3. Press **<ENTER>**.
4. Use **<UP>** or **<DOWN>** to select **Dimmer Curve**.
5. Press **<ENTER>**.
6. Use **<UP>** or **<DOWN>** to select **Square**, **I Squa**, **sCurve**, or **Linear**.
7. Press **<ENTER>**.

Dimmer Speed

To set the dimmer speed, follow the instructions below:

1. Press **<MENU>**.
2. Use **<UP>** or **<DOWN>** to choose **Setup**.
3. Press **<ENTER>**.
4. Use **<UP>** or **<DOWN>** to select **Dimmer Speed**.
5. Press **<ENTER>**.
6. Use **<UP>** or **<DOWN>** to select **Fast** or **Smooth**.
7. Press **<ENTER>**.

-
- Color Balance** To set the color balance, do the following:
1. Press **<MENU>**.
 2. Use **<UP>** or **<DOWN>** to choose **Setup**.
 3. Press **<ENTER>**.
 4. Use **<UP>** or **<DOWN>** to select **Color Balance**.
 5. Press **<ENTER>**.
 6. Use **<UP>** or **<DOWN>** to select **RED**, **GREEN**, **BLUE**, or **WHITE**.
 7. Press **<ENTER>**.
 8. Use **<UP>** or **<DOWN>** to increase or decrease the color value (**100–255**).
 9. Press **<ENTER>**.
 10. Repeat steps 6-9 until the desired color balance is set.

- Display Timeout** To select whether the display backlight should turn off after inactivity, follow the instructions below:
1. Press **<MENU>**.
 2. Use **<UP>** or **<DOWN>** to choose **Setup**.
 3. Press **<ENTER>**.
 4. Use **<UP>** or **<DOWN>** to select **Display**.
 5. Press **<ENTER>**.
 6. Use **<UP>** or **<DOWN>** to select **ON** or **OFF**.
 7. Press **<ENTER>**.

- Display Orientation** To set the display orientation on the Intimidator Wash Zoom 450 IRC, do the following:
1. Press **<MENU>**.
 2. Use **<UP>** or **<DOWN>** to choose **Setup**.
 3. Press **<ENTER>**.
 4. Use **<UP>** or **<DOWN>** to select **Screen Rev**.
 5. Press **<ENTER>**.
 6. Use **<UP>** or **<DOWN>** to select **ON** or **OFF**.
 7. Press **<ENTER>**.

- Fans** To set the fan speed, follow the instructions below:
1. Press **<MENU>**.
 2. Use **<UP>** or **<DOWN>** to choose **Setup**.
 3. Press **<ENTER>**.
 4. Use **<UP>** or **<DOWN>** to select **Fans**.
 5. Press **<ENTER>**.
 6. Use **<UP>** or **<DOWN>** to select **Auto** or **Full**.
 7. Press **<ENTER>**.

- Reset** To restart the Intimidator Wash Zoom 450 IRC, do the following:
1. Press **<MENU>**.
 2. Use **<UP>** or **<DOWN>** to choose **Setup**.
 3. Press **<ENTER>**.
 4. Use **<UP>** or **<DOWN>** to select **Reset**.
 5. Press **<ENTER>**.

- Load Factory Defaults** To reset the Intimidator Wash Zoom 450 IRC to factory default settings, follow the instructions below:
1. Press **<MENU>**.
 2. Use **<UP>** or **<DOWN>** to choose **Setup**.
 3. Press **<ENTER>**.
 4. Use **<UP>** or **<DOWN>** to select **Factory Set**.
 5. Press **<ENTER>**.

- System Info** To view system information, do the following:
1. Press **<MENU>**.
 2. Use **<UP>** or **<DOWN>** to choose **Sys Info**.
 3. Press **<ENTER>**. The version number, running mode, DMX address, and current product temperature will show on the display.

IR Mode

IR mode allows the product to be controlled with an infrared remote controller. The IRC-6 can remotely set the product to various modes; adjust the color, speed and sensitivity; and set the strobe.

To set the product to IR mode, do the following:


1. Make sure the product is plugged into a power source and not connected to a DMX cable.
2. Press **<MENU>**.
3. Use **<UP>** or **<DOWN>** to choose **Run Mode**.
4. Press **<ENTER>**. Use **<UP>** or **<DOWN>** to choose **IR**.
5. Press **<ENTER>** and the indicator on the front of the Intimidator Wash Zoom 450 IRC blinks.

IRC-6 Operation



Be sure the IRC-6 remote is pointing directly at the product and there is nothing in between the remote and the product.

The list below describes which features each button controls.

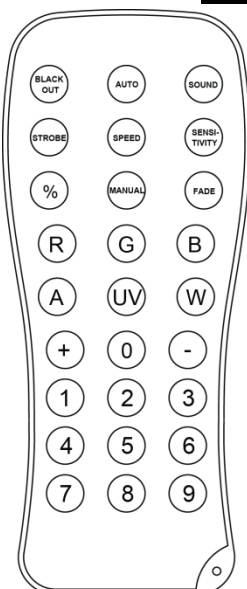

- **<BLACKOUT>** - Turns LED on and off.
- **<AUTO>** - Activates Auto mode. Use the **<+>** and **<->** buttons to cycle through Auto programs.
- **<SOUND>** - Activates Sound mode.
- **<STROBE>** - Activates the strobe. Use the **<+>** and **<->** buttons to increase or decrease strobe speed.
- **<SPEED>** - Adjusts the movement speed. Use the **<+>** and **<->** buttons to increase or decrease the pan/tilt speed.
- **<SENSITIVITY>** - Adjusts sound sensitivity. Use the **<+>** and **<->** buttons to increase or decrease the sound sensitivity.
- **<%>** - Adjusts the brightness of the LEDs. Use the **<+>** and **<->** buttons to increase or decrease the brightness of the LEDs.
- **<FADE/SNAP>** or **<FADE>** - Activates Color Fade mode and Color Snap mode. Press **<FADE>/SNAP>** to toggle Fade and Snap. Use the **<+>** and **<->** buttons to increase or decrease the Fade/Snap speed (fast to slow).
- **<MANUAL>** - Activates Manual mode.
- **<R>** - Adjusts the red LEDs. Use the **<+>** and **<->** buttons to increase or decrease the red output.
- **<G>** - Adjusts the green LEDs. Use the **<+>** and **<->** buttons to increase or decrease the green output.
- **** - Adjusts the blue LEDs. Use the **<+>** and **<->** buttons to increase or decrease the blue output.
- **<W>** - Adjusts the white LEDs. Use the **<+>** and **<->** buttons to increase or decrease the white output.
- **<A>** - Adjusts the Pan/Tilt manually. Press **<A>** to toggle between Pan and Tilt. Use the **<+>** and **<->** buttons to increase or decrease the Pan/Tilt value.
- **<UV>** or **<P>** - Adjusts the Zoom manually. Use the **<+>** and **<->** buttons to increase or decrease the Zoom value.
- **<+>** - Increases values for controls as described above.
- **<->** - Decreases values for controls as described above.
- **<0>-<9>** - Activates specific Auto modes. Can be used as a shortcut for the combination of the **<AUTO>** button and the **<+>** and **<->** buttons.

Master/Slave Mode

The Master/Slave mode allows a single Intimidator Wash Zoom 450 IRC (the master) to control the actions of one or more Intimidator Wash Zoom 450 IRC products (the slaves) without the need of a DMX controller. The master will be set to operate in either Stand-Alone mode or with the IRC-6, while the slaves will be set to operate in Slave mode. Once set and connected, the slaves will operate in unison with the master.

Configure the products as indicated below.

Slaves:

1. Press **<MENU>**.
2. Use **<UP>** or **<DOWN>** to select **Run Mode**.
3. Press **<ENTER>**.
4. Use **<UP>** or **<DOWN>** to select **Slave**.
5. Press **<ENTER>**.
6. Use **<UP>** or **<DOWN>** to select **Slave 1**, **Slave 2**, **Slave 3**, or **Slave 4**.
 - Select **Slave 1** for 100% synchronized actions.
 - Select **Slave 2**, **Slave 3**, or **Slave 4** for a delayed show with all heads in the same direction but with a delay creating a wave effect.
7. Press **<ENTER>**.
8. Connect the DMX input of the first slave product to the DMX output of the master.
9. Connect the DMX input of the subsequent slaves to the DMX output of the previous slave.
10. Finish setting and connecting all the slaves.

Master:

1. Set the master to operate in either Stand-Alone mode or with the IRC-6.
2. Make the master the first product in the DMX daisy chain.

When including Intimidator Wash Zoom products in Master/Slave configuration with Intimidator Wash Zoom 450 IRC products, you must observe the following:



- When the Intimidator Wash Zoom product is the master and the Intimidator Wash Zoom 450 IRC is connected as a slave, the Intimidator Wash Zoom 450 IRC must be set to DMX mode with a starting address of 001. **DO NOT** set the Intimidator Wash Zoom 450 IRC in Slave mode when an Intimidator Wash Zoom product is the master.
- The Intimidator Wash Zoom 450 IRC will not operate as the master to an Intimidator Wash Zoom product connected as a slave.



- Configure all the slaves before connecting the master to the DMX daisy chain.
- Never connect a DMX controller to a DMX string configured for Master/Slave operation because the controller may interfere with the signals from the master.
- Do not connect more than 31 slave products to the master.

5. MAINTENANCE

Product Maintenance

Dust build-up reduces light output performance and can cause overheating. This can lead to reduction of the light source's life and/or mechanical wear. To maintain optimum performance and minimize wear, clean your lighting products at least twice a month. However, be aware that usage and environmental conditions could be contributing factors to increase the cleaning frequency.

To clean the product, follow the instructions below:

1. Unplug the product from power.
2. Wait until the product is at room temperature.
3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external surface/vents.
4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
5. Apply the solution directly to a soft, lint free cotton cloth or a lens cleaning tissue.
6. Softly drag any dirt or grime to the outside of the transparent surface.
7. Gently polish the transparent surfaces until they are free of haze and lint.




Always dry the transparent surfaces carefully after cleaning them.



Do not spin the cooling fans using compressed air because you could damage them.

6. TECHNICAL SPECIFICATIONS

Dimensions and Weight	Length	Width	Height (pointing upward)	Weight
	7.6 in (194 mm)	10.9 in (277 mm)	14.3 in (363 mm)	15.8 lb (7.2 kg)
Note: Dimensions in inches rounded to the nearest decimal digit.				
Power	Power Supply Type	Range		Voltage Selection
	Switching (internal)	100 to 240 VAC, 50/60 Hz		Auto-ranging
	Parameter	120 V, 60 Hz		230 V, 50 Hz
	Consumption	219 W		207 W
	Operating	1.9 A		1 A
	Power linking current (products)	13.6 A (4 products)		13.6 A (8 products)
	Fuse	F 5 A, 250 V		F 5 A, 250 V
	Power I/O	US/Worldwide		UK/Europe
	Power input connector	powerCON®-compatible		powerCON®-compatible
	Power output connector	powerCON®-compatible		powerCON®-compatible
Power Cord plug	Edison (US)		Local plug	
Light Source	Type	Power	Lifespan	
	LED	15 W	50,000 hours	
	Color	Quantity	Current	
	Quad-color RGBW	12	3.7 A	
Photometrics	Parameter			
	Illuminance @ 2 m (14°)	25,610 lux		
	Illuminance @ 2 m (58°)	1,960 lux		
	Zoom Angle	7° to 53°		
	Strobe Rate	0 to 20 Hz		
	Pan and Tilt	540° Pan		
	Pan/Tilt Ranges	180°, 360°, 540° Pan	270° Tilt	
			90°, 180°, 270° Tilt	
Thermal	Maximum External Temp.	Cooling System		
	104 °F (40 °C)	Fan-Assisted Convection		
DMX	I/O Connectors	Connector Type	Channel Range	
	3-pin XLR	Sockets	14 or 29	
Ordering	Product Name	Item Code	UPC Number	
	Intimidator Wash Zoom 450 IRC	08010983	781462213312	

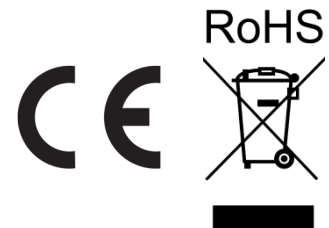

RETURNS

To get support or return a product:

- If you are located in the US, contact Chauvet World Headquarters.
- If you are located in the UK or Ireland, contact Chauvet Europe Ltd.
- If you are located in France, contact Chauvet France.
- If you are located in Germany, contact Chauvet Germany.
- If you are located in Mexico, contact Chauvet Mexico.
- If you are located in Benelux, contact Chauvet Europe BVBA.
- If you are located in any other country, DO NOT contact Chauvet. Instead, contact your local distributor. See www.chauvetdj.com for distributors outside the US, UK, Ireland, Mexico, or Benelux.



If you are located outside the US, UK, Ireland, Benelux, France, Germany, or Mexico, contact your distributor of record and follow their instructions on how to return Chauvet products to them. Visit our website www.chauvetlighting.com for contact details.

Call the corresponding Chauvet Technical Support office and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause for the return.

Send the merchandise prepaid, in its original box, and with its original packing and accessories. Chauvet will not issue call tags.

Clearly label the package with the RMA number. Chauvet will refuse any product returned without an RMA number.



Write the RMA number on a properly affixed label. DO NOT write the RMA number directly on the box.

Before sending the product, clearly write the following information on a piece of paper and place it inside the box:

- Your name
- Your address
- Your phone number
- RMA number
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be your responsibility. FedEx packing or double-boxing are recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).

CONTACT US

General Information	Technical Support
Chauvet World Headquarters	
Address: 5200 NW 108th Avenue Sunrise, FL 33351 Voice: (954) 577-4455 Toll free: (800) 762-1084	Voice: (844) 393-7575 Email: chauvetcs@chauvetlighting.com Website: www.chauvetdj.com
Chauvet Europe Ltd	
Address: Unit 1C Brookhill Road Industrial Estate Pinxton, Nottingham, UK NG16 6NT Voice: +44 (0)1773 511115	Email: uktech@chauvetlighting.com Website: www.chauvetdj.co.uk
Chauvet Europe BVBA	
Address: Stokstraat 18 9770 Kruishoutem Belgium Voice: +32 9 388 93 97	Email: Eutech@chauvetlighting.com Website: www.chauvetlighting.eu
Chauvet France	
Address: 3, Rue Ampère 91380 Chilly-Mazarin France Voice: +33 1 78 85 33 59	Email: FRtech@chauvetlighting.fr Website: http://www.chauvetdj.fr
Chauvet Germany	
Address: Bruno-Bürgel-Str. 11 28759 Bremen Germany Voice: +49 421 62 60 20	Email: Eutech@chauvetlighting.de Website: http://www.chauvetdj.de
Chauvet Mexico	
Address: Av. de las Partidas 34-3B (Entrance by Calle 2) Zona Industrial Lerma Lerma, Mexico C.P. 52000 Voice: +52 (728) 690-2010	Email: servicio@chauvetlighting.com.mx Website: www.chauvet.com.mx

Visit the applicable website above to verify our contact information and instructions to request support. Outside the US, UK, Ireland, Mexico, France, Germany, or Benelux, contact the dealer of record.